



Relative Position of the Screen and the Projector


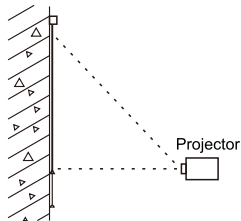


Side view

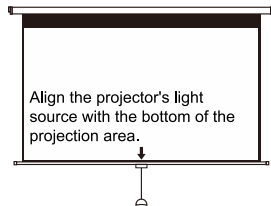


Front view

How to Use the Screen

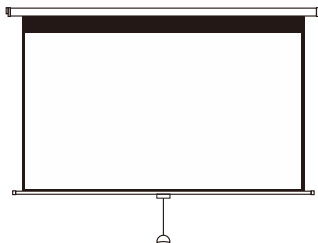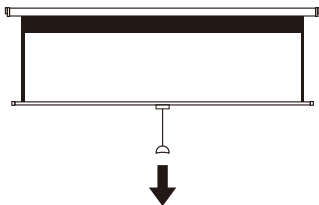

Pull-down: The screen will lock at any position

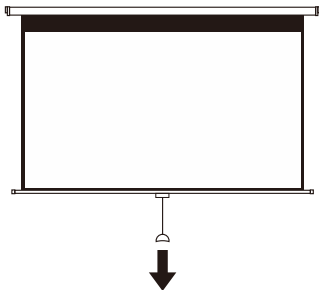


Pull the screen down slightly for a small distance and release: let it automatically ascend.

Hisense

Hisense Manual Pull-down Projector Screen Instructions


(Read these instructions carefully before use and keep them safe)

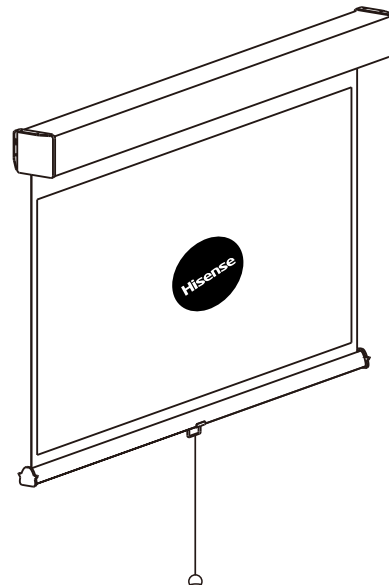


Precautions

1. When pulling down the screen, apply even force vertically without excessive pulling.
2. Do not use sharp objects or touch the screen surface to prevent damage.
3. When not in use, retract the screen into its case to prevent dust accumulation.
4. Gently wipe stains on the screen surface with a damp cotton cloth, and make sure it is dry before use or storage.

List of Accessories

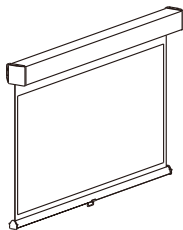


Manual Pull-down
Projector Screen x 1

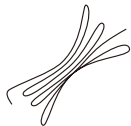


Lanyard x 1



 Hanging ball x 1

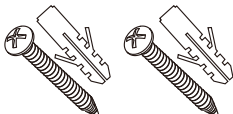


Expansion tube
assembly x 4

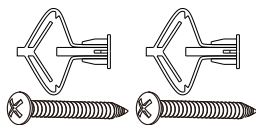


Butterfly anchor assembly x 4

Wall Mount

1. Prepare an impact drill. Prior to installation, mark and drill two hook holes on the left and right sides. Insert the anchor plugs into the drilled holes (For expansion tube anchor plugs, it is recommended to use an 8mm diameter drill bit). Secure the two expansion tube screws.
 2. Attach the product to the screws. The installation is complete.
- Note: When installing this screen on a gypsum board wall, make sure the gypsum board is at least 15mm thick and use butterfly anchors for installation (for butterfly anchor plugs, it is recommended to use a 10mm diameter drill bit).

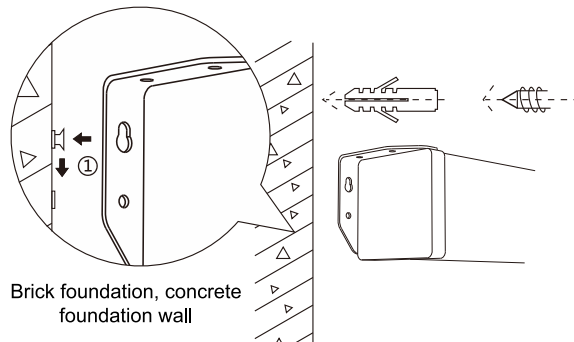

Brick foundation, concrete
foundation wall

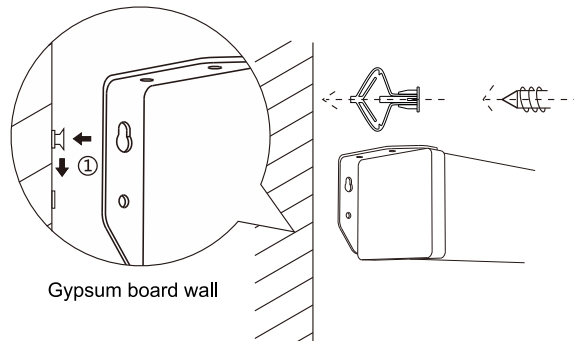

Gypsum board wall