


# Hisense

# QUICK START GUIDE

Before using the product, please read this guide thoroughly and retain it for future reference.

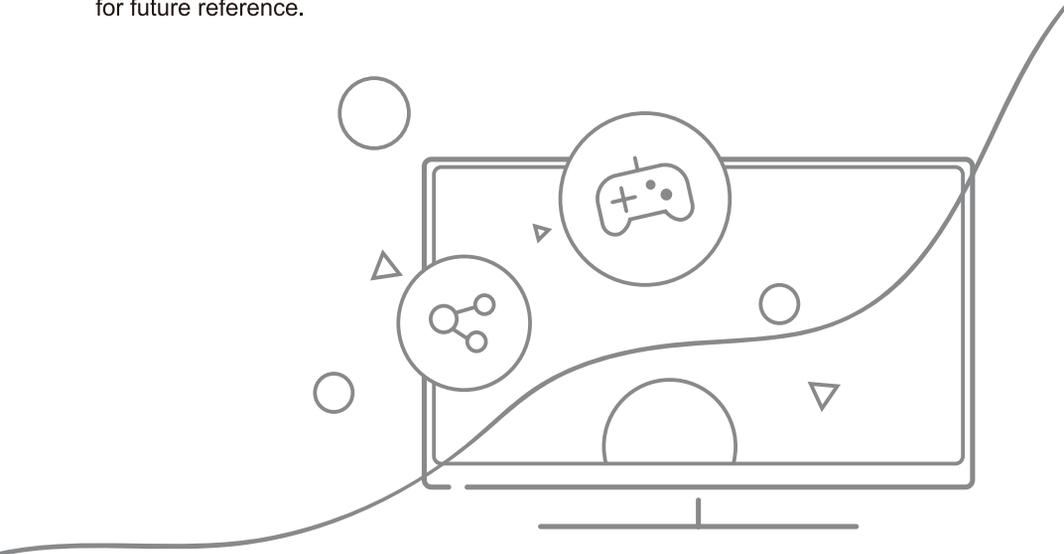

34G6QUK

*English*

# Contents

---

---

<b>Important Information</b> .....	1
Safety Precaution.....	1
Warnings .....	1
<b>Basic Information</b> .....	3
Accessories.....	3
Installing the Monitor .....	3
Connecting Your Monitor to a Computer.....	3
Front View of the Product.....	4
<b>Other Information</b> .....	5

## Important Information

---

---

### • Safety Precaution

This monitor is manufactured and tested on a ground principle that a user's safety comes first. However, improper use or installation may result danger to the monitor as well as to the user. Carefully go over the following WARNINGS before installation and keep this guide handy.

### • Warnings

- This monitor should be operated only at the correct power sources indicated on the label on the rear end of the monitor. If you're unsure of the power supply in your residence, consult your local dealer or power company.
- Do not try to repair the monitor yourself as it contains no user-serviceable parts. The monitor should only be repaired by a qualified technician.
- Do not remove the monitor cabinet. There is high-voltage parts inside that may cause electric shock to human bodies, even when the power cord is disconnected.
- Stop using the monitor if the cabinet is damaged. Have it checked by a service technician.
- Put your monitor only in a clean, dry environment. Unplug the monitor immediately if gets wet and consult your service technician.
- Do not place the monitor on an unstable cart, stand or table. Placing the monitor on an unstable base can cause the monitor to fall, resulting in serious personal injuries as well as damage to the monitor.

- Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the monitor and to protect it from overheating. Do not cover the ventilation openings in the cabinet and never place the set in a confined space such as built-in cabinet unless proper ventilation is provided. Leave a minimum 10cm gap all around the unit, the rear of the monitor should be 6cm away from the wall.
- Always unplug the monitor before cleaning it. Clean the cabinet with a clean, dry cloth. Apply non-ammonia based cleaner onto the cloth, not directly onto the glass screen.
- Do not expose the product to direct sunlight, heat, or a hot object such as a stove.
- Do not place heavy objects on the cable or power cord.
- For PLUGGABLE EQUIPMENT, the Socket-outlet shall be installed near the equipment and shall be easily accessible.
- During a lightning or thunderstorm, power off the product and remove the power cable.
- Disconnect the power cord from the power socket if you do not plan on using the product for an extended period of time.
- For displays with glossy bezels the user should consider the placement of the displays as the bezel may cause disturbing reflections from surrounding light and bright surfaces.
- Do not let children hang from the product or climb on top of it.
- Store small accessories out of the reach of children.
- Due to safety concerns, if the VESA mounting kit is purchased separately, please make sure the mounting kit is UL-Listed, and replaceable only by service personnel.

# Basic Information

---


## • Accessories

- |                   |                   |                       |
|-------------------|-------------------|-----------------------|
| AC Power Cord × 1 | Power adapter × 1 | Quick Start Guide × 1 |
| User Manual × 1   | Warranty card × 1 | DP cable × 1          |
| HDMI cable × 1    |                   |                       |


(This list contains optional items. The items you have received may be different from this list.)

## • Installing the Monitor


1. Place the monitor face down on a soft cloth or cushion on a table.
2. Install the stand base to the monitor.
3. The installation is complete.

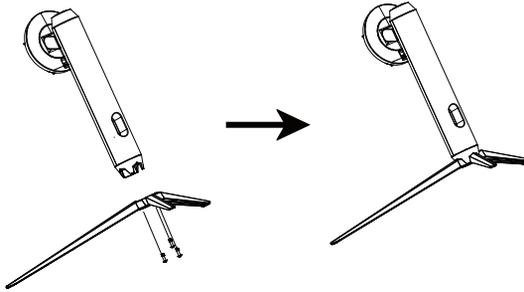

## • Connecting Your Monitor to a Computer

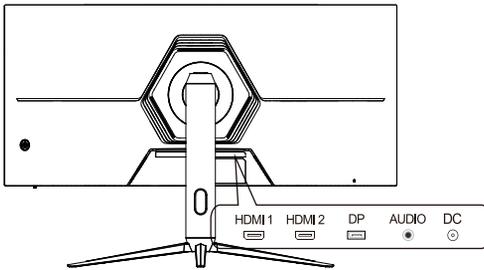


1. Power off the monitor and unplug the power source of the PC.
2. Connect Video cable(HDMI Cable).
3. Connect one end of the power adapter into the DC port of the monitor (If there is no power adapter, just connect the monitor power cord).
4. Connect the power adapter of the PC and the monitor into a power outlet nearby.

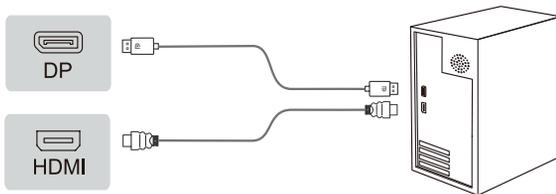

\*Picture is only for reference, please refer to the actual product.

## • Front View of the Product

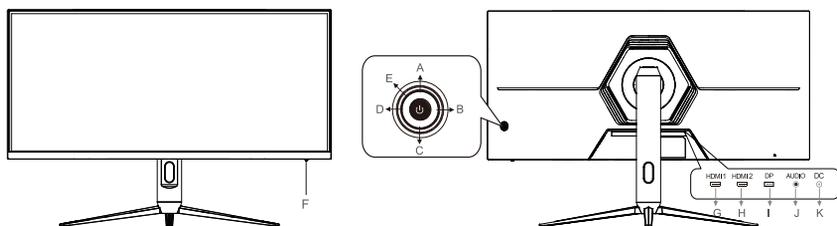

A	↑	When the menu is closed,press this button to open the menu; When the menu is opened, press this button to move upward;
B	→	When the menu is closed,press this button to open the menu;When the menu is opened, press this button to exit; The progress bar value decreases;
C	↓	When the menu is closed,press this button to open the menu; When the menu is opened, press this button to move downward;
D	←	When the menu is closed,press this button to open the menu;When the menu is opened, press this button will activate the selected function/progress bar value increment;
E	⏻	Power switch; Short press: turn on/confirm, long press: turn off
F	LED Indicator	Remains on:normal working state;Remains off:power-saving standby state
G	HDMI input	HDMI Digital signal input
H	HDMI input	HDMI Digital signal input
I	DP input	DP Digital signal input
J	AUDIO output	AUDIO analog signal output
K	DC input	DC power input

## Other Information

---

- **Disposal of Used Electrical & Electronic Equipment**



Packaging and electrical goods should be recycled appropriately, and not treated as household waste. Please dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipment waste. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

- **License**




The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

PN:



——— 定位框，不做印刷处理

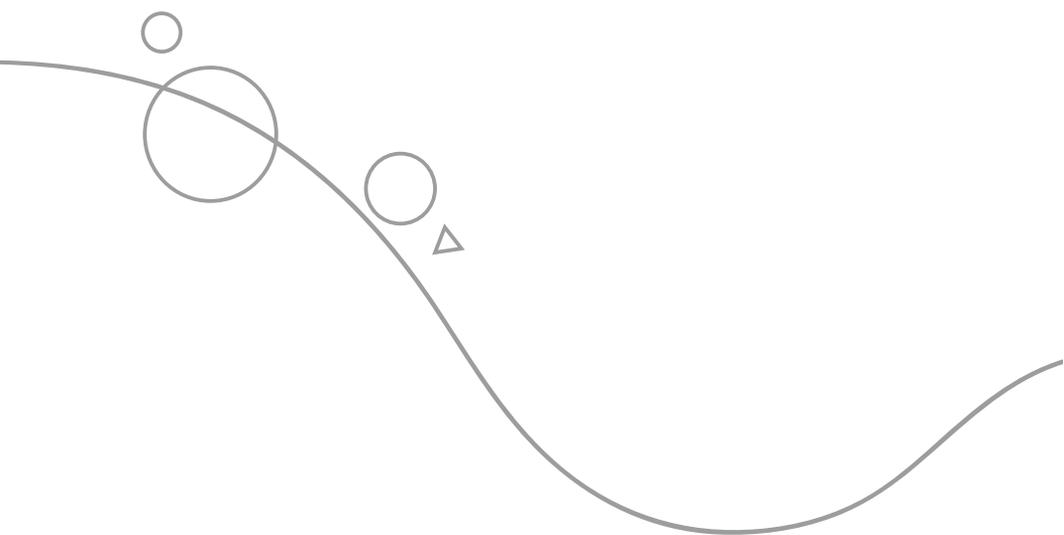

美工资料		HKC 惠科股份有限公司 HKC Corporation Limited			
料号	280602047640	物料名称	QSG	版本	V03
国家/订单		工厂型号	MG34H18QV16	客户型号	34G6QUK
规格	142x210mm	比例		客户品牌	海信
设计	范海平	核准		日期	202503
材质	80g双胶纸，单黑印刷				
备注说明	如遇不足页，空白页补齐。		V02: 版本更新 V03: 附件清单更新		

This page is not printed