 


ELEVATE CLICK SYSTEM

TV Cabinet

Assembly Instructions

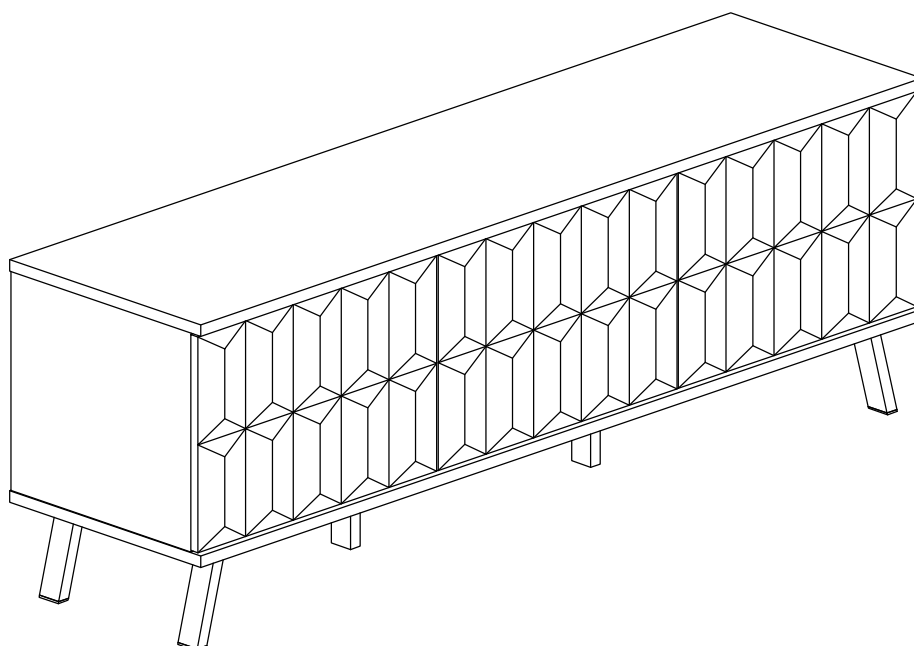

NOTE

We highly recommend watching the quick help & set up guide video first before assembling. Simply place a smart phone camera over the QR code for a quick link to the video.

 









 

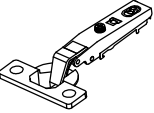
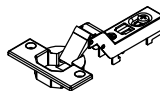




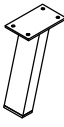
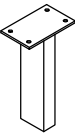
To watch assembly video :
www.frankolsenfurniture.co.uk

Download the **Frank Olsen Smart app** from :
Google Play store or Apple store



HARDWARE

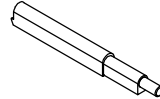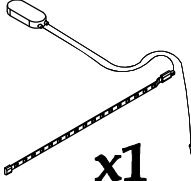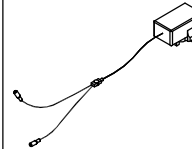


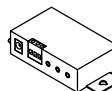A M3*12  x2	B M3.5*14  x26	C M3.5*16  x24	D M4*25  x4	E  x3	F  x1	G  x1
H  x2	I  x2	J  x4	K  x2	L  x12	M  x2	N  x1
O  x4	Q  x4	R  x2				

Tools Required-Not Supplied



 
PARTS

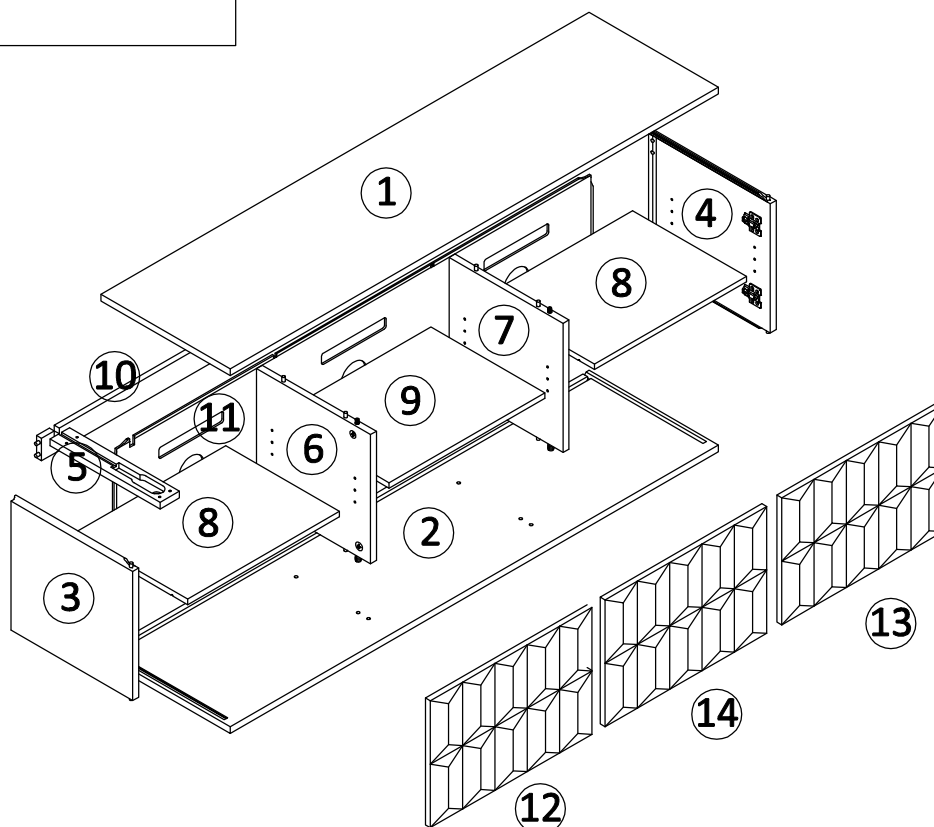

GUIDE

Assembly Instructions

 Ensure dowel is aligned with hole before pushing panel into groove

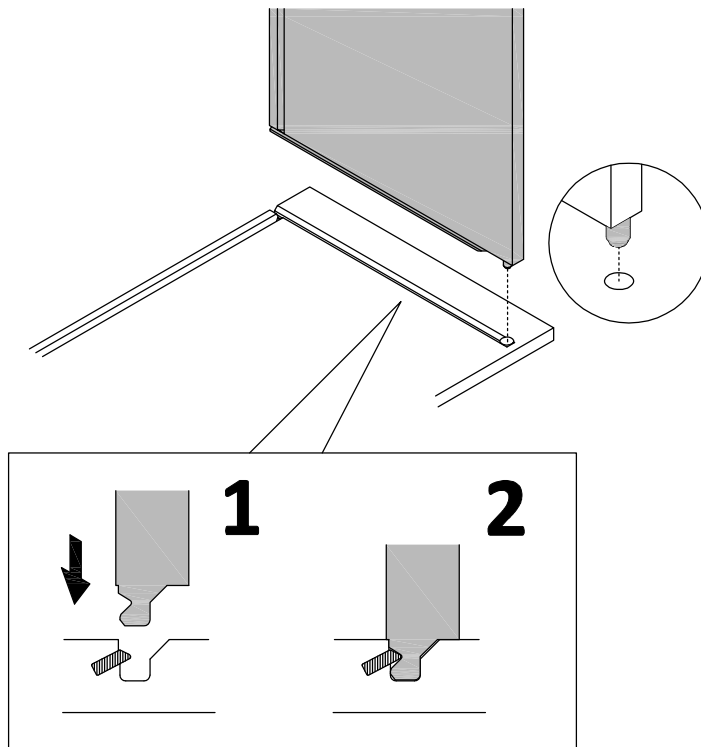


Disassembly Instructions






Unlock the cam fixing (top and bottom) of panels 6 and 7

Use Disassemble rod 'M' and gently slide in to the small triangle as shown below marked 'KEY'

 We highly recommend watching the quick help video before disassembling. Simply place a phone camera over the QR code below for a quick link to the video


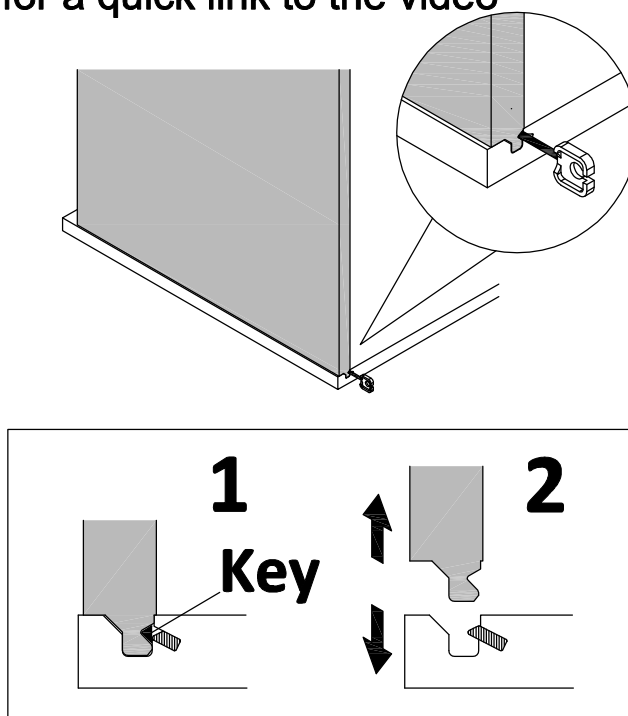


1

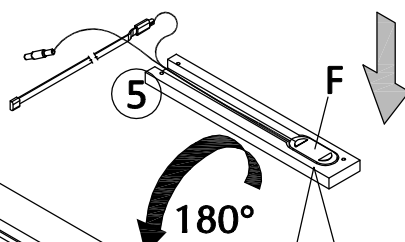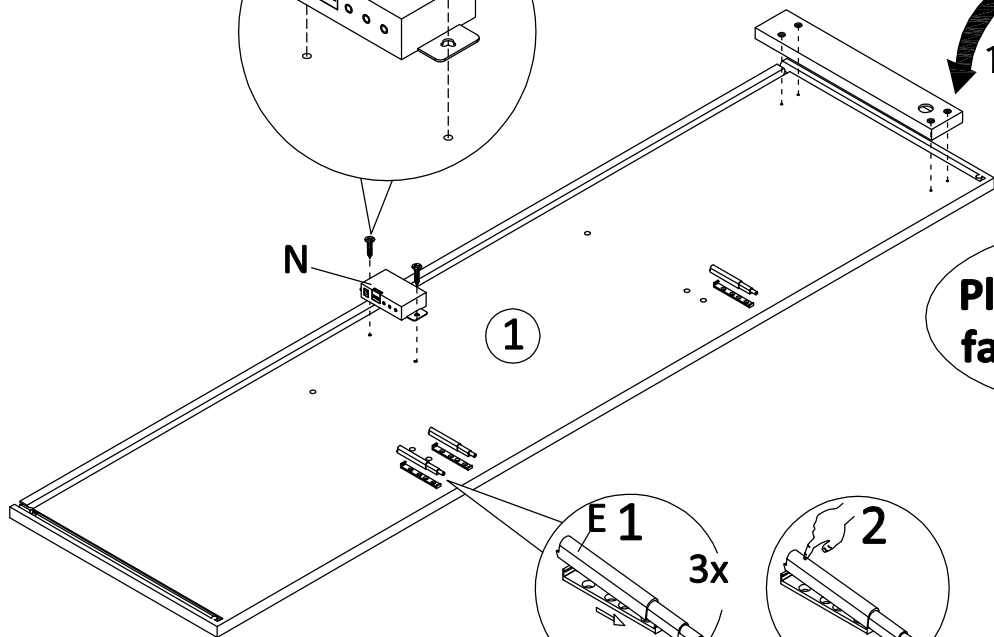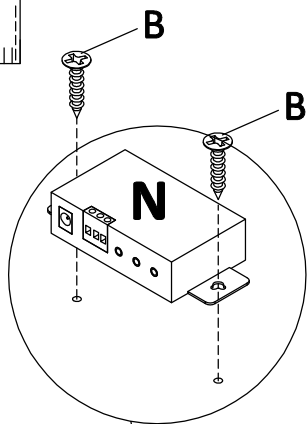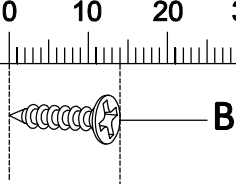     


Place the button facing down.


 
 
2



 NOTE: Please see the separate instructions provided to set this device up correctly.

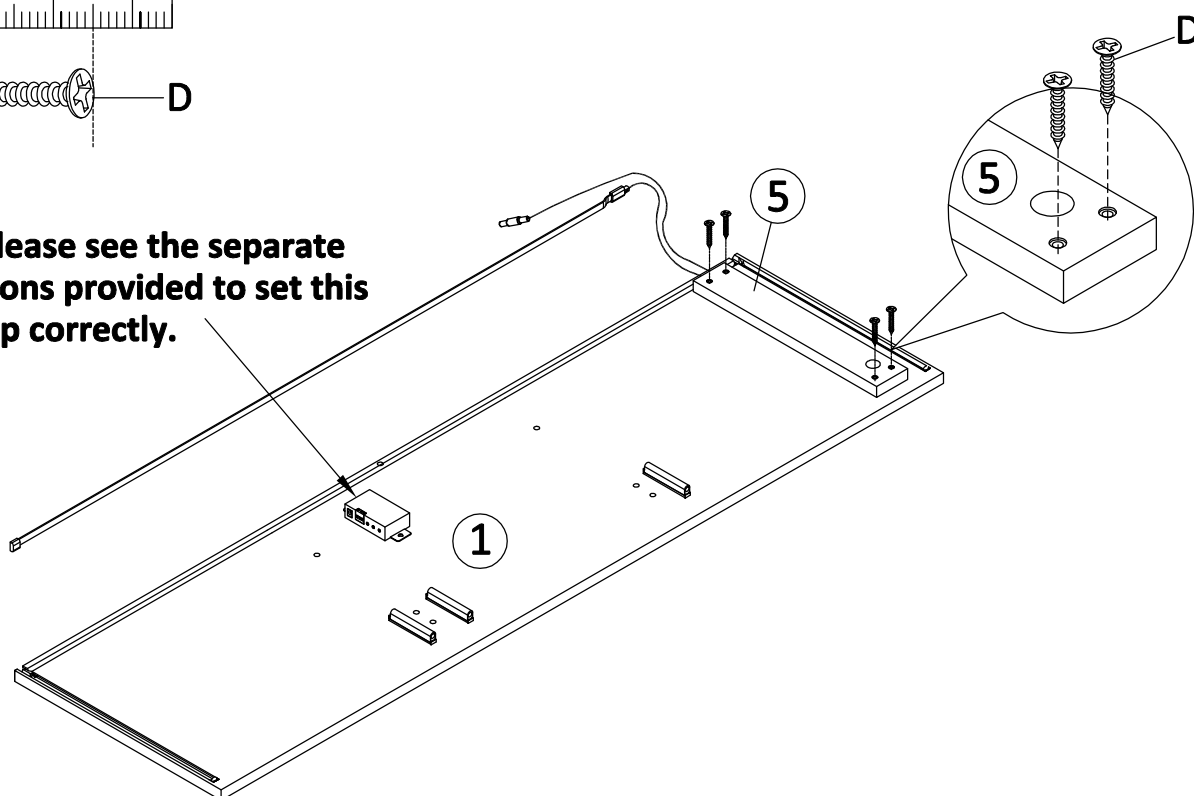

3

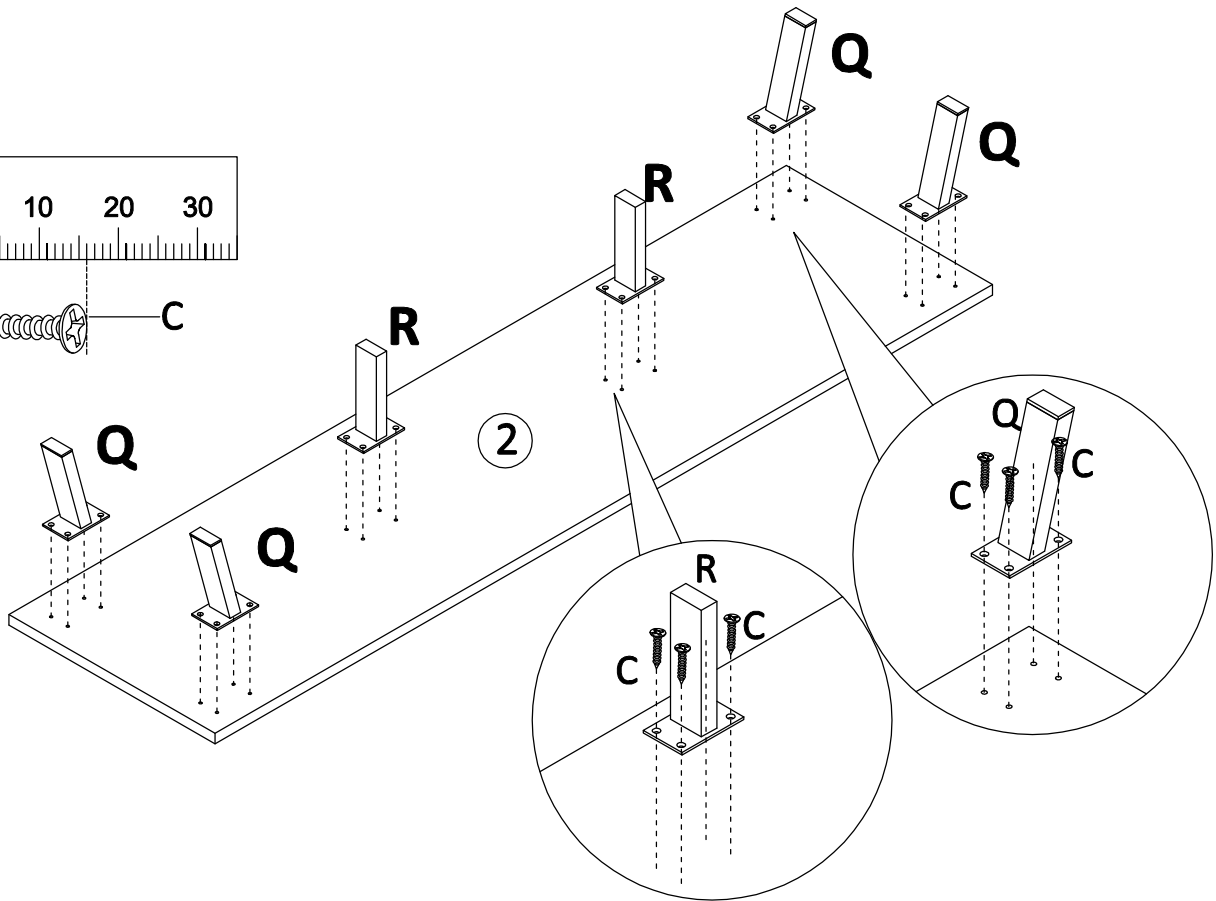   


4

NOTE : Panels should sit comfortably in position, do not force them, if they do not fit comfortably, they are likely to be UPSIDE down

Fitting Cam & Dowel panels 6&7

 
ENSURE Panel 6 has the pre-fitted hinge brackets on the right side of the panel to allow the door to fit correctly.

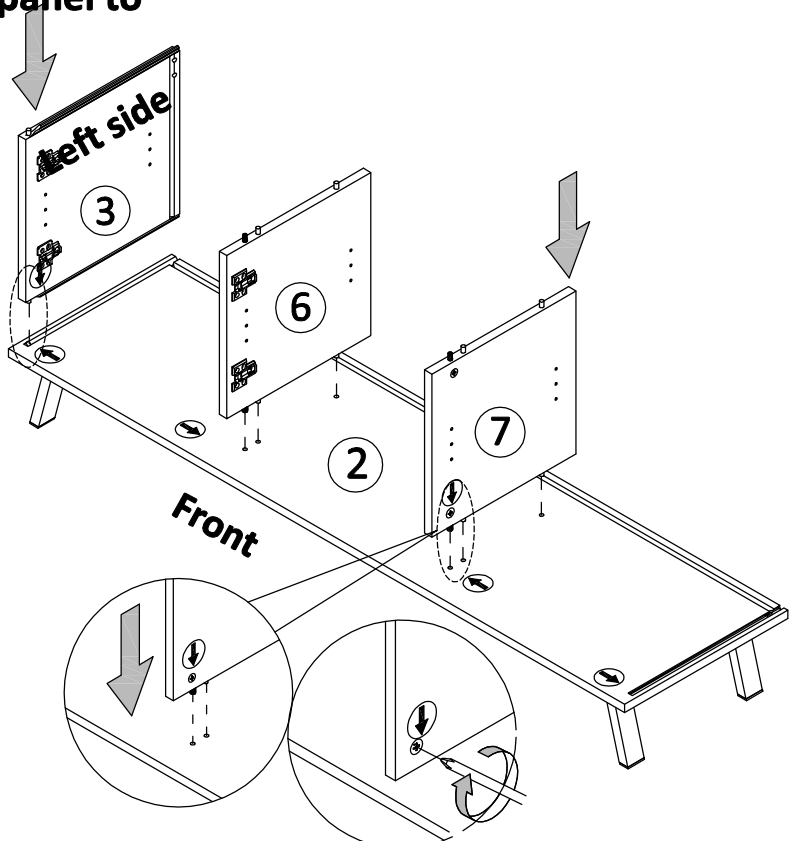


*** Locate Dowel position first as a guide**

5

 
* Groove on back panel must be this side

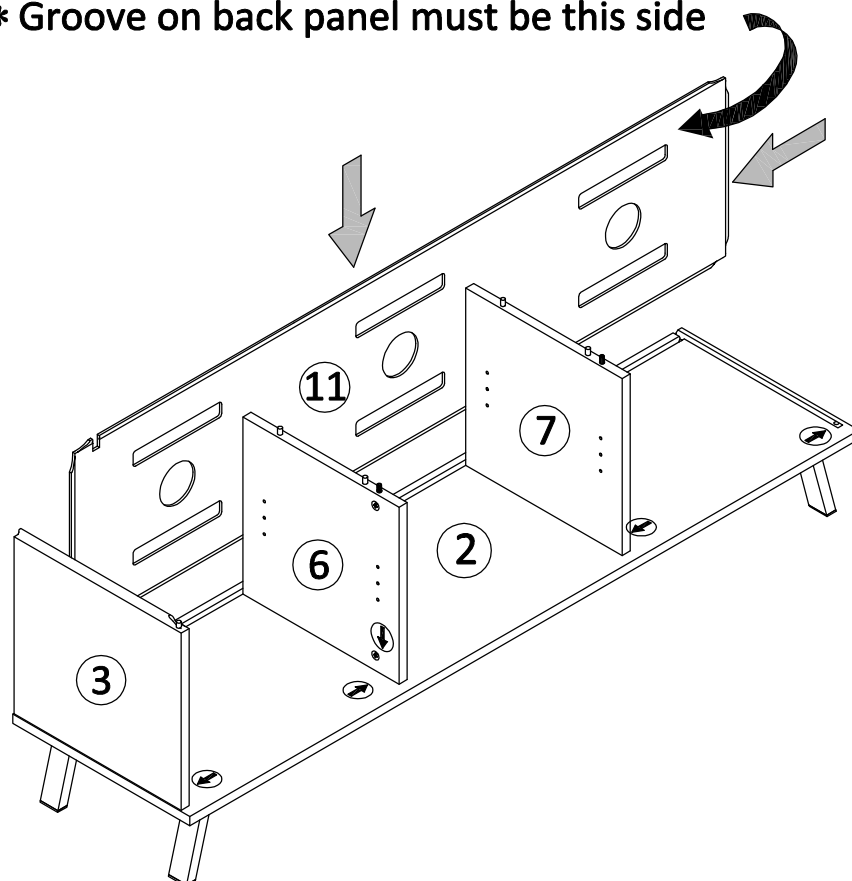

6

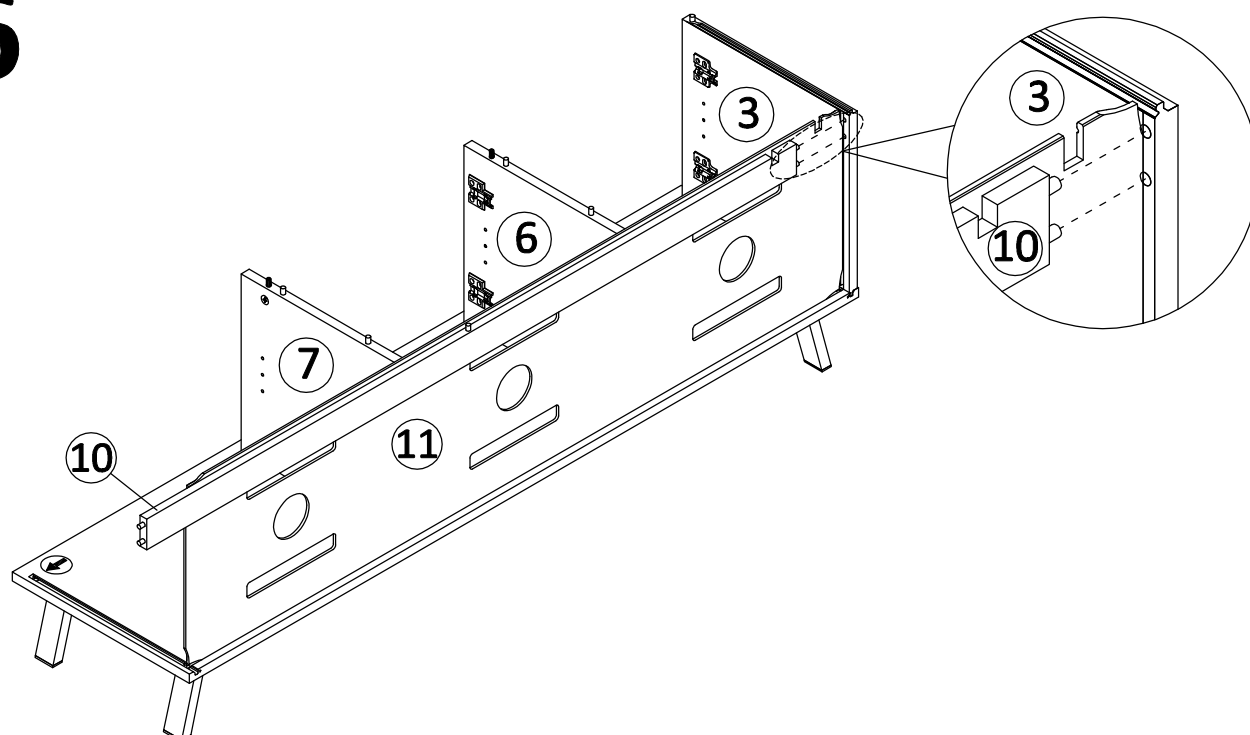 


7

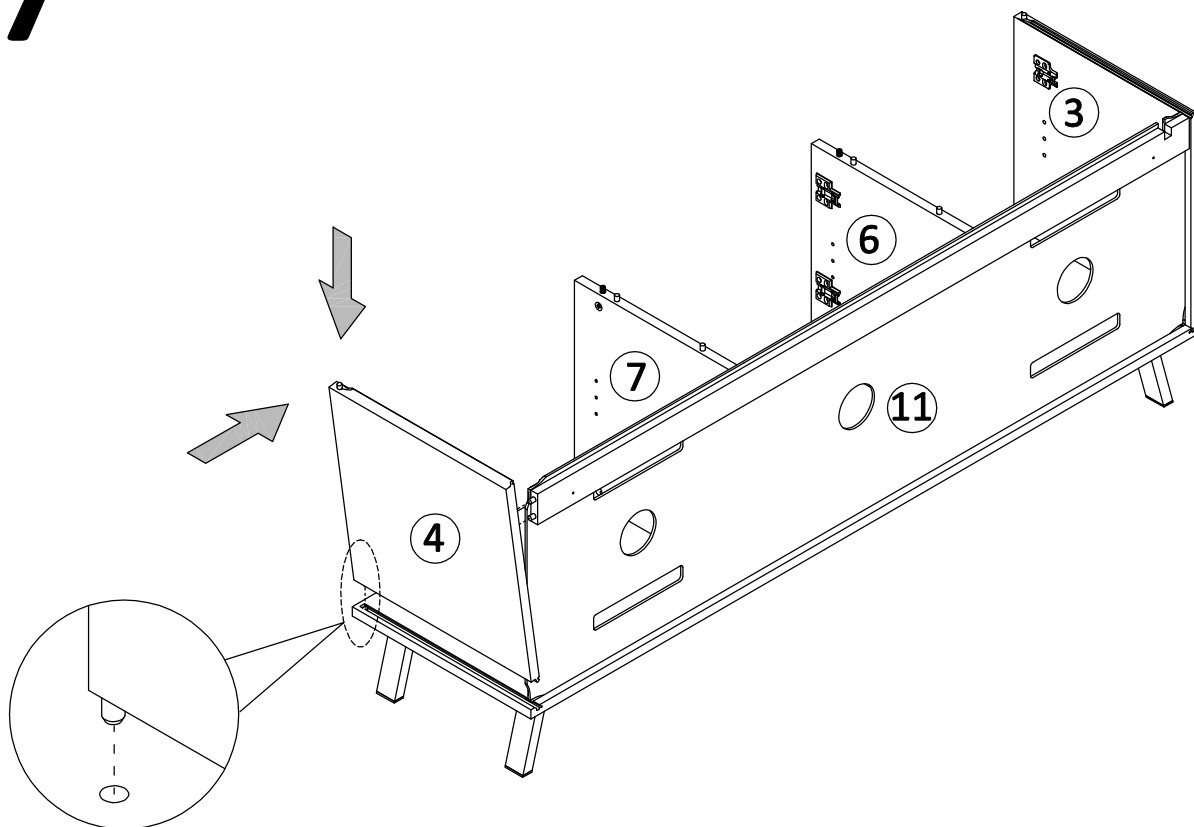 

*** Locate Dowel position first as a guide**

 8

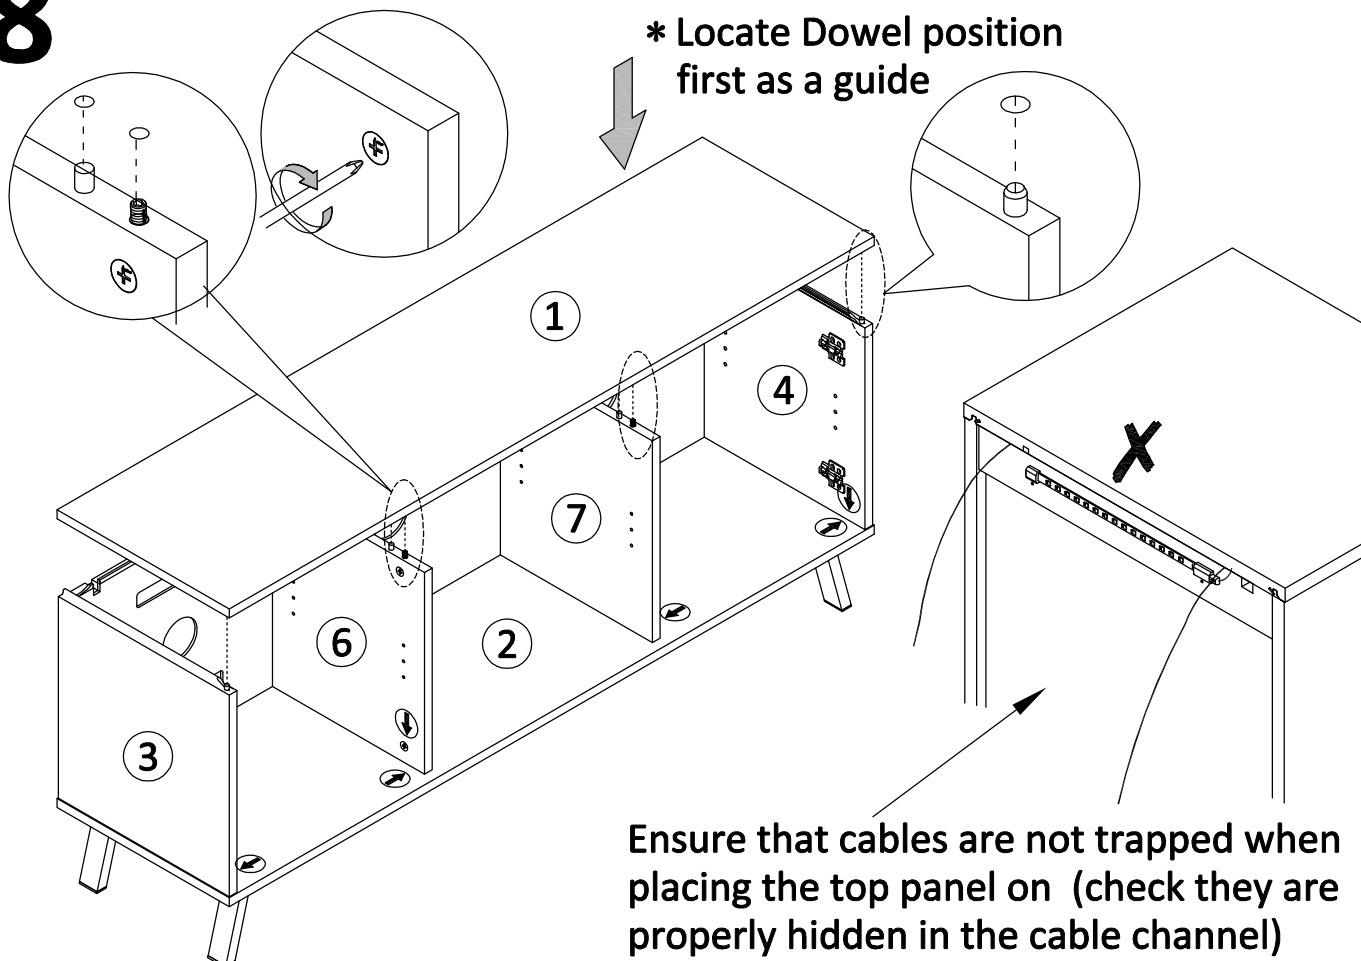



*** Locate Dowel position first as a guide**

Ensure that cables are not trapped when placing the top panel on (check they are properly hidden in the cable channel)

9


PLEASE FOLLOW THE STEPS TO ENSURE NO DAMAGE.

  1. Screw in clip 'I'- ensure surface is DUST FREE

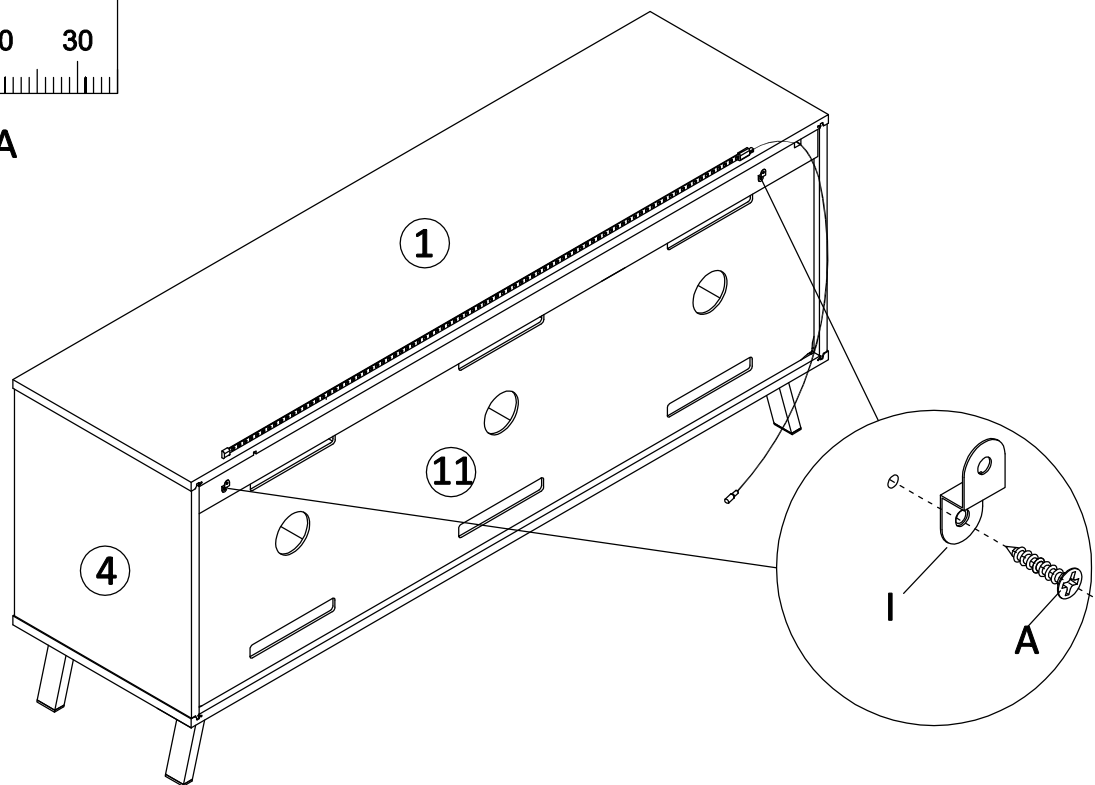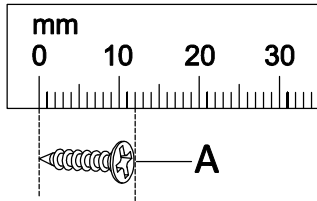


10

 CAUTION, When peeling off LED adhesive strip, take extra care to peel ONLY the protective strip, not the adhesive strip.

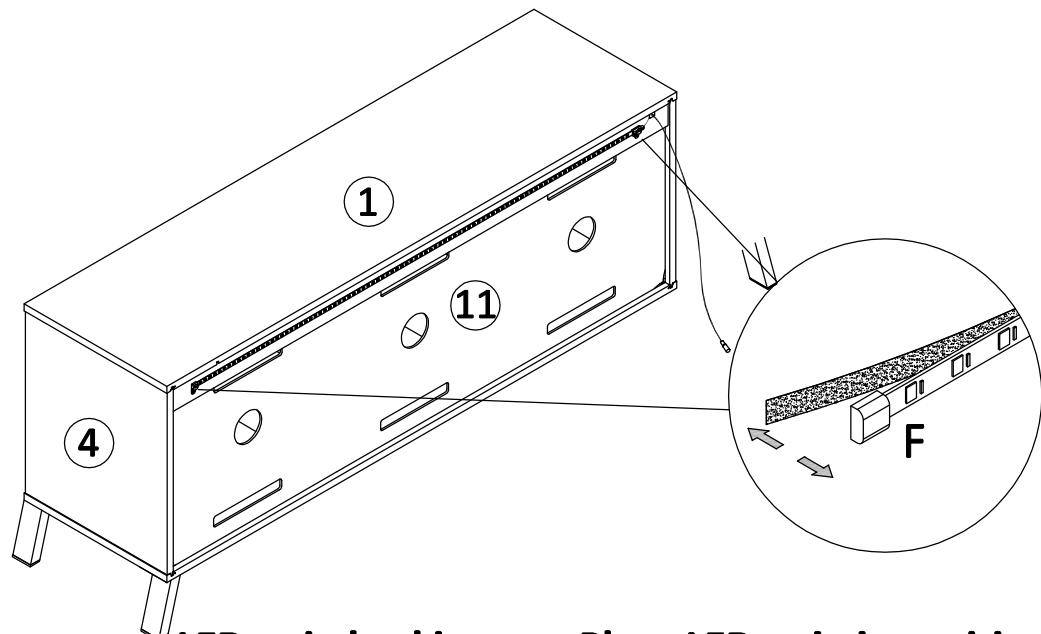


- 2. Do not remove LED strip backing yet. Place LED strip in position under the clip and lay LED strip in place.**
- 3. Start from the CLIP end, remove the LED strip backing with care and place in position on the edge of the back panel pressing firmly.**
- 4. Gently pull the wires so that the end of the LED strip is straight and sticking in position.**

 11

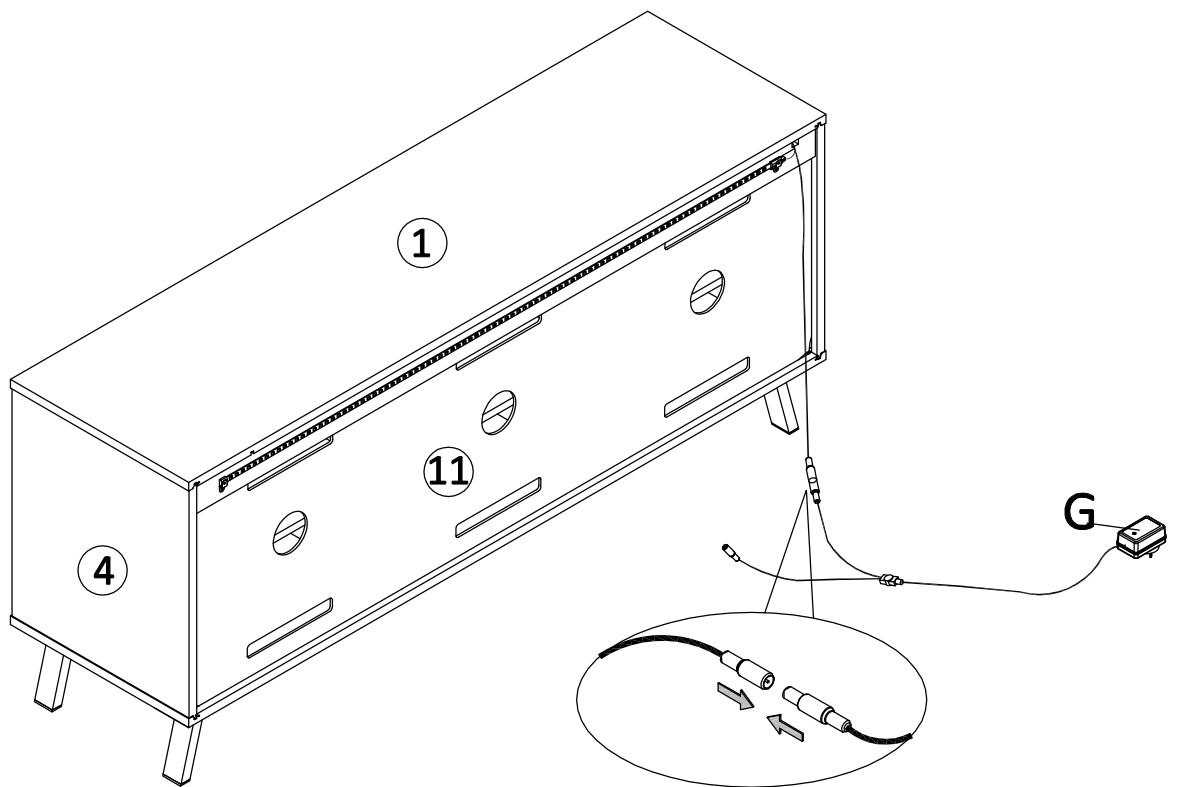


12



 
NOTE : See separate instructions provided on setting up the app / LED strip and Alexa voice control.

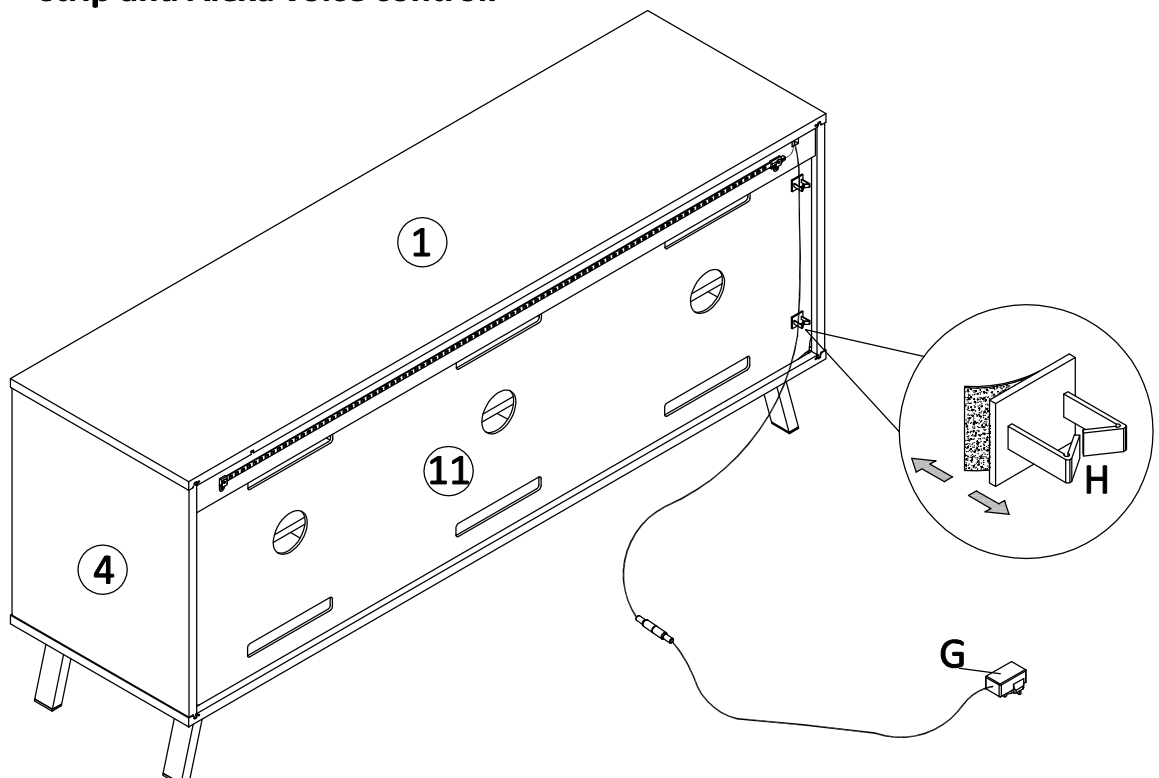

13

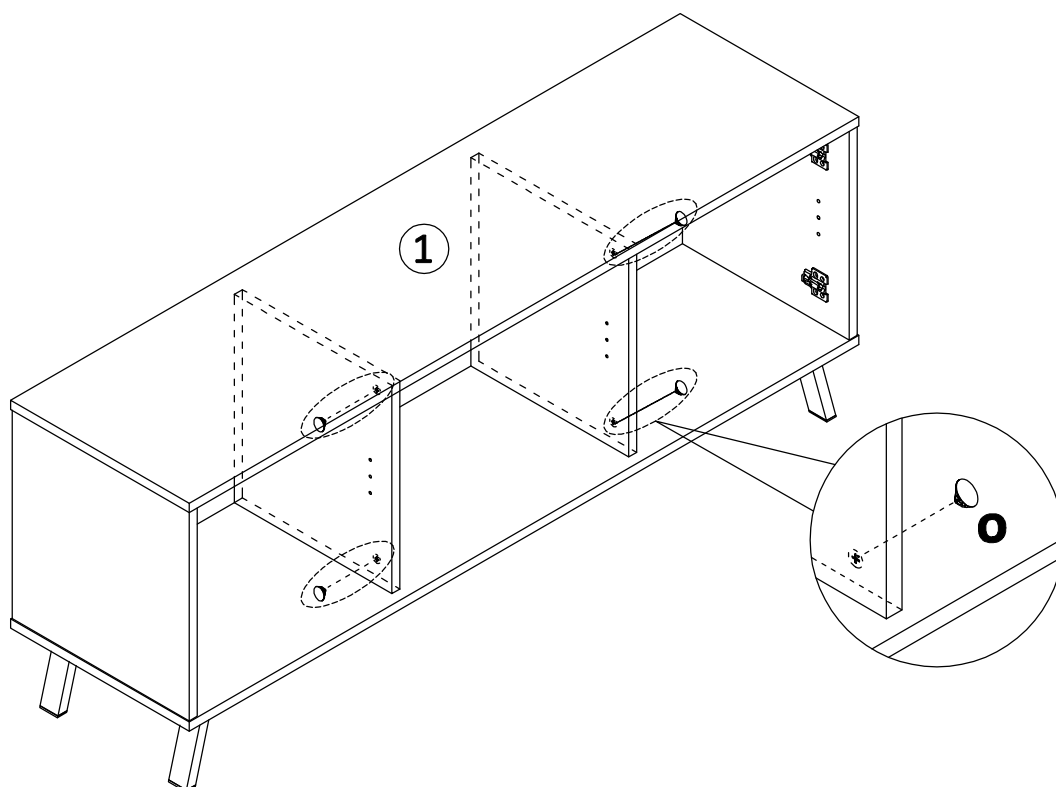 


14

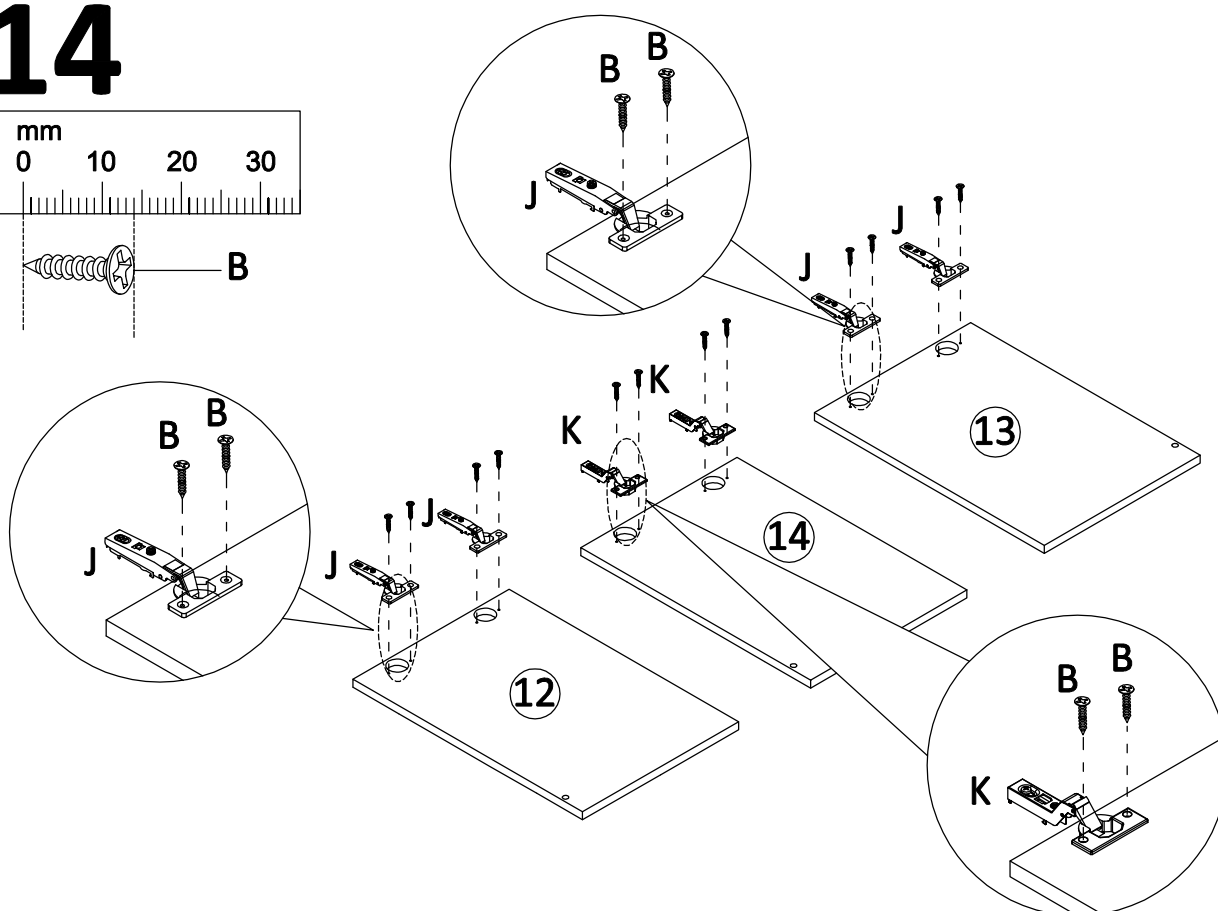   

15



 PUSH

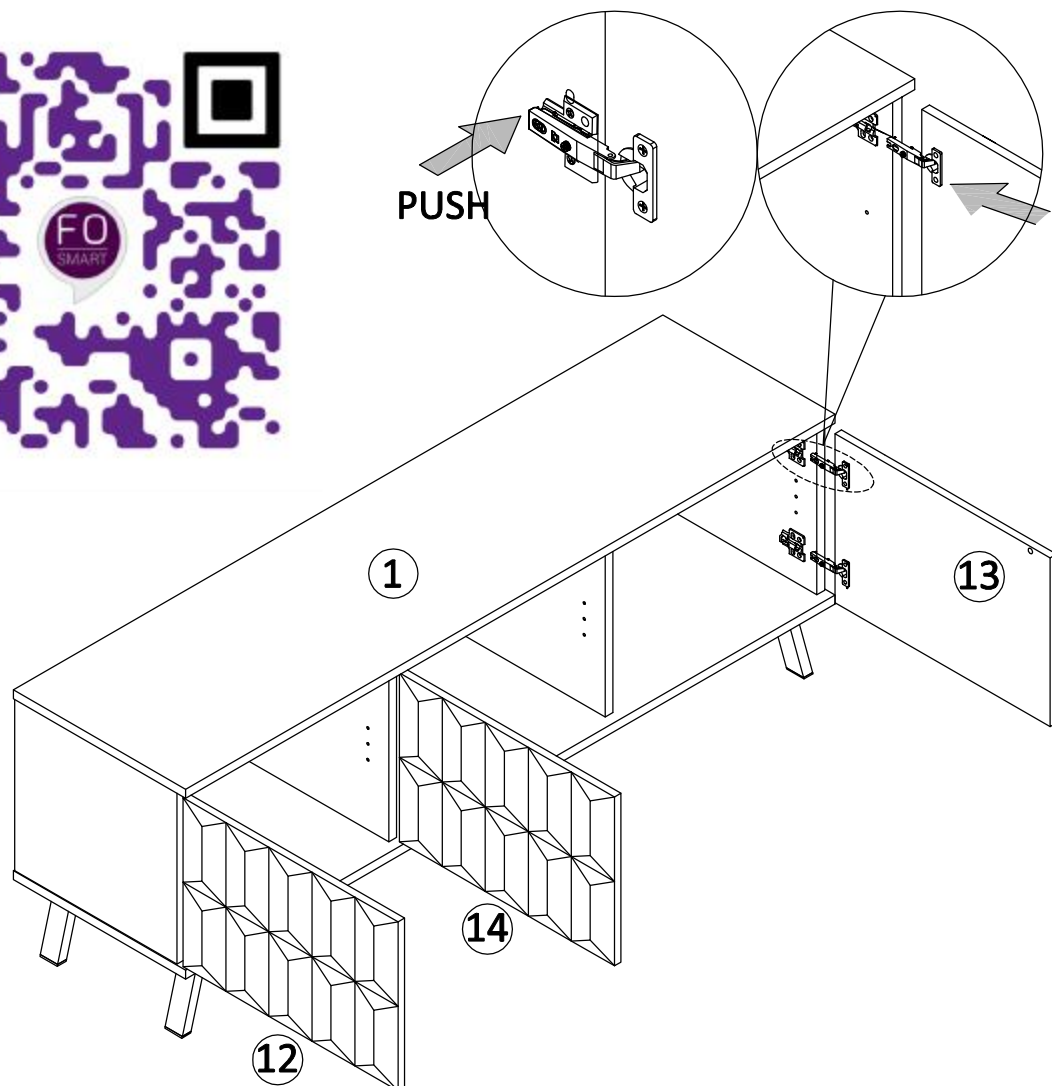

16

To get the doors aligned perfectly, the hinges can be adjusted in three places.

(A) Hinge Plate

Up

Down

(B) Door Alignment

 
Right

Left



(C) Hinge ARM

Back

Forward

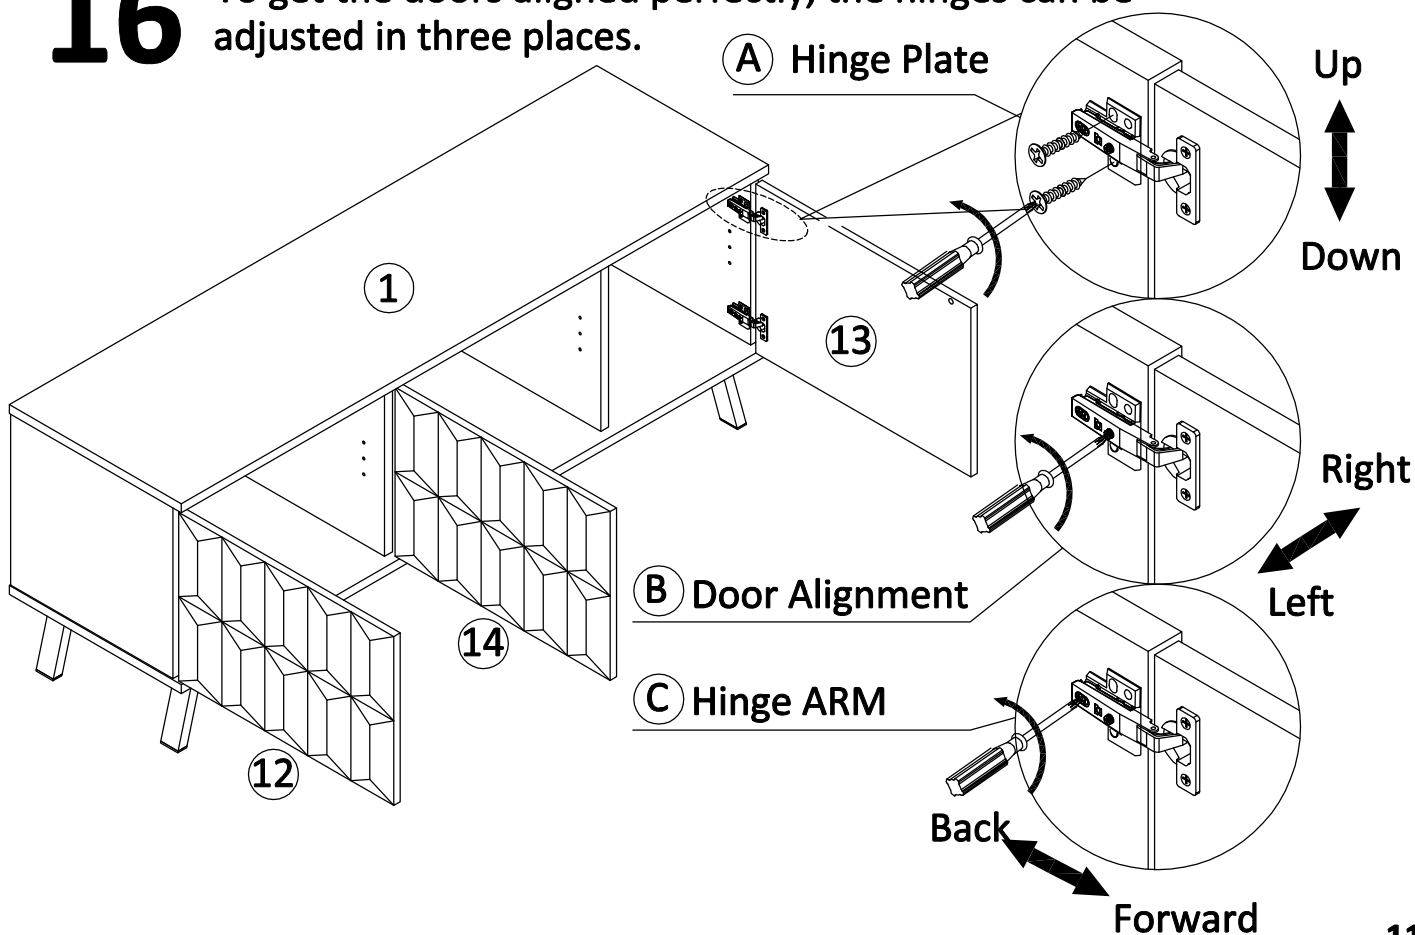


17

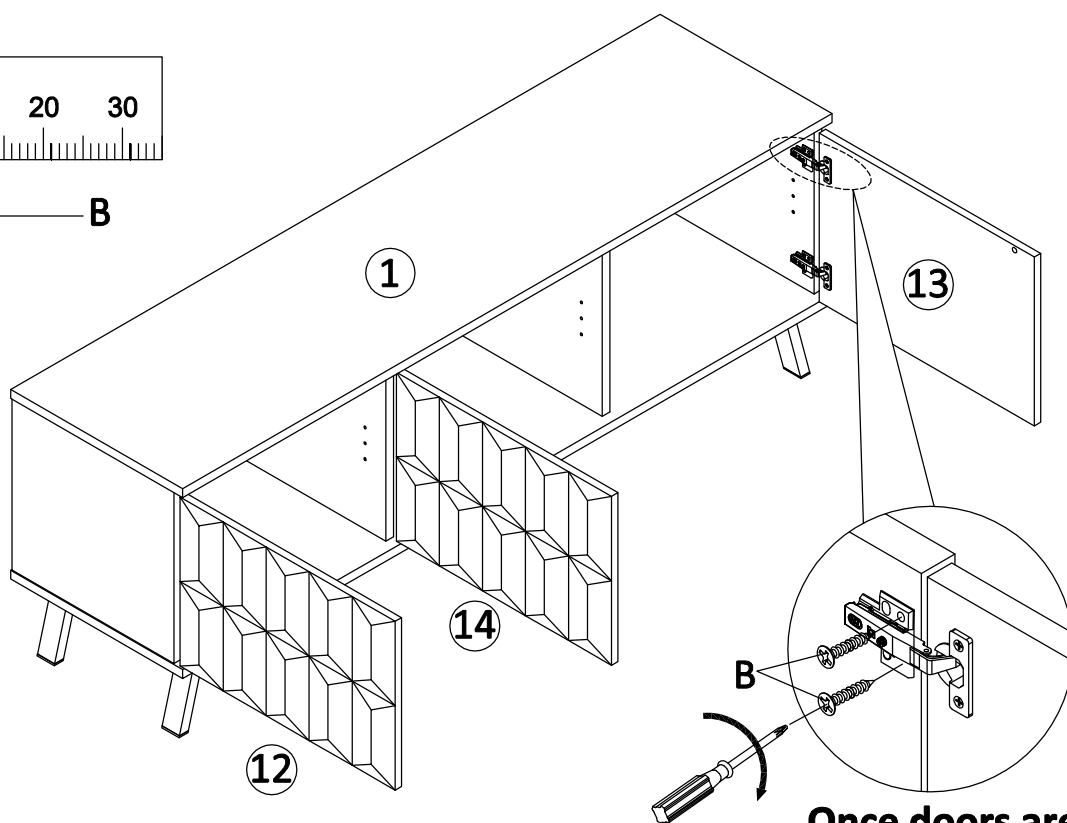  


Once doors are aligned, use extra screws to strengthen the hinge.

 18

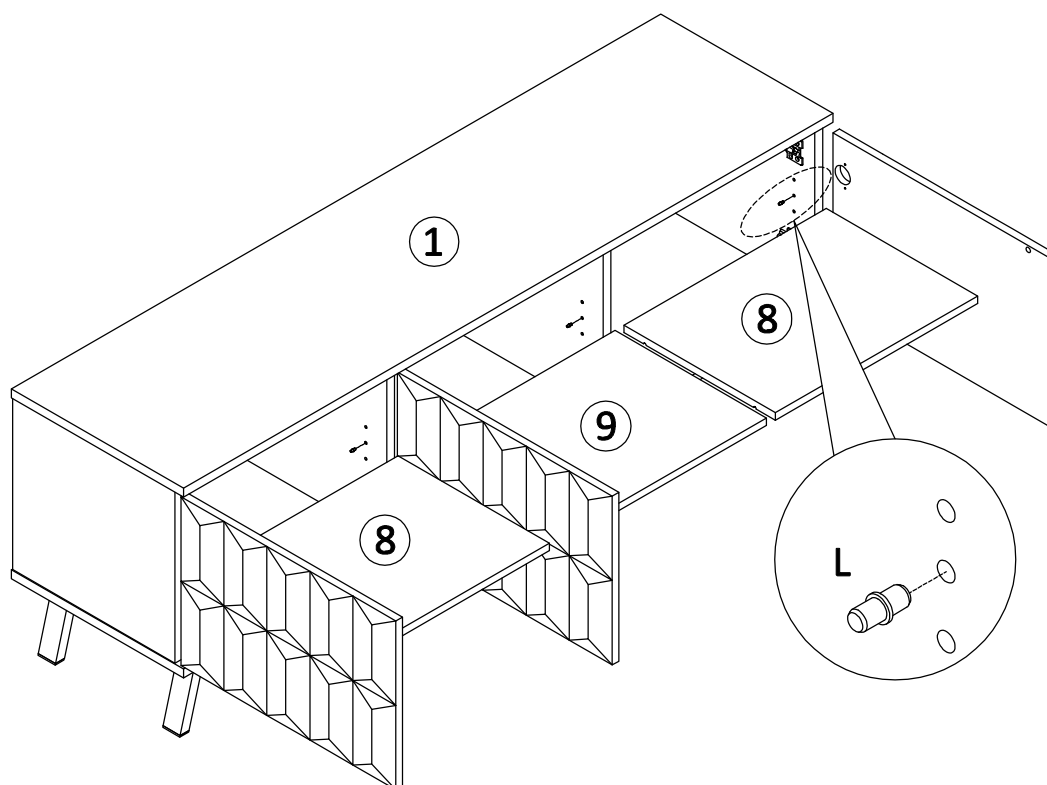

19

 NOTE: If the push to open mechanism is not working properly, Simply turn the end of the barrel to adjust.

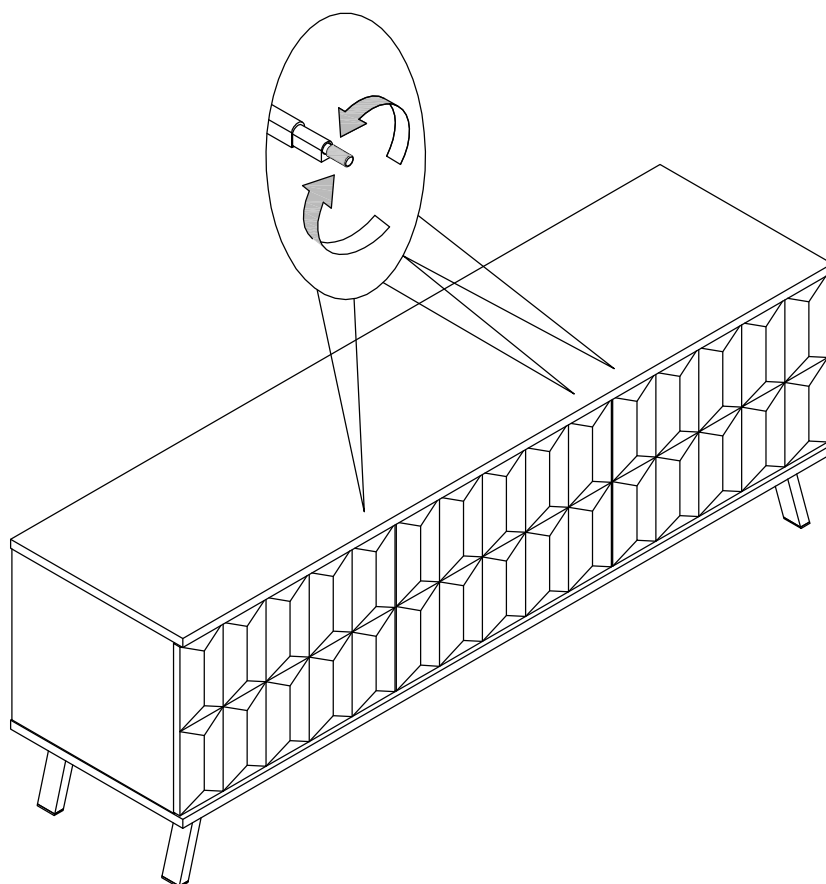

20

Wall Fixing Installation Instructions: Textile strap

Step 1

Place your product in the final position. Mark the wall with a pencil where corresponding hole will be drilled into wall. Check for hidden gas and water pipes and / or electrical wiring. Drill holes and fit an appropriate wall plug (not supplied) for your wall type. Screw the strap to the wall. Choose an appropriate screw to secure. If in any doubt please consult a professional.

Note 1

The wall plug and the screw / washer are not supplied as the wall types may vary

Note 2

The require gap between product and the wall is at least 25 mm.

Note 3

 
The end of the textile straps which are fixed to the wall should be about 25mm lower than the end fixed to the furniture.

CAUTION:

Where wall fixings are supplied it is essential that these are used to provide additional stability in order to avoid the furniture toppling over with risk of injury.


CAUTION:

Always ensure the area to be drilled is free from hidden electrical wires, water and gas pipes.

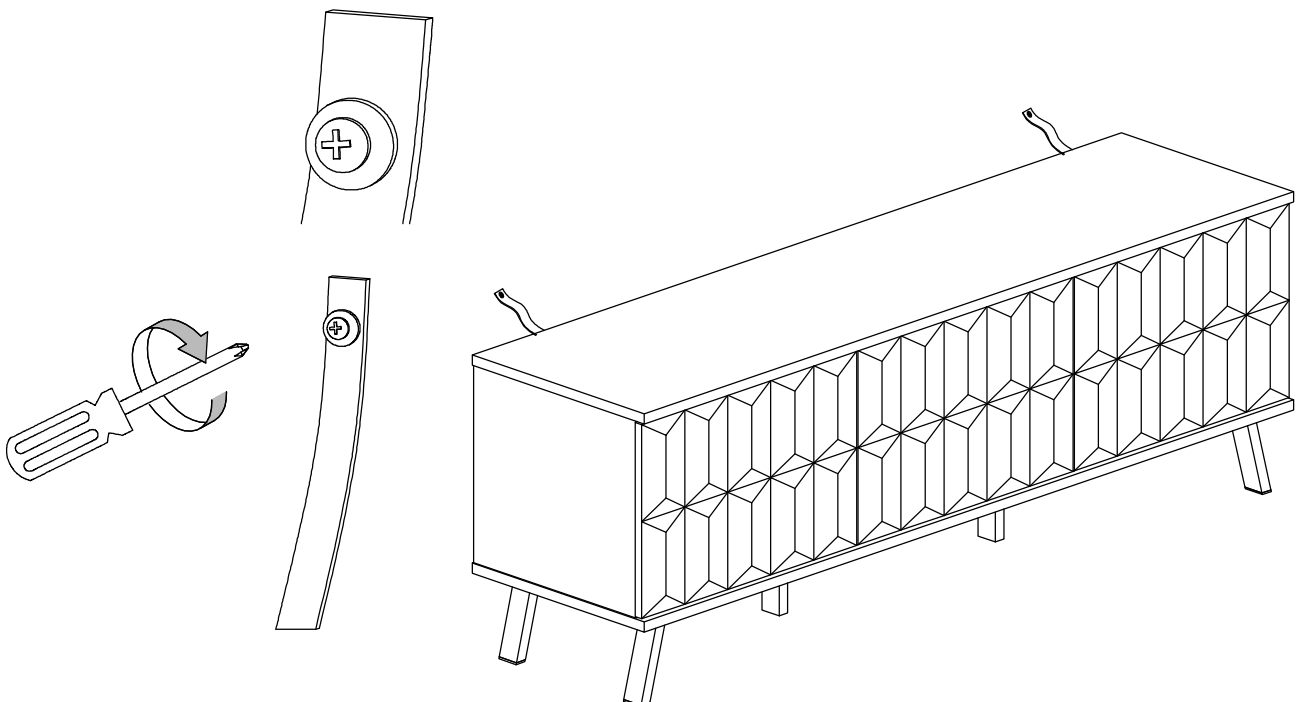


21 Disassembly Instructions

 Unlock the cam fixing (top and bottom) of panels 6 and 7
Gently insert Disassembly rod 'M' in to the triangle shown in the diagram as 'KEY' .
Once all the way in, the panels will come apart. Due to the click system, the panels may need a gently 'nudge or tap ' to release them.

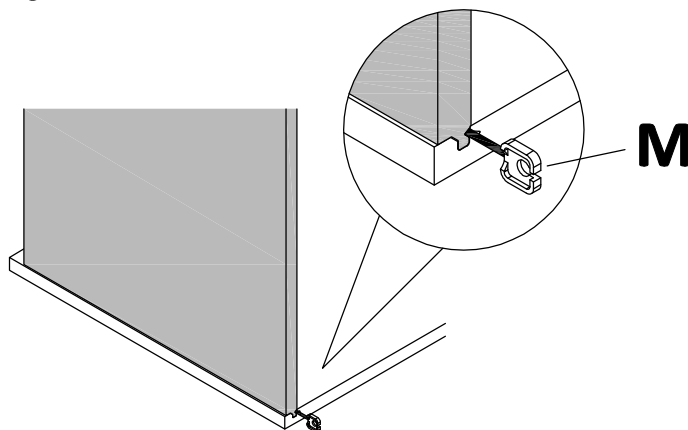

 Insert rod 'M' into each section panel to disassemble panel at a time

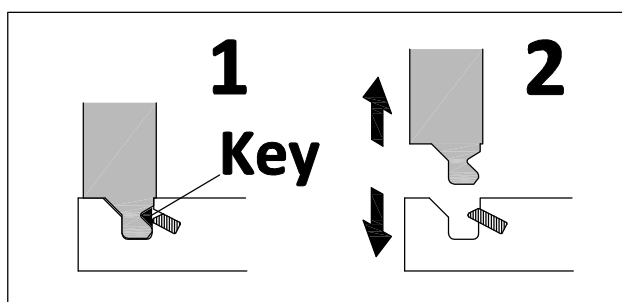


We highly recommend watching the quick help video before disassembling. Simply place a phone camera over the QR code below for a quick link to the video



22

 Finish - Remove all visible stickers when assembly is fully completed.

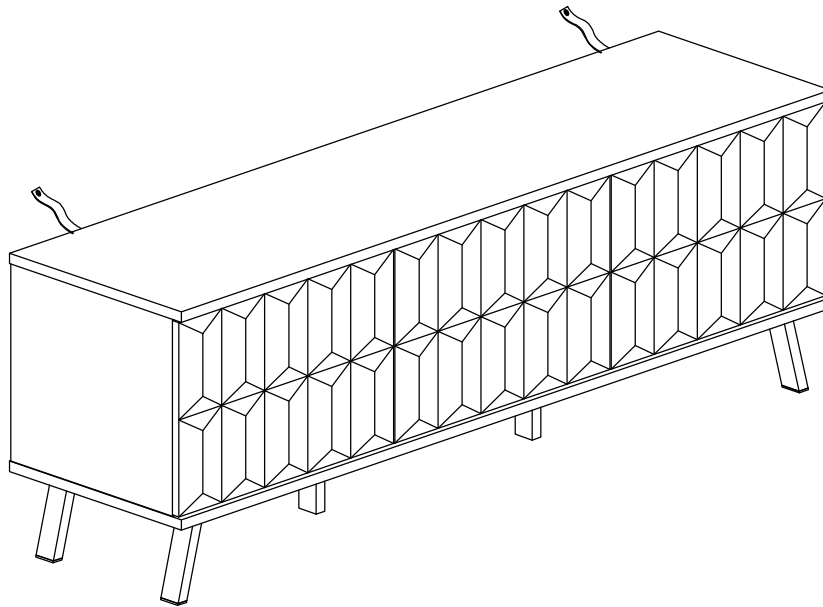

CLEANING ADVICE:

To avoid scratching the surfaces, clean only with a non abrasive cleaner.

NOTES ON SETTING UP WIFI

The LEDS lights only work on 2.4 GHz, they will not work on 5.0 GHz

Most homes are 2.4 GHz or operate a dual function. If for any reason the LED lights are not connecting to the app or Alexa, please check the router setting. Most routers will operate both 2.4 and 5.00 GHz so there should be no problem.

In commercial premises, there maybe software to block access connection to unknown apps or services. If this happens, please check with IT Department.

The system will work from a mobile WiFi hotspot from one phone to another. We recommend this approach if there are access issues.

Ensure Bluetooth setting is on.

QUICK HELP GUIDE & TIP VIDEOS

LED LIGHT SET UP GUIDES



Pairing mode



Re-setting pairing mode



AP mode



Re-setting AP mode



Help in setting up Intelligent Eye

Simply hold the camera on a smartphone over the QR code above to go to a quick link to the help video