
marantz

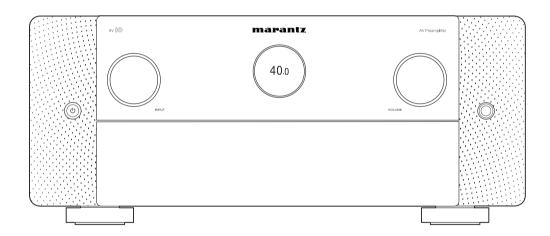

AV [] | AV Preamplifier

Owner's Manual

Accessories	9
Inserting the batteries	10
Operating range of the remote control unit	10
Features	11
High quality sound	11
High performance	15
Easy operation	19
Part names and functions	20
Front panel	20
Display	25
Rear panel	28
Remote control unit	32

Connections

3	peaker installation	37
3	onnecting a power amp	43
	Before connecting a power amp	43
	Speaker configuration and "Amp Assign" settings	48
	Connecting 5.1-channel speakers	50
	Connecting 7.1-channel speakers	51
	Connecting 9.1-channel speakers	53
	Connecting 11.1-channel speakers	55
	Connecting 13.1-channel speakers	58
	Connecting 15.1-channel speakers	61
	Connecting 17.1-channel speakers	63
	Connecting 13.1-channel speakers : Bi-amp connection of front speakers	64
	Connecting 13.1-channel speakers : Second pair of front speakers	65



Connecting a TV	66
Connection 1: TV equipped with an HDMI connector and compatible with the ARC / eARC	67
Connection 2 : TV equipped with an HDMI connector and incompatible with the ARC / eARC	68
Connecting a playback device	69
Connecting a set-top box (Satellite tuner/cable TV)	71
Connecting a media player	72
Connecting a Blu-ray Disc player or DVD player	73
Connecting a game console or player device compatible with 8K	74
Connecting a turntable	75
Connecting a USB memory device to the USB port	76
Connecting to a home network (LAN)	77
Wired LAN	77
Wireless LAN	78
Connecting an external control device	79
AMP CONTROL jacks	79
REMOTE CONTROL jacks	80
FLASHER IN jack	82
DC OUT jacks	83
Connecting the power cord	84

Playback

Basic operation	86
Turning the power on	86
Selecting the input source	86
Adjusting the volume	87
Turning off the sound temporarily (Muting)	87
Playback a Blu-ray Disc player/DVD player	87
Playing a USB memory device	88
Playing files stored on USB memory devices	88
Listening to music on a Bluetooth device	92
Playing music from Bluetooth device	93
Pairing with other Bluetooth devices	94
Reconnecting to this unit from a Bluetooth device	95
Listening to audio on Bluetooth headphones	96
Listening to audio on Bluetooth headphones	97
Reconnecting to a Bluetooth headphones	98
Disconnecting Bluetooth headphones	98



Listening to Internet Radio	99
Listening to Internet Radio	100
Playing back files stored on a PC or NAS	101
Playing back files stored on a PC or NAS	102
Getting the HEOS App	105
HEOS Account	106
Playing from streaming music services	107
Listening to the same music in multiple rooms	110
AirPlay function	114
Playing songs from your iPhone, iPod touch or iPad	115
Playing iTunes music with this unit	115
Play a song from your iPhone, iPod touch or iPad on multiple synced devices (AirPlay 2)	116

3	potify Connect function	117
	Playing Spotify music with this unit	117
3	onvenience functions	118
	Adding to HEOS Favorites	119
	Playing back HEOS Favorites	119
	Deleting a HEOS Favorites	120
	Adjusting the audibility of dialog and vocals (Dialog Enhancer)	120
	Adjusting the volume of each channel to match the input source (Channel Level Adjust)	121
	Adjusting the tone (Tone)	122
	Selecting a Dirac Live filter (Dirac Live)	123
	Adjusting audio delay (Audio Delay)	123
	Changing the strength of Tactile Transducer according to the input source (Tactile Transducer)	124
	Displaying your desired video during audio playback (Video Select)	125
	Playing the same music in all zones (All Zone Stereo)	126
	Changing the speaker settings to match the listening environment (Speaker Preset)	127
3	electing a sound mode	128
	Selecting a sound mode	129
	Direct playback	130
	Pure Direct playback	130
	Auto surround playback	131
	Description of sound mode types	132
	Sound mode that can be selected for each input signal	137



HDMI Control function	142
Setting procedure	142
Sleep timer function	143
Using the sleep timer	144
Smart select function	145
Calling up the settings	146
Changing the settings	147
Panel lock function	149
Disabling all key button operations	149
Disabling all button operations except VOLUME	150
Canceling the Panel lock function	150
Remote lock function	151
Disabling the sensor function of the remote control unit	151
Enabling the remote sensor function	151
Web control function	152
Controlling the unit from a web control	152
Playback in ZONE2/ZONE3 (Another room)	155
Connecting ZONE	156
Playback the source in ZONE2/ZONE3	158
Adjusting the Volume in ZONE2/ZONE3	162

Settings

Menu map	163
Menu operations	168
Audio	169
Subwoofer Level Adjust	169
Bass Sync	169
Surround Parameter	170
M-DAX	177
Volume	178
Audyssey [®]	179
Dirac Live	182
Graphic EQ	182
DAC Filter	184
Video	185
HDMI Setup	185
Output Settings	190
On-Screen Display	191
Screensaver	192
4K/8K Signal Format	193
HDCP Setup	194
TV Format	195



Inputs	196
Input Assign	196
Source Rename	199
Hide Sources	199
Source Level	200
Speakers	201
Audyssey® Setup	201
Procedure for speaker settings (Audyssey® Setup)	203
Error messages	209
Retrieving Audyssey® Setup settings	211
Manual Setup	212
Speaker Layout	212
Amp Assign	212
Front/Center/Surround/Surround Back/Front Wide	213
Height Speakers	213
Layout	214
Front Layout / Middle Layout / Rear Layout / TS/CH	215
Subwoofers	220
Subwoofer Mode	220
Subwoofer Layout	221
Bi-Amp	224
Front B	224
Settings	225
View Terminal Config.	225

	Distances	225
	Levels	227
	Crossovers	227
	Speaker Preset	228
	Advanced	229
	Subwoofer Output	229
	Low Pass Filter	230
	Distribution	231
	Front Speaker	231
	2ch Playback	232
	Tactile Transducer	235
D	irac Live Setup	236



Network	237
Information	237
Connection	237
Wi-Fi Setup	238
Settings	240
Network Control	241
Friendly Name	242
Diagnostics	242
AirPlay	243
Spotify Connect	244
TIDAL Connect	244
Wi-Fi and Bluetooth	244
HEOS Account	245
You have not signed in	245
You have already signed in	245

General	246
Language	246
Owner's Manual	246
Bluetooth Transmitter	246
ZONE2 Setup / ZONE3 Setup	247
Zone Rename	250
Smart Select	250
Trigger Out 1 / Trigger Out 2	251
Auto Standby	252
Front Panel	253
Firmware	254
Information	256
Usage Data	258
Save & Load	258
Setup Lock	259
Reset	259
Setting the back light of the remote control unit	260
Disabling the backlight	260
Specifying the zone used with the remote control unit	261



Tips

Γ	ips	
Γ	roubleshooting	
	Power does not turn on / Power is turned off	266
	Operations cannot be performed through the remote control unit	267
	Display on this unit shows nothing	267
	No sound comes out	268
	Desired sound does not come out	269
	Sound is interrupted or noise occurs	273
	No video is shown on the TV	274
	The menu screen is not displayed on the TV	276
	The color of the menu screen and operations content displayed on the television is different from normal	276
	AirPlay cannot be played back	277
	USB memory devices cannot be played back	278
	Bluetooth cannot be played back	279
	The Internet radio cannot be played back	281
	Music files on PC or NAS cannot be played back	282
	Various online services cannot be played	283
	The HDMI Control function does not work	283
	Cannot connect to a wireless LAN network	284
	When using HDMI ZONE2, the devices does not function properly	285
	Update error messages	286

Resetting factory settings	287
Resetting network settings	288
Factory Restore	289

Appendix

290
294
296
297
298
299
299
299
300
302
305
308
319
323
323
324
325
326
328




Thank you for purchasing this Marantz product.

To ensure proper operation, please read this owner's manual carefully before using the product.

After reading this manual, be sure to keep it for future reference.

Accessories

Check that the following parts are supplied with the product.

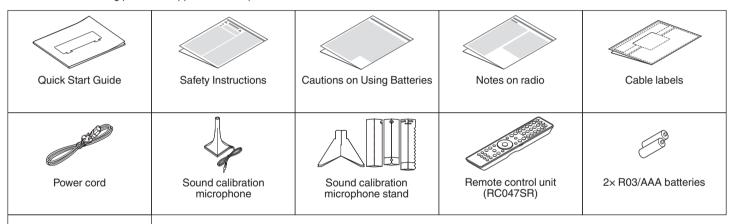



External antennas for Bluetooth/wireless connectivity




Inserting the batteries

1 Remove the rear lid in the direction of the arrow and remove it.



2 Insert two batteries correctly into the battery compartment as indicated.

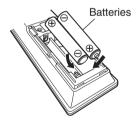


Put the rear cover back on.

NOTE

- To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.

Operating range of the remote control unit

Point the remote control unit at the remote sensor when operating it.

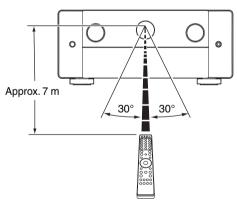



Features

High quality sound

15.4-channel processing with 17.4-channel XLR/RCA pre-outs
 Experience a versatile home theater setup with the new processor/
 preamplifier. Featuring 15.4-channel processing capability with 17.4 channel XLR and RCA pre-outs, this unit works with most demanding
 home theater gear up to 9.4.6 speaker configurations. Enjoy the
 audiophile quality sound you expect from Marantz.

· Discrete 4 subwoofers

Immerse yourself in evenly distributed, accurate bass. Featuring up to four subwoofer outputs to smooth out low frequencies and provide better dispersion. No audible peaks or dips - just powerful, room-filling bass.

· Current feedback amplifier

This unit uses a high-speed current feedback amplifier circuit for its preamplifier so that signals from a Blu-ray Disc player and other equipment that support high-definition audio formats can be amplified with high fidelity. The high-speed current feedback amplifier also reproduces a natural sound space.

• Dolby Atmos (底) p. 310)

This unit is equipped with a decoder that supports Dolby Atmos audio format. The placement or movement of sound is accurately reproduced by the addition of overhead speakers, enabling you to experience an incredibly natural and realistic surround sound field.

• Speaker Virtualizer (@ p. 172)

Speaker Virtualizer enables you to access a more immersive entertainment experience from traditional channel based speaker layouts through digital signal processing including Dolby Atmos height virtualization and surround virtualization.

- Speaker Virtualizer is not for use when both height speakers and surround speakers are connected.
- Height Virtualization may be applied when surround speakers are connected.

DTS:X Pro

This unit is equipped with the DTS:X Pro decoder technology. DTS:X Pro decoder brings the home theater experience to new heights with its immersive object based audio technology which removes the bounds of channels. Enjoy up to 15.1-channels of audio processing with DTS:X Pro to enjoy a full surround sound in exquisite detail.

• DTS Virtual:X (@ p. 313)

DTS Virtual:X technology features DTS's proprietary virtual height and virtual surround processing to deliver an immersive sound experience from any type of input source (stereo to 7.1.4 channel) and speaker configuration.

Index

• DTS Virtual:X is not for use when Height speakers are connected.



• IMAX Enhanced (@p. 313)

This IMAX Enhanced product have met stringent performance standards established by IMAX and DTS in order to create a consistent and higher bar for sound performance. DTS has developed a special method for reproducing an IMAX signature sound experience in the consumer's home. This method combines a unique conversion process for IMAX theatrical audio mixes utilizing an enhanced DTS codec technology. The IMAX theatrical audio format with point source surround speakers closely matches the speaker configuration most consumers have in their homes today. Coupled with DTS audio technology, IMAX Enhanced audio products will ensure the best and most accurate audio reproduction over 5.1 or more speaker channels.

- Audyssey LFC[™] (Low Frequency Containment) (PF p. 181)
 Audyssey LFC[™] solves the problem of low frequency sounds disturbing people in neighboring rooms or apartments. Audyssey LFC[™] dynamically monitors the audio content and removes the low frequencies that pass through walls, floors and ceilings. It then applies psychoacoustic processing to restore the perception of low bass for listeners in the room. The result is great sound that no longer disturbs the neighbors.
- Discrete subwoofers and Audyssey Sub EQ HTTM (F) p. 202)
 The unit has four subwoofer output capability and can adjust the level and delay for each subwoofer individually.

 Audyssey Sub EQ HTTM makes the integration seamless by first compensating for any level and delay differences between the four subwoofers and then applying Audyssey MultEQ® XT32 to four subwoofers together for improved deep bass response and detail.



· Dirac Live Upgradability

The interaction between your sound system and the physical layout of your room has a huge impact on sound quality. Dirac Live® Room Correction applies state-of-the-art, patented algorithms to analyze and digitally reduce room impact and enhance speaker performance. Dirac Live delivers a larger sweet spot, accurate staging, clarity, voice intelligibility, and a deeper, tighter bass not otherwise possible. Fully tunable to your preference.

You can purchase a Dirac Live license key to unlock the functionality. Visit www.dirac.com/marantz/

. Dirac Live Bass Control Upgradability

Dirac Live Bass Control is a technology to manage low-frequency channel routing from the signal to the playback channels (speakers) of your audio device. Additionally, with full control over the device's channel and frequency routing and output, the Dirac Live Room Correction technology is significantly augmented. In particular systems with multiple subwoofers will see a substantially improved room correction and bass performance.

For details, please refer to Dirac Live Manual.

https://manuals.marantz.com/DiracLive/ALL/EN




• Auro-3D

This unit is equipped with an Auro-3D decoder.

With Auro-3D, Front Height (FHL + FHR), Surround Height (SHL + SHR) and Top Surround (TS/optional) are added to a conventional 5.1-channel system to achieve a natural and realistic sound field that is three-dimensional and fully immersive.

You will be able to fully enjoy Auro-3D playback if you properly place the speakers for Auro-3D.

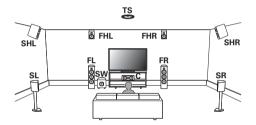




Auro-3D recommends adding FRONT HEIGHT and SURROUND HEIGHT speakers to a 5.1 speaker configuration. Optionally, you may substitute REAR HEIGHT, ceiling
speakers, Dolby Atmos Enabled speakers instead of FRONT HEIGHT and SURROUND HEIGHT speakers for Dolby Atmos, DTS:X and Auro-3D playback.



High performance

 · 8K 60Hz input/output supported



When 8K Ultra HD (High Definition) is used, an input/output speed of 60 frames per second (60p) is achieved for video signals. When connected to 8K Ultra HD and 60p video signal input compatible TV, you can enjoy the sense of realism only available from high-definition images, even when viewing fast-moving video.

This unit supports a wide range of HDR content, delivering even higher definition video.

• HDCP 2.3

This unit is compatible with HDCP 2.3 copyright protection standard.

• Digital video processor upscales 1080p / 4K to 8K



This unit is equipped with a 8K video upscaling function that allows 1080p/4K video to be output via HDMI at 8K (7680×4320 pixels) resolution. This function enables the device to be connected to a TV using a single HDMI cable, and produces high definition images for any video source.

eARC (Enhanced Audio Return Channel) function compatibility
 The eARC function is compatible with conventional ARC function-compatible audio formats in addition to multichannel linear PCM, Dolby TrueHD, Dolby Atmos, DTS-HD, DTS:X and other audio formats a conventional ARC function cannot transmit.

Additionally, connecting to an eARC function-compatible television.


enables enjoyment of higher-quality surround playback of the audio

content played from your television.

Equipped with HDMI ZONE2 output (Pp. 155)
 The ZONE2 multi-room output includes an HDMI output that lets you enjoy a different A/V source in that room, with another program playing in the main room.




 HDMI connections enable connection to various digital AV devices (7 inputs, 3 outputs)

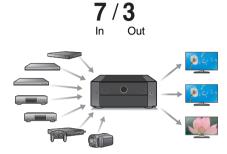

This unit is equipped with 7 HDMI inputs enabling connection to various HDMI compatible devices such as Blu-ray Disc players, game consoles and HD video camcorders. There are dual HDMI outputs for the main room, and a third HDMI output for another room.

 The device is equipped with a AirPlay[®] function in addition to network functions such as Internet radio etc. (@ p. 114)

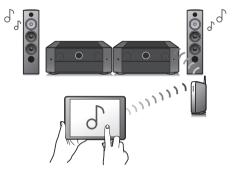

You can enjoy a wide variety of content, including listening to Internet Radio, playing audio files stored on your PC.

This unit also supports Apple AirPlay which lets you stream your music library from an iPhone[®], iPad[®], iPod touch[®] or iTunes[®].

• Supports AirPlay 2® wireless audio

Sync multiple AirPlay 2 compatible devices/speakers for simultaneous playback.


This unit supports AirPlay 2 and requires iOS 11.4 or later.



Playback of DSD and FLAC files via USB and networks

This unit supports the playback of high resolution audio formats such as DSD (5.6 MHz) and FLAC 192 kHz files. It provides high quality playback of high resolution files.

 Wireless connection with Bluetooth devices can be carried out easily (@p. 92)

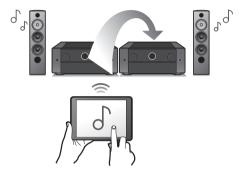


You can enjoy music simply by connecting wirelessly with your smartphone, tablet, PC, etc.

• Connect Bluetooth headphones

This unit can transmit Bluetooth so you can enjoy audio wirelessly through your Bluetooth headphones.

Playback can be performed using connected speakers and Bluetooth headphones simultaneously, or only using Bluetooth headphones.

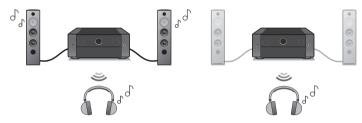




Multi-Room audio (I p. 126)

[MAIN ZONE]

[ZONE2] / [ZONE3]

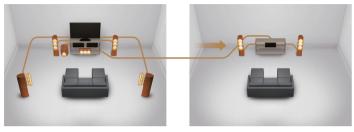

You can select and play back the respective inputs in MAIN ZONE, ZONE2 and ZONE3.

In addition, when the All Zone Stereo function is used, the music being played back in MAIN ZONE can be enjoyed in all the zones at the same time. This is useful when you want to let the background music propagate throughout the whole house.

· Energy-saving design

This unit is equipped with an auto-standby function that automatically turns off the power supply when the unit is not in use. This helps reduce unnecessary power use.

 Compatible with the "Marantz AVR Remote" App* for performing basic operations of the unit with an iPad, iPhone or Android™ devices (Google, Amazon Kindle Fire)




The Marantz AVR Remote app gives you full control of this unit as well as access to its setup menu for detailed adjustments from your phones or tablets. "Marantz AVR Remote" App also gives you quick access to the receiver's status display, option menus, Marantz Blu-ray Disc player control, and online owner's manual for your convenience.

* Download the appropriate "Marantz AVR Remote" App for your iOS or Android devices. This unit needs to be connected to the same LAN or Wi-Fi (wireless LAN) network that the iPad, iPhone or Android™ is connected to.



HEOS provides streaming music from your favorite online music sources

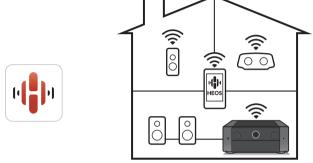

HEOS wireless multi-room sound system that enables you to enjoy your favorite music anywhere and everywhere around your home. By utilizing your existing home network and the HEOS App (available for iOS, Android and Amazon devices), you can explore, browse, and play music from your own music library or from many online streaming music services.

When multiple products with HEOS Built-in are connected to the same network, they can be grouped to play the same music on all products simultaneously, or different music can be played on each one.

Easy operation


- "Setup Assistant" provides easy-to-follow setup instructions
 First select the language when prompted. Then simply follow the instructions displayed on the TV screen to set up the speakers, network, etc.
- Easy to use Graphical User Interface
 This unit is equipped with a Graphical User Interface for improved operability.



Contents Connections **Playback** Settings **Appendix** Tips

Part names and functions


Front panel

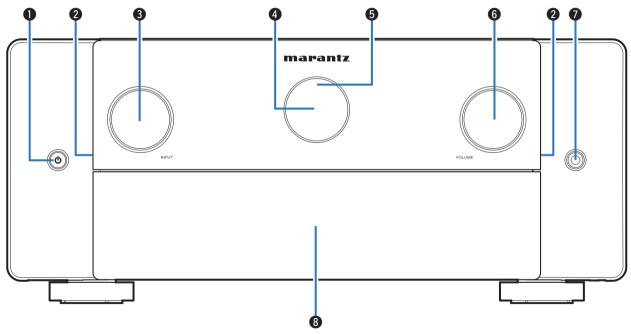

For details, see the next page.

Front panel



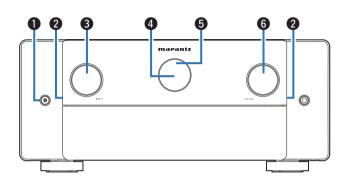

1 Power operation button (4)

Used to turn the power of the MAIN ZONE (room where this unit is located) on/off (standby). ($\ensuremath{ \mbox{($\mathcal{T}$ p. 86)}}$

Illumination

This lights up when the power is turned on. If you press the DIMMER button, the brightness of the illumination is switched in conjunction with the brightness of the display.

The illumination turned off from "Front Panel" of the settings menu. ($\ensuremath{ \mbox{\sc p}}$ p. 253)

INPUT selector knob

This selects the input source. (@p. 86)

4 Main display

This displays various pieces of information. (p. 25)


6 Remote control sensor

This receives signals from the remote control unit. (FP p. 10)

6 VOLUME knob

This adjusts the volume level. (@p. 87)



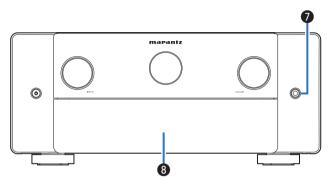

Headphones jack

This is used to connect headphones.


When the headphones are plugged into this jack, audio will no longer be output from the connected speakers or from the PRE OUT connectors.

NOTE

 To prevent hearing loss, do not raise the volume level excessively when using headphones.


Opening

When using the buttons and/or terminals behind the door, pull both sides of the door towards you to open it. Be careful not to catch your fingers when closing the door.

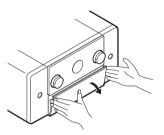



With the door open

 

PURE DIRECT button

This switches the sound mode between Direct, Pure Direct and Auto. ($\prescript{\begin{tabular}{l} \end{tabular}}$ p. 130 – 131)

M-DAX button

This enables the M-DAX mode. (PP p. 177)

STATUS button

Each press of this switches the status information that is shown on the display.

DIMMER button

Each press of this switches the brightness of the display. (PP p. 253)

Sub display

This displays various pieces of information. (FP p. 26)

() Information button (INFO)

This displays the status information on the TV screen. (p. 257)

Cursor buttons

These select items.


8 ENTER button

This determines the selection.

OPTION button

This displays the option menu on the TV screen.



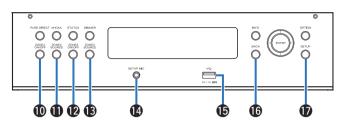

10 ZONE2 ON/OFF button

This turns the power of ZONE2 (another room) on/off. (@p. 158)

1 ZONE2 SOURCE button

This selects the input source for ZONE2. (@p. 158)

2 ZONE3 ON/OFF button

This turns the power of ZONE3 (another room) on/off. (@p. 158)

(B) ZONE3 SOURCE button

This selects the input source for ZONE3. (@p. 158)

SETUP MIC jack

This is used to connect the supplied Sound calibration microphone. (FF p. 204)

⊕ USB port (•←)

This is used to connect USB storages (such as USB memory devices). (FF p. 76)

Index

(f) BACK button

This returns to the previous screen.

® SETUP button

This displays the menu on the TV screen. (FF p. 168)




Display

■ Main display

The input source name, sound mode, setting values and other information are displayed here.

☐ Standard display

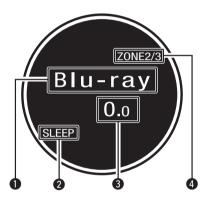

1 Input source indicator

The currently selected input source name is displayed.

If the input source name has been changed using "Source Rename" in the menu, the input source name after the change is displayed. (pp. 199)

Sleep timer indicator


This lights when the sleep mode is selected. (p. 143)

- Volume indicator
- 4 ZONE2/ZONE3 power on display

Lights up when ZONE2 power is turned on.
Lights up when ZONE3 power is turned on.
Lights up when ZONE2 and ZONE3 power is turned on. (译音 p. 160)



■ Sub display

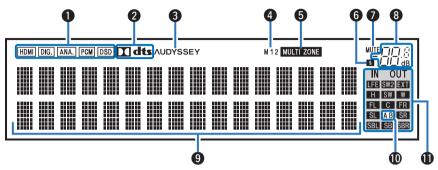

1 Input signal indicators

These light according to the audio input mode settings of each input source. (127 p. 198)

2 Decoder indicators

These light when Dolby or DTS signals are input or when the Dolby or DTS decoder is running.

Audyssey® indicator

This lights when "MultEQ® XT32", "Dynamic EQ", "Dynamic Volume" or "Audyssey LFCTM" has been set up. (🕼 p. 179)


Monitor output indicator

These light according to the HDMI monitor output setting. When set to "Auto(Dual)", the indicators light according to connection status.

MULTI ZONE indicator

This lights up when ZONE2 or ZONE3 (another room) power is turned on. ($(\mbox{$\mathbb{Z}$}\mbox{$\mathbb{P}$}$ p. 160)



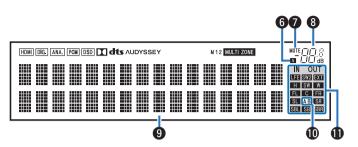

6 Sleep timer indicator

This lights when the sleep mode is selected. (PP p. 143)

- **MUTE indicator**This blinks while the sound is muted. (PF p. 87)
- Wolume indicator
- Information display

The input source name, sound mode, setting values and other information are displayed here.

Front speaker indicator

This lights according to the setting of the front A and B speakers.

• Input/output signal channel indicators


The channel for input/output signals is displayed according to the setting configured for "Channel Indicator". (p. 253)

- When "Channel Indicator" is set to "Output" (Default)
 These light when audio signals are being output from the speakers.
- When "Channel Indicator" is set to "Input"
 These light corresponding to the channels that include the input signals.

When playing HD Audio sources, the **M** indicator lights when a signal from an extension channel (a channel other than the front, center, surround, surround back, front height, front wide or LFE channel) is input.




Rear panel

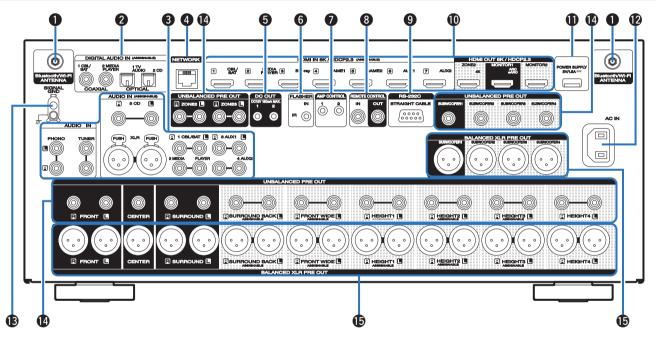

For details, see the next page.



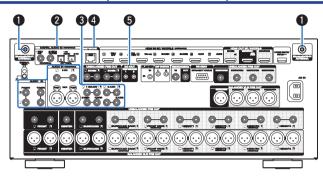

Bluetooth/wireless LAN antenna connectors

Used to connect the included external antennas for Bluetooth/wireless connectivity when connecting to a network via wireless LAN, or when connecting to a handheld device via Bluetooth. (Pp. p. 78)

- ① Place the external antennas for Bluetooth/wireless connectivity evenly over the screw terminal of rear.
- (2) Turn clockwise until the antennas is fully connected.
- (3) Rotate the antenna upwards for best reception.



Digital audio connectors (DIGITAL AUDIO)

Used to connect devices equipped with digital audio connectors.

- "Connection 2: TV equipped with an HDMI connector and incompatible with the ARC / eARC" (@p. 68)
- "Connecting a set-top box (Satellite tuner/cable TV)" (FF p. 71)
- "Connecting a media player" (@p. 72)

3 Analog audio connectors (AUDIO)

Used to connect devices equipped with analog audio connectors.

- "Connecting a set-top box (Satellite tuner/cable TV)" (@p. 71)
- "Connecting a Blu-ray Disc player or DVD player" (@p. 73)
- "Connecting a turntable" (@ p. 75)

NETWORK connector


Used to connect to a LAN cable when connecting to a wired LAN network. ((25 p. 77)

Index

6 DC OUT jacks

Used to connect devices equipped with the trigger function. (p p. 83)



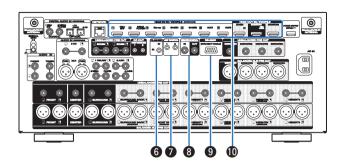

6 FLASHER IN jack

Used to connect commercially available (sold separately) IR repeaters. ($\ensuremath{ \mbox{\sc im}}\mbox{\sc p.}$ 82)

7 AMP CONTROL jacks

Used to connect a Marantz power amp that is equipped with AMP CONTROL terminals. You can turn this unit on/standby or change the brightness of the display in conjunction with the power amp. (PP p. 79)

8 REMOTE CONTROL jacks

Used to connect a Marantz product that is equipped with REMOTE CONTROL terminals. Use this when you want to control this unit with a remote control. (127 p. 80)

RS-232C connector

Used to connect home automation controller devices fitted with RS-232C connectors. Consult the owner's manual of the home automation controller for more information about serial control of this unit.

Perform the operation below beforehand.


- 1 Turn on the power of this unit.
- (2) Turn off the power of this unit from the external controller.
- (3) Check that the unit is in the standby mode.

M HDMI connectors

Used to connect devices equipped with HDMI connectors.

- "Connection 1: TV equipped with an HDMI connector and compatible with the ARC / eARC" (F) p. 67)
- "Connection 2: TV equipped with an HDMI connector and incompatible with the ARC / eARC" (@p. 68)
- "Connecting a set-top box (Satellite tuner/cable TV)" (126 p. 71)
- "Connecting a Blu-ray Disc player or DVD player" (@p. 73)
- "Connecting a game console or player device compatible with 8K" ($(\ensuremath{\mathfrak{SK}}^n$ p. 74)



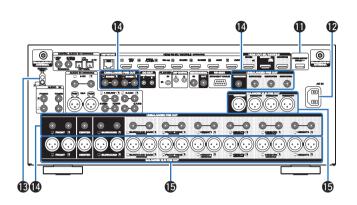

(1) USB port (POWER SUPPLY)

Can be used to power streaming media players, etc.

- ② AC inlet (AC IN)
 Used to connect the power cord. (② p. 84)
- SIGNAL GND terminal

Used to connect a ground wire for the turntable. (PP p. 75)

UNBALANCED RCA PRE OUT connectors

Used to connect a power amp with UNBALANCED RCA input connectors. (125° p. 45)

(B) BALANCED XLR PRE OUT connectors


Used to connect a power amp with BALANCED XLR input connectors. ($\ensuremath{\mathfrak{P}}$ p. 43)

NOTE

• Do not touch the inner pins of the connectors on the rear panel. Electrostatic discharge may cause permanent damage to the unit.



Remote control unit

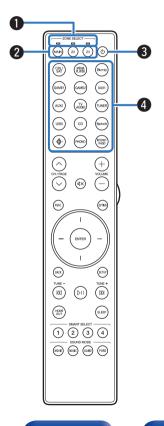

1 Zone mode indicators

The indicator of the zone that you are operating lights up.

2 ZONE SELECT buttons (MAIN, Z2, Z3)

These switch the zone (MAIN ZONE, ZONE2, ZONE3) that is operated through the remote control unit.

- "Playing different sources in MAIN ZONE, ZONE2 and ZONE3" (PP p. 160)
- "Menu operations" (@p. 168)
- "Specifying the zone used with the remote control unit" (@p. 261)

Index

3 POWER button (也)


This turns the power on/off.

- "Turning the power on" (@ p. 86)
- "Playback in ZONE2/ZONE3 (Another room)" (@p. 155)
- 4 Input source select buttons

These select the input source.

- "Selecting the input source" (@p. 86)
- "Playing different sources in MAIN ZONE, ZONE2 and ZONE3" (Pp p. 160)



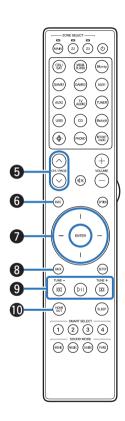

⑤ Channel/page search buttons (CH/PAGE △∨)

These switch pages. (@p. 100)

(6) Information button (INFO)

This displays the status information on the TV screen. (p. 257)

Cursor buttons

These select items.

BACK button

This returns to the previous screen.


9 System buttons

These perform playback related operations.

M HDMI OUT button

This sets the HDMI monitor output. (FF p. 190)



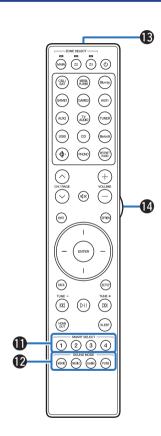

SMART SELECT buttons (1 - 4)

These call up settings registered to each button, such as input source, volume level and sound mode settings. (1257 p. 145)

12 SOUND MODE buttons

These select the sound mode. (p. 128)


Remote control signal transmitter

This transmits signals from the remote control unit. (PP p. 10)

Light button

This turns on the backlight for approx. 5 seconds. (@p. 260)



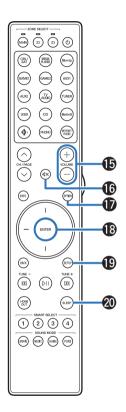

(1) VOLUME buttons (+-)

These adjust the volume level.

- "Adjusting the volume" (PP p. 87)
- "Adjusting the Volume in ZONE2/ZONE3" (@p. 162)

⑥ MUTE button (◀×)

This mutes the output audio.

- "Turning off the sound temporarily (Muting)" (@p. 87)
- "Turning off the sound temporarily (Muting)" (F) p. 162)

OPTION button

This displays the option menu on the TV screen.

® ENTER button

This determines the selection.

SETUP button

This displays the menu on the TV screen. (PP p. 168)

SLEEP button

This sets the sleep timer. (Pp. 143)



■ Contents


Speaker installation	37
Connecting a power amp	43
Connecting a TV	66
Connecting a playback device	69
Connecting a USB memory device to the USB port	76
Connecting to a home network (LAN)	77
Connecting an external control device	79
Connecting the power cord	84

NOTE

- Do not plug in the power cord until all connections have been completed.
 However, when the "Setup Assistant" is running, follow the instructions in the
 "Setup Assistant" (page 9 in the separate "Quick Start Guide") screen for making
 connections. (During "Setup Assistant" operation, the input/output connectors do
 not conduct current.)
- Do not bundle power cords together with connection cables. Doing so can result in noise.

Cables used for connections


Provide necessary cables according to the devices you want to connect.

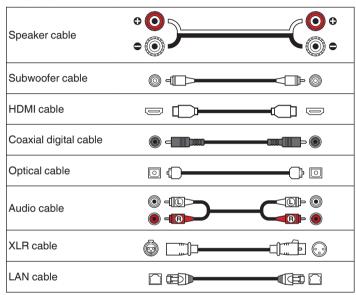



Speaker installation


Determine the speaker system depending on the number of speakers you are using and install each speaker and subwoofer in the room. Speaker installation is explained using this example of a typical installation.

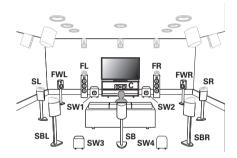

FL/FR (Front speaker left/ right):	Place the FRONT left and right speakers an equal distance from the main listening position. The distance between each speaker and your TV should also be the same.
C (Center speaker):	Place the CENTER speaker in between the front speakers and above or below your TV.


SL/SR (Surround speaker left/ right):	Place the SURROUND left and right speakers an equal distance to the left and right sides of the main listening position. If you don't have surround back speakers, move the surround speakers slightly behind your listening position.
SBL/SBR (Surround back speaker left/right):	Place the SURROUND BACK left and right speakers an equal distance from the main listening position and directly behind the main listening position. When using a single surround back speaker (SB), place it directly behind the listening position.
FWL/FWR (Front wide speaker left/right):	Place the FRONT WIDE left and right speakers outside of the front left and right speakers so that there is an equal distance between all front speakers.
SW 1/2/3/4 (Subwoofer):	Place your subwoofer near your front speakers. If you are using multiple subwoofers, place pairs of subwoofers spaced equally across the front or rear walls of the room or place single subs midway between the front pairs or rear pairs. You can also set a specific layout when using multiple subwoofers on the "Subwoofer Mode" setting (Pp. 220): 2 subwoofers: 2 front, or 1 front and 1 rear 3 subwoofers: 2 front and 1 rear 4 subwoofers: 2 front and 2 rear



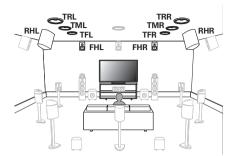


FHL/FHR (Front height speaker left/right):	Place the FRONT HEIGHT left and right speakers directly above the front speakers. Mount them as close to the ceiling as possible and aim them towards the main listening position.
TFL/TFR (Top front speaker left/right):	Mount the TOP FRONT left and right speakers on the ceiling slightly in front of your main listening position and aligned with the left and right front speakers.
TML/TMR (Top middle speaker left/right):	Mount the TOP MIDDLE left and right speakers directly above the main listening position and aligned with the left and right front speakers.
TRL/TRR (Top rear speaker left/right):	Mount the TOP REAR left and right speakers on the ceiling slightly behind your main listening position and aligned with the left and right front speakers.
RHL/RHR (Rear height speaker left/right):	Place the REAR HEIGHT left and right speakers directly behind the main listening position. Mount them as close to the ceiling as possible and aligned with the left and right front speakers.



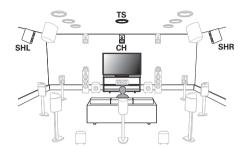

SHL/SHR (Surround height speaker left/right):	Place the SURROUND HEIGHT left and right speakers directly above the surround speakers.
CH (Center height speaker):	Place the CENTER HEIGHT speaker directly above the center speaker. Mount them as close to the ceiling as possible and aim them towards the main listening position.
TS (Top surround speaker):	Place the TOP SURROUND speaker directly above the main listening position and aligned with the center channel speaker.



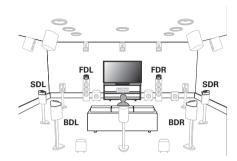

FDL/FDR left/right):

Place the FRONT Dolby Atmos Enabled speaker on the front speaker. For a Dolby Atmos Enabled (Front Dolby speaker integrated with a front speaker, place the Dolby Atmos Enabled speaker instead of the front speaker.

SDL/SDR (Surround Dolby

speaker left/right):

Place the SURROUND Dolby Atmos Enabled speaker on the surround speaker. For a Dolby Atmos Enabled speaker integrated with a surround speaker, place the Dolby Atmos Enabled speaker instead of the surround speaker.


BDL/BDR (Back Dolby speaker left/right):

Place the BACK Dolby Atmos Enabled speaker on the surround back speaker. For a Dolby Atmos Enabled speaker integrated with a surround back speaker, place the Dolby Atmos Enabled speaker instead of the surround back speaker.

About Dolby Atmos Enabled speakers

Dolby Atmos Enabled speakers reflect the sound off the ceiling to allow the sound to come from over your head by using a special upwardpointing speaker that is placed on the floor.

You can enjoy the Dolby Atmos 3D sound even in an environment where speakers cannot be installed on the ceiling.

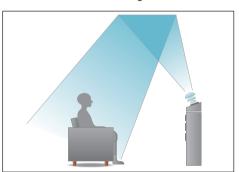






- This unit is compatible with Dolby Atmos and DTS:X which offers an even wider and deeper surround sensation.
- The "Speaker Virtualizer" must be set to "On" for Dolby Atmos playback with 5.1-channel speaker configurations or less. (☼ p. 172)
- IMAX DTS:X / DTS:X can be selected regardless of the speaker configuration.

■ Recommended placement of the speakers

Floor speakers Layout

• Use the following illustration as a guide for the installation location of each floor speaker. You do not have to match them exactly.

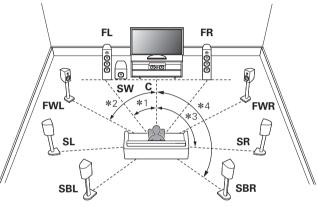

*1 22° - 30° *2 50° - 70° *3 90° - 110° *4 135° - 150°





- If you are not using the surround back speakers, the recommended angle of the surround sound speakers (*3) is 120°.
- When using a single surround back speaker, place it directly behind the listening position.



Height speakers Layout

• Use the following illustration as a guide for the installation location of each height speaker. You do not have to match them exactly.

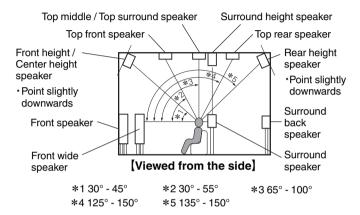

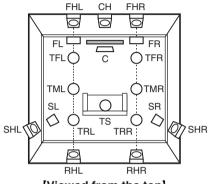





Connecting a power amp

Before connecting a power amp

- Connect a power amp (sold separately) to the PRE OUT connector of this unit.
- This unit has UNBALANCED RCA PRE OUT connector and BALANCED XLR PRE OUT connector. Connect to the correct connector for your power amp. If your power amp has both connectors, connect to either of them.
- Connect the speakers to the power amp.
- For details on speaker connections, see the Owner's Manual for the power amp.
- This section shows how to make a 15.1-channel connection.
 For how to make other speaker connections, see page 48.

[AV 10 BALANCED XLR PRE OUT connector PIN arrangement]



- (1) GND (Ground)
- ② HOT (+)
- 3 COLD (-)

The PIN arrangement in this unit uses the European method. In the USA method, ② is COLD, and ③ is HOT.

When connecting a device that utilizes the USA type of PIN arrangement, replace the ② and ③ plugs on one side of the balanced cable.

NOTE

- Do not short the HOT and GND or COLD and GND for use.
- Disconnect this unit's power plug from the power outlet before connecting the speakers.


Index

Also, turn off the power amp and subwoofer.



- **■** Example of connections to Marantz AMP 10 power amp
- □ Connecting the UNBALANCED RCA PRE OUT connector

When using UNBALANCED RCA connectors for connection, set the input change switch to "RCA" on Marantz AMP 10.

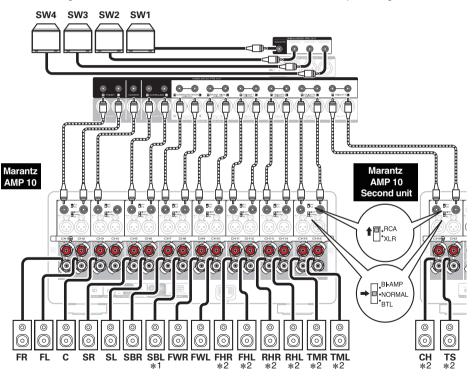


- 1 When using a single surround back speaker, connect it to the SURROUND BACK L terminal.
- *2 The output terminals for Height/Ceiling/Dolby Atmos Enabled speakers vary according to the speaker combination that you use. For the PRE OUT connector that connects each Height/Ceiling/Dolby Atmos Enabled speaker, refer to "Amp Assign" -"Layout" (@ p. 214).



□ Connecting the BALANCED XLR PRE OUT connector

When using BALANCED XLR connectors for connection, set the input change switch to "XLR" on Marantz AMP 10.

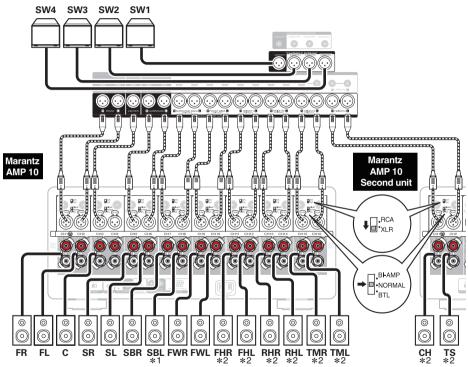

- 1 When using a single surround back speaker, connect it to the SURROUND BACK L terminal.
- *2 The output terminals for Height/Ceiling/Dolby Atmos Enabled speakers vary according to the speaker combination that you use. For the PRE OUT connector that connects each Height/Ceiling/Dolby Atmos Enabled speaker, refer to "Amp Assign" -"Layout" (@p. 214).



■ About the cable labels (supplied) for channel identification

Attach the cable label corresponding to each speaker to each speaker cable.

This makes it easier to connect the speakers to the power amp.


Channel	Color	
FRONT L	White	
FRONT R	Red	
CENTER	Green	
SURROUND L	Light Blue	
SURROUND R	Blue	
SURROUND BACK L	Beige	
SURROUND BACK R	Brown	
FRONT WIDE L	Light Yellow	
FRONT WIDE R	Yellow	
FRONT HEIGHT L	Light Yellow	
FRONT HEIGHT R	Yellow	
TOP FRONT L	Light Yellow	
TOP FRONT R	Yellow	
TOP MIDDLE L	Light Yellow	
TOP MIDDLE R	Yellow	
TOP REAR L	Light Yellow	
TOP REAR R	Yellow	

Channel	Color	
SURROUND HEIGHT L	Light Yellow	
SURROUND HEIGHT R	Yellow	
REAR HEIGHT L	Light Yellow	
REAR HEIGHT R	Yellow	
TOP SURROUND	Light Yellow	
CENTER HEIGHT	Yellow	
FRONT DOLBY L	Light Yellow	
FRONT DOLBY R	Yellow	
SURROUND DOLBY L	Light Yellow	
SURROUND DOLBY R	Yellow	
BACK DOLBY L	Light Yellow	
BACK DOLBY R	Yellow	
SUBWOOFER 1	Black	
SUBWOOFER 2	Black	
SUBWOOFER 3	Black	
SUBWOOFER 4	Black	



The supplied cable labels include labels for the speaker and HDMI cables. Attach a cable label to each cable that matches the speakers and HDMI devices being connected, as shown below. This makes it easy to identify and properly connect the cables between your components.

[How to attach the cable labels]

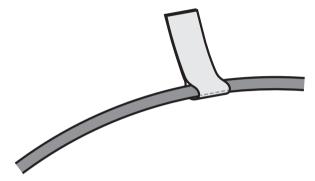



Speaker configuration and "Amp Assign" settings

This system configuration plays back 15-channels. You can create speaker systems such as a bi-amp connection by changing the "Amp Assign" settings. Perform "Speaker Layout" settings to suit the number of rooms and speaker configuration to be installed. (© p. 212)

Playback speaker in MAIN ZONE	"Amp Assign" settings	Connection page
5.1-channel playback	15.1ch (Default)	50
7.1-channel playback	15.1ch (Default)	51
9.1-channel playback	15.1ch (Default)	53
11.1-channel playback	15.1ch (Default)	55
13.1-channel playback	15.1ch (Default)	58
13.1-channel playback (Dolby Atmos and Auro-3D)	15.1ch (Default)	62
15.1-channel playback for Dolby Atmos	15.1ch (Default)	61
15.1-channel for Dolby Atmos and 13.1ch for Auro-3D	15.1ch (Default)	63
13.1-channel playback (bi-amp connection of front speakers)	13.1ch (Bi-Amp)	64
13.1-channel playback + second pair of front speakers	13.1ch + Front B	65
	· · · · · · · · · · · · · · · · · · ·	

The sound mode that can be selected varies according to the speaker configuration.

The following pages provide basic connection examples.



Refer to the example connection for "Example layout for Auro-3D 11.1 channel system" (F p. 57) when playing Auro-3D with a 11.1-channel system using the basic 5.1-channel system and the front height, surround height, top surround and center height speakers.

Also refer to the connection example for "Example layout for Auro-3D 13.1 channel system" (\mathfrak{T} p. 60) when playing Auro-3D with a 13.1-channel system by adding the surround back, top surround and center height speakers.



 In addition to the connections described in <u>p.50</u> - 65, this unit allows for various speaker connections with the "Speaker Layout" setting.


Also refer to the menu screen in "View Terminal Config." on the "Speaker Layout" setting screen, which shows how to make connections in your environment.





Connecting 5.1-channel speakers

This serves as a basic 5.1-channel surround system.

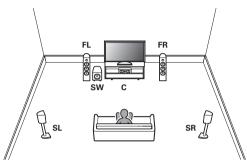

For each speaker connection, refer to "Connecting a power amp" (@p p. 43).




- Set Speaker Layout in the menu as follows. (Pp p. 212)
 - 1. Center: Yes
 - 2. Surround: Yes
 - 3. Subwoofers: 1 spkr



Connecting 7.1-channel speakers

Example layout when using surround back speakers

This 7.1-channel surround system is basic 7.1-channel system. (Adding surround back speakers to basic 5.1-channel system)

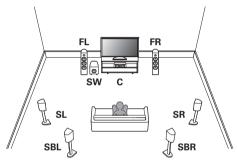


For each speaker connection, refer to "Connecting a power amp" (12 p. 43).



- Set Speaker Layout in the menu as follows. (@p. 212)
 - 1. Center: Yes
 - 2. Surround: Yes
 - 3. Surround Back: 2 spkrs
 - 4. Subwoofers: 1 spkr

Example layout when using front wide speakers

This 7.1-channel surround system is the same as a basic 5.1-channel system but with front wide speakers.

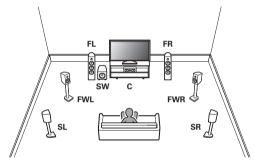

Index

For each speaker connection, refer to "Connecting a power amp" (Pp p. 43).




- Set Speaker Layout in the menu as follows. (@p. 212)
 - 1. Center: Yes
 - 2. Surround: Yes
 - 3. Front Wide: Yes
 - 4. Subwoofers: 1 spkr



■ Example layout when using height speakers

This 7.1-channel surround system is the same as a basic 5.1-channel system but with front height speakers.

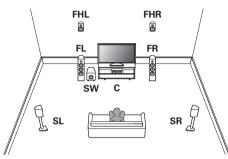

For each speaker connection, refer to "Connecting a power amp" (@p p. 43).




- Set Speaker Layout in the menu as follows. (126 p. 212)
 - 1. Center: Yes
 - 2. Surround: Yes
 - 3. Height Speakers: 2 spkrs
 - 4. Layout: Front Height*
 - 5. Subwoofers: 1 spkr
 - * The front height speakers can be changed to other height, ceiling or Dolby Atmos Enabled speakers in the "Speaker Layout" "Layout" settings.



Connecting 9.1-channel speakers

Example layout when using surround back and front wide speakers

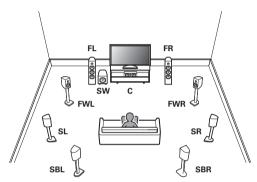


For each speaker connection, refer to "Connecting a power amp" (12 p. 43).



- Set Speaker Layout in the menu as follows. (@p. 212)
 - 1. Center: Yes
 - 2. Surround: Yes
 - 3. Surround Back: 2 spkrs
 - 4. Front Wide: Yes
 - 5. Subwoofers: 1 spkr

■ Example layout when using surround back and one set of height speakers

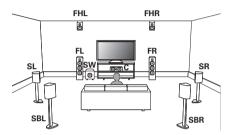


For each speaker connection, refer to "Connecting a power amp" (@p. 43).



- Set Speaker Layout in the menu as follows. (@ p. 212)
 - 1. Center: Yes
 - 2. Surround: Yes
 - 3. Surround Back: 2 spkrs
 - 4. Height Speakers: 2 spkrs
 - 5. Layout: Front Height*
 - 6. Subwoofers: 1 spkr
- * The front height speakers can be changed to other height, ceiling or Dolby Atmos Enabled speakers in the "Speaker Layout" "Layout" settings.



 Example layout when using front wide and one set of height speakers




For each speaker connection, refer to "Connecting a power amp" (126 p. 43).



- Set Speaker Layout in the menu as follows. (Pp. 212)
 - 1. Center: Yes
 - 2. Surround: Yes
 - 3. Front Wide: Yes
 - 4. Height Speakers: 2 spkrs
 - 5. Layout: Front Height*
 - 6. Subwoofers: 1 spkr
 - * The front height speakers can be changed to other height, ceiling or Dolby Atmos Enabled speakers in the "Speaker Layout" "Layout" settings.

Example layout when using two sets of height speakers

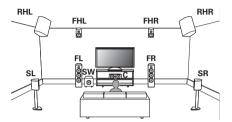

For each speaker connection, refer to "Connecting a power amp" (Pp p. 43).




- Set Speaker Layout in the menu as follows. (@p. 212)
 - 1. Center: Yes
 - 2. Surround: Yes
 - 3. Height Speakers: 4 spkrs
 - 4. Front Layout: Front Height*
 - 5. Rear Layout: Rear Height *
 - 6. Subwoofers: 1 spkr
 - * The front height speakers and rear height speakers can be changed to other height, ceiling or Dolby Atmos Enabled speakers in the "Speaker Layout" "Layout" settings.



Connecting 11.1-channel speakers

■ Example layout when using surround back, Front Wide and one set of height speakers

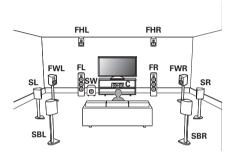


For each speaker connection, refer to "Connecting a power amp" (@p p. 43).



- Set Speaker Layout in the menu as follows. (@p. 212)
 - 1. Center: Yes
- 2. Surround: Yes
- 3. Surround Back: 2 spkrs
- 4. Front Wide: Yes
- 5. Height Speakers: 2 spkrs
- 6. Layout: Front Height*
- 7. Subwoofers: 1 spkr
- * The front height speakers can be changed to other height, ceiling or Dolby Atmos Enabled speakers in the "Speaker Layout" "Layout" settings.

■ Example layout when using surround back and two sets of height speakers

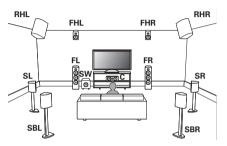


For each speaker connection, refer to "Connecting a power amp" (3 p. 43).



- Set Speaker Layout in the menu as follows. (PP p. 212)
 - 1. Center: Yes
 - 2. Surround: Yes
 - 3. Surround Back: 2 spkrs
 - 4. Height Speakers: 4 spkrs
 - 5. Front Layout: Front Height *
 - 6. Rear Layout: Rear Height *
 - 7. Subwoofers: 1 spkr
 - * The front height speakers and rear height speakers can be changed to other height, ceiling or Dolby Atmos Enabled speakers in the "Speaker Layout" "Layout" settings.



Example layout when using front wide and two sets of height speakers

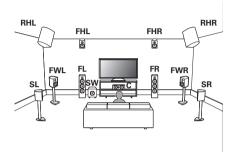


For each speaker connection, refer to "Connecting a power amp" (@p p. 43).



- Set Speaker Layout in the menu as follows. (PP p. 212)
 - 1. Center: Yes
 - 2. Surround: Yes
 - 3. Front Wide: Yes
 - 4. Height Speakers: 4 spkrs
 - 5. Front Layout: Front Height*
 - 6. Rear Layout: Rear Height*
 - 7. Subwoofers: 1 spkr
 - * The front height speakers and rear height speakers can be changed to other height, ceiling or Dolby Atmos Enabled speakers in the "Speaker Layout" "Layout" settings.

Example layout when using three sets of height speakers

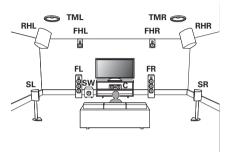

For each speaker connection, refer to "Connecting a power amp" (Pp p. 43).




- Set Speaker Layout in the menu as follows. (p. 212)
 - 1. Center: Yes
 - 2. Surround: Yes
 - 3. Height Speakers: 6 spkrs
 - 4. Front Layout: Front Height *
 - 5. Middle Layout: Top Middle*
 - 6. Rear Layout: Rear Height *
 - 7. Subwoofers: 1 spkr
 - * The front height speakers, top middle speakers and rear height speakers can be changed to other height, ceiling or Dolby Atmos Enabled speakers in the "Speaker Layout" "Layout" settings.



■ Example layout for Auro-3D 11.1 channel system


This speaker configuration is optimized for Auro-3D playback.

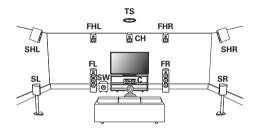

For each speaker connection, refer to "Connecting a power amp" (12 p. 43).



- Set Speaker Layout in the menu as follows. (Page p. 212)
 - 1. Center: Yes
 - 2. Surround: Yes
 - 3. Height Speakers: 6 spkrs
 - 4. Front Layout: Front Height
 - 5. Middle Layout: Surround Height
 - 6. Rear Layout: No
 - 7. TS/CH: TS/CH
 - 8. Subwoofers: 1 spkr

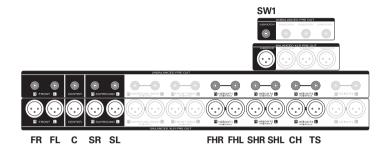




- To use two sets of height speakers with a center height and top surround speakers, connect the center height and top surround speakers to the HEIGHT 3 connector.
- For the best Auro-3D experience Surround Height speakers are recommended, however you may substitute Rear Height speakers from a Dolby Atmos speaker setup in place of Surround Height speakers.



Connecting 13.1-channel speakers

■ Example layout when using surround back, Front Wide and two set of height speakers

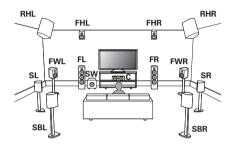


For each speaker connection, refer to "Connecting a power amp" (@p p. 43).



- Set Speaker Layout in the menu as follows. (@p. 212)
 - 1. Center: Yes
- 2. Surround: Yes
- 3. Surround Back: 2 spkrs
- 4. Front Wide: Yes
- 5. Height Speakers: 4 spkrs
- 6. Front Layout: Front Height
- 7. Rear Layout: Rear Height
- 8. Subwoofers: 1 spkr

■ Example layout when using surround back and three sets of height speakers

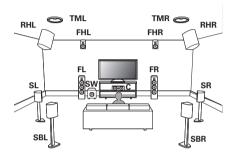

Index


For each speaker connection, refer to "Connecting a power amp" (Pp p. 43).



- Set Speaker Layout in the menu as follows. (@p. 212)
 - 1. Center: Yes
 - 2. Surround: Yes
 - 3. Surround Back: 2 spkrs
 - 4. Height Speakers: 6 spkrs
 - 5. Front Layout: Front Height
 - 6. Middle Layout: Top Middle
 - 7. Rear Layout: Rear Height
 - 8. Subwoofers: 1 spkr



Example layout when using front wide and three sets of height speakers

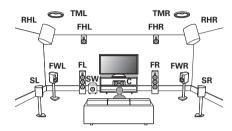




- Set Speaker Layout in the menu as follows. (126 p. 212)
 - 1. Center: Yes
- 2. Surround: Yes
- 3. Front Wide: Yes
- 4. Height Speakers: 6 spkrs
- 5. Front Layout: Front Height
- 6. Middle Layout: Top Middle
- 7. Rear Layout: Rear Height
- 8. Subwoofers: 1 spkr



Example layout for Auro-3D 13.1 channel system


This speaker configuration is optimized for Auro-3D playback.

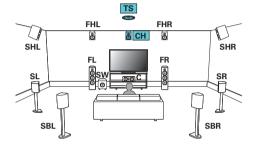

For each speaker connection, refer to "Connecting a power amp" (12 p. 43).



- Set Speaker Layout in the menu as follows. (FF p. 212)
 - 1. Center: Yes
 - 2. Surround: Yes
 - 3. Surround Back: 2 spkrs
 - 4. Height Speakers: 6 spkrs
 - 5. Front Layout: Front Height
 - 6. Middle Layout: Surround Height
 - 7. Rear Layout: No
 - 8. TS/CH: TS/CH
 - 9. Subwoofers: 1 spkr

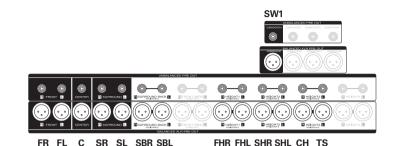




- To use two sets of height speakers with a center height and top surround speakers, connect the center height and top surround speakers to the HEIGHT 3 connector.
- For the best Auro-3D experience Surround Height speakers are recommended, however you may substitute Rear Height speakers from a Dolby Atmos speaker setup in place of Surround Height speakers.



Connecting 15.1-channel speakers

Example layout when using surround back, Front Wide and three set of height speakers

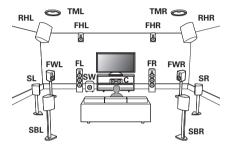

For each speaker connection, refer to "Connecting a power amp" (@p p. 43).




- Set Speaker Layout in the menu as follows. (@p. 212)
 - 1. Center: Yes
 - 2. Surround: Yes
 - 3. Surround Back: 2 spkrs
 - 4. Front Wide: Yes
 - 5. Height Speakers: 6 spkrs
 - 6. Front Layout: Front Height
 - 7. Middle Layout: Top Middle
 - 8. Rear Layout: Rear Height
 - 9. TS/CH: No
 - 10.Subwoofers: 1 spkr



■ Example layout when using surround back and eight height speakers

This system can connect with up to 15.1-channel speakers and simultaneously play up to 13.1-channels for Dolby Atmos and Auro-3D playback.

The top middle speakers, top surround speaker, and center height speaker are switched and played according to the audio format you are playing.

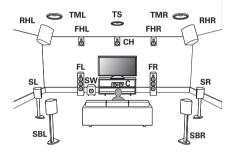

For each speaker connection, refer to "Connecting a power amp" (3 p. 43).




- Set Speaker Layout in the menu as follows. (PP p. 212)
 - 1. Center: Yes
 - 2. Surround: Yes
 - 3. Surround Back: 2 spkrs
 - 4. Front Wide: No
 - 5. Height Speakers: 8 spkrs
 - 6. Front Layout: Front Height
 - 7. Middle Layout: Top Middle
 - 8. Rear Layout: Rear Height
- 9. TS/CH: TS/CH
- 10.Subwoofers: 1 spkr



Connecting 17.1-channel speakers

This system can connect with up to 17.1-channel speakers and simultaneously play up to 15.1-channels for Dolby Atmos and play up to 13.1-channel for Auro-3D playback.

The top middle speakers, top surround speaker, and center height speaker are switched and played according to the audio format you are playing.

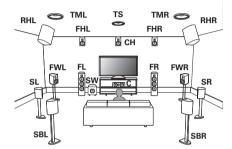

For each speaker connection, refer to "Connecting a power amp" (12 p. 43).




- Set Speaker Layout in the menu as follows. (@ p. 212)
 - 1. Center: Yes
 - 2. Surround: Yes
 - 3. Surround Back: 2 spkrs
 - 4. Front Wide: Yes
 - 5. Height Speakers: 8 spkrs
 - 6. Front Layout: Front Height
 - 7. Middle Layout: Top Middle
 - 8. Rear Layout: Rear Height
 - 9. TS/CH: TS/CH
 - 10.Subwoofers: 1 spkr




Connecting 13.1-channel speakers: Bi-amp connection of front speakers

This system plays back 13.1-channels. You can use the bi-amp connection for front speakers. Bi-amp connection is a method to connect separate amplifiers to the tweeter terminal and woofer terminal of a speaker that supports bi-amplification. This connection enables back EMF (power returned without being output) from the woofer to flow into the tweeter without affecting the sound quality, producing a higher sound quality.

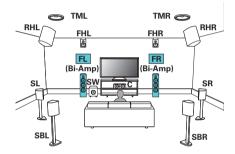

NOTE

 When making bi-amp connections, be sure to remove the short-circuiting plate or wire between the speaker's woofer and tweeter terminals. [Example] UNBALANCED RCA connector connection

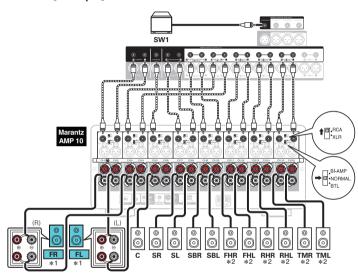


- *1 The PRE OUT connectors for a bi-amp connection vary depending on the MAIN ZONE layout. Refer to "Amp Assign" "Bi-Amp". (@p. 224)
- *2 The height speakers, ceiling speakers and Dolby Atmos Enabled speakers can be connected to the HEIGHT1, HEIGHT2 and HEIGHT3 RCA connectors or HEIGHT1, HEIGHT2 and HEIGHT3 XLR connectors. Set the speaker to be connected from "Height" in the menu. (127 p. 214)




Connecting 13.1-channel speakers : Second pair of front speakers

This system enables switching playback between front speakers A and B as desired.

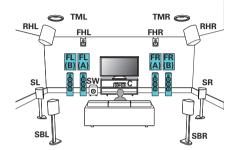

[Example] UNBALANCED RCA connector connection

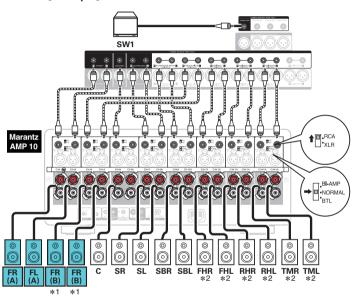


- *1 The PRE OUT connectors for connecting to the second front speakers vary depending on the main zone layout. Refer to "Amp Assign" "Front B". (125" p. 224)
- *2 The height speakers, ceiling speakers and Dolby Atmos Enabled speakers can be connected to the HEIGHT1, HEIGHT2 and HEIGHT3 RCA connectors or HEIGHT1, HEIGHT2 and HEIGHT3 XLR connectors. Set the speaker to be connected from "Height" in the menu. (② p. 214)



Connecting a TV

Connect a TV to this unit so that the input video is output to the TV. You can also enjoy audio from the TV on this unit. How to connect a TV depends on the connectors and functions equipped on the TV.

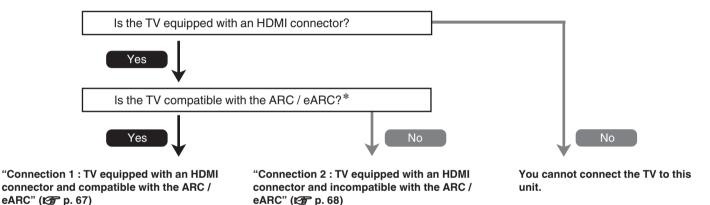

* What is ARC and eARC?

ARC (Audio Return Channel) sends audio back to this unit using the same HDMI cable that sends video from this unit to your TV. This allows this unit to process the sound from your TV's built-in tuner and apps.

TVs with eARC (Enhanced Audio Return Channel) port provide additional support for high bitrate multichannel audio (Dolby Atmos, Dolby TrueHD, DTS-HD and DTS:X). Please refer to your TV Owner's Manual for details about eARC support for your particular model.

NOTE


• Use a TV with a 2 prong power plug for this unit. Do not connect a TV with a 3 prong power plug, as this may cause noise.



Connection 1 : TV equipped with an HDMI connector and compatible with the ARC / eARC

Using a high quality HDMI cable*, connect one end to the HDMI port labeled "eARC" or "ARC" on your TV. Connect the other end to the HDMI OUT MONITOR 1 port on this unit.

When a TV with eARC support is connected, the eARC function of this unit is enabled automatically and the television audio is played back. When a TV with ARC support is connected, set "ARC" in the menu to "On". (127 p. 187)

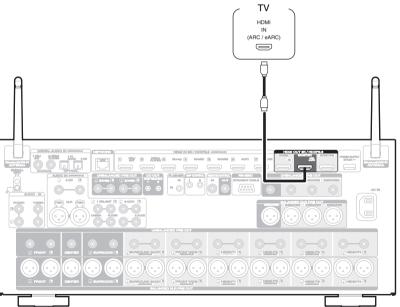

- * For 4K TVs we recommend using an HDMI cable labeled "High Speed" and "with Ethernet".
- * For 8K TVs we recommend using an HDMI cable labeled "Ultra High Speed".



- eARC function settings may be required depending on the eARC function-compatible television you are using. Make sure eARC is set to on if this setting exists on your television. For more information, check your television's owner's manual.
- Use a certified "Ultra High Speed HDMI cable" to enjoy 8K or 4K 120Hz video.

Index


Set "4K/8K Signal Format" to "8K Enhanced" in the menu to enjoy 8K video. (Pp p. 193)



Connection 2 : TV equipped with an HDMI connector and incompatible with the ARC / eARC

Use an HDMI cable to connect the TV to this unit.

To listen to audio from TV on this unit, use an optical cable to connect the TV to this unit.

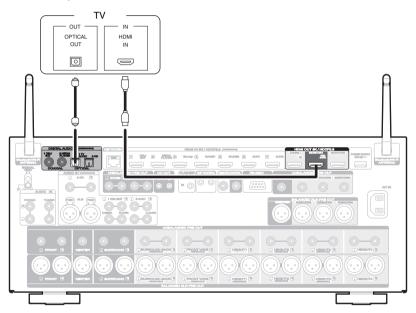



Connecting a playback device

This unit is equipped with HDMI video input connectors and three types of audio input connectors (HDMI, digital audio and audio).

Select input connectors on this unit according to the connectors equipped on the device you want to connect.

If the device connected to this unit is equipped with an HDMI connector, it is recommended to use HDMI connections.

In the HDMI connection, audio and video signals can be transmitted through a single HDMI cable.

- "Connecting a set-top box (Satellite tuner/cable TV)" (@p. 71)
- "Connecting a media player" (@p. 72)
- "Connecting a Blu-ray Disc player or DVD player" (P p. 73)
- "Connecting a game console or player device compatible with 8K" (FP p. 74)
- "Connecting a turntable" (P p. 75)



- · Connect devices to this unit as indicated by the input sources printed on the audio/video input connectors of this unit.
- The source that is assigned to the HDMI IN, DIGITAL AUDIO IN and AUDIO IN connectors can be changed. See "Input Assign" on how to change the input source assigned to the input connectors. (127) p. 196)
- To play back audio signals that are input to this unit on a TV connected via HDMI, set in the menu "HDMI Audio Out" to "TV". (127) p. 185)
- To enjoy content that is copyright protected by HDCP 2.2 or HDCP 2.3, use a playback device and TV compatible with HDCP 2.2 or HDCP 2.3.



■ Connecting the BALANCED XLR IN connector

This unit is equipped with BALANCED XLR IN connectors. Use these connectors if your device has an XLR connector as an audio output connector. When using BALANCED XLR IN connectors, assign "XLR" for "Input Assign" – "ANALOG". (FP p. 197)

By default, these connectors are disabled.

[AV 10 BALANCED XLR IN connector PIN arrangement]




- (1) GND (Ground)
- ② HOT (+)
- ③ COLD (-)



Connecting a set-top box (Satellite tuner/cable TV)

This explanation uses the connection with a satellite tuner/cable TV STB as an example.

Select the input connectors on this unit to match the connectors on the device that you want to connect to.

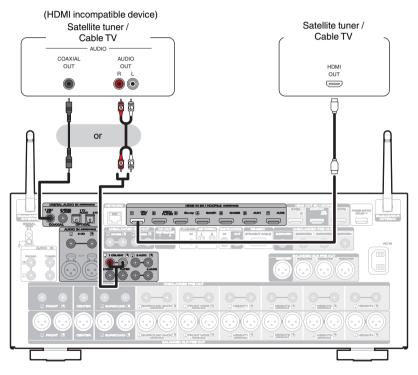




Connecting a media player

This explanation uses the connection with a media player as an example.


Select the input connectors on this unit to match the connectors on the device that you want to connect to.

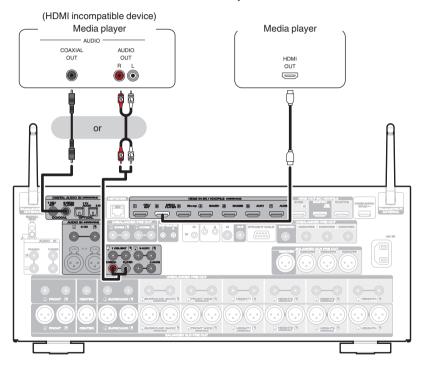



Connecting a Blu-ray Disc player or DVD player


This explanation uses the connection with a Blu-ray Disc player or DVD player as an example. Select the input connectors on this unit to match the connectors on the device that you want to connect to.

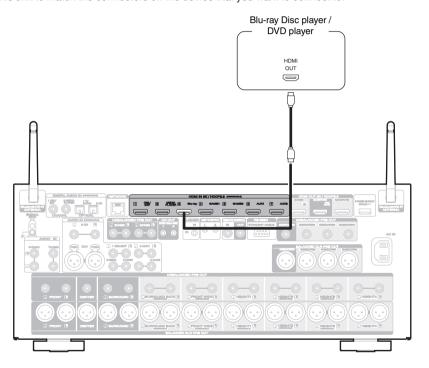



Connecting a game console or player device compatible with 8K

This unit supports 8K HDMI video signals.

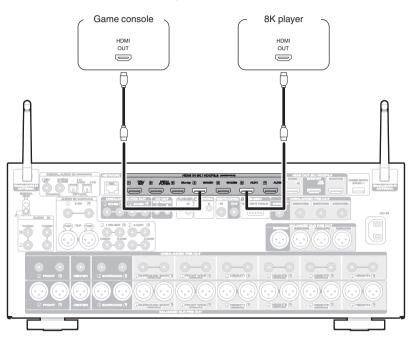




- Use a certified "Ultra High Speed HDMI cable" to enjoy 8K or 4K 120Hz video.
- Set "4K/8K Signal Format" to "8K Enhanced" in the menu to enjoy 8K video. (128 p. 193)



Connecting a turntable

This unit is compatible with turntables equipped with a moving magnet (MM) phono cartridge. When you connect to a turntable with a low output moving coil (MC) cartridge, use a commercially available MC head amp or a step-up transformer.

If you set this unit's input source to "Phono" and you accidentally increase the volume without having a turntable connected, you may hear a hum noise from the speakers.

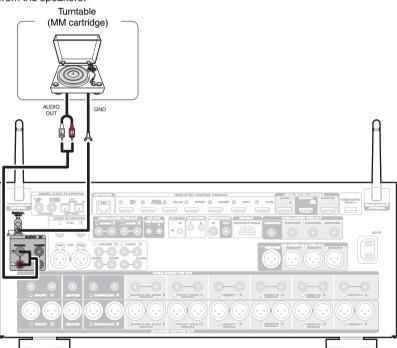


NOTE

 The earth terminal (SIGNAL GND) of this unit is not for safety grounding purposes. If this terminal is connected when there is a lot of noise, the noise can be reduced. Note that depending on the turntable, connecting the ground line may have the reverse effect of increasing noise. In this case, it is not necessary to connect the ground line.



Connecting a USB memory device to the USB port

For operating instructions see "Playing a USB memory device" (@p. 88).

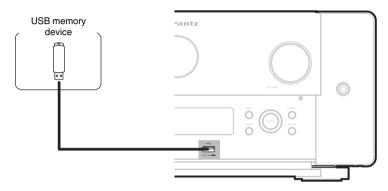



- Marantz does not guarantee that all USB memory devices will operate or receive power. When using a portable USB hard disk drive (HDD) which came with an AC adapter, use that device's supplied AC adapter.
- The USB port on the rear panel can only be used to supply power (5 V/1.5 A). It cannot be used to play music files. (12 p. 31)

NOTE

- USB memory devices will not work via a USB hub.
- It is not possible to use this unit by connecting the unit's USB port to a PC via a USB cable.
- Do not use an extension cable when connecting a USB memory device. This may cause radio interference with other devices.



Connecting to a home network (LAN)


This unit can connect to a network using a wired LAN or wireless LAN. You can connect this unit to your home network (LAN) to enable various types of playback and operations as described below.

- Playback of network audio such as Internet Radio and from your media server(s)
- · Playback of streaming music services
- Using the Apple AirPlay function
- · Operation on this unit via the network
- · Operation with the HEOS wireless multi-room sound system
- Firmware Update

For connections to the Internet, contact an ISP (Internet Service Provider) or a computer shop.

Wired LAN

To make connections via wired LAN, use a LAN cable to connect the router to this unit as shown in the figure below.

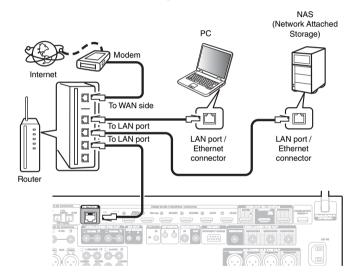




Wireless LAN

When connecting to the network via wireless LAN, connect the external antennas for Bluetooth/wireless connectivity connection to the rear panel and stand them upright.

See "Wi-Fi Setup" on how to connect to a wireless LAN router. (\mathfrak{F} p. 238)

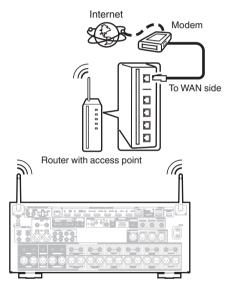



- When using this unit, we recommend you use a router equipped with the following functions:
 - Built-in DHCP server
 This function automatically assigns IP addresses on the LAN.
 - Built-in 100BASE-TX switch
 When connecting multiple devices, we recommend a switching hub with a speed of 100 Mbps or greater.
- Only use a shielded STP or ScTP LAN cable (readily available at electronics stores). (CAT-5 or greater recommended)
- The normal shielded-type LAN cable is recommended.
 If a flat-type cable or unshielded-type cable is used, other devices could be affected by noise.
- When using this unit connected to a network with no DHCP function, configure the IP address, etc. in "Network". (128" p. 237)

NOTE

- The types of routers that can be used depend on the ISP. Contact your ISP or a computer shop for details.
- This unit is not compatible with PPPoE. A PPPoE compatible router is required if your contracted line is not set using PPPoE.

- Do not connect a NETWORK connector directly to the LAN port / Ethernet connector on your computer.
- Various online services may be discontinued without prior notice.



Connecting an external control device


AMP CONTROL jacks

If you connect Marantz power amp products equipped with AMP CONTROL jacks using a control cable (supplied with the power amp), you can perform the following linked operations.

- Link the power of the power amp to the on/standby operation of this unit.
- · Link the display brightness of the power amp to the display brightness setting operation of this unit.



• Up to two power amps can be connected. For the connection method, see the Owner's Manual for the power amp.

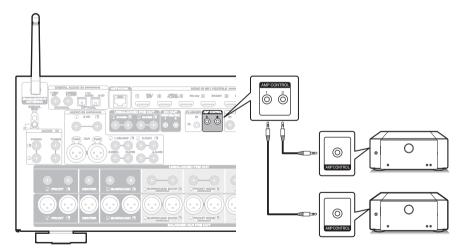




REMOTE CONTROL jacks

If the remote control jack of this unit is connected with the remote control terminal of a Marantz device, the connected device can be controlled with the remote as a single system.

When controlling a connected device from this unit


- Connect the REMOTE CONTROL OUT jack of this unit to the REMOTE CONTROL IN jack of the device to be connected.
- Point the remote control operations towards this unit. The transmitted infrared signal from the remote control is received by the remote control infrared receiver of this unit and is sent to the other devices through the remote control jack.
- If there is a remote control switch on the back of the device to be connected with this unit, set it to "EXTERNAL" or "EXT.".
- If you connect the Marantz power amp (including Hi-Fi amplifier) to any of these terminals, the power of the power amp operates in conjunction with the power of this unit.

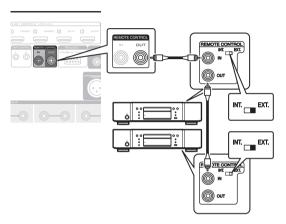



■ When controlling this unit from a connected device

- Connect to the REMOTE CONTROL IN jack of this unit from the REMOTE CONTROL OUT jack of the device to be connected.
- If you perform this operation, disable the remote sensor function of this unit using the "Remote lock function". (** p. 151)

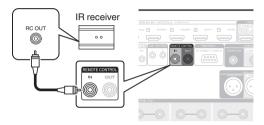


NOTE

• When the remote control signal receiving function is disabled, you can not perform operations with the remote control unit.



FLASHER IN jack


If a commercially available (sold separately) IR repeater is connected to the FLASHER IN jack of this unit, remote control operations can be performed even if this unit is installed in a place where the remote control signal may not reach, such as in a cabinet.

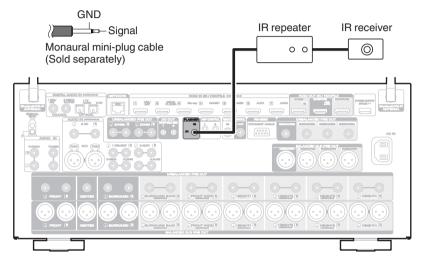



DC OUT jacks

When a device with DC IN jack is connected, the connected device's power on/standby can be controlled through linked operation to this unit. The DC OUT jack outputs a maximum 12 V DC/150 mA electrical signal.

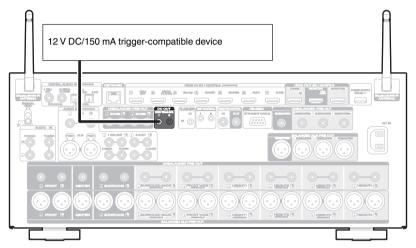


NOTE

- Use a monaural mini-plug cable for connecting the DC OUT jacks. Do not use a stereo mini-plug cable.
- If the permissible trigger input level for the connected device is larger than 12 V DC/150 mA, or has shorted, the DC OUT jack cannot be used. In this case, turn off the power to the unit, and disconnect it.



Connecting the power cord

After completing all the connections, insert the power plug into the power outlet.

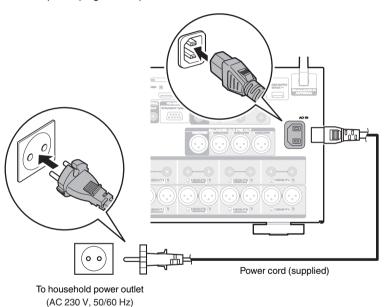



■ Contents

Basic operation

Turning the power on	86
Selecting the input source	86
Adjusting the volume	87
Turning off the sound temporarily (Muting)	87
Selecting a sound mode	128

Playback a device

Playing a Blu-ray Disc player/DVD player	87
Playing a USB memory device	88
Listening to music on a Bluetooth device	92
Listening to audio on Bluetooth headphones	96

Playback network audio/service

Listening to Internet Radio	99
Playing back files stored on a PC or NAS	101
Getting the HEOS App	105
AirPlay function	114
Spotify Connect function	117

Convenience functions


Convenience functions	118
HDMI Control function	142
Sleep timer function	143
Smart select function	145
Panel lock function	149
Remote lock function	151

Other functions

Web control function	152
Playback in ZONE2/ZONE3 (Another room)	155



Basic operation

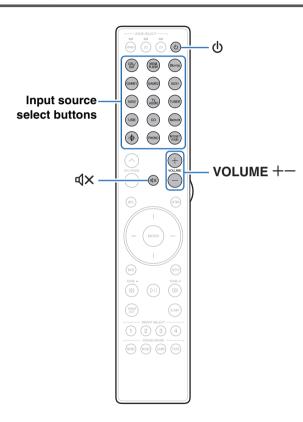

Turning the power on

1 Press POWER (b) to turn on power to the unit.



- You can press the input source select button when the unit is in standby mode to turn on the power.
- You can also switch the power to standby by pressing ϕ on the main unit.

Selecting the input source

Press the input source select button to be played back.

The desired input source can be selected directly.



• You can also select the input source by turning INPUT selector on the main unit.



Adjusting the volume

1 Use VOLUME +- to adjust the volume.



- The variable range differs according to the input signal and channel level setting.
- You can also adjust the master volume by turning VOLUME on the main unit.

Turning off the sound temporarily (Muting)

- 1 Press MUTE ◀X.
 - "MUTE" appears on the display.
 - ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬
 ¬



- The sound is reduced to the level set at "Mute Level" in the menu. (p. 178)
- To cancel mute, either adjust the sound volume or press MUTE ◀X again.
- If ¬X is displayed on the TV screen for more than 5 minutes when the "Screen Saver" is set to "On", the ¬X symbol moves randomly over the TV screen.
 (☼) p. 192)

Playback a Blu-ray Disc player/DVD player


The following describes the procedure for playing Blu-ray Disc player/DVD player.

- 1 Prepare for playback.
 - (1) Turn on the power of the TV, subwoofer and player.
 - (2) Change the TV input to the input of this unit.
- 2 Press POWER (b) to turn on power to the unit.
- Press Blu-ray or DVD to switch an input source for a player used for playback.

- ⚠ Play the Blu-ray Disc player or DVD player.
- Surround playback (© p. 128)



Playing a USB memory device

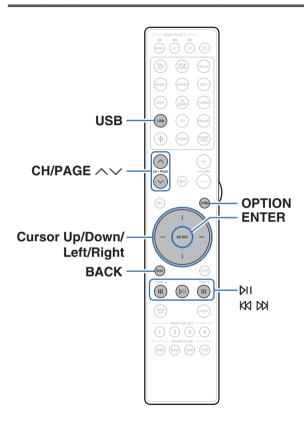

- Playing back music files stored on a USB memory device.
- Only USB memory devices conforming to mass storage class standards can be played on this unit.
- This unit is compatible with USB memory devices in "FAT32" or "NTFS" format.
- The audio format types and specifications supported by this unit for playback are as follows.
 See "Playing back a USB memory devices" (Pp. 296) for details.
 - WMA
 - MP3
 - WAV
 - MPEG-4 AAC
 - FLAC
 - Apple Lossless
 - DSD



Playing files stored on USB memory devices

- 1 Insert a "FAT32" or "NTFS" formatted USB memory device into the USB port.
- **2** Press USB to switch the input source to "USB".
- 3 Select the name of this unit.

4 Browse the music on your USB memory device and select something to play.



• When you select something to play you will be asked how you want to queue up your music.


Play Now:	Inserts the item into the queue after the currently playing track and plays the selected item immediately.
Play Now & Replace Queue:	Clears the queue and plays the selected item immediately.
Play Next:	Inserts the item into the queue after the current song and plays it when the current song ends.
Add to End of Queue:	Adds the item to the end of the queue.





Use cursor Up/Down to select the "Play Now" or "Play Now & Replace Queue", then press ENTER.

Playback starts.

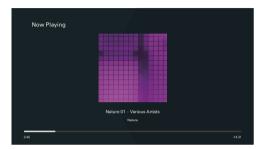

Operation buttons	Function
DII	Playback / Pause
KKI DDI	Skip to previous track / Skip to next track
CH/PAGE ∧∨	Switch to the previous page/next page in the list display



• When an MP3 music file includes album art data, the album art can be displayed while playing the file.

NOTE

- Note that Marantz will accept no responsibility whatsoever for any problems arising with the data on a USB memory device when using this unit in conjunction with the USB memory device.
- When a USB memory device is connected to this unit, the unit loads all of the files on the USB memory device. Loading may take a while if the USB memory device contains a large number of folders and/or files.




Operations accessible through the option menu

- "Adjusting the audibility of dialog and vocals (Dialog Enhancer)" (Pp. 120)
- "Adjusting the volume of each channel to match the input source (Channel Level Adjust)" (© p. 121)
- "Adjusting the tone (Tone)" (@p. 122)
- "Adjusting audio delay (Audio Delay)" (@p. 123)
- "Changing the strength of Tactile Transducer according to the input source (Tactile Transducer)" (PP p. 124)
- "Displaying your desired video during audio playback (Video Select)" (PP p. 125)
- "Playing the same music in all zones (All Zone Stereo)" (@p. 126)
- "Changing the speaker settings to match the listening environment (Speaker Preset)" (
 p. 127)
- Changing the "Dirac Live Filter" https://manuals.marantz.com/DiracLive/ALL/EN/DRDZSYktvnhzad.php



Listening to music on a Bluetooth device

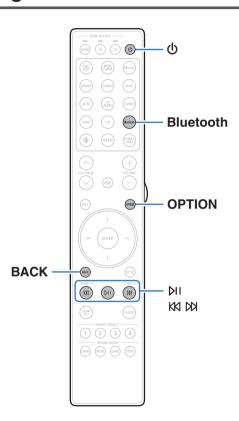

Music files stored on Bluetooth devices such as smartphones, digital music players, etc. can be enjoyed on this unit by pairing and connecting this unit with the Bluetooth device.

Communication is possible up to a range of about 30 m.

NOTE

 To play back music from a Bluetooth device, the Bluetooth device needs to support the A2DP profile.



Playing music from Bluetooth device

In order to enjoy music from a Bluetooth device on this unit, the Bluetooth device must first be paired with this unit.

Once the Bluetooth device has been paired, it does not need to be paired again.

1 Prepare for playback.

- ① Connect the supplied external antennas for Bluetooth/wireless connectivity to the Bluetooth/wireless LAN antenna connectors on the rear panel. (☞ p. 29)
- ② Press POWER of to turn on power to the unit.

Press Bluetooth.

When using for the first time, the unit will go into the pairing mode automatically and "Pairing..." will appear on the display of the unit.

Activate the Bluetooth settings on your mobile device.

Select this unit when its name appears in the list of devices displayed on the screen of the Bluetooth device.

Connect to the Bluetooth device while "Pairing" is being displayed on the display of the unit.

Perform the connection with the Bluetooth device close to the unit (about 1 m).

5 Play music using any app on your Bluetooth device.

- The Bluetooth device can also be operated with the remote control of this unit.
- The next time the Bluetooth button is pressed on the remote control unit, this unit automatically connects to the last Bluetooth device that was connected.

Operation buttons	Function
ЫI	Playback / Pause
KN DN	Skip to previous track / Skip to next track



 Press STATUS on this unit during playback to switch the display between Title name, Artist name, Album name, etc.



Pairing with other Bluetooth devices

Pair a Bluetooth device with this unit.

- 1 Activate the Bluetooth settings on your mobile device.
- Press and hold Bluetooth on the remote control unit for at least 3 seconds.

This unit will go into the pairing mode.

Select this unit when its name appears in the list of devices displayed on the screen of the Bluetooth device.



- This unit can be paired with a maximum of 8 Bluetooth devices. When a 9th Bluetooth device is paired, it will be registered in place of the oldest registered device.
- You can also enter pairing mode by pressing the OPTION button when the Bluetooth playback screen is displayed and selecting "Pairing Mode" from the displayed option menu.

NOTE

- To operate the Bluetooth device with the remote control of this unit, the Bluetooth device needs to support the AVRCP profile.
- The remote control of this unit is not guaranteed to work with all Bluetooth devices.
- Depending on the type of Bluetooth device, this unit outputs audio that is coupled to the volume setting on the Bluetooth device.

Operations accessible through the option menu

- "Pairing with other Bluetooth devices" (@p. 94)
- "Adjusting the audibility of dialog and vocals (Dialog Enhancer)" (P p. 120)
- "Adjusting the volume of each channel to match the input source (Channel Level Adjust)" (@p. 121)
- "Adjusting the tone (Tone)" (@p. 122)
- "Adjusting audio delay (Audio Delay)" (@p. 123)
- "Changing the strength of Tactile Transducer according to the input source (Tactile Transducer)" (☼ p. 124)
- "Displaying your desired video during audio playback (Video Select)" (ref. p. 125)
- "Playing the same music in all zones (All Zone Stereo)" (@p. 126)
- Changing the "Dirac Live Filter" https://manuals.marantz.com/DiracLive/ALL/EN/DRDZSYktvnhzad.php



Reconnecting to this unit from a Bluetooth device

After pairing is completed, the Bluetooth device can be connected without performing any operations on this unit.

This operation also needs to be performed when switching the Bluetooth device for playback.

- 1 If a Bluetooth device is currently connected, deactivate the Bluetooth setting of that device to disconnect it.
- 2 Activate the Bluetooth setting of the Bluetooth device to be connected.
- 3 Select this unit from the Bluetooth device list on your Bluetooth device.
- 4 Play music using any app on your Bluetooth device.




- The screen automatically switches to the "Bluetooth" playback screen if a Bluetooth device is connected while the power of this unit is on.
- When the "Network Control" setting of this unit is set to "Always On" and a
 Bluetooth device is connected with the unit in the standby state, the power of the
 unit will be turned on automatically. (pp. 241)



Listening to audio on Bluetooth headphones

You can listen to audio playing through the MAIN ZONE of this unit on Bluetooth headphones.

Output audio from connected speakers and Bluetooth headphones simultaneously, or only using Bluetooth headphones.

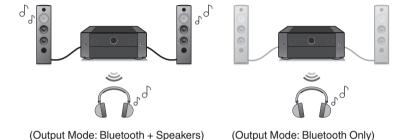



Listening to audio on Bluetooth headphones

- 1 Set "Transmitter" to "On" from the "General" "Bluetooth Transmitter" setting in the menu. (尼罗 p. 246)
- 2 Select "Output Mode", and set audio output method.

Bluetooth + Speakers (Default):	Audio is output to Bluetooth headphones and main zone speakers. This simultaneous output is suitable for family movie night and other group activities.
Bluetooth Only:	Audio is output to Bluetooth headphones only. This is suitable for listening to music or watching movies by yourself at night when you need to keep quiet.

- Enter pairing mode on the Bluetooth headphones you want to connect to this unit.
- 4 Select "Device List" and select the name of the Bluetooth headphones from the device list.
- Adjust the volume of connected Bluetooth headphones after the connection is completed.



- "Output Mode" can also be set from "Bluetooth Transmitter" in the option menu.
- A2DP profile-compatible Bluetooth speakers can be connected following the same steps used to connect Bluetooth headphones.

NOTE

- The volume of Bluetooth headphones cannot be adjusted through this unit's MASTER VOLUME or the VOLUME on the remote control unit. Adjust the volume through the Bluetooth headphones.
- Stereo mode is fixed as the sound mode when using Bluetooth headphones. Any sound modes and other audio settings are not reflected in audio output on Bluetooth headphones.

Audio settings, sound modes and All Zone Stereo mode are not available while using Bluetooth headphones and "Output Mode" is set to "Bluetooth Only".

- · Audio may be delayed when sent over Bluetooth.
- · AirPlay audio cannot be transmitted.
- Bluetooth headphones cannot be connected when use a Bluetooth input source in any zone.

Furthermore, selecting a Bluetooth input source in any zone will terminate the connection between this unit and Bluetooth headphones.

 Bluetooth headphones cannot be connected when this unit is grouped in the HEOS App.

CAUTION:

Using Bluetooth headphones without a volume adjustment function

• In order to avoid hearing loss, do not connect Bluetooth headphones that lack volume adjustment functionality.

- Bluetooth headphone volume may be unexpectedly loud when this unit connects to Bluetooth headphones.
- Bluetooth headphone volume cannot be adjusted from this unit.



Reconnecting to a Bluetooth headphones

Follow any of the steps below to reconnect the most recently used Bluetooth headphones:

- Reconnect to this unit with Bluetooth headphone's reconnect function.
- Go to "Bluetooth Transmitter" and then select "Reconnect" within the options menu.
- If "Output Mode" is set to "Bluetooth + Speakers", this unit will automatically connect to the most recently used Bluetooth headphones when power is turned on.
- Select the device you wish to connect from the "Device List" under "Bluetooth Transmitter" in the menu. (☞ p. 246)


Disconnecting Bluetooth headphones

Complete any of the following steps to disconnect your Bluetooth headphones:

- Turn off your Bluetooth headphones.
- Go to "Bluetooth Transmitter" and then select "Disconnect" within the options menu.
- In the setup menu, go to "General" "Bluetooth Transmitter", and set "Transmitter" to Off. (இ) p. 246)



Listening to Internet Radio

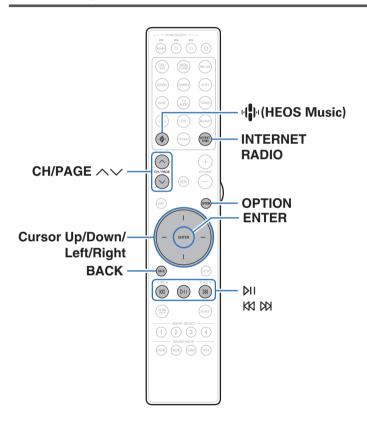

- Internet Radio refers to radio broadcasts distributed over the Internet.
 Internet Radio stations from around the world can be received.
- The Internet Radio station list on this unit the database service provided by TuneIn Radio service.
- The audio format types and specifications supported by this unit for playback are as follows.
 See "Playing back Internet Radio" (Pp. 299) for details.
 - WMA
 - MP3
 - MPEG-4 AAC



Listening to Internet Radio

1 Press INTERNET RADIO.

• You can also press 'th' (HEOS Music). Use cursor Up/Down to select "TuneIn Internet Radio", then press ENTER.

2 Select the station you want to play.

Operation buttons	Function
ÞII	Playback / Stop or Pause*
KKI DDI	Skip to previous track* / Skip to next track*
CH/PAGE ∧∨	Switch to the previous page/next page in the list display

^{*} Enabled when playing Podcasts.



 The display switches between track title and radio station name etc. each time the main unit's STATUS is pressed.

NOTE


 The radio station database service may be suspended or be otherwise unavailable without notice.

Operations accessible through the option menu

- "Adding to HEOS Favorites" (@p. 119)
- "Adjusting the volume of each channel to match the input source (Channel Level Adjust)" (@p. 121)
- "Adjusting the tone (Tone)" (@p. 122)
- "Adjusting audio delay (Audio Delay)" (@p. 123)
- "Changing the strength of Tactile Transducer according to the input source (Tactile Transducer)" (FF p. 124)
- "Displaying your desired video during audio playback (Video Select)" (Pp p. 125)
- "Playing the same music in all zones (All Zone Stereo)" (@p. 126)
- Changing the "Dirac Live Filter" https://manuals.marantz.com/DiracLive/ALL/EN/DRDZSYktvnhzad.php



Playing back files stored on a PC or NAS

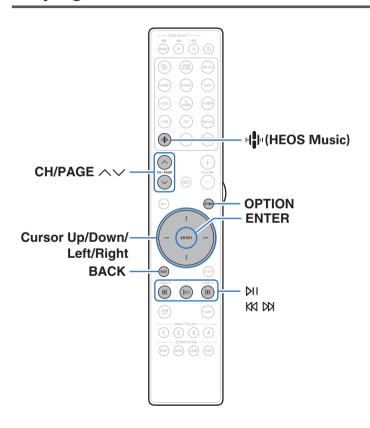

- This unit can play back music files and playlists (m3u, wpl) from DLNA compatible servers including PCs and NAS devices on your network.
- Supported file formats: For details, see "Playing back a file saved on a PC or NAS" (Pp. 298).
 - WMA
 - MP3
 - WAV
 - MPEG-4 AAC
 - FLAC
 - Apple Lossless
 - DSD



Playing back files stored on a PC or NAS

Use this procedure to play music files or playlists stored on DLNA files servers on your local network.

- 1 Press (HEOS Music).
- Use cursor Up/Down to select "Music Servers", then press ENTER.



3 Select the name of your networked PC or NAS (Network Attached Storage) server.

4 Browse the music on your PC/NAS and select something to play.



 When you select something to play you will be asked how you want to queue up your music.

Play Now:	Inserts the item into the queue after the currently playing track and plays the selected item immediately.
Play Now & Replace Queue:	Clears the queue and plays the selected item immediately.
Play Next:	Inserts the item into the queue after the current song and plays it when the current song ends.
Add to End of Queue:	Adds the item to the end of the queue.





Use cursor Up/Down to select the "Play Now" or "Play Now & Replace Queue", then press ENTER.

Playback starts.



Operation buttons	Function
ЫI	Playback / Pause
K4 D3	Skip to previous track / Skip to next track
CH/PAGE ^V	Switch to the previous page/next page in the list display



- The display switches between track title, artist name, and album title each time the main unit's STATUS is pressed.
- When a WMA (Windows Media Audio), MP3 or MPEG-4 AAC file includes album art data, the album art can be displayed while the music files are playing.
- If you use Ver.11 or later of Windows Media Player, the album art for WMA files can be displayed.

NOTE

- When playing back music files with your PC or NAS connected through wireless LAN, audio may be interrupted depending on your wireless LAN environment. In this case, connect using a wired LAN.
- The order in which the tracks/files are displayed depends on the server specifications. If the tracks/files are not displayed in alphabetical order due to the server specifications, searching by the first letter may not work properly.



Operations accessible through the option menu

- "Adjusting the audibility of dialog and vocals (Dialog Enhancer)" (Pp p. 120)
- "Adjusting the volume of each channel to match the input source (Channel Level Adjust)" (@p. 121)
- "Adjusting the tone (Tone)" (@p. 122)
- "Adjusting audio delay (Audio Delay)" (@p. 123)
- "Changing the strength of Tactile Transducer according to the input source (Tactile Transducer)" (Pp p. 124)
- "Displaying your desired video during audio playback (Video Select)" (PP p. 125)
- "Playing the same music in all zones (All Zone Stereo)" (@p. 126)
- "Changing the speaker settings to match the listening environment (Speaker Preset)" (
 p. 127)
- Changing the "Dirac Live Filter" https://manuals.marantz.com/DiracLive/ALL/EN/DRDZSYktvnhzad.php



Getting the HEOS App

You can use many online music streaming services from the HEOS App. Depending upon your geographical location, there are several options to choose from.

Download the HEOS App for iOS or Android by searching App Store, Google Play store or Amazon Appstore for "HEOS".









HEOS Account

HEOS Accounts can be registered by tapping "Music" tab - "Settings" icon to the HEOS App.

Once you create or sign into your HEOS Account, you can use the HEOS Favorites feature to save and recall your favorite streaming radio stations using the on-screen user interface on your AVP.

■ What is a HEOS Account?

A HEOS Account is master account or "keychain" for managing all of your HEOS music services with one single username and password.

■ Why do I need a HEOS Account?

With the HEOS Account you just have to enter your music services login names and passwords one time. This allows you to easily and quickly use multiple controller apps on different devices.

You just log into your HEOS Account on any device and you will have access to all of your associated music services, play history and custom playlists, even if you are at a friend's house listening to music on their HEOS system.

■ Signing up for a HEOS Account

You will be instructed to signup for a HEOS Account the first time you try to access any music service from the main "Music" menu of the HEOS App.

■ Changing your HEOS Account

- 1 Tap the "Music" tab.
- Select the Settings icon to the screen.
- 3 Select "HEOS Account".
- 4 Change your location, change your password, delete your account or sign out of your account.



Playing from streaming music services

A music service is an online music company that provides access to vast music collections via free and/or paid subscriptions. Depending upon your geographical location, there are several options to choose from.

NOTE

 The HEOS App and brand is not affiliated with any manufacturer of any mobile device. Availability of music services may vary by region. Not all services may be available at time of purchase. Some services may be added or discontinued from time to time based on decisions of the music service providers or others.

■ Selecting a room/device

Tap the "Rooms" tab, and select "Marantz AV 10" if there are multiple products with HEOS Built-in.



 Tap the Pencil icon at the top right to switch edit mode. You can change the displayed name.





- Selecting the music track or station from music sources
- Tap the "Music" tab and select a music source.



• All music services displayed may not be available in your location.





2 Browse the music to play.

After selecting a music track or radio station the app will automatically change to the "Now Playing" screen.



 When you select a music track to play you will be asked how you want to queue up your music.

Play Now:	Inserts the item into the queue after the currently playing track and plays the selected item immediately.
Play Now & Replace Queue:	Clears the queue and plays the selected item immediately.
Play Next:	Inserts the item into the queue after the current song and plays it when the current song ends.
Add to End of Queue:	Adds the item to the end of the queue.



• When you select a radio station the following items are displayed.

Play Now:	Plays the selected item immediately.
Add to HEOS Favorites:	Adds to HEOS Favorites.








Listening to the same music in multiple rooms

This system is a true multi-room audio system. You can create one or more HEOS groups to automatically synchronize audio playback between multiple products with HEOS Built-in so that the music playing different rooms is perfectly in sync and always sounds amazing! You can easily add up to 32 products to your system in total. You can group up to 16 individual products to have them play the same song fully synchronized.

■ Grouping rooms

- Press and hold your finger on room that is not playing music.
- 2 Drag it into the room that is playing music and lift your finger.
- The two rooms will be grouped together into a single device group and both rooms will be playing the same music in perfect sync.

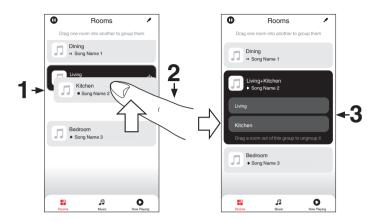




■ Ungrouping rooms

- 1 Press and hold your finger on room that you want to remove from the group.
- 2 Drag it out of the group and lift your finger.

NOTE

• You can not remove the first room that started playing the music before grouping.

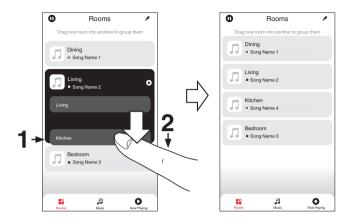




■ Grouping all rooms (party mode)

You can easily group 16 rooms together into Party Mode by using a "pinch" gesture.

- Place two fingers on the screen over the list of rooms.
- **2** Quickly pinch your two fingers together and release.
- All of your rooms will be joined together and begin playing the same music in perfect sync.

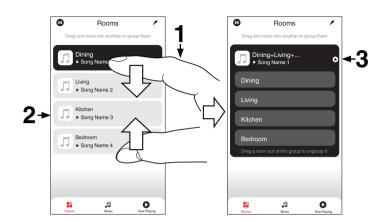




■ Ungrouping all rooms

You can easily ungroup all of your rooms and exit Party Mode by using a "spread" gesture.

- Place two fingers close together on the screen over list of rooms.
- Quickly spread your two fingers apart from each other and release.
- 3 All of your rooms will be ungrouped.

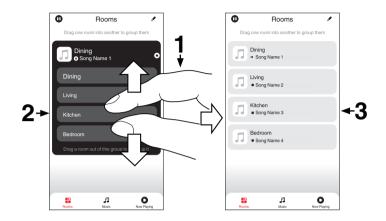



AirPlay function

Music files stored on your iPhone, iPod touch, iPad or iTunes can be played on this unit via the network.




- Source input will be switched to "HEOS Music" when AirPlay playback is started.
- You can stop AirPlay playback by choosing other input source.
- To see song and artist names together, press STATUS on the main unit.
- For information about how to use iTunes, also see the Help for iTunes.
- The screen may differ depending on the OS and software versions.

This unit supports AirPlay 2.

Sync multiple AirPlay 2 compatible devices/speakers for simultaneous playback.



• This unit supports AirPlay 2 and requires iOS 11.4 or later.

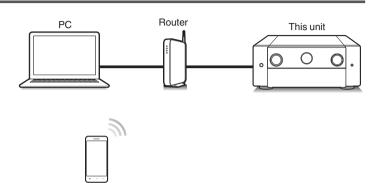



Playing songs from your iPhone, iPod touch or iPad

If you update your "iPhone/iPod touch/iPad" to iOS 10.0.2 or later, you can stream music stored in your "iPhone/iPod touch/iPad" directly to this unit.

- 1 Connect your iPhone, iPod touch or iPad Wi-Fi to the same network as this unit.
 - For details, see your device's manual.
- Play the song on your iPhone, iPod touch or iPad.
 AirPlay icon is displayed on the iPhone, iPod touch or iPad screen.
- 3 Tap the AirPlay icon and select this unit.

[Example] iOS 15



[Example] iOS 10



Playing iTunes music with this unit

- 1 Install iTunes 10, or later, on a Mac or Windows PC that is connected to the same network as this unit.
- **7** Turn this unit ON.

Set "Network Control" to "Always On" for this unit. (@p. 241)

NOTE

- When "Network Control" is set to "Always On", the unit consumes more standby power.
- 3 Start iTunes and click the AirPlay icon to select this unit.

[Example] iTunes



4 Choose a song and click play in iTunes.

The music will stream to this unit.



NOTE

 In playback using the AirPlay function, the sound is output at the iPhone, iPod touch, iPad or iTunes volume setting level.

You should turn down the iPhone, iPod touch, iPad or iTunes volume prior to playback and then adjust it to a suitable level.

Play a song from your iPhone, iPod touch or iPad on multiple synced devices (AirPlay 2)

Songs from an iPhone, iPod touch or iPad operating iOS 11.4 or later can be synced with multiple AirPlay 2 supported devices for simultaneous playback.

1 Play the song on your iPhone, iPod touch or iPad.

AirPlay icon is displayed on the iPhone, iPod touch or iPad screen.



2 Tap the AirPlay icon and select this unit.

Displays a list of devices/speakers that can be played back on the same network.

• A circle is displayed to the right of AirPlay 2 compatible devices.



- 3 Tap the devices/speakers you want to use.
 - Multiple AirPlay 2 compatible devices can be selected.






Spotify Connect function

Spotify is all the music you'll ever need. Millions of songs available instantly. Just search for the music you love, or let Spotify play you something great. Spotify works on your phone, tablet, computer and home speakers. So you'll always have the perfect soundtrack for whatever you're doing. Now you can enjoy Spotify with your free account as well as Premium account.

Use your phone, tablet or computer as a remote control for Spotify. Go to www.spotify.com/connect to learn how.

The Spotify software is subject to third party licenses found here: www.spotify.com/connect/third-party-licenses

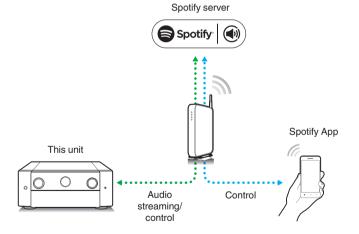

Playing Spotify music with this unit


Download the "Spotify App" onto your Android or iOS device beforehand.

- 1 Connect the Wi-Fi settings of the iOS or Android device in the same network as this unit.
- 2 Launch the Spotify App.
- 3 Play back the Spotify track.
- 4 Tap the Spotify icon (to select the unit.

The music will stream to this unit.



Convenience functions

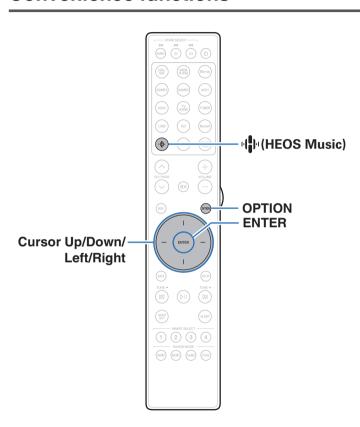

This section explains how to use convenient functions that can be used for each input source.

These functions can only be set in the MAIN ZONE.



Adding to HEOS Favorites

- 1 While content is playing, press OPTION.
 The option menu screen is displayed.
- 2 Use cursor Up/Down to select "Add to HEOS Favorites", then press ENTER.

Playing back HEOS Favorites

- 1 Press 🕩 (HEOS Music).
- 2 Use cursor Up/Down to select "HEOS Favorites", then press ENTER.



3 Browse the content and select something to play.



Deleting a HEOS Favorites

- While the HEOS Favorites content list is displayed, use cursor Up/Down to select the item you want to remove from HEOS Favorites, then press OPTION.
- 2 Use cursor Up/Down to select "Remove from HEOS Favorites", then press ENTER.

Adjusting the audibility of dialog and vocals (Dialog Enhancer)

This function adjusts the center channel frequency band to enhance the dialog in the movies and vocals in music for easier listening.

1 Press OPTION.

An option menu screen is displayed.

- When the input source is "HEOS Music", an option menu for online music is displayed. Select "AVP Options...", then press ENTER.
- 2 Use cursor Up/Down to select "Dialog Enhancer", then press ENTER.

The "Dialog Enhancer" screen is displayed.

3 Use cursor Left/Right to select your favorite enhancement effect.

Low / Medium / High:	Enhances the dialog and vocals.
Off (Default):	Does not enhance the dialog or vocals.

Press ENTER.



- "Dialog Enhancer" settings are stored for each source.
- This cannot be set when the sound mode is set to "Direct", "Virtual" or "Pure Direct"



Adjusting the volume of each channel to match the input source (Channel Level Adjust)

The volume of each channel can be changed while listening to music. You can set this for each input source.

1 Press OPTION.

An option menu screen is displayed.

- When the input source is "HEOS Music", an option menu for online music is displayed. Select "AVP Options...", then press ENTER.
- Use cursor Up/Down to select "Channel Level Adjust", then press ENTER.

The "Channel Level Adjust" screen is displayed.

3 Use cursor Up/Down to select the channel that you wish to adjust.

4. Use cursor Left/Right to adjust the volume.

-12.0 dB - +12.0 dB (Default: 0.0 dB)

5 Use cursor Up/Down/Left/Right to select "Exit", then press ENTER.



- Select "Reset" and press ENTER if you want to restore the adjustment values of the various channels to "0.0 dB" (Default).
- Headphone volume can be adjusted when a headphone is connected.
- "Channel Level Adjust" settings are stored for each input source.
- You can only set this for speakers that output audio. In addition, you cannot set this when in the menu "HDMI Audio Out" is set to "TV". (***) p. 185)



Adjusting the tone (Tone)

Adjusts the tonal quality of the front speakers.

1 Press OPTION.

An option menu screen is displayed.

- When the input source is "HEOS Music", an option menu for online music is displayed. Select "AVP Options...", then press ENTER.
- 2 Use cursor Up/Down to select "Tone", then press ENTER.

The "Tone" screen is displayed.

3 Use cursor Left/Right to set the tone control function to on/off.

On:	Allow tone adjustment (bass, treble).
Off (Default):	Playback without tone adjustment.

4 Select "On" in step 3 and press cursor Down to select the sound range to be adjusted.

Bass:	Adjust bass.
Treble:	Adjust treble.

Use cursor Left/Right to adjust the tone, then press ENTER.

-6 dB - +6 dB (Default : 0 dB)



- "Tone" settings are stored for each input source.
- This cannot be set when the sound mode is set to "Direct" or "Pure Direct".
- This item cannot be set when "Dynamic EQ" is set to "On". (@p. 180)
- You cannot set this when no audio signal is input or in the menu "HDMI Audio Out" is set to "TV". (@F p. 185)



Selecting a Dirac Live filter (Dirac Live)

Set a Dirac Live filter transferred from Dirac Live software.

This can be set after running Dirac Live Room Correction.

See the Dirac Live Manual for details.

https://manuals.marantz.com/DiracLive/ALL/EN

Adjusting audio delay (Audio Delay)

Compensates for incorrect timing between video and audio.

1 Press OPTION.

An option menu screen is displayed.

- When the input source is "HEOS Music", an option menu for online music is displayed. Select "AVP Options...", then press ENTER.
- 2 Use cursor Up/Down to select "Audio Delay", then press ENTER.

The "Audio Delay" screen is displayed.

3 Use cursor Left/Right to set the auto lip sync function to on/off.

On (Default):	Automatically adjusts the audio processing time to compensate for delays in audio/video timing from TV compatible with Auto Lip Sync.
Off:	Do not adjust automatically.

Press cursor Down to select "Adjust" if the timing mismatch between the picture and sound need to be corrected manually, then use cursor Left/Right to adjust the timing.

0 ms - 500 ms (Default : 0 ms)



- "Audio Delay" settings are stored for each input source.
- Automatic correction may not be performed depending on the specifications of your TV even when "Auto Lip Sync" is set to "On".

Index

• You can also finely adjust the delay correction value set by "Auto Lip Sync".



Changing the strength of Tactile Transducer according to the input source (Tactile Transducer)

Adjusts the volume of the tactile transducer output.

1 Press OPTION.

An option menu screen is displayed.

- When the input source is "HEOS Music", an option menu for online music is displayed. Select "AVP Options...", then press ENTER.
- Use cursor Up/Down to select "Tactile Transducer", then press ENTER.

The "Tactile Transducer" screen is displayed.

3 Use cursor Left/Right to set the tactile transducer function to on/off.

On (Default):	Enable tactile Transducer.
Off:	Disable tactile Transducer.

- 4 If you selected "On" in step 3, press cursor Down and adjust the "Level".
- 5 Use cursor Left/Right to adjust the tone, then press ENTER.

-12.0 dB - +12.0 dB (Default : 0.0 dB)



- "Tactile Transducer" settings are stored for each input source.
- This cannot be set when the "Speakers" "Manual Setup" "Advanced" "Tactile Transducer" "Tactile Transducer" is set to "Disabled".



Displaying your desired video during audio playback (Video Select)

This unit can display video from a different source on TV during audio playback. You can set this for each input source.

☐ Supported input sources: CD* / Tuner / HEOS Music / Phono

* This cannot be set when any of the HDMI connector is assigned.

1 Press OPTION.

An option menu screen is displayed.

- When the input source is "HEOS Music", an option menu for online music is displayed. Select "AVP Options...", then press ENTER.
- Use cursor Up/Down to select "Video Select", then press ENTER.

The "Video Select" screen is displayed.

3 Use cursor Left/Right to select the Video Select mode.

Off (Default):	Disable Video Select mode.
On:	Enable Video Select mode.

- 4 If you selected "On" in step 3, press cursor Down and select "Source".
- Use cursor Left/Right to select the input source for video you want to play back, then press ENTER.

Last (Default):	Plays the video from the last input source that was played.
CBL/SAT / Media Player / Blu-ray / Game1 / Game2 / AUX1 / AUX2 / TV Audio / CD:	Plays the video from the selected input source. *

^{*} You can select the input source to which the HDMI terminal is assigned.

Index



• "Video Select" settings are stored for each input source.



Playing the same music in all zones (All Zone Stereo)

You can play back the music being played back in MAIN ZONE simultaneously in ZONE2 and ZONE3 (another rooms).

It is useful when you want to enjoy the same music at the same time in multiple rooms during home party or when you want to play back the same background music in the entire house.

1 Press OPTION.

An option menu screen is displayed.

- When the input source is "HEOS Music", an option menu for online music is displayed. Select "AVP Options...", then press ENTER.
- 2 Use cursor Up/Down to select "All Zone Stereo", then press ENTER.

The "All Zone Stereo" screen is displayed.

- 3 Select "Start", then press ENTER.
 - The input sources for ZONE2 and ZONE3 are switched to the same input source as for MAIN ZONE, and playback starts in the All Zone Stereo mode.
 - When you do not want ZONE2 or ZONE3 to participate in All Zone Stereo, press ENTER to clear the check mark and then press "Start".

■ Stopping the All Zone Stereo mode

1 During playback in All Zone Stereo mode, press OPTION.

An option menu screen is displayed.

- When the input source is "HEOS Music", an option menu for online music is displayed. Select "AVP Options...", then press ENTER
- 2 Use cursor Up/Down to select "All Zone Stereo", then press ENTER.
- 3 Select "Stop", then press ENTER.



- The All Zone Stereo mode is canceled even when the power supply of the MAIN ZONE is turned off.
- In the All Zone Stereo mode, only the "Multi Ch Stereo" and "Stereo" sound modes can be selected.
- When "HDMI Audio Out" is set to "TV", the All Zone Stereo mode is not available.
 (p. 185)

Index

• Save the All Zone Stereo mode playback status to the Smart Select function to enable simple playback in All Zone Stereo mode with a single touch.



Changing the speaker settings to match the listening environment (Speaker Preset)

Two speaker settings can be saved to suit the environments where you use your speakers.

1 Press OPTION.

An option menu screen is displayed.

- When the input source is "HEOS Music", an option menu for online music is displayed. Select "AVP Options...", then press ENTER.
- Use cursor Up/Down to select "Speaker Preset", then press ENTER.

The "Speaker Preset" screen is displayed.

3 Use cursor Left/Right to set the preset.

Preset 1 (Default):	Use Preset 1.
Preset 2:	Use Preset 2.




- This function can be used in the following cases.
 - Adjust the speaker settings manually after setting "Speaker Preset" to "Speaker Preset 2".
 - Save the result to "Speaker Preset 2" after performing Audyssey® Setup for a second time.

Index

 You can switch between Audyssey and Dirac Live easily by saving the Audyssey measurement results to "Speaker Preset 1" and the Dirac Live measurement results to "Speaker Preset 2".



Selecting a sound mode

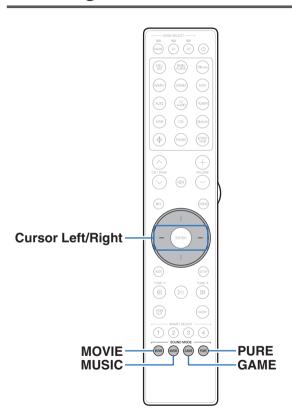

This unit allows you to enjoy various kinds of surround and stereo playback modes.

Disc formats such as Blu-ray Disc and DVD, as well as being supported by digital broadcasting, and even by streaming movies and music from internet-based subscription services.

This unit supports playback of almost all of these multi-channel audio formats. It also supports surround playback of audio formats other than multi-channel audio such as 2-channel stereo audio.



• For audio formats recorded on a disc, see the disc jacket or label.



Selecting a sound mode

1 Press MOVIE, MUSIC or GAME to select a sound mode.

MOVIE :	Switches to the sound mode suitable for enjoying movies and TV programs.
MUSIC:	Switches to the sound mode suitable for enjoying music.
GAME :	Switches to the sound mode suitable for enjoying games.



- The MOVIE, MUSIC, or GAME button memorizes the last sound mode selected for its button. Pressing MOVIE, MUSIC, or GAME recalls the same sound mode as the one selected at the previous playback.
- If the content played back does not support the previously selected sound mode, the most appropriate sound mode for the content is automatically selected.
- This can also be set by pressing MOVIE, MUSIC or GAME on the main unit.

■ Switching the sound mode

- Each time you press MOVIE, MUSIC or GAME, the sound mode changes.
- While the sound mode is displayed, you can also use cursor Up/ Down to select a sound mode.
- Try out various sound modes and enjoy sound mode in your favorite mode.



 Please set the surround mode to Dolby Atmos/Surround when playing back Dolby Atmos encoded content. Dolby Atmos/Surround delivers the optimum playback experience from Blu-ray and streaming sources encoded with Dolby Atmos as well as channel based content. The default setting of this receiver is Dolby Atmos/ Surround.

[Example] When MOVIE is pressed





Direct playback

Sound recorded in source is played as is.

Press PURE to select "Direct".
Direct playback begins.



- While DSD signals are played back, "DSD Direct" is displayed.
- This can also be set by pressing PURE DIRECT on the main unit.

Pure Direct playback

This mode is for playback with higher sound quality than in Direct playback mode.

This mode turns off the main unit display. Doing so suppresses noise sources that affect sound quality.

1 Press PURE to select "Pure Direct".

The display goes dark, and Pure Direct playback begins.



- In Direct and Pure Direct sound modes, the following items cannot be adjusted.
 - Dialog Enhancer (@p. 120)
- Tone (@p. 122)
- M-DAX (@p. 177)
- MultEQ® XT32 (PP p. 179)
- Dynamic EQ (@p. 180)
- Dynamic Volume (PP p. 181)
- Dirac Live Filter (@p. 182)
- Graphic EQ (@p. 182)
- This can also be set by pressing PURE DIRECT on the main unit.

NOTE

 When the Pure Direct mode has been selected, the display turns off after about 5 seconds.



Auto surround playback

This mode detects the type of input digital signal, and automatically selects the corresponding mode for playback. Perform stereo playback when the input signal is PCM. When the input signal is Dolby Digital or DTS, the music is played back according to the respective channel number.

1 Press PURE to select "Auto".

Auto surround playback begins.



• This can also be set by pressing PURE DIRECT on the main unit.



Description of sound mode types

Dolby sound mode

Sound mode type	Description
Dolby Atmos	Please select this mode to play content encoded with Dolby Atmos. If you have selected a different sound mode previously, please select again this mode for Dolby Atmos content play back. It decodes Dolby Atmos content and its positioning data in real time and outputs audio from the appropriate speakers, creating natural audio images regardless of the speaker layout. Use ceiling speakers and/or Dolby Atmos Enabled speakers to realize a three-dimensional sound field. An immersive audio experience can be enjoyed from traditional speaker layouts that do not employ overhead or Dolby Atmos Enabled Speakers by selecting the Speaker Virtualizer feature.
Dolby TrueHD	Please select this mode to play back the contents encoded with Dolby TrueHD at 192kHz/96kHz.
Dolby Digital Plus	Please select this mode to play back the contents encoded with Dolby Digital Plus.
Dolby Digital	Please select this mode to play back the contents encoded with Dolby Digital.
Dolby Surround	This mode uses Dolby Surround Upmixer to extend various sources to natural and realistic multi channels for playback. Use ceiling speakers such as top middle speakers to realize a three-dimensional sound field.



Contents / Connections | Playback | Settings | Tips | Appendix

DTS sound mode

Sound mode type	Description				
DTS Surround	his mode can be selected when playing sources recorded in DTS.				
DTS-HD	This mode can be selected when playing sources recorded in DTS-HD.				
DTS:X	This mode can be selected when playing back content encoded with DTS:X. It decodes DTS:X content and its positioning data in real time and outputs audio from the appropriate speakers, creating natural audio images regardless of the speaker layout. Use height speakers to realize a three-dimensional sound field.				
IMAX DTS	 This mode is automatically activated when playing back IMAX Enhanced content featuring a DTS bitstream. (Pp. 173) When "Speaker Layout" - "Surround Back" is set to "2 spkrs", "Speaker Layout" - "Center" is set to "Yes", and sound mode is set to "IMAX DTS", surround audio is output from the surround back speaker. Audio is not output from the surround speaker. The bass information of speakers are not redirected to the subwoofer, but getting a better bass effect from front and center speakers by special algorithm of IMAX "Crossovers" of "Front" and "Center" is set to other than "Full Range". 				
IMAX DTS:X	This mode is automatically activated when playing back IMAX Enhanced content featuring a DTS:X bitstream. (Fig. p. 173) The bass information of speakers are not redirected to the subwoofer, but getting a better bass effect from front and center speakers by special algorithm of IMAX "Crossovers" of "Front" and "Center" is set to other than "Full Range".				



Sound mode type	Description		
	This mode uses DTS Neural:X Upmixer to extend various sources to natural and realistic multi channels for playback. Use height speakers such as front height speakers to realize a three-dimensional sound field.		
	This mode uses DTS Virtual:X with virtual height and virtual surround processing to realize a three-dimensional sound field when the height speakers are not used.		

- *1 It cannot be selected when the input signal is Dolby Digital, Dolby Digital Plus, Dolby TrueHD or Dolby Atmos.
- *2 This can be selected when Height, Ceiling and Dolby Atmos Enabled speakers are not being used.

Auro-3D sound mode

Sound mode type	Description
Auro-3D	This mode uses an Auro-3D decoder to create three-dimensional audio output using the Height Channel. It is ideal for playback of signals encoded as Auro-3D with a Height Channel. If signals not encoded as Auro-3D are input, an Upmixer called the Auro-Matic is used to create highly realistic three-dimensional audio output.
Auro-2D Surround	This mode uses an Auro-3D decoder to create Surround Sound without a Height Channel. It is ideal for playback of signals encoded as Auro-3D without a Height Channel. If signals not encoded as Auro-3D are input, an Upmixer called the Auro-Matic is used to output Surround Sound.



MPEG-H sound mode

Sound mode type	Description		
MPEG-H	This mode can be selected when MPEG-H audio is being delivered, such as in TV broadcasts.		
	With MPEG-H, you can enjoy playback of highly realistic sound according to the format it is delivered in, such as music		
	programs with high-quality sound and movies with multi-channel audio.		

PCM multi-channel sound mode

Sound mode type	Description	
Multi Ch In	This mode can be selected when playing multi-channel PCM/DSD sources.	

Original sound mode

Sound mode type	Description	
Multi Ch Stereo	This mode is for enjoying stereo sound from all speakers.	
	This mode lets you experience an expansive surround sound effect when playing back through just the front (L/R) speakers only, and when listening with stereo headphones.	



Auto sound mode

Sound mode type	Description		
	In this mode, the type of digital signal input, such as Dolby Digital, Dolby TrueHD, Dolby Digital Plus, Dolby Digital EX, Dolby Atmos, DTS, DTS-HD, DTS:X, DTS-ES, PCM (multi-channel) is detected, and the playback mode switches automatically to the corresponding mode. If the input signal is analog or PCM (2-channel), stereo playback is used. For Dolby Digital or DTS, the music is played back according to the respective channel number.		

Stereo sound mode

Sound mode type	Description		
Stereo	This mode plays 2-channel stereo audio with no additional surround sound processing.		
	Sound is output from the front left and right speakers, and subwoofer if connected.		
	 When multi-channel signals are inputted, they are mixed down to 2-channel audio and are played back with no additional surround sound processing. 		

Direct sound mode

Sound mode type	Description	
Direct	his mode plays back audio as recorded in the source.	
Pure Direct	This mode plays back an even higher quality sound than the "Direct" mode. The following circuits are stopped in order to further improve sound quality. • Display indicator circuit of the main body (display will go off.)	



Sound mode that can be selected for each input signal

- The following sound modes can be selected using the MOVIE, MUSIC and GAME buttons.
- Adjust the sound field effect with the menu "Surround Parameter" to enjoy surround sound the way you like it. (127) p. 170)



• Only "Stereo" and "Virtual" can be selected when headphones are used.

Input signal	Sound mode	MOVIE button	MUSIC button	GAME button
	Stereo	0	0	0
	Dolby Surround	0	0	0
	DTS Neural:X	0	0	0
2-channel *1	DTS Virtual:X *2*3	0	0	0
2-Chamber & F	Auro-3D *4	0	0	0
	Auro-2D Surround *5	0	0	0
	Multi Ch Stereo	0	0	0
	Virtual	0	0	0

- *1 2-channel also includes analog input.
- *2 It cannot be selected when a speaker configuration with any height speakers is used.
- *3 It cannot be selected when the input signal is Dolby Digital, Dolby Digital Plus, Dolby TrueHD or Dolby Atmos.
- *4 It cannot be selected when a speaker configuration without front height or front Dolby Atmos Enabled speakers is used.
- *5 It cannot be selected when only front speakers are used.



Input signal	Sound mode	MOVIE button	MUSIC button	GAME button
Multi-channel *6	Stereo	0	0	0
	Dolby Digital	0	0	0
Dolby Digital	Dolby Digital + Dolby Surround	0	0	0
	Dolby Digital + Neural:X	0	0	0
	Dolby Digital Plus	0	0	0
Dolby Digital Plus	Dolby Digital Plus + Dolby Surround *7	0	0	0
Doiby Digital Flus	Dolby Digital Plus + Neural:X	0	0	0
	Dolby Atmos *8	0	0	0
	Dolby TrueHD	0	0	0
Dolby TrueHD	Dolby TrueHD + Dolby Surround *7	0	0	0
Doiby Huerib	Dolby TrueHD + Neural:X	0	0	0
	Dolby Atmos *8	0	0	0
Dolby Atmos	Dolby Atmos	0	0	0

^{*6} The sound mode that can be selected differs depending on the audio format of the input signal and the number of channels.



^{*7} This can be selected when the input signal does not contain Dolby Atmos.

^{*8} This can be selected when the input signal contains Dolby Atmos.

	Input signal	Sound mode	MOVIE button	MUSIC button	GAME button
Multi-channel *6	DTS	DTS Surround	0	0	0
		DTS + Dolby Surround	0	0	0
		DTS + Neural:X	0	0	0
		DTS + Virtual:X *2	0	0	0
	DTS-HD	DTS-HD + Dolby Surround	0	0	0
		DTS-HD + Neural:X	0	0	0
		DTS-HD + Virtual:X *2	0	0	0
	DTS:X	DTS:X	0	0	0
		DTS:X + Virtual:X *2	0	0	0

^{*2} It cannot be selected when a speaker configuration with any height speakers is used.




^{*6} The sound mode that can be selected differs depending on the audio format of the input signal and the number of channels.

Input signal	Sound mode	MOVIE button	MUSIC button	GAME button
IMAX DTS	IMAX DTS *9	0	0	0
	IMAX DTS + Neural:X *9	0	0	0
	IMAX DTS + Virtual:X *2*9	0	0	0
IMAX DTS:X	IMAX DTS:X *9	0	0	0
	IMAX DTS:X + Virtual:X *2*9	0	0	0
PCM multi-channel	Multi Ch In	0	0	0
	Multi Ch In 7.1	0	0	0
	Multi In + Dolby Surround	0	0	0
	Multi Ch In + Neural:X	0	0	0
	Multi In + Virtual:X *2	0	0	0
MPEG-H	MPEG-H	0	0	0
Multi-channel *6	Auro-3D *4 *10	0	0	0
	Auro-2D Surround *5 *10	0	0	0
	Multi Ch Stereo *7		0	0
	Virtual	0	0	0

- *2 It cannot be selected when a speaker configuration with any height speakers is used.
- *4 It cannot be selected when a speaker configuration without front height or front Dolby Atmos Enabled speakers is used.
- *5 It cannot be selected when only front speakers are used.
- *6 The sound mode that can be selected differs depending on the audio format of the input signal and the number of channels.
- *7 This can be selected when the input signal does not contain Dolby Atmos.
- *9 Selectable when "Surround Parameter" "IMAX" is set to "Auto" in the menu. When "IMAX" is set to "Off", playback is normal DTS or DTS:X. (12) p. 173)
- *10 It cannot be selected when the input signal is Dolby Atmos, DTS:X and MPEG-H.



 ■ Views on the display



- 1 Shows a decoder to be used.
 - In the case of the Dolby Digital Plus decoder, "DDD+" is displayed.
- 2 Shows a decoder that creates sound output.
 - "DDDSunn" indicates that the Dolby Surround decoder is being used.



HDMI Control function

A recent addition to the HDMI standard is CEC (Consumer Electronics Control), which allows control signals from one device to communicate with another device via the HDMI cable connection.

Setting procedure

- **1** Enable the HDMI Control function of this unit. Set "HDMI Control" to "On". (p. 187)
- Turn the power on for all the devices connected by HDMI cable.
- 3 Set the HDMI Control function for all devices connected by HDMI cable.
 - Please consult the operating instructions for the connected devices to check the settings.
 - Carry out steps 2 and 3 should any of the devices be unplugged.
- 4 Switch the television input to the HDMI input connected to this unit.


- 5 Switch the input source of this unit to check that video from the player connected by HDMI is played back correctly.
- When you turn the TV's power to standby, check that the power of this unit also goes to standby.

NOTE

- Some functions may not operate depending on the connected TV or player. Check the owner's manual of each device for details beforehand.
- The HDMI ZONE2 function is not compatible with the HDMI Control function.
- When the HDMI ZONE2 function is used with "HDMI Control" in the menu set to "On", the HDMI ZONE2 function may not fully work.



Sleep timer function

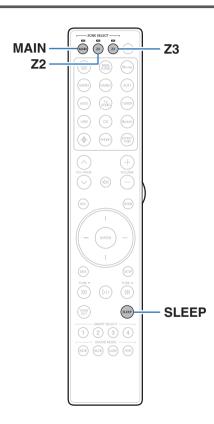

You can have the power automatically switched to standby once a set time has elapsed. This is convenient for viewing and listening while going to sleep. The sleep timer function can be set for each zone.



Using the sleep timer

1 Press MAIN, Z2 or Z3 to select the operating zone with the remote control.

The indicator for the selected zone is lit.

- Press SLEEP and display the time you want to set.
 - The sleep timer indicator lights up on the display and the sleep timer starts.
 - You can set the sleep timer in the range from 10 to 120 minutes in steps of 10 minutes.

■ Checking the remaining time

Press SLEEP when the sleep timer is in operation. The remaining time appears on the display.

■ To cancel the sleep timer

Press SLEEP to select "Off".

The sleep timer indicator on the display turns off.




• The sleep timer setting is canceled when the unit switches to standby mode.

NOTE

 The sleep timer function cannot turn off the power of devices connected to this unit. To turn off the power of those connected devices, set up sleep timers on the connected devices themselves.



Smart select function

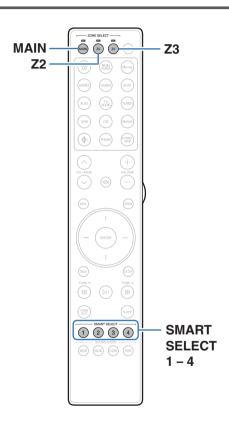

Settings such as the input source, volume level and sound mode can be registered to the SMART SELECT 1 - 4 buttons.

You can simply press one of the registered SMART SELECT buttons in subsequent playbacks to switch to the group of saved settings in a batch. By saving frequently used settings at the SMART SELECT 1 – 4 buttons, you will always be able to easily call up the same playback environment. The Smart Select function can be memorized for each zone.



Calling up the settings

1 Press MAIN, Z2 or Z3 to select the operating zone with the remote control.

The indicator for the selected zone is lit.

Press SMART SELECT.

The Smart Select settings registered to the button you pressed are called up.

• The default settings for the input source are as shown below.

[MAIN ZONE]/[ZONE2]/[ZONE3]

Button	Input source
SMART SELECT 1	CBL/SAT
SMART SELECT 2	Blu-ray
SMART SELECT 3	Media Player
SMART SELECT 4	HEOS Music





Changing the settings

1 Set the items below to the settings you want to register.

The following settings from ① to ② can be memorized for MAIN ZONE, and settings ① and ② can be memorized for ZONE2 and ZONE3.

- 1) Input source (PP p. 86)
- 2 Volume (PP p. 87)
- ③ Sound mode (@p. 128)
- (Audyssey (Audyssey MultEQ® XT32, Audyssey Dynamic EQ®, Audyssey Dynamic Volume®, Audyssey LFC™) (☞ p. 179)
- (5) "Dirac Live" (@p. 182)
- ⑥ "M-DAX" (© p. 177)
- ① "Adjusting the volume of each channel to match the input source (Channel Level Adjust)" (② p. 121)
- (§) "Displaying your desired video during audio playback (Video Select)" (FF p. 125)
- (9) "All Zone Stereo" (PP p. 126)
- 10 "Speaker Preset" (PP p. 127)
- (i) "HDMI Video Output" (PP p. 190)
- (12) "TV Audio sharing settings" (127 p. 148)



- Press and hold SMART SELECT while a radio station is being received is being played back with any of the following sources, the current radio station is memorized.
 - Internet Radio Station / Spotify

Press MAIN, Z2 or Z3 to select the operating zone with the remote control.

The indicator for the selected zone is lit.

Press and hold the desired SMART SELECT until "Smart* Memory", "Z2 Smart* Memory" or "Z3 Smart* Memory" appears on the display.

The current settings will be memorized.

 $*$ is displayed the number for the SMART SELECT button you pressed.

■ Changing setting items in Smart Select

You can change the MAIN ZONE Smart Select names displayed on the TV screen or this unit's display and saved setting items. See "Smart Select" in the menu for details on how to make these changes. (3 p. 250)



■ TV Audio sharing settings

You can enjoy the same content as the MAIN ZONE in ZONE2 or ZONE3 while maintaining surround playback of the content from TV or other playback devices in the MAIN ZONE with the original audio format such as Dolby Atmos.

By saving the following settings in advance to Smart Select, you can easily call up the playback environments to be used in the MAIN ZONE, ZONE2 and ZONE3 with this function.

- 1 Select the input source to play back in the MAIN ZONE.
- Press ZONE2 ON/OFF or ZONE3 ON/OFF on the main unit to turn on the power of the zone where you want to play the same content as the MAIN ZONE.
- Press ZONE2 SOURCE or ZONE3 SOURCE on the main unit to switch the input source of ZONE2 or ZONE3 to "Source".


If "Source" is selected as the input source of ZONE2 or ZONE3, the input source is changed to mirror that of the MAIN ZONE.

Press and hold the desired SMART SELECT until "Smart Select* Memory" appears on the display.



Panel lock function

To prevent accidental operation of this unit, you can disable operation of the buttons on the front panel.

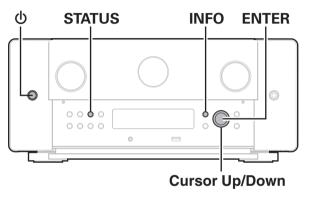

Disabling all key button operations

- 1 Press (b) while you press and hold STATUS and INFO with the unit in standby mode.
- 2 Use cursor Up/Down to select "FP/VOL LOCK On".
- 3 Press ENTER to enter the setting.

All button operations except $oldsymbol{0}$ are disabled.



Disabling all button operations except VOLUME

- 1 Press & while you press and hold STATUS and INFO with the unit in standby mode.
- 2 Use cursor Up/Down to select "FP LOCK On".
- 3 Press ENTER to enter the setting.

 All button operations except \oplus and VOLUME are disabled.

Canceling the Panel lock function

- 1 Press (b) while you press and hold STATUS and INFO with the unit in standby mode.
- Use cursor Up/Down to select "FP LOCK *Off". (* The currently set mode.)
- **3** Press ENTER to enter the setting.
 The Panel lock function is canceled.




 Even when the Panel lock function is set, you can operate the unit using the remote control unit.



Remote lock function

When connecting an IR receiver, enable the Remote lock function. When the function is enabled, you can not perform operations with the remote control unit.

By default, this function is disabled.

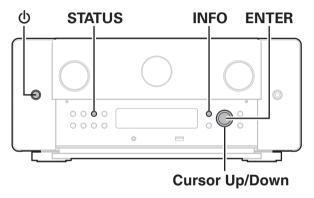

Disabling the sensor function of the remote control unit

- 1 Press (b) while you press and hold STATUS and INFO with the unit in standby mode.
- 2 Use cursor Up/Down to select "RC LOCK On".
- 3 Press ENTER to enter the setting.
 The infrared light receiving function is disabled.


Enabling the remote sensor function

- 1 Press & while you press and hold STATUS and INFO with the unit in standby mode.
- Use cursor Up/Down to select "RC LOCK *Off". (* The currently set mode.)
- 3 Press ENTER to enter the setting.
 Infrared light receiving function on the main unit is enabled.



Web control function

You can control and configure this unit from a web control screen on a web browser.

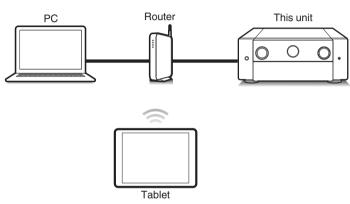



- This unit and the PC or tablet need to be connected correctly to the network in order to use the web control function. (127) p. 77)
- Depending on the settings of your security-related software, you may not be able
 to access this unit from your PC. If this is the case, then change the settings of the
 security-related software.

Controlling the unit from a web control

The web control screen supports the following functions.

- 1 Setup Menu
- Power ON/OFF for each zone
- MAIN ZONE input source switching

Web control screen Top menu






- Audyssey Setup is not supported on the web control screen. If you wish to perform measurement, perform measurement from the on-screen Setup Menu.
- "CI Menu" contains settings for use by custom installers and should not be used at any other time.




- Switch the "Network Control" setting to "Always On". (F) p. 241)
- Check the IP address of this unit with "Information". (© p. 237)

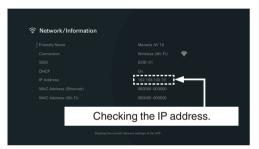

3 Open a web browser on a PC or tablet.

4 Enter the IP address of this unit in browser's address box.

 For example, if the IP address of this unit is "192.168.100.19", enter "http://192.168.100.19".



A privacy error message is displayed when the web control screen is opened through a web browser. Follow the following procedure to proceed to the web control screen.


The message and behavior differ depending on your web browser.




When the top menu is displayed on the web browser, click on the menu item you want to operate.

Example (Chrome):

Click "Advanced" and "Proceed to xxx.xxx.xxx (IP address)" to open the web control screen.

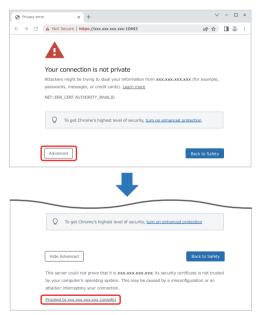



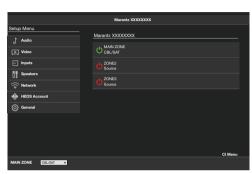



Playback in ZONE2/ZONE3 (Another room)

You can operate this unit to enjoy video and audio in a room (ZONE2 and ZONE3) that is different from the room where this unit is placed (MAIN ZONE).

- You can simultaneously play back the same source in both the MAIN ZONE, ZONE2 and ZONE3.
- You can also play back separate sources in the MAIN ZONE, ZONE2 and ZONE3.

■ Connecting ZONE (© p. 156)

- "Connection 1: Connection through the HDMI ZONE2 connector" (@p. 156)
- "Connection 2: Connection through the external power amplifiers" (P p. 157)

■ Playback the source in ZONE2/ZONE3 (© p. 158)

"Playing the same source simultaneously in MAIN ZONE, ZONE2 and ZONE3 (TV Audio Sharing setting)" (に實 p. 158)

■ Adjusting the Volume in ZONE2/ZONE3 (© p. 162)

"Adjusting the volume" (PP p. 162)

"Turning off the sound temporarily (Muting)" (@p. 162)

 


[&]quot;Playing different sources in MAIN ZONE, ZONE2 and ZONE3" (@p. 160)

Connecting ZONE

■ Connection 1 : Connection through the HDMI ZONE2 connector

When a TV is connected to the HDMI ZONE2 OUT connector, you can play back a video or audio from the device connected to the HDMI 1 – 7 IN connector in ZONE2 (HDMI ZONE2 function).






• When a TV is connected to the HDMI ZONE2 OUT connector, and the MAIN ZONE and ZONE2 are set to the same input source, the MAIN ZONE audio may be mixed down to 2-channel audio.



■ Connection 2 : Connection through the external power amplifiers

The audio signals of this unit's ZONE2 and ZONE3 audio output connectors are played on the ZONE2 and ZONE3 power amplifiers.

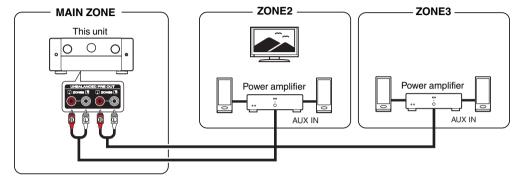




Playback the source in ZONE2/ZONE3

■ Playing the same source simultaneously in MAIN ZONE, ZONE2 and ZONE3 (TV Audio Sharing setting)

The TV Audio Sharing setting of this unit can be used to output all signals from ZONE2 and ZONE3 by setting "Source" as the input source for ZONE2 and ZONE3. When playing audio input from a TV via the ARC or eARC or audio input from a playback device, you can enjoy the original input audio format, such as Dolby Atmos, in surround sound in MAIN ZONE while playing the same content in ZONE2 and ZONE3.



• Only the controls on the main unit can be used to set "Source" as the input source.

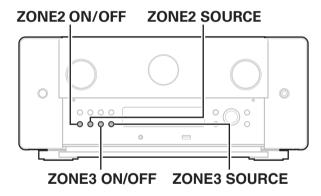

- 1 Select the input source to play back in the MAIN ZONE.
- Press ZONE2 ON/OFF or ZONE3 ON/OFF on the main unit to turn on the power of ZONE2 or ZONE3.

The MULTI ZONE indicator on the display lights.



Press ZONE2 SOURCE or ZONE3 SOURCE on the main unit to switch the input source of ZONE2 or ZONE3 to "Source".


If "Source" is selected as the input source of ZONE2 or ZONE3, the input source is changed to mirror that of the MAIN ZONE. "Source" is the default setting.

• The following audio signals can be played in ZONE2 and ZONE3.

Input	Output	
input	ZONE2	ZONE3
Digital Audio (HDMI)	0	0
Digital Audio (Coaxial/Optical)	0	0
Analog Audio	0	0
USB	0	0
HEOS Music	0	0



■ Playing different sources in MAIN ZONE, ZONE2 and ZONE3

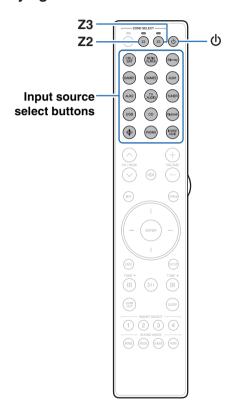

1 Press Z2 or Z3 to select the operating zone with the remote control.

The indicator for the selected zone is lit.

Press POWER () to turn on the ZONE2 or ZONE3 power.

The MULTI ZONE indicator on the display lights.

 Power in ZONE2 or ZONE3 can be turned on or off by pressing ZONE2 ON/OFF or ZONE3 ON/OFF on the main unit.



Press the input source select button to select the input source to be played.

The audio signal of the selected source is output to ZONE2 or ZONE3.

- To perform an operation with the main unit, press ZONE2 SOURCE or ZONE3 SOURCE. Each time you press ZONE2 SOURCE or ZONE3 SOURCE, the input source changes.
- The following audio signals can be played in ZONE2 and ZONE3.


Input	Output	
input	ZONE2	ZONE3
Digital Audio (HDMI)	○*1	
Digital Audio (Coaxial/Optical)	○*2	○*2
Analog Audio	0	0
USB	0	0
HEOS Music	0	0

^{*1} To play an HDMI signal other than PCM 2-channel in ZONE2, set "HDMI Audio" to "PCM". (@P p. 248)



^{*2} Only a 2-channel PCM signal is supported.

Adjusting the Volume in ZONE2/ZONE3

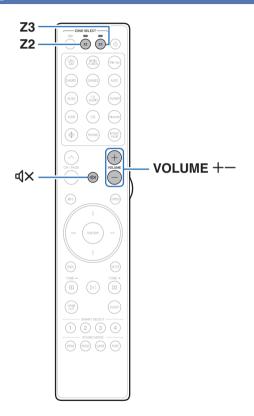

■ Adjusting the volume

1 Press Z2 or Z3 to select the operating zone with the remote control.

The indicator for the selected zone is lit.

- 2 Use VOLUME +— to adjust the volume.
 - At time of purchase, "Volume Limit" is set to "70 (-10 dB)".
 (P) p. 249)



 Turn VOLUME after pressing ZONE2 SOURCE or ZONE3 SOURCE on the main unit to adjust the volume.

■ Turning off the sound temporarily (Muting)

1 Press Z2 or Z3 to select the operating zone with the remote control.

The indicator for the selected zone is lit.

Press MUTE ዺX.

The sound is reduced to the level set at "Mute Level" in the menu. ($\ensuremath{\mathfrak{P}}$ p. 249)

Index

 To cancel mute, either adjust the sound volume or press MUTE ◀X again.



Menu map

When using menu operations, connect this unit to a TV and operate this unit while viewing the TV.

The recommended settings are configured for this unit by default. You can customize this unit based on your existing system and your preferences.

Setting items	Detailed items	Description	Page
	Subwoofer Level Adjust	Adjusts the subwoofer channel volume for all input sources.	169
	Bass Sync	Synchronizes the timing of the low frequency sound.	169
	Surround Parameter	Adjusts surround sound parameters.	170
Audio	M-DAX	Expands the low and high frequency components of compressed audio content such as MP3 files to enable richer audio playback.	177
	Volume	Sets the MAIN ZONE (room where the unit is located) volume setting.	178
	Audyssey	Makes Audyssey MultEQ® XT32, Audyssey Dynamic EQ®, Audyssey Dynamic Volume® and Audyssey LFC TM settings.	179
	Dirac Live	Select a Dirac Live filter.	182
	Graphic EQ	Adjusts the tonal quality for each speaker using a graphic equalizer.	182
D	DAC Filter	Selects the DAC filter.	184
	HDMI Setup	Makes settings for HDMI Audio Out, HDMI Pass Through and HDMI Control settings.	185
	Output Settings	Makes settings for video output.	190
	On-Screen Display	Selects the on-screen display user interface preferences.	191
	Screensaver	Sets the screen saver setting.	192
Video	4K/8K Signal Format	Sets signal format options for your 4K or 8K video equipment.	193
	HDCP Setup	Sets the HDCP version for each HDMI input source.	194
	TV Format	Selects the format used to send video to the TV.	195



Setting items	Detailed items	Description	Page
	Input Assign	Changes input connector assignment and the audio input mode.	196
	Source Rename	Changes the display name for input source.	199
	Hide Sources	Selects source inputs to hide on the user interface and front panel displays.	199
Inputs	Source Level	Adjusts the input level for the current source.	200
	Audyssey® Setup	The acoustic characteristics of the connected speakers and listening room are measured and the optimum settings are made automatically.	201
	Manual Setup	Sets up the speakers manually or changes Audyssey® Setup, Dirac Live® Room Correction settings.	212
Speakers	Dirac Live Setup	Displays information about using Dirac Live Room Calibration.	236
Ir	Information	Displays network information.	237
	Connection	Configures the network connection.	237
	Settings	Configures the network settings (DHCP and IP address).	240
	Network Control	Enables network communication in standby power mode.	241
Network	Friendly Name	Edits the name of this unit that is displayed on the network.	242
	Diagnostics	Tests the network connection.	242
	AirPlay	Settings for Apple AirPlay.	243
	Spotify Connect	Toggles access to Spotify Connect.	244
	TIDAL Connect	Toggles access to TIDAL Connect.	244
	Wi-Fi and Bluetooth	Toggles power to the Wi-Fi and Bluetooth radios.	244



Setting items	Detailed items	Description	Page
	[When the user is signed out of the HEOS account]		
	I have a HEOS Account	Select to sign in.	245
	Create Account	Creates new HEOS account.	245
	Forgot Password	If you forgot your password, we'll send you an email with instructions to reset it.	245
HEOS Account	[When the user is signed in to the HEOS account]		
	Signed in as	Displays your HEOS account.	245
	Change Location	Selects your location.	245
	Change Password	Changes your HEOS account password.	245
	Delete Account	Deletes your HEOS account.	245
	Sign Out	Signs out of your HEOS account.	245




Setting items	Detailed items	Description	Page
	Language	Selects the language for the on-screen user interface.	246
5	Owner's Manual	Access the online Owner's Manual from your mobile device.	246
\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \	Bluetooth Transmitter	Sets Bluetooth transmitter settings.	246
General	ZONE2 Setup/ ZONE3 Setup	Makes settings for audio playback with ZONE2 and ZONE3.	247
	Zone Rename	Changes the display title of each zone to one you prefer.	250
	Smart Select	Changes the Smart Select Name display title to one you prefer.	250
	Trigger Out 1/ Trigger Out 2	Select the conditions for activating trigger out function.	251
	Auto Standby	Selects when to automatically enter standby power mode.	252
	Front Panel	Adjusts the front panel display settings.	253
	Firmware	Checks for the latest firmware information about updates, updates the firmware.	254
	Information	Shows information about this unit settings, input signals, etc.	256
	Usage Data	Selects whether or not to send anonymous usage data to Marantz.	258
	Save & Load	Save and restore device settings by using a USB memory device.	258
	Setup Lock	Protects settings from inadvertent changes.	259
	Reset	Various settings are reset to the factory default values.	259



Setting items	Detailed items	Description	Page
*****	Begin Setup	Performs basic installation/connections/settings from the beginning according to the guidance indicated on the TV screen.	Page 9 of the separate
	Language Select	Sets individual setting items according to the guidance displayed on the TV screen.	manual "Quick Start
	Speaker Setup		Guide"
Setup Assistant	Speaker Calibration		
	Network Setup		
	TV Audio Setup		
	Input Setup		
	Mobile Apps		



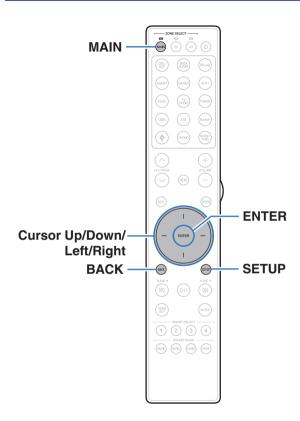

Menu operations

1 Press MAIN on the remote control unit to set the operating zone to the MAIN ZONE.

The MAIN indicator lights.

? Press SETUP.

The menu is displayed on the TV screen.

- 3 Use cursor Up/Down/Right to select the menu to be set or operated, then press ENTER.
- Use cursor Left/Right to change to desired setting.
- 5 Press ENTER to enter the setting.
 - To return to the previous item, press BACK.
 - Exiting the menu, press SETUP while the menu is displayed. The menu display disappears.



Audio

Make audio-related settings.

Subwoofer Level Adjust

Adjusts the subwoofer channel volume for all input sources.

■ Subwoofer 1 / Subwoofer 2 / Subwoofer 3 / Subwoofer 4

Adjusts the volume level for the Subwoofer 1, 2, 3 and 4.

-12.0 dB - +12.0 dB (Default: 0.0 dB)



- This setting is also reflected in the subwoofer channel level in the "Speakers" "Levels" menu settings. (127) p. 227)
- The name of the subwoofer changes depending on the configuration of "Subwoofer Mode" (@p. 220) and "Subwoofer Layout" (@p. 221).

Bass Sync

For contents recorded in multi-channel such as Blu-ray discs, the recorded low frequency effects (LFE) may be out of synch and delayed. This function corrects such a delay of low frequency effects (LFE).

0 ms - 16 ms (Default: 0 ms)



How low frequency effects (LFE) are delayed differ according to the disc. Set this
to the desired value.

- "Bass Sync" settings are stored for each input source.
- This can be set when the LFE signal is included in the input signal.



Surround Parameter

You can adjust the surround audio sound field effects to match your preferences.

The items (parameters) that can be adjusted depend on the signal being input and the currently set sound mode.



- Some setting items cannot be set while playback is stopped. Make the settings during playback.
- "Surround Parameter" settings are stored for each sound mode.

■ Cinema EQ

Gently softens the upper treble range of movie soundtracks to reduce possible harshness and improve clarity.

On:	"Cinema EQ" is used.
Off (Default):	"Cinema EQ" is not used.



 This item cannot be set when sound mode is "Direct", "Pure Direct", "Stereo" and "Original sound mode".

■ Loudness Management

This sets whether to output as specified in "Dynamic Compression" or output directly without compressing the dynamic range of audio recorded in the disc.

On (Default):	Outputs are given based on enabling the settings made in "Dynamic Compression" and Dialogue normalization function.
Off:	"Dynamic Compression" settings and Dialogue normalization are disabled, and the signals on the disc are output as is.



 "Loudness Management" can be set when Dolby Digital, Dolby Digital Plus, Dolby TrueHD and Dolby Atmos signal is input.



■ Dynamic Compression

Compress dynamic range (difference between loud and soft sounds).

Auto:	Automatic dynamic range compression on/off control according to source.
Low / Medium / High:	These set the compression level.
Off (Default):	Dynamic range compression is always off.



- "Dynamic Compression" can be set when Dolby Digital, Dolby Digital Plus, Dolby TrueHD, Dolby Atmos or DTS signal is input.
- "Auto" cannot be set when inputting a DTS signal.

■ Dialog Control

Adjust the volume of dialog in movies, vocals in music, etc. so these can be heard more easily.

0 - 6 (Default: 0)



• This can be set when a DTS:X signal that is compatible with the Dialog Control function is input.

■ Low Frequency Effects

Adjust the low frequency effects level (LFE).

-10 dB - 0 dB (Default: 0 dB)



- This can be set when the LFE signal is included in the input signal.
- This item can be selected when a Dolby Digital or DTS signal or DVD-Audio is played.

Index

 For proper playback of the different sources, we recommend setting to the values below.

Dolby Digital sources: 0 dBDTS movie sources: 0 dB

• DTS music sources: -10 dB



■ Speaker Virtualizer

The Speaker Virtualizer enhances the surround and height speaker channels to create an enveloping virtual surround effect.

On (Default):	Enables "Speaker Virtualizer".
Off:	Disables "Speaker Virtualizer".



- You can set this when the sound mode is "Dolby Atmos", "Dolby Surround" or sound mode that has "+Dolby Surround" in the sound mode name.
- Usable when not using height, ceiling or Dolby Atmos Enabled speakers, or when not using surround speakers.
- Audio is not output from the surround back speaker if "Speaker Virtualizer" is set to "On" when "Speaker Layout" - "Surround Back" is set to "1 spkr" in the menu.

■ Center Spread

Center Spread expands the center channel signal to left and right front speakers to create a wider frontal audio image for the listener. It is optimized and designed primary for playback of stereo music content.

On:	Use "Center Spread".
Off (Default):	Do not use "Center Spread".

Index



• You can set this when sound mode is "Dolby Surround".



■ DTS Neural:X

DTS Neural:X Expands the non-object based audio signals and optimizes them for your speaker configuration.

On (Default):	Use "DTS Neural:X".
Off:	Do not use "DTS Neural:X".



• You can set this when sound mode is "DTS:X".

■ IMAX

Sets the audio mode for IMAX playback.

Auto	Automatically enables IMAX mode when
(Default):	IMAX content is detected.
Off:	Disables IMAX mode.



• This setting cannot be set when headphones are used.

■ IMAX Audio Settings

You can configure special IMAX audio settings to recreate the conditions of an IMAX theater.

Auto (Default):	Applies the optimized speaker settings to reproduce similar to the IMAX theater environment.
Manual:	Manually adjusts the "High Pass Filter", "Low Pass Filter" and "Subwoofer Output".



- You can set this when sound mode is "IMAX DTS" or "IMAX DTS:X".
- "Speakers" "Crossovers", "Bass" "Subwoofer Output" and "LPF for LFE" in the menu cannot be applied during IMAX playback.

High Pass Filter

Set the high pass filter cutoff frequency for all speakers during IMAX playback.

40 Hz / 60 Hz / 80 Hz / 90 Hz / 100 Hz / 110 Hz / 120 Hz / 150 Hz / 180 Hz / 200 Hz / 250 Hz (Default: 80 Hz)

Index



• You can set this when "IMAX Audio Settings" is set to "Manual".



Low Pass Filter

Set the low pass filter cutoff frequency of the LFE signal during IMAX playback.

80 Hz / 90 Hz / 100 Hz / 110 Hz / 120 Hz / 150 Hz / 180 Hz / 200 Hz / 250 Hz (Default: 120 Hz)



• You can set this when "IMAX Audio Settings" is set to "Manual".

■ Subwoofer Output

Set the bass signal to be played by the subwoofer during IMAX playback.

LFE + Main:	The low range signal of all speakers is added to the LFE signal output from the subwoofer. The LFE signal and the bass component of each speaker is played.
LFE (Default):	Only the LFE signal is played.



• You can set this when "IMAX Audio Settings" is set to "Manual".

Auro-Matic 3D Preset

Selects the Auro-Matic 3D Preset for fine tuning the Auro-3D experience to specific audio material.

Small:	"Small" is ideal for pop and chamber music.
Medium (Default):	"Medium" is ideal on jazz music or typical movies and TV shows.
Large:	"Large" is ideal for recordings that were recorded in large spaces (e.g. orchestral recording).
Movie:	"Movie" is ideal for experiencing a large- cinema effect for watching movies (e.g. action movies with big explosions).
Speech:	"Speech" is ideal for recordings which are mostly dialog (e.g. news broadcast), and that have virtually no inherent spatial information.



- You can set this when the sound mode is set to "Auro-3D" or "Auro-2D Surround".
- This cannot be set if the input signal contains Auro-3D signals containing a Height channel.



■ Auro-Matic 3D Strength

Changes the level of the up-mixed channels in relation to the original input signal.

The value ranges from 0 (no up-mixing) to 15 (Maximum level, providing maximum effect).

0 - 15 (Default:12)



- You can set this when the sound mode is set to "Auro-3D" or "Auro-2D Surround".
- This cannot be set if the input signal contains Auro-3D signals containing a Height channel.

■ Auro-3D Mode

Select how to output sound to all speakers when Auro-3D decoding is active.

Channel Expansion (Default):	Incoming Auro-3D content is expanded to additional speakers. All speakers configured for Auro-3D will output sound.
Direct:	Incoming Auro-3D content is sent directly to each corresponding channel. No content is sent to additional speakers.



 You can set this when the input signal contains Auro-3D signal and sound mode is set to Auro-3D.

■ Speaker Select

Selects which speakers output sound, depending on the current sound mode.

Floor:	Plays back without height speakers.
Floor & Height (Default):	Plays back with height speakers.

Index



• This can be set when the sound mode is the Multi Ch Stereo mode.



■ Subwoofer

Turn subwoofer output on and off.

On (Default):	The subwoofer is used.
Off:	The subwoofer is not used.



• You can set this when the sound mode is "Direct" or "Stereo" and in the menu "Subwoofer Output" is set to "LFE + Main". (1276 p. 229)

■ Set Defaults

The "Surround Parameter" settings are returned to the default settings.



M-DAX

Compressed audio formats such as MP3, WMA (Windows Media Audio) and MPEG-4 AAC reduce the amount of data by eliminating signal components that are hard for the human ear to hear. The "M-DAX" function generates the signals eliminated upon compression, restoring the sound to conditions near those of the original sound before compression. It also restores the original bass characteristics for a rich and expanded tonal range.

■ Mode

High:	Optimized mode for compressed sources with very weak highs (64 kbps and under).
Medium:	Apply suitable bass and treble boost for all compressed sources (96 kbps and under).
Low:	Optimized mode for compressed sources with normal highs (96 kbps and over).
Off (Default):	Do not use "M-DAX".



- This item can be set with analog signals or PCM signal (Sample Rate = 44.1/48 kHz) is input.
- This cannot be set when the sound mode is set to "Direct" or "Pure Direct".
- "M-DAX" settings are stored for each input source.
- This can also be set by pressing M-DAX on the main unit.



Volume

Set the MAIN ZONE (room where the unit is located) volume setting.

■ Scale

Set how volume is displayed.

0 - 98 (Default):	Display in the range 0 (Min) to 98.
-79.5 dB - 18.0 dB:	DisplaydB (Min), in the range -79.5 dB to 18.0 dB.



• "Scale" settings are reflected in all the zones.

Limit

Make a setting for maximum volume.

60 - 80 (-20 dB - 0 dB)	
Off (Default)	



The dB value is displayed when the "Scale" setting is "-79.5 dB - 18.0 dB". (☞ p. 178)

■ Power On Level

Sets the initial volume level when the power is turned on.

Last (Default):	Sets the power-on level to the last-used volume level.
Mute:	Sets the power-on level to mute level.
1 – 98 (–79 dB – 18 dB) :	Sets a specific power-on level.



• The dB value is displayed when the "Scale" setting is "-79.5 dB - 18.0 dB". (@p p. 178)

■ Mute Level

Set the amount of attenuation when mute is on.

Full (Default):	Sets the mute level to full mute (no sound).
-40 dB :	Sets the mute level to 40 dB lower than the current volume level.
-20 dB :	Sets the mute level to 20 dB lower than the current volume level.



Audyssey®

Set Audyssey MultEQ® XT32, Audyssey Dynamic EQ®, Audyssey Dynamic Volume® and Audyssey LFC™. These can be selected after Audyssey® Setup has been performed.

For additional information on Audyssey technology, please see "Explanation of terms" (FF p. 308).



- "MultEQ® XT32", "Dynamic EQ", "Reference Level Offset", "Dynamic Volume", "Audyssey LFC™" and "Containment Amount" settings are stored for each input source.
- When the sound mode is in the "Direct" or "Pure Direct" mode, "MultEQ® XT32", "Dynamic EQ", "Dynamic Volume" and "Audyssey LFC™" settings cannot be configured.
- When the sound mode is in "DTS Virtual:X" or sound mode that have "+Virtual:X" in the sound mode name, "Dynamic EQ", "Dynamic Volume" and "Audyssey LFCTM" settings cannot be configured.
- This item cannot be selected when a DTS:X format with a sampling frequency of over 48 kHz is input.

■ MultEQ® XT32

MultEQ® XT32 compensates for both time and frequency characteristics of the listening area based on Audyssey® Setup measurement results. Selection is done from three types of compensation curves. We recommend the "Reference" setting.

Reference (Default):	Selects the default calibrated setting with a slight roll off at high frequencies. Optimal for movies.
L/R Bypass:	Selects the reference setting, but bypasses MultEQ® XT32 on the front left and right speakers.
Flat:	Selects the calibrated setting which is optimized for small rooms where your listening position is closer to the speakers.
Off:	Do not use "MultEQ® XT32".



• When using headphones, "MultEQ® XT32" is automatically set to "Off".



■ Dynamic EQ

Solves the problem of deteriorating sound quality as volume is decreased by taking into account human perception and room acoustics.

Works with MultEQ® XT32.

On (Default):	Use "Dynamic EQ".
Off:	Do not use "Dynamic EQ".



- When the menu "Dynamic EQ" setting is "On", it is not possible to do "Tone" adjustment. ((27 p. 122)
- This item cannot be set when "MultEQ® XT32" in the menu is set to "Off".

■ Reference Level Offset

Audyssey Dynamic EQ[®] is referenced to the standard film mix level. It makes adjustments to maintain the reference response and surround envelopment when the volume is turned down from 0 dB. However, film reference level is not always used in music or other non-film content. Dynamic EQ Reference Level Offset provides three offsets from the film level reference (5 dB, 10 dB, and 15 dB) that can be selected when the mix level of the content is not within the standard. Recommended setting levels for content are shown below.

0 dB (Film Reference) (Default):	Optimized for content such as movies.
5 dB:	Select this setting for content that has a very wide dynamic range, such as classical music.
10 dB:	Select this setting for jazz or other music that has a wider dynamic range. This setting should also be selected for TV content as that is usually mixed at 10 dB below film reference.
15 dB :	Select this setting for pop/rock music or other program material that is mixed at very high listening levels and has a compressed dynamic range.

Index



• Setting is enabled when "Dynamic EQ" is "On". (FF p. 180)



■ Dynamic Volume

Solves the problem of large variations in volume level between TV, movies and other content (between quiet passages and loud passages, etc.) by automatically adjusting to the user's preferred volume setting.

Works with MultEQ® XT32.

Heavy:	Most adjustment to softest and loudest sounds.
Medium:	Medium adjustment to loudest and softest sound.
Light:	Least adjustment to loudest and softest sounds.
Off (Default):	Do not use "Dynamic Volume".



- This item cannot be set when "MultEQ® XT32" in the menu is set to "Off".

■ Audyssey LFC[™]

Adjusts the low frequency band to prevent bass and vibration from being conveyed to neighboring rooms.

Works with MultEQ® XT32.

On:	Use "Audyssey LFC™".
Off (Default):	Do not use "Audyssey LFC™".



• This item cannot be set when "MultEQ® XT32" in the menu is set to "Off".

Containment Amount

Adjusts the amount of low frequency containment. Use higher settings if you have close neighbors.

Index



This can be set when "Audyssey LFC™" in the menu is set to "On".



Dirac Live

■ Filter

Set a Dirac Live filter. This can be set after running Dirac Live Room Correction. See the Dirac Live Manual for details.

https://manuals.marantz.com/DiracLive/ALL/EN



 \bullet A Dirac Live license needs to be purchased to use Dirac Live. ($\ensuremath{\mathfrak{P}}$ p. 236)

Graphic EQ

Uses the graphic equalizer to adjust the tone of each speaker.



- Speakers for which "Graphic EQ" can be set differ according to the sound mode.
- This can be set when "MultEQ® XT32" setting is "Off". (@p. 179)
- This cannot be set when the sound mode is set to "Direct" or "Pure Direct".
- If you are using headphones, you can set the equalizer for headphones.
 (F) p. 182)

■ Graphic EQ / Headphone EQ

Set whether to use the graphic equalizer or not.

On:	Use the graphic equalizer.
Off (Default):	Do not use the graphic equalizer.

Index



• "Headphone EQ" is set in the menu when headphones are used.



■ Speaker Selection

Select whether to adjust tones for individual speakers or for all speakers.

All:	Adjust all speaker tones together.
Left/Right (Default):	Adjust the left and right speaker tones together.
Each:	Adjust the tone for each speaker.

Adjust EQ

Adjust tonal balance for each frequency band.

- 1. Select the speaker.
- 2. Select the adjustment frequency band.

 $63~Hz\,/\,125~Hz\,/\,250~Hz\,/\,500~Hz\,/\,1~kHz\,/\,2~kHz\,/\,4~kHz\,/\,8~kHz\,/\,16~kHz$

3. Adjust the level.

-20.0 dB - +6.0 dB (Default: 0.0 dB)



 Front Dolby, Surround Dolby and Back Dolby speakers can only be set when 63 Hz/125 Hz/250 Hz/500 Hz/1 kHz.

■ Curve Copy

Copy the Flat correction curve created in Audyssey® Setup.



- "Curve Copy" is displayed after Audyssey® Setup has been performed.
- "Curve Copy" cannot be used when using headphones.

■ Set Defaults

The "Graphic EQ" settings are returned to the default settings.



DAC Filter

Selects the DAC filter.

■ Filter

Filter 1 (Default):	Recommended setting to enjoy the Marantz sound.
Filter 2:	Recommended setting for bench test measurements.



Video

Make video-related settings.

HDMI Setup

Make settings for HDMI Audio Out, HDMI Pass Through and HDMI Control settings.

NOTE

 When "HDMI Pass Through" and "HDMI Control" is set to "On", it consumes more standby power. ("HDMI Pass Through" (@p. 185), "HDMI Control" (@p. 187))
 If you are not using this unit for an extended period, it is recommended that you unplug the power cord from the power outlet.

■ HDMI Audio Out

Selects the audio output speakers.

AVP (Default):	Play back through speakers connected to power amp. (Audio is output from the PRE OUT connector on this unit.)
TV:	Play back through TV connected to the unit.



- When the HDMI Control function is activated, priority is given to the TV audio setting. (@ p. 142)
- When the power of this unit is on and "HDMI Audio Out" is set to "TV", audio is output as 2-channel from the HDMI OUT connector.

■ HDMI Pass Through

Selects how this unit will transmit HDMI signals to the HDMI output in standby power mode.

On:	Transmits the selected HDMI input through this unit's HDMI output when this unit is in standby power mode.
Off (Default):	No HDMI signals are transmitted through this unit's HDMI output in standby power mode.



■ Pass Through Source

Selects the HDMI input to pass through the HDMI output when this unit is in standby power mode.

Last (Default):	Selects the last used HDMI input.
-----------------	-----------------------------------

CBL/SAT / Media Player / Blu-ray / Game1 / Game2 / AUX1 / AUX2 / TV Audio / CD*:

Selects the HDMI input as the standby source.

* "Pass Through Source" can be set when any of the HDMI connectors is assigned to "CD" for the input source in the "Input Assign" setting. (1287 p. 196)



• "Pass Through Source" can be set when "HDMI Control" is set to "On" or "HDMI Pass Through" is set to "On". ("HDMI Pass Through" (** p. 185), "HDMI Control" (** p. 187))

■ RC Source Select

Set whether to allow this unit to be turned on by the input source select button on the remote control when this unit is in standby power mode.

Power On + Source (Default):	The power of this unit is turned on and the input source changes.
Source Select Only:	This unit remains in standby but switches the HDMI input source when you press an input source button. The power display of this unit blinks when the input source select button of the remote control is pressed.



• "RC Source Select" can be set when "HDMI Control" is set to "On" or "HDMI Pass Through" is set to "On". ("HDMI Pass Through" (@p. 185), "HDMI Control" (@p. 187))



■ HDMI Control

You can link operations with devices connected to HDMI and compatible with HDMI Control.

On:	Use HDMI Control function.
Off (Default):	Do not use HDMI Control function.



- If using the HDMI Control function, connect a TV compatible with HDMI control to the HDMI OUT MONITOR 1 connector.
- Please consult the operating instructions for each connected device to check the settings.
- Refer to "HDMI Control function" for more information about the HDMI Control function. (Pp p. 142)

NOTE

• If the "HDMI Control" settings have been changed, always reset the power to connected devices after the change.

ARC

On the TV connected to the HDMI OUT MONITOR 1 connector, set whether to receive sound from the TV via HDMI.

On:	Use ARC function.
Off (Default):	Do not use ARC function.



- You can adjust the volume of this unit using the TV remote control.
- If using this function, use a TV compatible with ARC (Audio Return Channel) and enable the HDMI Control function of the TV.

NOTE

- If the "ARC" settings have been changed, always reset the power to connected devices after the change.
- Using an eARC function-compatible television enables audio playback from the speaker connected to this unit, regardless of "ARC" settings in the menu.



■ TV Audio Switching

Sets automatic switching to the "TV Audio" input when a TV connected via HDMI sends an appropriate CEC control command to this unit.

On (Default):	Select the "TV Audio" input automatically when receiving a command from the TV.
Off:	Do not select the "TV Audio" input automatically when receiving a command from the TV.



"TV Audio Switching" can be set when "HDMI Control" is set to "On".
 (© p. 187)

■ Power Off Control

Links the power standby of this unit to external devices.

All (Default):	If power to a connected TV is turned off independently of the input source, power
	to this unit is automatically set to standby.
Video:	With an input source being selected that is assigned "HDMI", when you turn the power of the TV off, power to this unit is automatically set to standby. (© p. 197)
Off:	This unit does not link with power to a TV.



"Power Off Control" can be set when "HDMI Control" is set to "On".
 (©F p. 187)



■ Power Saving

Enables the Power Saving feature of the AVR to reduce energy costs when using the TV's speakers.

This function is activated in the following cases.

- When "TV Audio" is selected as the input source of this unit
- When playing content from a device connected by HDMI

On:	Use Power Saving feature.
Off (Default):	Do not use Power Saving feature.



• "Power Saving" can be set when "HDMI Control" is set to "On". (@p. 187)



Output Settings

Makes settings for video output.

■ HDMI Video Output

Select the HDMI monitor connector to be used.

Auto(Dual) (Default):	The presence of a TV connected to the HDMI OUT MONITOR 1 or HDMI OUT MONITOR 2 connector is detected automatically, and that TV connection is used.
Monitor 1:	A TV connected to the HDMI OUT MONITOR 1 connector is always used.
Monitor 2:	A TV connected to the HDMI OUT MONITOR 2 connector is always used.



- If both the HDMI OUT MONITOR 1 and HDMI OUT MONITOR 2 connectors are connected and "HDMI Upscaler" is set to "Auto", the signals are output with a resolution that is compatible with both TVs. (@p. 191)
- You can check which resolutions are compatible with your TV in "HDMI Monitor 1" and "HDMI Monitor 2". (F) p. 256)
- When connecting multiple Dolby Vision TVs, the signal will only be optimal for one TV. A TV connected to the HDMI OUT MONITOR 1 connector has priority.

■ Video Mode

Configure the video processing method to match the type of video content.

Process video automatically based on the HDMI content information.
Always process video for game content. Minimize the video delay when the video is delayed compared to the button operations on the controller of the game console.
Perform image processing that is suitable for contents other than games.
Remove all video processing from the HDMI video path.



- If "Video Mode" is set to "Auto", the mode is switched according to the input contents.
- Information displays such as the volume bar cannot be overlaid with the video signal when "Video Mode" is set to "Bypass".
- This item can be set when "HDMI" is assigned for each input source.
- This cannot be set when sound mode is set to "IMAX DTS" or "IMAX DTS:X".



■ HDMI Upscaler

Sets the mode for upscaling 1080p and 4K HDMI content to 8K.

Auto:	Upscale 1080p and 4K HDMI video to 8K based on the monitor's capabilities.
Off (Default):	8K upscaler is disabled.



- This item can be set when "HDMI" is assigned for each input source.
- This function is not effective when the input signal is compressed video or HDR.
- This cannot be set when sound mode is set to "IMAX DTS" or "IMAX DTS:X".
- This item can be set when "Video Mode" is set to anything other than "Bypass". (☞ p. 190)

On-Screen Display

Select the on-screen display user interface preferences.

■ Volume

Sets where to display the volume level.

Bottom (Default):	Display at the bottom.
Top:	Display at the top.
Off:	Turn display off.



 When the master volume display is hard to see when superimposed text (closed captioning) or movie subtitles are present, set to "Top".

■ Info

Displays status of operation temporarily when the input source is switched.

On (Default):	Turn display on.	
Off:	Turn display off.	



■ Now Playing

Sets the display time for the playback display when the input source is "HEOS Music".

Always On (Default):	Show display continuously.
Auto Off:	Show display for 30 seconds after operation.

Screensaver

Select the screen saver setting.

A screen saver is activated if no operation is performed for more than 5 minutes when no video signal is input or when the same screen (e.g. the setup menu) is displayed.

Use cursor Up/Down/Left/Right to clear the screen saver.

On:	Turns screen saver on.
Off (Default):	Turns screen saver off.



- The screen saver is activated in the following cases.
 - When the setup menu is displayed
 - When no video signal is input
 - When the HEOS Music, USB or Bluetooth playback screen is displayed



4K/8K Signal Format

Set the format of 4K and 8K signal to be played back by this unit when the TV or playback device connected to this unit is HDMI 4K or 8K signal compatible.

■ 4K/8K Signal Format

Sets the signal format options for devices connected to each input on this unit.

Standard:	Select if your TV and the source device support 4K 60Hz 4:2:0 8 bit video signals.
Enhanced (Default):	Select if your TV, the source device, and cables support high quality 4K 60Hz 4:4:4 8 bit, 4:2:2 or 4:2:0 10 bit video signals.
8K Enhanced:	Select if your TV, the source device, and cables support high quality 8K 60Hz or 4K 120Hz video signals.

[Relation between the "4K/8K Signal Format" setting and supported resolutions]

Cupport	Support Color	Pixel	4K/8K Signal Format		
Resolution	Space	Depth	Standard	Enhanced	8K Enhanced
4K 24Hz,	RGB/	8 bit	✓	✓	✓
4K 30Hz,	YCbCr 4:4:4	10,12 bit	_	✓	✓
4K 25Hz	YCbCr 4:2:2	12 bit	✓	✓	✓
	YCbCr 4:2:0	8 bit	✓	✓	✓
	100014.2.0	10,12 bit	-	✓	✓
4K 60Hz, 4K 50Hz	RGB/	8 bit	-	✓	✓
4100112	YCbCr 4:4:4	10,12 bit	-	-	✓
	YCbCr 4:2:2	12 bit	-	✓	✓
	YCbCr 4:2:0	8,10,12 bit	-	-	√
4K 120Hz, 4K 100Hz	RGB / YCbCr 4:4:4	8,10 bit	-	-	✓
	YCbCr 4:2:2	12 bit	-	-	✓
8K 24Hz, 8K 30Hz, 8K 25Hz	YCbCr 4:2:0	8,10,12 bit	-	-	√
	RGB / YCbCr 4:4:4	8,10 bit	-	-	√
	YCbCr 4:2:2	12 bit	-	-	✓
8K 60Hz, 8K 50Hz	YCbCr 4:2:0	8, 10 bit	_	-	√





- When setting this to "Enhanced", we recommend using a "Premium High Speed HDMI Cable" or "Premium High Speed HDMI Cable with Ethernet" that has an "HDMI Premium Certified Cable" label attached to the product package.
- When setting this to "8K Enhanced", we recommend using a certified "Ultra High Speed HDMI cable".
- When this setting is "8K Enhanced", configure the television or playback device settings to match this setting.
- When this setting is "8K Enhanced", video may not be output correctly depending on the connected playback device or HDMI cable. In this case, change this setting to "Enhanced" or "Standard".
- "Custom" is displayed for the setting item if our service engineers or custom installers has configured the HDMI signal format for this unit.
- "4K/8K Signal Format" can also be set by the following procedure. However, the menu screen is not displayed. Watch the display while configuring the setting.
 - 1. Switch to the HDMI input source you want to set.
 - Press and hold the main unit's STATUS and ZONE3 SOURCE at the same time for at least 3 seconds.
 - "*Video Format < PAL>" appears on the display.
 - Press cursor Down on the main unit. "4K/8K Format <Enhanced>" appears on the display.
- Use cursor Left or cursor Right on the main unit to select the 4K/8K Signal Format.
- 5. Press the main unit's ENTER to complete the setting.

HDCP Setup

Sets the HDCP version for each HDMI input source.

Video may not be output depending on the HDCP version of your player and the TV.

If this issue occurs, use this setting to set one version of HDCP. This may be able to output video.

Auto (Default):	Automatically applies the HDCP version of this unit according to TV.
1.4:	Fixes the HDCP version of this unit to 1.4.
2.3:	Fixes the HDCP version of this unit to 2.3.



 "Custom" is displayed for the setting item if our service engineers or custom installers has configured the HDCP version for this unit.



TV Format

Set the video signal format to be output for the TV you are using.

■ Format

PAL (Default):	Select PAL output.
NTSC:	Select NTSC output.



- "Format" can also be set by the following procedure. However, the menu screen is not displayed. Following the display content to make the setting.
- 1. Press and hold the main unit's STATUS and ZONE3 SOURCE at the same time for at least 3 seconds.
 - "*Video Format <PAL>" appears on the display.
- 2. Use the main unit's cursor Left or cursor Right and set the video signal format
- 3. Press the main unit's ENTER to complete the setting.

NOTE

• When a format other than the video format of the connected TV is set, the picture will not be displayed properly.



Inputs

Perform settings related to input source playback.

You do not have to change the settings to use the unit. Make settings when needed.

Input Assign

By making connections as indicated by the input sources printed on the audio/video input connectors of this unit, you can just press one of the input source select buttons to easily play back audio or video from a connected device.

Please change the assignment of the HDMI input connector, digital audio input connector and analog audio input connector when connecting an input source that differs from that printed to the audio/video input connectors of this unit.

Sets the audio input mode for each "INPUT MODE" source. "AUTO" is normally recommended for this setting. This automatically detects and plays signal input to this unit prioritized in the following order: HDMI > DIGITAL > ANALOG.





• By default, each item is set as follows.

Input source	In	INPUT		
iliput source	HDMI	DIGITAL	ANALOG	MODE
CBL/SAT	1	COAX1	1	AUTO
Media Player	2	COAX2	2	AUTO
Blu-ray	3	-	-	HDMI
Game1	4	_	-	HDMI
Game2	5	-	-	HDMI
AUX1	6	_	3	AUTO
AUX2	7	_	4	AUTO
TV Audio	-	OPT1	-	DIGITAL
CD	-	OPT2	5	AUTO



☐ TV set top box/satellite users please note

When using the digital audio output on a TV/satellite box:

To play the video signal assigned to "HDMI" combined with the audio signal assigned at "Input Assign" - "DIGITAL", you will also need to select "DIGITAL" in the "INPUT MODE".



The same input connector can be assigned to multiple input sources. For example, assign the same HDMI input connector to multiple sources to use each input source in combination with analog or digital audio as you prefer. In such cases, set the audio connector for playback in "INPUT MODE".

■ HDMI

Set this to change the HDMI input connectors assigned to the input sources.

1/2/3/4/5/6/7	Assign an HDMI input connector to the selected input source.
-:	Do not assign an HDMI input connector to the selected input source.



- When "HDMI Control" or "ARC" is set to "On" in the menu, "HDMI" cannot be assigned to "TV Audio". ("HDMI Control" (@p. 187), "ARC" (@p. 187))
- The eARC function does not operate when "HDMI" is set as the "TV Audio" input source.

DIGITAL

Set this to change the digital audio input connectors assigned to the input sources.

COAX1 (Coaxial) / COAX2 / OPT1 (Optical) / OPT2:	Assign a digital audio input connector to the selected input source.
-:	Do not assign a digital audio input connector to the selected input source.

ANALOG

Set this to change the analog audio input connectors assigned to the input sources.

1/2/3/4/5/XLR:	Assign a analog audio input connector to the selected input source.		
-:	Do not assign a analog audio input connector to the selected input source.		



■ INPUT MODE

Set the audio input modes for each input source. It is normally recommended to set the audio input mode to "AUTO".

AUTO (Default):	Automatically detect input signal and perform playback.
HDMI:	Play only signals from HDMI input.
DIGITAL:	Play only signals from digital audio input.
ANALOG:	Play only signals from analog audio input.



- When digital signals are properly input, the IIIG indicator lights on the display.
 If the IIIG indicator does not light, check "Input Assign" and the connections.
 (IPF p. 196)
- If "ARC" is set to "On" and a TV compatible with the ARC is connected via the HDMI OUT MONITOR 1 connectors, the input mode whose input source is "TV Audio" is fixed to ARC.
- When an eARC function-compatible television is connected to the HDMI OUT MONITOR 1 connector, the input mode whose input source is "TV Audio" is fixed to eARC.

■ Set Defaults

The "Input Assign" settings are returned to the default settings.



Source Rename

- Changes the display name of the input source.
 Once changed, the name is displayed on the display and menu screens of this unit.
- If the device name can be acquired from a connected HDMI device, the display name is changed automatically.
 Use this function to change names as needed when the device you are using differs from the input source on this unit.

CBL/SAT / Media Player / Blu-ray / Game1 / Game2 / AUX1 / AUX2 / TV Audio / CD / Phono / Tuner:

Change the display name for input source.

Set Defaults:

The "Source Rename" settings are returned to the default settings.



• Up to 16 characters can be input.

Hide Sources

Remove from the display input sources that are not used.

Show (Default):	Use this source.
Hide:	Do not use this source.



Source Level

This function corrects the playback level of the selected input source's audio input.

Make this setting if there are differences in the input volume levels between the different sources.

Source Level

■ When the input source is set to "HEOS Music"

-12 dB - +12 dB (Default : 0 dB)

Analog Inputs / Digital Inputs

■ When the input source is set other than to "HEOS Music"

-12dB - +12dB (Default : 0dB)



- The analog input level can be adjusted independently for input sources for which "ANALOG" is assigned at "Input Assign". (@ p. 196)
- The digital input level can be adjusted independently for input sources for which "HDMI" or "DIGITAL" is assigned at "Input Assign". ((2) p. 196)
- "Source Level" settings are stored for each input source.



Speakers

The acoustic characteristics of the connected speakers and listening room are measured and the optimum settings are made automatically. This is called "Audyssey® Setup".

You do not have to perform Audyssey® Setup when you have already performed "Speaker Calibration" in "Setup Assistant".

To set up the speakers manually, use "Manual Setup" on the menu. (p. 212)


Audyssey® Setup

To perform measurement, place the Sound calibration microphone in multiple locations all around the listening area. For best results, we recommend you measure in six or more positions, as shown in the illustration (up to eight positions).

When measuring the second and subsequent positions, install the Sound calibration microphone within 60 cm of the first measurement position (main listening position).



If you perform Audyssey® Setup, Audyssey MultEQ® XT32, Audyssey Dynamic EQ®, Audyssey Dynamic Volume® and Audyssey LFC™ functions are enabled.
 (★★★ p. 179)

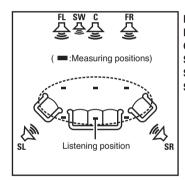

FL Front speaker (L)

FR Front speaker (R)

Center speaker

SW Subwoofer

SL Surround speaker (L)

SR Surround speaker (R)



■ About the main listening position

The main listening position is the position where listeners would normally sit or where one would normally sit alone within the listening environment. Before starting Audyssey[®] Setup, place the Sound calibration microphone in the main listening position.

Audyssey MultEQ® XT32 uses the measurements from this position to calculate speaker distance, level, polarity, and the optimum crossover value for the subwoofer.

■ About Audyssey Sub EQ HT™

The Audyssey Sub EQ HT™ performs corrections based on the volume level and the distances of multiple subwoofers, and processes the Audyssey MultEQ® XT32 signal to reproduce a powerful low frequency sound.

To run Audyssey Sub EQ HT[™] you must set "Measure (2 spkrs)", "Measure (3 spkrs)" or "Measure (4 spkrs)" and set "Subwoofer Mode" to "Standard" in "Speaker Layout". (☞ p. 220).




 Audyssey Sub EQ HT will not work when "Subwoofer Mode" is set to "Directional".

NOTE

- Make the room as quiet as possible. Background noise can disrupt the room measurements. Close windows and turn off the power on electronic devices (radios, air conditioners, fluorescent lights, etc.). The measurements could be affected by the sounds emitted by such devices.
- During the measurement process, place cell phones outside the listening room.
 Cell phone signals could disrupt the measurements.
- Do not stand between the speakers and Sound calibration microphone or allow obstacles in the path while the measurements are being made. Also, install the Sound calibration microphone at least 50 cm away from the wall. Failure to do so will result in inaccurate readings.
- During the measurement process, audible test tones will come from the speakers and subwoofer(s), but this is part of normal operation. If there is background noise in the room, these test signals will increase in volume.
- Operating VOLUME +— on the remote control unit or VOLUME on the main unit during the measurements will cancel the measurements.
- Measurement cannot be performed when headphones are connected. Unplug the headphones before performing Audyssey® Setup.



Procedure for speaker settings (Audyssey® Setup)

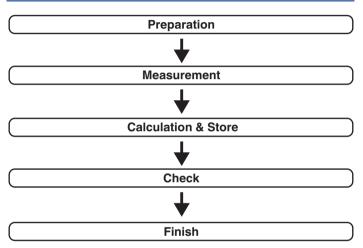

Attach the Sound calibration microphone to the supplied microphone stand or own tripod and install it at the main listening position.

When installing the Sound calibration microphone, point the tip of the microphone toward the ceiling and adjust the height to match the height of the ears of a listener in a seated position.

- 2 If using a subwoofer capable of the following adjustments, set up the subwoofer as shown below.
 - When using a subwoofer with a direct mode

Set the direct mode to "On" and disable the volume adjustment and crossover frequency setting.

☐ When using a subwoofer without a direct mode

Make the following settings:

Volume: 10 o'clock position

 
• Crossover frequency : Maximum/Highest Frequency

Index

Low pass filter : OffStandby mode : Off



3 Connect the Sound calibration microphone to the SETUP MIC jack of this unit.



When the Sound calibration microphone is connected, the following screen is displayed.



4 Select "Start", then press ENTER.

Audyssey® Setup can also make the following settings.

- Speaker Layout
 - Set the Speaker Layout to suit your speaker environment.
- Channel Select

If "Amp Assign" is set to "13.1ch + Front B", select the Front speakers to be measured.

Dolby Speaker Setup

Set the distance between the Dolby Atmos Enabled speaker and the ceiling.

This can be set when using the Front Dolby Atmos Enabled, Surround Dolby Atmos Enabled or Back Dolby Atmos Enabled speaker.

Follow the instructions on the screen display and press "Next" to proceed further.



When the following screen is displayed, select "Begin Test" and then press ENTER.

Start the measurement of the first position.



• Measurement requires several minutes.

NOTE

- If "ERROR" or "CAUTION" is displayed on TV screen:
 - Go to "Error messages" (29 p. 209). Check any related items, and perform the necessary procedures.
 - If the volume level for the subwoofer is not appropriate, an error message is displayed. See "Subwoofer level error message and how to adjust" (F) p. 210).

When the detected speaker is displayed, select "Next" and then press ENTER.





8 Move the Sound calibration microphone to position 2, select "Continue", then press ENTER.

The measurement of the second position starts. Measurements can be made in up to eight positions.



☐ Stopping Audyssey® Setup

- 1) Press BACK to display the popup screen.
- 2 Press cursor Left to select "Yes", then press ENTER.

9 Repeat step 8, measuring positions 3 to 8.



- To skip measuring the fourth and subsequent listening position, press cursor Left to select "Complete" and press ENTER to proceed to step 11.
- 10 Select "Continue", then press ENTER.



Start the analysis and storage of the measurement results.

 Analysis takes several minutes to complete.
 The more speakers and measurement positions that there are, the more time it takes to perform the analysis.

NOTE

 When the measurement results are being saved, make sure the power is not turned off.



11 Perform the settings for Audyssey Dynamic EQ® and Audyssey Dynamic Volume®.

The following screen is displayed during the analysis. Configure the settings as preferred.



- Dynamic EQ corrects the frequency response in consideration of the audio characteristics of the room and human hearing ability so that sound can be heard even at low volume.
 - This is recommended when using the unit with the volume turned down, e.g. when enjoying a movie or TV program in the middle of the night.
- Dynamic Volume adjusts the output volume to the optimal level
 while constantly monitoring the level of the audio input to the unit.
 Optimal volume control is performed automatically without any
 loss in the dynamism and clarity of the sound when, for example,
 the volume suddenly increases for commercials shown during
 television programs.

12 When the analysis and storage ends, unplug the Sound calibration microphone from the SETUP MIC jack on the main unit and then press "Next".







- When performing Audyssey® Setup for the first time, the measurement data is automatically saved to "Speaker Preset 1" of "Speaker Preset".
- If Audyssey[®] Setup has already been performed, the following "Speaker Preset" selection screen is displayed.



 See "Speaker Preset" for detailed information on the Speaker Preset function. (☼ p. 228)

13 Select "Details" and press ENTER to verify the measurement results.

 Subwoofers may measure a greater reported distance than the actual distance due to added electrical delay common in subwoofers.

NOTE

 Do not enable new speakers in Speaker Layout menu after Audyssey® Setup. If it is changed, run Audyssey® Setup again in order to configure the optimum equalizer settings.



Error messages

An error message is displayed if Audyssey[®] Setup could not be completed due to speaker placement, the measurement environment, etc. If an error message is displayed, check the relevant items and perform the necessary measures. Be sure to turn off the power before checking speaker connections.

Examples	Error details	Measures
No speakers found.	Sound calibration microphone is not detected.	Connect the included Sound calibration microphone to the SETUP MIC jack of this unit.
	Not all speakers could be detected.	Check the speaker connections.
Ambient noise is too high or level is too	There is too much noise in the room.	Either turn off any device generating noise or move it away.
low		Perform again when the surroundings are quieter.
	Speaker or subwoofer sound is too low.	Check the speaker installation and the direction in which the speakers are facing.
		Adjust the subwoofer's volume.
Front R : None	The displayed speaker could not be detected.	Check the connections of the displayed speaker.
Front R : Phase	The displayed speaker is connected with the	Check the polarity of the displayed speaker.
	polarity reversed.	For some speakers, this error message may be displayed even if the speaker is properly connected. If you are sure the connection is correct, press cursor Right to select "Ignore", then press ENTER.



Subwoofer level error message and how to adjust

The optimal level of each subwoofer channel for Audyssey[®] Setup measurement is 75 dB.

During subwoofer level measurement, an error message is displayed when one level of subwoofers is outside the $72-78~\mathrm{dB}$ range.

When using a subwoofer with built-in amplifier (active type), adjust the subwoofer volume so that the subwoofer level is within the 72 to 78 dB range.

[Error message]



- **1** Select "SW Level Matching" and then press ENTER.
- Adjust the volume control on your subwoofer so that the measured level is within the 72 to 78 dB range.
- When the measured level is within the 72 to 78 dB range, select "Next" and then press ENTER.
 - If you use two subwoofers, the second subwoofer's adjustment will be started. Repeat the operation from step 2, 3.



Retrieving Audyssey® Setup settings

If you set "Restore..." to "Restore", you can return to Audyssey® Setup measurement result (value calculated at the start by MultEQ® XT32) even when you have changed each setting manually.





Manual Setup

Perform when setting the speakers manually or when changing settings made in Audyssey $^{\otimes}$ Setup, Dirac Live Room Correction.

- If you enable new speakers in the Speaker Layout menu after performing Audyssey® Setup, you will no longer be able to select Audyssey MultEQ® XT32, Audyssey Dynamic EQ® or Audyssey Dynamic Volume®. (ref p. 179)
- Changing the following settings:
 Distances / Levels / Crossovers settings will not disable Audyssey[®] or require running Audyssey[®] Setup again.
- Dirac Live cannot be selected when changing the Speaker Configuration in the Speaker Layout menu after performing Dirac Live Room Correction.
- "Manual Setup" can be used without changing the settings. Please set if necessary.

Speaker Layout

Select a suitable speaker layout for your speaker system.

■ Amp Assign

Select how to use the Preamplifier.

You need to configure the detailed settings for the speaker configuration in accordance with the selected mode. Select Amp Assign configure the corresponding detailed settings.

15.1ch (Default):	 All Preamplifiers of this unit are used for MAIN ZONE.
13.1ch (Bi-Amp):	 The Preamplifier of this unit is assigned to 2-channels for creating bi- amp connections with the front speaker.
	 You can connect speakers for up to 13.1-channels for MAIN ZONE.
13.1ch + Front B:	The Preamplifier of this unit is assigned to 2-channels for connecting to the second front speaker.
	 You can connect speakers for up to 13.1-channels for MAIN ZONE.
Custom:	 Assign the Preamplifier for the 15 channels of this unit however you want.
	To set the channels to be assigned to the PRE OUT connector, refer to "Settings". (P. 225)



■ Front/Center/Surround/Surround Back/Front Wide

Set the correct audio output terminals for your speaker system.

Configuration

Select whether or not each speaker exists. For Surround Back speakers, select the number of speakers to be used.

[Front/Center/Surround/Front Wide]

Yes (Default):	The selected speakers will be used.
No:	The selected speakers will not be used.
[Surround Back]	
2 spkrs (Default):	Two Surround Back speakers will be used.
1 spkr:	Only one Surround Back speaker will be used. When you select this setting, connect to the SURROUND BACK L terminal.



No:

- "Front" is fixed as "Yes" as it is required for playback.
- When "Surround" is set to "No", "Surround Back" and "Front Wide" settings are automatically set to "No".

■ Height Speakers

Select the number of the height speakers, ceiling speakers and Dolby Atmos Enabled speakers used in MAIN ZONE.

Uses no height, ceiling and Dolby Atmos Enabled speakers.
Uses a set of (two) height speakers, ceiling speakers or Dolby Atmos Enabled speakers.
Uses two set of (four) height speakers, ceiling speakers or Dolby Atmos Enabled speakers.
Uses five height speakers, ceiling speakers or Dolby Atmos Enabled speakers.
Uses six height speakers, ceiling speakers or Dolby Atmos Enabled speakers.
Uses seven height speakers, ceiling speakers or Dolby Atmos Enabled speakers.
Uses eight height speakers, ceiling speakers or Dolby Atmos Enabled speakers.



Surround Back speakers will not be used.

■ Layout

Configuration

Set the speaker layout when installing 1 set (2-channels) of Height, Ceiling or Dolby Atmos Enabled speakers.

The layouts that can be selected differ depending on the combinations of "Amp Assign" and floor speaker settings in the menu. ("Amp Assign" (Front/Center/Surround/Surround Back/Front Wide" (Fp. 213))

[2-channel height speakers]

Settings		AUDIO OUT connectors			
Height Speakers	Layout	HEIGHT 1	HEIGHT 2	HEIGHT 3	HEIGHT 4
None	-	-	-	-	-
	Front Height	Front Height	-	-	-
	Top Front	Top Front	-	-	-
Top Middle	Top Middle	Top Middle	-	-	-
O onlero	Top Rear	Top Rear	-	=	-
Fro	Rear Height	Rear Height	-	-	-
	Front Dolby	Front Dolby	-	=	-
	Surround Dolby*1	Surround Dolby	-	-	-
	Back Dolby*2	Back Dolby	-	-	-

^{*1} This can be selected when using Surround speakers. Set "Surround" in the menu to "Yes". (@p. 213)



^{*2} This can be selected when using two Surround Back speakers. Set "Surround Back" in the menu to "2 spkrs". (🕼 p. 213)

■ Front Layout / Middle Layout / Rear Layout / TS/CH

Select the layout setting and audio output terminals for your Height speakers.

Configuration

Set the speaker layout when installing 2 sets (4-channels) or more of Height, Ceiling or Dolby Atmos Enabled speakers. The layouts that can be selected differ depending on the combinations of "Amp Assign" and floor speaker settings in the menu. ("Amp Assign" (P. 212), "Front/Center/Surround/Surround Back/Front Wide" (P. 213))

[4-channel height speakers]

Settings				AUDIO OUT connectors				
Height Speakers	NOTE	Front Layout	Rear Layout	HEIGHT 1	HEIGHT 2	HEIGHT 3	HEIGHT 4	
		Front Height	Top Middle	Front Height	Top Middle	-	-	
		Front Height	Top Rear	Front Height	Top Rear	-	-	
		Front Height	Surround Height	Front Height	Surround Height	=	-	
		Front Height	Rear Height	Front Height	Rear Height	-	-	
		Front Height	Surround Dolby	Front Height	Surround Dolby	-	-	
		Front Height	Back Dolby * 1	Front Height	Back Dolby	=	-	
		Top Front	Top Rear	Top Front	Top Rear	-	-	
4 spkrs		Top Front	Rear Height	Top Front	Rear Height	-	-	
		Top Front	Surround Dolby	Top Front	Surround Dolby	-	-	
		Top Front	Back Dolby * 1	Top Front	Back Dolby	=	-	
		Top Middle	Rear Height	Top Middle	Rear Height	-	-	
		Front Dolby	Top Rear	Front Dolby	Top Rear	=	-	
		Front Dolby	Rear Height	Front Dolby	Rear Height	-	-	
		Front Dolby	Surround Dolby	Front Dolby	Surround Dolby	-	-	
		Front Dolby	Back Dolby * 1	Front Dolby	Back Dolby	-	-	



[5-channel height speakers]

		Settings		AUDIO OUT connectors				
Height Speakers	NOTE	Front Layout	Rear Layout	TS/CH	HEIGHT 1	HEIGHT 2	HEIGHT 3	HEIGHT 4
5 spkrs		Front Height	Surround Height	Top Surround	Front Height	Surround Height	L: Top Surround	-
		Front Height	Surround Height	Center Height	Front Height	Surround Height	R: Center Height	-
		Front Height	Rear Height	Top Surround	Front Height	Rear Height	L: Top Surround	-
		Front Height	Rear Height	Center Height	Front Height	Rear Height	R: Center Height	-



[6-channel height speakers]

Settings							AUDIO OUT connectors			
Height Speakers	NOTE	Front Layout	Middle Layout	Rear Layout	TS/CH	HEIGHT 1	HEIGHT 2	HEIGHT 3	HEIGHT 4	
		Front Height	Top Middle	Rear Height	No	Front Height	Rear Height	Top Middle	-	
	*2	Front Height	Surround Height	Rear Height	No	Front Height	Rear Height	Surround Height	-	
		Front Height	Surround Height	No	TS/CH	Front Height	Surround Height	L: Top Surround R: Center Height	-	
		Front Height	Surround Dolby	Rear Height	No	Front Height	Rear Height	Surround Dolby	-	
		Front Height	Surround Dolby	Back Dolby * 1	No	Front Height	Back Dolby	Surround Dolby	-	
6 spkrs		Front Height	No	Rear Height	TS/CH	Front Height	Rear Height	L: Top Surround R: Center Height	-	
		Top Front	Top Middle	Top Rear	No	Top Front	Top Rear	Top Middle	-	
		Top Front	Surround Dolby	Top Rear	No	Top Front	Top Rear	Surround Dolby	-	
		Front Dolby	Top Middle	Back Dolby * 1	No	Front Dolby	Back Dolby	Top Middle	-	
		Front Dolby	Surround Dolby	Rear Height	No	Front Dolby	Rear Height	Surround Dolby	-	
		Front Dolby	Surround Dolby	Back Dolby * 1	No	Front Dolby	Back Dolby	Surround Dolby	-	



[7-channel height speakers]

	Settings						AUDIO OUT connectors			
Height Speakers	NOTE	Front Layout	Middle Layout	Rear Layout	TS/CH	HEIGHT 1	HEIGHT 2	HEIGHT 3	HEIGHT 4	
		Front Height	Top Middle	Rear Height	Top Surround	Front Height	Rear Height	Top Middle	L: Top Surround	
7 onkro		Front Height	Top Middle	Rear Height	Center Height	Front Height	Rear Height	Top Middle	R: Center Height	
7 spkrs		Front Height	Surround Dolby	Rear Height	Top Surround	Front Height	Rear Height	Surround Dolby	L: Top Surround	
		Front Height	Surround Dolby	Rear Height	Center Height	Front Height	Rear Height	Surround Dolby	R: Center Height	



[8-channel height speakers]

	Settings							AUDIO OUT connectors			
Height Speakers	NOTE	Front Layout	Middle Layout	Rear Layout	TS/CH	HEIGHT 1	HEIGHT 2	HEIGHT 3	HEIGHT 4		
8 spkrs		Front Height	Top Middle	Rear Height	TS/CH	Front Height	Rear Height	Top Middle	L: Top Surround R: Center Height		
ο σρκισ		Front Height	Surround Dolby	Rear Height	TS/CH	Front Height	Rear Height	Surround Dolby	L: Top Surround R: Center Height		

^{*1} This can be selected when using two Surround Back speakers. Set "Surround Back" in the menu to "2 spkrs". (🕼 p. 213)



^{*2} Use 2 sets of Height speakers in the appropriate sound modes for Dolby Atmos, DTS:X or Auro-3D playback. Use the Front Height and Rear Height speakers for Dolby Atmos playback. Use the Front Height, Surround Height and Rear Height speakers for DTS:X playback. Use the Front Height and Surround Height speakers for Auro-3D playback.

■ Subwoofers

Set the presence of a subwoofer.

4 spkrs:	Use four subwoofers.
3 spkrs:	Use three subwoofers.
2 spkrs:	Use two subwoofers.
1 spkr (Default):	Use only one subwoofer.
No:	Select when a subwoofer is not connected.

■ Subwoofer Mode

When you are using multiple subwoofers, set the audio to be output from the subwoofer.

Standard (Default):	All subwoofers output LFE signals and bass below the crossover frequency of all the speakers.
Directional:	All subwoofers output LFE signals. In addition, each subwoofer outputs bass below the crossover frequency of speakers that are placed near them.



• This can be set when "Subwoofers" is set to "4 spkrs", "3 spkrs" or "2 spkrs".



■ Subwoofer Layout

When you are using multiple subwoofers, configure the subwoofer layout. The layouts that can be selected differ depending on the configuration of "Subwoofer Mode".

[When "Subwoofers" is set to "2 spkrs"]

Left/Right (Default):	Place subwoofers symmetrically on the front side.
Front/Rear:	Place a subwoofer in the middle of the front side and another in the middle of the rear side.

[When "Subwoofers" is set to "3 spkrs"]

FL/FR/Rear:	Place subwoofers symmetrically on the front side and one in the middle of the
FL/Fn/near.	
	rear side.

[When "Subwoofers" is set to "4 spkrs"]

FL/FR/RL/RR:	Place the subwoofers in the four corners
FL/FN/NL/NN:	of the room.






- This can be set when "Subwoofers" is set to "4 spkrs", "3 spkrs" or "2 spkrs", and "Subwoofer Mode" is set to "Directional".
- The name of the Subwoofer that is displayed in the GUI of this unit depends on the setting combination of "Subwoofers", "Subwoofer Mode", and "Subwoofer Layout".

Subwoofers	Subwoofer Mode	Subwoofer	Subwoofer name					
Subwoolers	Subwooler wode	Layout	Subwoofer 1	Subwoofer 2	Subwoofer 3	Subwoofer 4		
1 spkr	-	-	Subwoofer 1	-	-	-		
	Standard	-	Subwoofer 1	Subwoofer 2	-	-		
2 spkrs	Directional	Left/Right	Subwoofer Left	Subwoofer Right	-	-		
		Front/Rear	Subwoofer Front	Subwoofer Rear	-	-		
O onless	Standard	-	Subwoofer 1	Subwoofer 2	Subwoofer 3	-		
3 spkrs	Directional	FL/FR/Rear	Subwoofer FL	Subwoofer FR	Subwoofer Rear	-		
4 onlys	Standard	-	Subwoofer 1	Subwoofer 2	Subwoofer 3	Subwoofer 4		
4 spkrs	Directional	FL/FR/RL/RR	Subwoofer FL	Subwoofer FR	Subwoofer RL	Subwoofer RR		



• With the "Directional" setting, your room is divided into four areas as shown below so that each subwoofer plays the bass of the speaker set to other than "Full Range" which is located within the area.

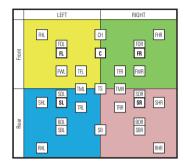

For example, if "Subwoofers" = 2 spkrs and Subwoofer Layout = Left/Right, Subwoofer Left (Subwoofer 1) plays the bass of the speakers in the Left area which includes FL/SL and Subwoofer Right (Subwoofer 2) plays the bass of the speakers in the Right area which includes FR/SR.



■ Bi-Amp

When "Amp Assign" is "13.1ch (Bi-Amp)", the PRE OUT connector used for the bi-amp connection of the front speakers is displayed. Depending on the settings of Main Zone speaker configuration, the connector is determined automatically.

HEIGHT 3:	The HEIGHT 3 PRE OUT connector is used for the bi-amp connection of the front speakers.
FRONT WIDE:	The FRONT WIDE PRE OUT connector is used for the bi-amp connection of the front speakers.
SURROUND BACK:	The SURROUND BACK PRE OUT connector is used for the bi-amp connection of the front speakers.

■ Front B

When "Amp Assign" is "13.1ch + Front B", the PRE OUT connector used for the second front speakers is displayed. Depending on the settings of Main Zone speaker configuration, the connector is determined automatically.

HEIGHT 3:	The HEIGHT 3 PRE OUT connector is used for the second front speakers.
FRONT WIDE:	The FRONT WIDE PRE OUT connector is used for the second front speakers.
SURROUND BACK:	The SURROUND BACK PRE OUT connector is used for the second front speakers.



Settings

Select the signal to be output from the selected preout terminal.

- Only "Center" and "None" can be set for the CENTER preout terminal.
- If you are using a total of seven or more Height/Ceiling/Dolby Atmos Enabled speakers, you can only set "Top Middle", "Surround Dolby", or "None" for the HEIGHT 3 PRE OUT connector.
- You can use the HEIGHT 4 PRE OUT connector only if you are using a total of seven or more Height/Ceiling/Dolby Atmos Enabled speakers. You can only set "Top Surround", "Center Height", "TS/CH", or "None" for the HEIGHT 4 PRE OUT connector.

■ View Terminal Config.

This shows how to connect the PRE OUT connectors for your "Amp Assign" setting on the menu screen.

Distances

Set distance from listening position to speakers.

Measure beforehand the distance from the listening position to each speaker.

When using Dirac Live, the unit is fixed as msec.

"Distances" values for each filter are stored independently in Dirac Live Room Correction.

■ Unit

Set the unit of distance.

Meters (Default)

Feet

[When using Dirac Live]

msec

■ Step

Set the minimum variable width of the distance.

0.1 m / 0.01 m (Default: 0.1 m)

1 ft / 0.1 ft

[When using Dirac Live]

1 ms / 0.1 ms



■ Set the distance

0.00 m - 18.00 m / 0.0 ft - 59.1 ft

[When using Dirac Live]

0.0 ms - 20.0 ms



- The speakers that can be selected differ depending on the "Speaker Layout" settings. (
 p. 212)
- · Default settings:

Front L / Front R / Front Height L / Front Height R / Center / Front Wide L / Front Wide R / Front Dolby L / Front Dolby R / Subwoofer 1 / Subwoofer 2 / Subwoofer 3 / Subwoofer 4: 3.60 m (11.8 ft)
Speakers other than the above: 3.00 m (9.8 ft)

 Set the difference in the distance between the speakers to less than 6.00 m (19.7 ft).

■ Dolby Speaker Setup

Set the distance between the Dolby Atmos Enabled speaker and the ceiling.

0.90 m - 3.30 m / 3.0 ft - 10.8 ft

(Default: 1.80 m / 5.9 ft)



- Cannot be set when Dirac Live are being used. "Dirac Live Setup" (Pp. 236)

Index

Set Defaults

The "Distances" settings are returned to the default settings.



Levels

Set the volume of the test tone to be the same at the listening position when it is output from each speaker.

"Levels" values for each filter are stored independently in Dirac Live Room Correction.

■ Test Tone Start

A test tone is output from the selected speaker.

While listening to the test tone, adjust the volume output from the selected speaker.

-12.0 dB - +12.0 dB (Default: 0.0 dB)



- The set "Levels" are reflected in all sound modes.
- When headphones are connected to the PHONES connector on this unit, you cannot set "Levels".

Set Defaults

The "Levels" settings are returned to the default settings.

Crossovers

Set in accordance with the lower limit frequency of the base frequencies that can be played back through each speaker. See the speaker manual for information concerning speaker crossover frequency.

■ Set the crossover frequency

(Default: Front=Full Range, Other than Front=80 Hz)

Full Range:	play full-range audio.
40 Hz / 60 Hz / 80 Hz /	
90 Hz / 100 Hz / 110 Hz /	
120 Hz / 150 Hz / 180 Hz /	Selects the crossover point to send the
200 Hz / 250 Hz	low frequency sound to the subwoofer.

Select "Full Bange" to set the speaker to



- The default crossover frequency is "80 Hz", which will work best with the
 widest variety of speakers. We recommend setting to a higher frequency that
 the crossover frequency when small speakers are used. For example, set to
 "250 Hz" when the frequency range of the speakers is 250 Hz 20 kHz.
- Sound below the crossover frequency is cut off from the output of the speakers. This cut off bass frequency is output from the subwoofer or front speakers.
- The "Front" is automatically set to "Full Range" when "Subwoofers" is set to "No" in the "Speaker Layout".
- Each speaker can be set to "Full Range" only when the Front is set to "Full Range".

Index

The audio settings in "IMAX Audio Settings" are applied during IMAX playback. (☼ p. 173)



Speaker Preset

Two speaker settings can be saved to suit the environments where you use your speakers.

For example, in some cases the characteristics of a room change depending on whether a screen is used. By saving two different presets, you can easily switch between the equalizer and speaker settings for each situation that were measured with an Audyssey® Setup.

Presets also make it easy to switch between the sound effects of an Audyssey Setup and those of Dirac Live.

If you want to use a preset, select the preset you want to use and then configure settings such as Audyssey® Setup, Dirac Live Room Correction* and speaker settings to save those settings to the selected preset.

* When exporting measurement results from Dirac Live Software to this unit for the first time, the settings are automatically saved in "Speaker Preset 2".

Speaker Preset 1 (Default):	Saves the settings to Preset 1.
Speaker Preset 2:	Saves the settings to Preset 2.



- The following settings are saved to presets.
 - "Speaker Layout" settings
 - "Distances" settings
 - "Levels" settings
 - "Crossovers" settings
 - "Subwoofer Output" settings
 - "Low Pass Filter" settings
 - "Distribution" settings
 - "2ch Playback" settings
 - "Front Speaker" settings
 - "MultEQ® XT32" data
 - "Dirac Live" data
 - "Graphic EQ" data
- This setting also be configured using "Speaker Preset" in the option menu.
 (Pp. 127)



Advanced

The following advanced speaker settings are available.

■ Low Frequency Effects

- "Subwoofer Output" (@p. 229)
- "Low Pass Filter" (@ p. 230)
- "Distribution" (@ p. 231)
- Front Speaker (1267 p. 231)
- 2ch Playback (@p. 232)
- Tactile Transducer (PP p. 235)

Subwoofer Output

Selects which low frequency signals are sent to the subwoofer outputs.

■ Subwoofer Output

LFE + Main:	The subwoofer outputs receive the LFE track, plus redirected bass, and a copy of the low frequency signals from all full-range speakers.
LFE (Default):	The subwoofer outputs receive the LFE track, plus any redirected bass from speakers with crossovers set. Use this setting as the default for home theater bass management in a typical room.

■ Bass Extraction LPF

Selects the low-pass filter point for the full-range speaker to copy the low frequency signal to subwoofer.

40 Hz / 60 Hz / 80 Hz / 90 Hz / 100 Hz / 110 Hz / 120 Hz / 150 Hz / 180 Hz / 200 Hz / 250 Hz (Default: 80 Hz)





- "Subwoofer Output" can be set when "Speaker Layout" "Subwoofers" in the menu is set to other than "No". (1287 p. 220)
- Play music or a movie source and select the mode offering the strongest bass.
- If "Crossovers" "Front" and "Center" are set to "Full Range", and "Subwoofer Output" is set to "LFE", no sound may be output from the subwoofers, depending on the input signal or selected sound mode. (Pp p. 227)
 Select "LFE + Main" if you want the bass signals to always be produced from the subwoofer.
- "Bass Extraction LPF" can only be set for channels with "Crossovers" set to "Full Range".
- The audio settings in "IMAX Audio Settings" are applied during IMAX playback. (12 p. 173)

Low Pass Filter

Selects the crossover point for the LFE channel. Set this when you want to change the playback LFE signal of the subwoofer.

■ Low Pass Filter

80 Hz / 90 Hz / 100 Hz / 110 Hz / 120 Hz / 150 Hz / 180 Hz / 200 Hz / 250 Hz (Default: 120 Hz)



The audio settings in "IMAX Audio Settings" are applied during IMAX playback. (PF p. 173)



Distribution

Adjusts the amount of LFE signal sent to the full-range floor speakers.

■ Front/Center/Surround/Surround Back/Front Wide

Off (Default):	Floor Speakers do not play LFE signals.
-20 dB - 0 dB	Adjusts the amount of LFE signal sent to the full-range speakers.



• This can only be set if the "Front", "Center", "Surround", "Surround Back" or "Front Wide" speaker is set to "Full Range" in "Crossovers".

Front Speaker

Set the front speaker A/B to use for every sound mode.

A (Default):	Front speaker A is used.
B:	Front speaker B is used.
A+B:	Both front speakers A and B are used.

Index



• This can be set when "Amp Assign" is set to "13.1ch + Front B". (p. 212)



2ch Playback

Select the method for setting the speakers used in the 2-channel direct and stereo playback modes.

Setting

Select the method for setting the speakers used in the 2-channel direct and stereo playback modes.

Auto (Default):	The settings in "Speakers" are applied. (🍲 p. 201)
Manual:	Set the speakers for 2-channel playback. Make the following settings.

■ Crossover

Set the maximum frequency of the bass signal output from each channel to the subwoofer.

Full Range:	Select "Full Range" to set the speaker to play full-range audio.
40 Hz / 60 Hz / 80 Hz / 90 Hz / 100 Hz / 110 Hz / 120 Hz / 150 Hz / 180 Hz / 200 Hz / 250 Hz (Default: 80 Hz)	Selects the crossover point to send the low frequency sound to the subwoofer.



• When "Speaker Layout" - "Subwoofers" in the menu is set to "No", "Full Range" is automatically set. (1287 p. 220)

Index

When "2ch Playback" - "Subwoofer" is set to "No", "Full Range" is automatically set. (☞ p. 233)



■ Subwoofer

Set the presence of a subwoofer.

Yes (Default):	Use a subwoofer.
No:	Select when a subwoofer is not connected.



When "Speaker Layout" - "Subwoofers" in the menu is set to "No", No is automatically set. (☞ p. 220)

■ Subwoofer Output

Selects which low frequency signals are sent to the subwoofer outputs.

LFE (Default):	When "2ch Playback" - "Crossover" is set to "Full Range", only LFE signals are output from the subwoofer. Also, when "2ch Playback" - "Crossover" is set to other than "Full Range", the front channel low range signals are added to the LFE signals and output from the subwoofer.
LFE + Main:	The front channel low range signal is added to the LFE signal output from the subwoofer.



• This can be set when "2ch Playback" - "Subwoofer" is set to "Yes".



Bass Extraction LPF

Selects the low-pass filter point for the full-range speaker to copy the low frequency signal to subwoofer.

40 Hz / 60 Hz / 80 Hz / 90 Hz / 100 Hz / 110 Hz / 120 Hz / 150 Hz / 180 Hz / 200 Hz / 250 Hz (Default: 80 Hz)



• This can be set when "2ch Playback" - "Crossover" is set to "Full Range", and "2ch Playback" - "Subwoofer" is set to "Yes".

LFE Distribution

Adjusts the amount of LFE signal sent to the full-range front speakers.

Off (Default):	Front Speakers do not play LFE signals.
-20 dB - 0 dB	Adjusts the amount of LFE signal sent to the front speakers



• This can be set when "2ch Playback" - "Crossover" is set to "Full Range", and "2ch Playback" - "Subwoofer" is set to "Yes".

■ Distance FL / Distance FR

Set distance from main listening position to speaker. The unit is "msec" when using "Dirac Live".

0.00 m - 18.00 m (Default : 3.60 m) / 0.0 ft - 59.1 ft (Default : 11.8 ft)



• Set the difference in the distance between the speakers to less than 6.00 m (19.7 ft).

Index

[When using Dirac Live]

0.0 ms - 20.0 ms

■ Level FL / Level FR

Adjust the level of each channel.

-12.0 dB - +12.0 dB (Default: 0.0 dB)



Tactile Transducer

Set the level and low pass filter cutoff frequency when using tactile transducers.

■ Tactile Transducer

Sets the tactile transducer option.

Enabled:	Enables tactile transducers.
Disabled (Default):	Disables the tactile transducers.



- For Tactile Transducer connections, use the Subwoofer 4 PRE OUT connector.
- This can not be set when "Speaker Layout" "Subwoofers" is set to "4 spkrs".

Level

Adjusts the volume of the tactile transducer output.

-12.0 dB - +12.0 dB (Default : 0.0 dB)



- The "Level" are reflected in all input sources.
- If you wish to adjust the tactile transducer level for each input source, carry out the settings in "Tactile Transducer". (p. 124)

■ Low Pass Filter

Selects the low pass filter cutoff frequency for the tactile transducer output.

40 Hz / 60 Hz / 80 Hz / 90 Hz / 100 Hz / 110 Hz / 120 Hz / 150 Hz / 180 Hz / 200 Hz / 250 Hz (Default: 80 Hz)

• The "Low Pass Filter" are reflected in all input sources.



Dirac Live Setup

Dirac Live is a powerful solution that helps you get the best from your speakers.

Dirac Live and its various features use research-driven acoustic processing algorithms to analyze your room and reduce its impact on sound quality, resulting in speaker performance that would be physically impossible otherwise.

You will need to create a Dirac Live account and purchase a license before running Dirac Live.

You can create an account and purchase a license on the website below.

www.dirac.com/marantz/



See the Dirac Live Room Correction manual for details on Dirac Live.

https://manuals.marantz.com/DiracLive/ALL/EN





Network

To use this unit by connecting it to a home network (LAN), you must configure network settings.

If you set up your home network (LAN) via DHCP, set "DHCP" to "On". (Use the default setting.) This allows this unit to use your home network (LAN). When assigning an IP address to each device manually, you need to assign an IP address to this unit using the "IP Address" settings, and enter information about your home network (LAN) such as the gateway address and subnet mask, etc.

Information

Display network information.

Friendly Name / Connection / SSID / DHCP / IP Address / MAC Address (Ethernet) / MAC Address (Wi-Fi) / Wi-Fi signal strength

Connection

Choose whether to connect the home network to a wireless LAN or a wired LAN.

When connecting to the network using wired LAN, select "Wired (Ethernet)" after connecting a LAN cable.

When connecting to the network using wireless LAN, select "Wireless (Wi-Fi)" and configure the "Wi-Fi Setup". (E) p. 238)

■ Connect Using

Select the method for connecting to the home network (LAN).

Wired (Ethernet):	Use a LAN cable to connect to a network.
Wireless (Wi-Fi) (Default):	Use the wireless LAN (Wi-Fi) function to connect to a network.



• "Wired (Ethernet)" is set when "Wi-Fi" is set to "Disabled". (@p. 244)



Wi-Fi Setup

Connect to a wireless LAN (Wi-Fi) router.

The router can be connected in the following ways. Select the connection method to suit your home environment.

■ Scan Networks

Select the network you wish to connect to from the list of possible networks shown on the TV screen.

- Select the network you wish to connect to from the list of wireless networks.
 - Select "Rescan" if the network cannot be found.
- 2. Enter your password and select "OK".

■ Use iOS Device

Use your iOS device (iPhone/iPod/iPad) to connect to the network. By connecting your iOS device to this unit using Wi-Fi, the unit can be automatically connected to the same network as your device.

- 1. Select "Use iOS Device" on the TV screen.
- Check that your iOS device is connected to the wireless LAN (Wi-Fi) router and select "Marantz AV 10" from "SET UP NEW AIRPLAY SPEAKER..." at the bottom of the Wi-Fi configuration screen of your iOS device.
- 3. Tap "Next" on the screen of the iOS device.



• The iOS device firmware version needs to support iOS 10.0.2 or later.



■ WPS Router

Use a WPS-compatible router to connect using the push button method.

- 1. Select "Push Button" on the TV screen.
- Switch to the WPS mode by pressing the WPS button of the router you wish to connect to.
 - The time for pressing the button varies depending on the router.
- 3. Select "Connect" on the TV screen within 2 minutes.

■ Manual

Enter the name (SSID) and password of the network you wish to connect to.

1. Set the following items.

SSID:	Input the name of the wireless network (SSID).
Security:	Select the encryption method according to the encryption setting of the access point you are using.
Password:	Input the password.

2. Select "Connect" at the end of the setting.



• The Default key of this unit is fixed at "1". Set Default key of the router to "1" to use.



Settings

Configure the IP address.

- If you are using a broadband router (DHCP function), the information required for network connection such as the IP address will be automatically configured since the DHCP function is set to "On" in the default settings of this unit.
- Set up the IP Address, Subnet Mask, Default Gateway and DNS server information only when assigning a fixed IP address or when connecting to a network without DHCP function.



■ DHCP

Selects how to connect to the network.

On (Default):	Configure the network settings automatically from your router.
Off:	Configure the network settings manually.

■ IP Address

Set the IP address within the ranges shown below.

 The Network Audio function cannot be used if other IP addresses are set.

CLASS A: 10.0.0.1 - 10.255.255.254 CLASS B: 172.16.0.1 - 172.31.255.254 CLASS C: 192.168.0.1 - 192.168.255.254

■ Subnet Mask

When connecting an xDSL modem or connector adapter directly to this unit, input the subnet mask indicated in the documentation supplied by your provider. Normally input "255.255.255.0".



■ Default Gateway

When connected to a gateway (router), input its IP address.

DNS

Enter the DNS address indicated in the documentation supplied by your provider.



- If you cannot connect to the Internet, recheck the connections and settings.
 (©F p. 77)
- If you do not understand about Internet connection, contact your ISP (Internet Service Provider) or the store from which you purchased your computer.

Network Control

Enables network communication in standby power mode.

Off In Standby (Default):	Suspend network function during standby.
Always On:	Network is on during standby. Main unit operable with a network compatible controller.



• When using the web control function, Marantz AVR Remote App or HEOS App, use with the "Network Control" setting set to "Always On".

NOTE

 When "Network Control" is set to "Always On", the unit consumes more standby power.



Friendly Name

The Friendly Name is the name of this unit displayed on the network. You can change the Friendly Name according to your preferences.

Friendly Name

Selects Friendly Name from the list.

When you select "Other", you can change the Friendly Name according to your preferences.

Home Theater /Living Room / Family Room / Guest Room / Kitchen / Dining Room / Master Bedroom / Bedroom / Den / Office / Other



- Up to 30 characters can be input.
- The default Friendly Name on first use is "Marantz AV 10".

■ Set Defaults

Restores Friendly Name, which you had changed, to the default setting.

Diagnostics

Used to check the network connection.

■ Physical Connection

Checks the physical LAN port connection.

ОК	
Error:	The LAN cable is not connected. Check
Ellol.	the connection.



 When connected using a wireless LAN, "Connection Wireless (Wi-Fi)" will be displayed.

■ Router Access

Checks the connection from this unit to the router.

OK	
Error:	Failed to communicate with the router. Check the router settings.



■ Internet Access

Checks whether this unit has access to the Internet (WAN).

0	ĸ
	1

Error:

Failed to connect to the Internet. Check
the Internet connection environment or
router settings.

AirPlay

Settings for Apple AirPlay.

■ AirPlay Name

Displays the name which identifies this unit on Apple devices.



 If you registered this unit to the Apple Home app, use the app to change the name.

■ AirPlay

Enables/disables the Apple AirPlay.

On (Default):	Enables Apple AirPlay.
Off:	Disables Apple AirPlay.



Spotify Connect

Toggles access to Spotify Connect.

On (Default):	Enables Spotify Connect.
Off:	Disables Spotify Connect.

TIDAL Connect

Toggles access to TIDAL Connect.

On (Default):	Enables TIDAL Connect.
Off:	Disable TIDAL Connect.

Wi-Fi and Bluetooth

Enables/disables the Wi-Fi and Bluetooth radios.

■ Wi-Fi

The Wi-Fi function can be stopped to prevent noise that affects the sound quality. Using a wired LAN to connect this unit to the network enables playback with a high sound quality.

Enabled (Default):	Enables the Wi-Fi function.
Disabled:	Disables the Wi-Fi function.

■ Bluetooth

Stopping Bluetooth receiver and transmitter functions reduces a source of noise that affects sound quality, enabling higher sound quality playback.

Enabled (Default):	Enables the Bluetooth function.
Disabled:	Disables the Bluetooth function.



HEOS Account

Make HEOS Account-related settings.

HEOS Account is needed in order to use HEOS Favorites.

The menu displayed differs depending on the status of the HEOS Account.

You have not signed in

I have a HEOS Account

If you already have a HEOS Account, enter the current account name and password to sign in.

■ Create Account

If you do not have a HEOS Account, create a new HEOS Account.

■ Forgot Password

If you have forgotten the password, an email explaining how to reset the password will be sent.

You have already signed in

■ Signed in as

The currently signed in HEOS Account is displayed.

■ Change Location

Change the regional settings for the signed in HEOS Account.

Index

Change Password

Change the password for the signed in HEOS Account.

■ Delete Account

Delete the signed in HEOS Account.

■ Sign Out

Sign out from the HEOS Account.



General

Make various other settings.

Language

Set the language for display the menu on the TV screen.

English / Deutsch / Français / Italiano / Español / Nederlands / Svenska / Русский / Polski (Default : English)



- "Language" can also be set up by the following operation. However, the menu screen is not displayed. Watch the display while configuring the settings.
 - Press and hold the main unit's STATUS and ZONE3 SOURCE at the same time for at least 3 seconds.
 - "*Video Format <PAL>" appears on the display.
- 2. Press cursor Down on the main unit twice.
 - "*GUI Language <ENGLISH>" appears on the display.
- 3. Use the main unit's cursor Left or cursor Right and set the language.
- 4. Press the main unit's ENTER to complete the setting.

Owner's Manual

Shows URL and QR code to access the online Owner's Manual from your mobile device.

Bluetooth Transmitter

Sets this unit's Bluetooth transmitter.

Set to use Bluetooth headphones to listen to audio playing in the MAIN ZONE.

■ Transmitter

Enables or disables the Bluetooth transmitter.

On:	Enables the Bluetooth transmitter feature.
Off	Disables the Bluetooth transmitter
(Default):	feature.

■ Output Mode

Selects the audio output method.

Bluetooth + Speakers (Default):	Audio is output to Bluetooth headphones and main zone speakers.
Bluetooth Only:	Audio is output to Bluetooth headphones only.

Index

Connected device

Displays the Bluetooth device connected to this unit.



■ Device List

- Available devices are displayed in the list once you start pairing mode on the Bluetooth headphones you want to connect. Select your Bluetooth headphones from the list to pair them.
- This unit can only pair with one Bluetooth headphone at a time.
 However, up to 8 Bluetooth headphones can be registered. Switch between registered devices from Device List in the "Bluetooth Transmitter" setup menu.
- To remove a saved Bluetooth device from the list, use the cursor Up/Down buttons to select it, then press the OPTION button and select "Forget This Device".



- "Output Mode" can also be set from "Bluetooth Transmitter" in the option menu.
- A2DP profile-compatible Bluetooth speakers can be connected following the same steps used to connect Bluetooth headphones.

NOTE

- Bluetooth transmitter and Bluetooth receiver function cannot be used at the same time. Settings in this menu are not available when listening to music on a Bluetooth device in any zone.
- Even when "Transmitter" is set to "On", press Bluetooth on the remote control to select the "Bluetooth" source and enable the Bluetooth receiver function.
 To listen to music stored on Bluetooth devices such as smartphones on this unit, press Bluetooth on the remote control to switch the input source to Bluetooth, then reconnect the Bluetooth device.
- Menu settings for Bluetooth Transmitter are not available when this unit is grouped within the HEOS App.

ZONE2 Setup / ZONE3 Setup

Makes settings for audio playback with ZONE2 and ZONE3.



 Values set for "Volume Limit" and "Power On Volume" are displayed according to the setting specified for the volume "Scale". (FF p. 178)

■ Bass

Adjust bass.

-10dB - +10dB (Default : 0dB)

■ Treble

Adjust treble.

-10dB - +10dB (Default : 0dB)

High Pass Filter

Make settings for cutting the low range to reduce distortion in the bass.

On:	The low range is attenuated.
Off (Default):	The low range is not attenuated.



■ L Ch Level

Adjust the left channel output level.

-12 dB - +12 dB (Default : 0 dB)

■ R Ch Level

Adjust the right channel output level.

-12 dB - +12 dB (Default : 0 dB)

■ Channel

Set whether to playback in stereo or monaural.

Stereo (Default):	Stereo playback.	
Mono:	Monaural playback.	

■ HDMI Audio (ZONE2 only)

Selects the audio signal format for playing an HDMI source in ZONE2.

Through (Default):	The HDMI audio signal is passed through this unit to the device in ZONE2.
PCM:	The HDMI audio signal input into this unit is converted to a PCM signal that can be output from the ZONE2 PRE OUT connectors or speaker terminals.* The HDMI audio signal input into this unit is converted to a PCM signal that can be output from the ZONE2 PRE OUT connectors.

^{*} When the same input source is set for both MAIN ZONE and ZONE2, PCM 2channel is used for the audio in MAIN ZONE too. However, it may not be possible to convert the signal from some playback devices to a PCM signal using this setting.

■ Volume Level

Set the volume output level.

Variable (Default):	Volume can be adjusted.
1 – 98 (–79 dB – 18 dB):	Volume is fixed at the desired level. The volume cannot be adjusting using the remote control unit.



The dB value is displayed when the "Scale" setting is "-79.5 dB - 18.0 dB".
 (©F p. 178)



■ Volume Limit

Make a setting for maximum volume.

60 – 80 (–20 dB – 0 dB) (Default : 70 (-10 dB))	
Off:	Do not set a maximum volume.



- This can be set when "Volume Level" is set to "Variable". (Pp. 248)
- The dB value is displayed when the "Scale" setting is "-79.5 dB 18.0 dB".
 (©F p. 178)

■ Power On Volume

Sets the initial volume level when the power is turned on.

Last (Default):	Sets the power-on level to the last-used volume level.
Mute:	Sets the power-on level to mute level.
1 – 98 (–79 dB – 18 dB):	Sets a specific power-on level.



- This can be set when "Volume Level" is set to "Variable". (p. 248)
- The dB value is displayed when the "Scale" setting is "-79.5 dB 18.0 dB".
 (☼) p. 178)

■ Mute Level

Set the amount of attenuation when mute is on.

Sets the mute level to full mute (no sound).
Sets the mute level to 40 dB lower than the current volume level.
Sets the mute level to 20 dB lower than the current volume level.



Zone Rename

Change the display title of each zone to one you prefer.

MAIN ZONE / ZONE2 / ZONE3

Set Defaults:

The default setting is restored for the edited zone name.



• Up to 10 characters can be input.

Smart Select

Sets the "Smart Select" parameters and display name.

Name

Change the Name that appears on the TV screen to one you prefer.



- Up to 16 characters can be input.
- Input Source/Master Volume/Sound Mode/ Channel Level/Audyssey Parameters/M-DAX/ HDMI Video Output/Playback Content/Speaker Preset/All Zone Stereo/TV Audio Sharing/Dirac Live

The current settings are registered when Smart Select is registered. In addition, when Smart Select is called up, the content of the registered settings is called up.
Settings are not registered when Smart Select is registered. In addition, when Smart Select is called up, the content of the registered settings is not called up.





- "Smart Select" can be set for each Smart Select.
- When "Input Source" is "Disabled", Video Select information is not registered/ called up either.

Trigger Out 1 / Trigger Out 2

Select the conditions for activating trigger out.

For details about how to connect the DC OUT jacks, see "DC OUT jacks" (@p. 83).

☐ When setting for zone (MAIN ZONE / ZONE2 / ZONE3)

Trigger out is activated through linkage to the power of the zone set to "On".

When setting for input source

Activate trigger out when the input source set to "On" is selected.

☐ When setting for HDMI Out

Activate trigger out when the HDMI Out set to "On" is selected.

On:	Activate trigger on this mode.
Off:	Do not activate trigger on this mode.



Auto Standby

Set so the unit power automatically switches to standby.

■ MAIN ZONE

Sets the time for switching to auto standby when there are no audio or video signals input into this unit.

Before the unit enters standby mode, "Auto Standby" is displayed on the unit display and the menu screen.

60 min:	The unit goes into standby after 60 minutes.
30 min:	The unit goes into standby after 30 minutes.
15 min (Default):	The unit goes into standby after 15 minutes.
Off:	The unit does not go into standby automatically.

■ ZONE2 / ZONE3

When there are no operations for a certain period of time as set here, the power is automatically shut off even if there is audio or video input.

8 hours:	Switches ZONE2/ZONE3 the standby state after about 8 hours.
4 hours:	Switches ZONE2/ZONE3 to the standby state after about 4 hours.
2 hours:	Switches ZONE2/ZONE3 to the standby state after about 2 hours.
Off (Default):	Does not automatically switch ZONE2/ ZONE3 to the standby state.



Front Panel

Adjusts the front panel display settings.

■ Displays

□ Brightness

Adjusts the brightness of the front panel display.

Bright (Default):	Sets the front panel display to full brightness.
Dim:	Sets the front panel display to 50% brightness.
Dark:	Sets the front panel display to 25% brightness.
Off:	Turns off the front panel display until controls are activated.



[•] You can also adjust the display by pressing DIMMER on the main unit.

☐ Channel Indicator

Sets whether to use the input signal display or output signal display for the channel indication on the display.

Input:	Uses the input signal display for the channel indication on the display.
Output (Default):	Uses the output signal display for the channel indication on the display.

■ Illumination

Brightness

Adjusts the brightness of the illumination.

Auto (Default):	Uses the same brightness setting as Displays.
Bright:	Sets the illumination to full brightness.
Dim:	Sets the illumination to 50% brightness.
Dark:	Sets the illumination to 25% brightness.
Off:	Turns off the illumination.



Firmware

Checks for the latest firmware information about updates and updates the firmware.

Check for Update

Check for firmware updates.

The firmware can be updated if a firmware update has been released.

Update Now:	Execute the update process. When the update starts, the menu screen is shut down. During the update, the progress is shown on the display.
Update Later:	Update later.



- This unit automatically retries updating if updating fails. If an update still
 cannot be performed, an "Update Error" message appears in the display. See
 "Troubleshooting" "Update error messages" for information on update error
 messages. (@ p. 286)
- Check the conditions according to the message and try the update again.
- This menu cannot be selected when "Allow Update" is set to "Off".

■ Auto-Update

Turns on Automatic Updates so that feature updates are automatically downloaded and installed when this unit is in standby mode.

□ Auto-Update

This unit will automatically update to the newest firmware when in standby mode.

On:	Turns on Automatic Updates.
Off (Default):	Turns off Automatic Updates.

☐ Time Zone

Change the time zone.

Set the time zone that matches the area where you live.



• This menu cannot be selected when "Allow Update" is set to "Off".



Allow Update

Enable or disable updates for this unit.

On (Default):	Enables this unit to receive updates.
Off:	Prevents this unit from receiving update.



• This setting causes Incompatibilities between this unit and HEOS App.

Notes concerning use of "Update" and "Add New Feature"

- In order to use these functions, you must have the correct system requirements and settings for an Internet connection. (PF p. 77)
- Do not turn off the power until updating is completed.
- Approximately 1 hour is required for the updating procedure to be completed.
- Once updating starts, normal operations on this unit cannot be performed until updating is completed. Furthermore, there may be cases where backup data is reset for the parameters, etc., set on this unit.
- If the update fails, press and hold the O on the main unit for more than 5 seconds, or remove and re-insert the power cord. After about 1 minute, "Please wait" appears on the display and update restarts. If the error continues, check the network environment.



Information

Show information about this unit settings, input signals, etc.

Audio

Show the audio information for MAIN ZONE.

The currently set sound mode.
The input signal type.
The number of input signal channels (presence of front, surround, LFE).
The input signal's sampling frequency.
The dialogue normalization correction value.
This is displayed when inputting signals including a surround back channel. "MATRIX" is displayed with DTS-ES Matrix input signals, "DISCRETE" with DTS-ES Discrete signals.

■ Video

Show the HDMI input/output signals and HDMI monitor information for MAIN ZONE.

HDMI Signal Info.

Resolution / HDR / Color Space / Pixel Depth / ALLM / QFT / FRL Rate

HDMI Monitor 1 / HDMI Monitor 2

Interface / HDR / Resolutions / Enhanced Features / Max FRL Rate



- A or B may be displayed at the end of resolution. A represents uncompressed video and B represents compressed video.
- Refer to "About HDMI" for more information about ALLM, QFT and FRL.
 (p. 291)

ZONE

Show information about current settings.

MAIN ZONE:	This item shows information about settings for MAIN ZONE. The information displayed differs according to the input source.
ZONE2/3:	This item shows information about settings for ZONE2 and ZONE3.



■ Firmware

Version:	Displays information for the current firmware.
DTS Version:	Displays the current DTS version.

Notifications

Displays and sets notifications.

Also, sets whether or not to display the notification when the power is turned on.

Notification Alerts

On (Default):	Notification messages are displayed.
Off:	Notification messages are not displayed.



 Pressing INFO on the remote control switches the display to show information such as the input source name, the volume, the sound mode name, the video input/output signals, and other information. The FRL Rate is displayed when the "4K/8K Signal Format" setting of this unit is "8K Enhanced" and the connected TV supports FRL transmission mode.









Usage Data

To help us improve our products and customer service, Marantz collects anonymous information about how you use this unit (such as frequently used input sources and sound modes and speaker settings). Marantz will never provide any information we collect to third parties.

Yes:	Provide information on the operating status of this unit.
No:	Do not provide information on the operating status of this unit.

Save & Load

Save and restore device settings by using a USB memory device.



- Use a USB memory device that has at least 128 MB of free space and is formatted to FAT32. Data may not Save/Load correctly to some USB memory devices.
- It may take up to 10 minutes for data to Save/Load. Do not turn off the power until
 the process is complete.

■ Save Configuration

Current unit settings are stored on the USB memory device.

When the settings are saved correctly, "Saved" appears on the display and the file "config.avr" is created on the USB memory device.



• Do not change the file name of the created file. Doing so will prevent the file from being recognized as a settings file when restoring.

■ Load Configuration

Settings saved on the USB memory device are restored.

When the saved settings are restored correctly, "Loaded" appears on the display and the unit automatically restarts.



Setup Lock

Protect settings from inadvertent changes.

■ Lock

On:	Turn protection on.
Off (Default):	Turn protection off.



• When cancelling the setting, set "Lock" to "Off".

NOTE

 When "Lock" is set to "On", no setting items are displayed except for "Setup Lock".

Reset

Returns settings to the factory default.

Initialization can be performed for all unit settings or for Network settings only.

■ All Settings

All settings are reset to the factory default values.

■ Network Settings

Only network settings are reset to the factory default values.



- Before returning the settings to the default settings, use the "Save & Load" function from the menu to save and restore the details of various settings configured on the unit. (12) p. 258)
- The "Reset" operation can also be performed by using the button on the main unit. For details on resetting all of the settings to the factory defaults see "Resetting factory settings" (127 p. 287), and for details on resetting the network settings to the factory defaults see "Resetting network settings" (127 p. 288).


Index

NOTE

 Do not disconnect the power or turn the device off during network settings initialization.



Setting the back light of the remote control unit

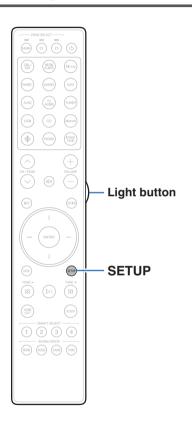

You can turn off the backlight of the remote control unit.

• Backlight is set on in the factory settings.

Disabling the backlight


1 Press and hold both SETUP and Light button until the MAIN, Z2 and Z3 indicators on the remote are flashing green, then release.



• The backlight function can be turned on by performing step 1 again while the backlight function is off.



Specifying the zone used with the remote control unit

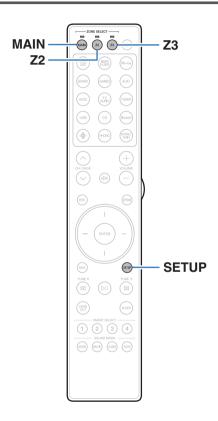

To prevent accidental misuse, you can set the zone for which the remote control unit is used.

Press and hold down either MAIN, Z2 or Z3 and SETUP at the same time until the MAIN, Z2 and Z3 indicators flash green.

MAIN:	When only using MAIN ZONE
Z2:	When using MAIN ZONE and ZONE2
Z3 (Default):	When using MAIN ZONE, ZONE2 and ZONE3



■ Contents

Tips

I want the volume not to become too loud by mistake	263
I want to keep the volume at the same level when I turn the power on	263
I want to have the subwoofer always output audio	263
I want to make human voices in the movies clearer	263
I want to keep bass and clarity during playback at a lower volume level	263
I want to automatically adjust the volume level difference in content such as TV and movies	263
I want to set the optimized listening environment after changing the configuration/position of the speakers or changing a speaker to a new one	264
I want to combine a desired video with the current music	264
I want to skip unused input sources	264
I want to enjoy the same music in all zones at the home party, etc.	264
I want to minimize the delay in video signals when I'm playing a game on my game console	264

Troubleshooting

Power does not turn on / Power is turned off	26
Operations cannot be performed through the remote control unit	26
Display on this unit shows nothing	26
No sound comes out	26
Desired sound does not come out	26
Sound is interrupted or noise occurs	27
No video is shown on the TV	27
The menu screen is not displayed on the TV	27
The color of the menu screen and operations content displayed on the television is different from normal	27
AirPlay cannot be played back	27
USB memory devices cannot be played back	
Bluetooth cannot be played back	
The Internet radio cannot be played back	
Music files on PC or NAS cannot be played back	
Various online services cannot be played	
The HDMI Control function does not work	
Cannot connect to a wireless LAN network	28
When using HDMI ZONE2, the devices does not function properly	
Update error messages	28



Tips

I want the volume not to become too loud by mistake

• Set the volume upper limit for "Volume Limit" in the menu beforehand. This prevents children or others from increasing the volume too much by mistake. You can set this for each zone. ("Volume" (Pp. 178), "Volume Limit" (Pp. 249))

I want to keep the volume at the same level when I turn the power on

• By default, the volume setting when power was previously set to standby on this unit is applied at next power on with no change. To use a fixed volume level, set the volume level at power on for "Power On Volume" in the menu. You can set this for each zone. ("Volume" (Power On Volume") (Power On Volume") p. 249))

I want to have the subwoofer always output audio

• Depending on the input signals and sound mode, the subwoofer may not output audio. When "Subwoofer Output" in the menu is set to "LFE + Main", you can have the subwoofer always output audio. (*** p. 229)

I want to make human voices in the movies clearer

• Select a setting that makes the dialog easier to hear in the option menu "Dialog Enhancer". (@p. 120)

I want to keep bass and clarity during playback at a lower volume level

• Set "Dynamic EQ" in the menu to "On". This setting corrects the frequency characteristics to allow you to enjoy clear sound without the bass being lost even during playback at a lower volume level. (F) p. 180)

I want to automatically adjust the volume level difference in content such as TV and movies

• Set "Dynamic Volume" in the menu. Volume level changes (between quiet scenes and loud scenes) in TV shows or movies are automatically adjusted to your desired level. (@p. 181)



I want to set the optimized listening environment after changing the configuration/position of the speakers or changing a speaker to a new one

• Perform Audyssey® Setup. This automatically makes the optimized speaker settings for the new listening environment. (127) p. 201)

I want to combine a desired video with the current music

• Set "Video Select" in the option menu to "On". You can combine the current music with your desired video source from a Set-top Box or Blu-ray, etc. while listening to music from the CD, Phono, HEOS Music, USB or Bluetooth. (F) p. 125)

I want to skip unused input sources

• Set unused input sources for "Hide Sources" in the menu. This allows you to skip unused input sources when turning the INPUT selector knob on this unit. (127 p. 199)

I want to enjoy the same music in all zones at the home party, etc.

• Set "All Zone Stereo" in the option menu to "Start". You can simultaneously play back music in another room (ZONE2, ZONE3) that is played back in MAIN ZONE. (1267) p. 126)

I want to minimize the delay in video signals when I'm playing a game on my game console

• When the video is delayed against button operations with the controller on the game console, set "Video Mode" in the menu to "Game". (Fig. p. 190)



Troubleshooting

If a problem should arise, first check the following:

- 1. Are the connections correct?
- 2. Is the set being operated as described in the owner's manual?
- 3. Are the other devices operating properly?



If steps 1 to 3 above do not improve the problem, restarting the device may improve the problem.
 Continue pressing the Φ button on the unit until "Restart" appears in the display, or remove and re-insert the power cord of the unit.

If this unit does not operate properly, check the corresponding symptoms in this section.

If the symptoms do not match any of those described here, consult your dealer as it could be due to a fault in this unit. In this case, disconnect the power immediately and contact the store where you purchased this unit.



Power does not turn on / Power is turned off

Power does not turn on.

• Check whether the power plug is correctly inserted into the power outlet. (PP p. 84)

Power automatically turns off.

- The sleep timer is set. Turn on the power again. (@p. 143)
- "Auto Standby" is set. "Auto Standby" is triggered when there is no operation for a set amount of time. To disable "Auto Standby", set "Auto Standby" on the menu to "Off". (127 p. 252)

The power to this unit does not turn off when you press the Power operation button. "ZONE2 On" or "ZONE3 On" appears on the display.

• Power in either ZONE2 or ZONE3 is on. To turn off the power of the device (standby), press either the ZONE2 ON/OFF or ZONE3 ON/OFF button on the main unit or press the POWER Φ button after pressing the Z2 or Z3 button on the remote control unit.



Operations cannot be performed through the remote control unit

Operations cannot be performed through the remote control unit.

- Batteries are worn out. Replace with new batteries. (@p. 10)
- Operate the remote control unit within a distance of about 7 m from this unit and at an angle of within 30°. (12) p. 10)
- Remove any obstacle between this unit and the remote control unit.
- Insert the batteries in the proper direction, checking the \oplus and Θ marks. (\bigcirc p. 10)
- The set's remote control sensor is exposed to strong light (direct sunlight, inverter type fluorescent bulb light, etc.). Move the set to a place in which the remote control sensor will not be exposed to strong light.
- The operation target zone does not correspond to the zone setting specified on the remote control unit. Press MAIN, Z2 or Z3 to select the zone to operate. (FF p. 168)
- When using a 3D video device, the remote control unit of this unit may not function due to effects of infrared communications between units (such as TV and glasses for 3D viewing). In this case, adjust the direction of units with the 3D communications function and their distance to ensure they do not affect operations from the remote control unit of this unit.

Display on this unit shows nothing

Display is off.

- Set "Displays" "Brightness" on the menu to something other than "Off". (1287 p. 253)
- When the sound mode is set to "Pure Direct", the display is off. (p. 130)



No sound comes out

No sound comes out of speakers.

- Check the connections for all devices. (Fig. p. 43)
- Insert connection cables all the way in.
- Check that input connectors and output connectors are not reversely connected.
- Check cables for damage.
- Check the speaker connections and configurations. (@ p. 48)
- Check the connections for PRE OUT connectors. (@p. 43)
- Check whether the audio device power is turned on. (@p. 66)
- Check that a proper input source is selected. (FF p. 86)
- Adjust the volume. (@p. 87)
- Cancel the mute mode. (@p. 87)
- Check the digital audio input connector setting. (Page p. 196)
- Check the digital audio output setting on the connected device. On some devices, the digital audio output is set to off by default.
- When a headphone is plugged into the PHONES jack on the main unit, sound is not output from the speaker terminal and PRE OUT connector.
- Audio is output to your Bluetooth headphones, but not to speakers or pre-outs when "Output Mode" set to "Bluetooth Only". Change "Output Mode" to "Bluetooth + Speakers" to output audio from your Bluetooth headphones as well as your speakers or pre-outs. (*** p. 246)

No sound comes out when using the DVI-D connection.

• When this unit is connected to a device equipped with a DVI-D connector, no sound is output. Make a separate audio connection.

No sound comes out when selecting Tuner input.

• This unit does not have built-in FM/AM tuner. Connect an external tuner to the TUNER inputs.



Desired sound does not come out

The volume does not increase.

- The maximum volume is set too low. Set the maximum volume using "Limit" on the menu. (@p. 178)
- · Appropriate volume correction processing is performed according to the input audio format and settings, so the volume may not reach the upper limit.

No sound comes out with the HDMI connection.

- Check the connection of the HDMI connectors. (@p. 67)
- When outputting HDMI audio signals from the speakers of a power amp connected to this unit, set "HDMI Audio Out" in the menu to "AVP". To output from the TV, set it to "TV". (F) p. 185)
- When using the HDMI Control function, check that the audio output is set to the AV amplifier on the TV. (@ p. 142)

When an eARC function-compatible television is connected, television audio is not output from the speaker connected to this unit

- eARC function settings may be required depending on the eARC function-compatible television you are using. Make sure eARC is set to on if this setting exists on your television. For more information, check your television's owner's manual.
- Make sure the input source of this unit is "TV Audio".
- The eARC function does not operate when the HDMI input connector is set to the "TV Audio" input source. To enable eARC function operation, remove the HDMI input connector setting, then restart this unit and the television. (1977)



No sound comes out of a specific speaker.

- Check that PRE OUT cables and speaker cables are properly connected.
- Check that a selection other than "No" is set for the "Speaker Layout" setting in menu. (@pp. 212)
- Check the "Amp Assign" setting in the menu. (@p. 212)
- When the sound mode is "Stereo" and "Virtual", audio is only output from the front speakers and subwoofer.
- Audio is not output from the surround back speaker if "Speaker Virtualizer" is set to "On" when "Speaker Layout" "Surround Back" is set to "1 spkr" in the menu. (😭 p. 172)
- Audio is not output from the front wide speaker if "Speaker Virtualizer" is set to "On". (128 p. 172)
- When "Speaker Layout" "Surround Back" is set to "2 spkrs", "Speaker Layout" "Center" is set to "Yes", and sound mode is set to "IMAX DTS", surround audio is output from the surround back speaker. Audio is not output from the surround speaker. (1287 p. 213)

No sound is produced from subwoofer.

- Check the subwoofer connections.
- Turn on the subwoofer's power.
- Set "Speaker Layout" "Subwoofers" in the menu to "1 spkr", "2 spkrs", "3 spkrs" or "4 spkrs". (127 p. 220)
- When "Crossovers" "Front" in the menu is set to "Full Range", depending on the input signal and the sound mode, no sound may be output from the subwoofer. (27 p. 227)
- When no subwoofer audio signal (LFE) is included in the input signals, no sound may be output from the subwoofer. (27 p. 229)
- You can make the subwoofer always output sound by setting the "Subwoofer Output" to "LFE + Main". (FP p. 229)

DTS sound is not output.

• Check that the digital audio output setting on the connected device is set to "DTS".

Dolby Atmos, Dolby TrueHD, DTS-HD, Dolby Digital Plus audio is not output.

- Make HDMI connections. (@p. 71)
- · Check the digital audio output setting on the connected device. On some devices, "PCM" is set by default.



DTS Neural:X mode cannot be selected.

• DTS Neural:X cannot be selected when using the headphones.

Dolby Surround mode cannot be selected.

• Dolby Surround cannot be selected when using the headphones.

IMAX DTS:X cannot be selected.

• IMAX DTS:X and IMAX DTS cannot be selected but DTS:X and DTS can be selected, when the headphones are used.

Sound modes other than "Stereo" or "Direct" cannot be selected.

• Only "Stereo" or "Direct" can be selected for the sound mode if Headphone:X signals are input.

Audyssey MultEQ® XT32, Audyssey Dynamic EQ®, Audyssey Dynamic Volume® and Audyssey LFC™ cannot be selected.

- These cannot be selected when you have not performed Audyssey® Setup. (127 p. 201)
- Switch to a sound mode other than "Direct" or "Pure Direct". (r p. 130)
- Audyssey Dynamic EQ[®], Audyssey Dynamic Volume[®] and Audyssey LFC[™] cannot be selected when sound mode is "DTS Virtual:X" or sound mode that have "+ Virtual:X" in the sound mode name.
- These cannot be selected when using the headphones.

Dirac Live can not be selected.

- This cannot be selected when you have not perforned Dirac Live Room Correction. "Dirac Live Setup" (1267) p. 236)
- This cannot be selected when using the headphone.
- Dirac Live cannot be used when the "Speaker Layout" is changed to different settings from the settings that were used when Dirac Live Room Correction was performed.

"M-DAX" cannot be selected.

- Check that an analog signal or PCM signal (Sample Rate = 44.1/48 kHz) is input. For playback of multichannel signals such as Dolby Digital or DTS surround, "M-DAX" cannot be used. (12) p. 177)
- Switch to a sound mode other than "Direct" or "Pure Direct". (@p. 130)



No audio is output from PRE OUT for ZONE2/ZONE3.

- In ZONE2/ZONE3, the audio can be played back when signals input from digital connectors (OPTICAL/COAXIAL) are in 2ch PCM format.
- In ZONE2, the audio can be played back when signals input from the HDMI connector are in 2ch PCM format. To play back the audio in ZONE2 irrespective of the input signal format, set "HDMI Audio" in the menu to "PCM". Depending on the played back device, the audio may not be played back even with this setting. In that case, set the audio format to "PCM (2ch)" on the played back device. (127) p. 248)
- When listening to audio from a Bluetooth device in ZONE2/ZONE3, remove any obstructions between the Bluetooth device and this unit and use it within a range of about 30 m.

Sound mode settings are not available when using Bluetooth headphones. Audio menu settings are also not available.

• This unit cannot change sound mode or audio menu settings for audio output to Bluetooth headphones.



Sound is interrupted or noise occurs

During playback from the Internet radio or USB memory device, sound is occasionally interrupted.

- When the transfer speed of the USB memory device is slow, sound may occasionally be interrupted.
- The network communication speed is slow or the radio station is busy.

When making a call on iPhone, noise occurs in audio output on this unit.

• When making a call, keep a distance of 20 cm or longer between iPhone and this unit.

The sounds appear to be distorted.

• Lower the volume. (@p. 87)

Sound cuts out when using Wi-Fi connection.

- The frequency band used by the wireless LAN is also used by microwave ovens, cordless telephones, wireless game controllers and other wireless LAN devices. Using such devices at the same time as this unit may cause sound to cut out due to electronic interference. Sound cut out can be improved using the following methods. (FF p. 77)
 - Install devices that cause interference away from this unit.
 - Turn off the power supply to devices that cause interference.
 - Change the settings of the router channel to which this unit is connected to. (See the instruction manual of the wireless router for details on how to change the channel.)
- Switch to a wired LAN connection.
- Particularly when you play back large music files, depending on your wireless LAN environment, the playback sound may be interrupted. In this case, make the wired LAN connection. (127 p. 238)



No video is shown on the TV

No picture appears.

- Check the connections for all devices. (FF p. 67)
- · Insert connection cables all the way in.
- Check that input connectors and output connectors are not reversely connected.
- · Check cables for damage.
- Match the input settings to the input connector of the TV connected to this unit. (Par p. 196)
- Check that the proper input source is selected. (PP p. 86)
- Check the video input connector setting. (FF p. 196)
- Check that the resolution of the player corresponds to that of the TV. (PP p. 256)
- Check whether the TV is compatible with copyright protection (HDCP). If connected to a device not compatible with HDCP, video will not be output correctly. (@pp. 293)
- To enjoy content that is copyright protected by HDCP 2.2 or HDCP 2.3, use a playback device and TV compatible with HDCP 2.2 or HDCP 2.3.
- The HDMI signal cannot be converted to an analog signal. (@p. 294)
- To play back a 4K video, use a "High Speed HDMI Cable" or a "High Speed HDMI Cable with Ethernet". In order to achieve a higher fidelity for 4K videos, it is recommended to use a "Premium High Speed HDMI Cables" or a "Premium High Speed HDMI Cables with Ethernet" that has an HDMI Premium Certified Cable label on the product package.
- Use a certified "Ultra High Speed HDMI cable" to enjoy 8K or 4K 120Hz video. If you use a different HDMI cable, the video may not display or other problems may occur.

No video is shown on the TV with the DVI-D connection.

• With the DVI-D connection, on some device combinations, devices may not function properly due to the copy guard copyright protection (HDCP). (F) p. 293)



While the menu is being displayed, no video is shown on the TV.

• The video being played will not appear in the background of the menu when the menu is operated.

When using HDMI ZONE2, the video output in MAIN ZONE is interrupted.

• When ZONE2 is operated with the same input source selected for MAIN ZONE and ZONE2, video in MAIN ZONE may be interrupted.



The menu screen is not displayed on the TV

The menu screen or status information screen is not displayed on the TV.

- The status information will not appear on the TV when the following video signals are being played.
- Some images of 3D video content
- Computer resolution images (example: VGA)
- Video with an aspect ratio other than 16:9 or 4:3
- Some kind of HDR signals
- Some kind of game contents
- Compressed video
- When a 2D video is converted to a 3D video on the TV, the menu screen or status information screen is not displayed properly. (12) p. 257)
- In the pure direct playback mode, the menu screen or status information is not displayed. Switch to a sound mode other than the pure direct mode.
 (P) p. 129)
- Set the "TV Format" setting in the menu to a selection that is appropriate for the TV. (128 p. 195)

The color of the menu screen and operations content displayed on the television is different from normal

The color of the menu screen and operations content displayed on the television is different.

• Performing operations on this unit during playback of a Dolby Vision signal may cause variance in the color display of the menu screen and operations content. This is a characteristic of the Dolby Vision signal and is not a malfunction.



AirPlay cannot be played back

The AirPlay icon is not displayed on iTunes / iPhone / iPod touch / iPad.

- This unit and PC / iPhone / iPod touch / iPad are not connected to the same network (LAN). Connect it to the same LAN as this unit. (127 p. 77)
- The firmware on iTunes / iPhone / iPod touch / iPad is not compatible with AirPlay. Update the firmware to the latest version.

Audio is not output.

- The volume on iTunes / iPhone / iPod touch / iPad is set to the minimum level. The volume on iTunes / iPhone / iPod touch / iPad is linked with the volume on this unit. Set a proper volume level.
- The AirPlay playback is not performed, or this unit is not selected. Click the AirPlay icon on the iTunes / iPhone / iPod touch / iPad screen and select this unit. (15) p. 115)

Audio is interrupted during the AirPlay playback on iPhone / iPod touch / iPad.

- · Quit the application running in the background of the iPhone/iPod touch/iPad, and then play using AirPlay.
- Some external factors may be affecting the wireless connection. Modify the network environment by taking measures such as shortening the distance from the wireless LAN access point.

iTunes cannot be played back through the remote control unit.

• Enable the "Allow iTunes audio control from remote speakers" setting on iTunes. Then, you can perform playback, pause, and skip operations through the remote control unit.



USB memory devices cannot be played back

USB memory device is not recognized.

- Disconnect and reconnect the USB memory device. (@p. 76)
- Mass storage class compatible USB memory devices are supported.
- This unit does not support a connection through a USB hub. Connect the USB memory device directly to the USB port.
- The USB memory device must be formatted to "FAT32" or "NTFS".
- Not all USB memory devices are guaranteed to work. Some USB memory devices are not recognized. When using a type of portable hard disc drive compatible with the USB connection that requires power from an AC adapter, use the AC adapter that came with the drive.

Files on the USB memory device are not displayed.

- Files of a type not supported by this unit are not displayed. (@p. 88)
- This unit is able to display files in a maximum of eight folder layers. A maximum of 5000 files (folders) can also be displayed for each layer. Modify the folder structure of the USB memory device.
- When multiple partitions exist on the USB memory device, only files on the first partition are displayed.

iOS and Android devices are not recognized.

• The USB port of this unit does not support playback from iOS and Android devices.

Files on a USB memory device cannot be played.

- Files are created in a format that is not supported by this unit. Check the formats supported by this unit. (Pp. 296)
- You are attempting to play a file that is copyright protected. Files that are copyright protected cannot be played on this unit.
- Playback may not be possible if the album art file size exceeds 2 MB.



Bluetooth cannot be played back

Bluetooth devices cannot be connected to this unit.

- The Bluetooth function in the Bluetooth device has not been enabled. See the Owner's Manual of the Bluetooth device to enable the Bluetooth function.
- . Bring the Bluetooth device near to this unit.
- The Bluetooth device cannot connect with this unit if it is not compatible with the A2DP profile.
- Turn the power of the Bluetooth device off and on again, and then try again.

Smartphones and other Bluetooth devices cannot be connected.

• Smartphones and other Bluetooth devices cannot be connected when "Transmitter" is set to "On". Press Bluetooth on the remote control to switch the input source to Bluetooth, then connect the device. (F) p. 246)

Cannot connect Bluetooth headphones.

- · Bring the Bluetooth headphones near to this unit.
- Turn the power of the Bluetooth headphones off and on again, and then try again.
- Go to "General" "Bluetooth Transmitter", and set "Transmitter" to "On" within the menu. (12) p. 246)
- Make sure this unit is not already connected to another pair of Bluetooth headphones. Check the currently connected Bluetooth headphones by
 pressing INFO on the remote control or STATUS button on the unit.
 Disconnect the connected Bluetooth headphones before connecting the ones you want to use.
- Bluetooth headphones cannot be connected if Bluetooth is being used as an input source in any zone.
- Bluetooth headphones cannot be connected if this unit is grouped in the HEOS App. Remove this unit from the group to enable Bluetooth headphones connection.
- The Bluetooth headphones cannot connect with this unit if it is not compatible with the A2DP profile.
- Connection and operation are not guaranteed for all Bluetooth-enabled devices.
- This unit can only connect to one Bluetooth headphone at a time. However, up to 8 Bluetooth headphones can be registered. You can switch between registered devices from "Device List" in the "Bluetooth Transmitter" menu. (pp. 246)



The sound is cut off.

- . Bring the Bluetooth device near to this unit.
- Remove obstructions between the Bluetooth device and this unit.
- To prevent electromagnetic interference, locate this unit away from microwave ovens, wireless LAN devices and other Bluetooth devices.
- · Reconnect the Bluetooth device.

The sound is cut off or noise occurs when using Bluetooth headphones.

- Move the Bluetooth headphones closer to this unit.
- Remove obstructions between the Bluetooth headphones and this unit.
- · Reconnect the Bluetooth headphones.
- To prevent electromagnetic interference, locate this unit away from microwave ovens, wireless LAN devices and other Bluetooth devices.
- We recommend using wired LAN to connect this unit and other devices.
- Bluetooth transmits on the 2.4 GHz band which may interfere with Wi-Fi transmitted on this band. Connect this unit and other devices to Wi-Fi network on a 5 GHz band if available on your Wi-Fi router.

Audio is delayed on my Bluetooth headphones.

• This unit cannot adjust audio delay on Bluetooth headphones.



The Internet radio cannot be played back

A list of broadcasting stations is not displayed.

- The LAN cable is not properly connected, or the network is disconnected. Check the connection status. (🖅 p. 77)
- Perform the network diagnostic mode.

Internet Radio cannot be played.

- The selected radio station is broadcasting in a format that is not supported by this unit. Formats that can be played back in this unit are MP3, WMA and AAC. (F) p. 299)
- The firewall function is enabled on the router. Check the firewall setting.
- The IP address is not properly set. (@p. 240)
- Check the power of the router is on.
- To obtain the IP address automatically, enable the DHCP server function on the router. Also, set the DHCP setting to "On" on this unit. (127) p. 240)
- To obtain the IP address manually, set the IP address on this unit. (P p. 240)
- Some radio stations broadcast silently during some time period. In this case, no audio is output. Wait for a while and select the same radio station, or select another radio station. (128 p. 100)
- The selected radio station is not in service. Select a radio station in service.

Cannot connect to favorite radio stations.

• Radio station is not currently in service. Register radio stations in service.



Music files on PC or NAS cannot be played back

Files stored on a computer cannot be played.

- Files are stored in a non-compatible format. Record in a compatible format. (Fig. p. 298)
- Files that are copyright protected cannot be played on this unit.
- The USB port of this unit cannot be used for connection to a computer.
- Media sharing settings on the server or NAS do not allow this unit. Change the settings to allow this unit. For details, see the owner's manual of the server or NAS.

Server is not found, or it is not possible to connect to the server.

- The computer's or router's firewall is activated. Check the computer's or router's firewall settings.
- Computer's power is not turned on. Turn on the power.
- Server is not running. Launch the server.
- IP address of this unit is wrong. Check the IP address of this unit. (@p. 237)

Music files on PC cannot be played back.

• Even if PC is connected to the USB port on this unit, music files on it cannot be played back. Connect PC to this unit through the network. (127 p. 77)

Files on PC or NAS are not displayed.

• Files of a type not supported by this unit are not displayed. (PP p. 298)

Music stored on a NAS cannot be played.

- If you use a NAS in conformity with the DLNA standard, enable the DLNA server function in the NAS setting.
- If you use a NAS that does not conform with the DLNA standard, play the music via a PC. Set Windows Media Player's media sharing function and add NAS to the selected play folder.
- If connection is restricted, set audio equipment as the connection target.



Various online services cannot be played

Various online services cannot be played.

• The online service may have been discontinued.

The HDMI Control function does not work

The HDMI Control function does not work.

- Check that "HDMI Control" in the menu is set to "On". (@p. 187)
- You cannot operate devices that are not compatible with the HDMI Control function. In addition, depending on the connected device or the settings, the HDMI Control function may not work. In this case, operate the external device directly. (Page p. 142)
- Check that the HDMI Control function setting is enabled on all devices connected to this unit. (27 p. 142)
- When you make connection related changes such as connecting an additional HDMI device, the link operation settings may be initialized. Turn off this unit and devices connected via HDMI, and turn them on again. (27 p. 142)
- The HDMI OUT MONITOR 2 connector is not compatible with the HDMI Control function. Use the HDMI OUT MONITOR 1 connector to connect to the TV. (1287 p. 67)



Cannot connect to a wireless LAN network

Cannot connect to the network.

- The network name (SSID), password and encryption setting have not been set up correctly. Configure the network settings according to the setting details of this unit. (FF p. 239)
- Shorten the distance from the wireless LAN access point and remove any obstructions to improve access first before re-connecting again. Place the unit away from microwave ovens and other network access points.
- Configure the access point channel settings away from channels that are being used by other networks.
- This unit is not compatible with WEP (TSN).

Cannot connect to a WPS Router.

- · Check that the WPS mode of the router is operating.
- Press the WPS button on the router and then press the "Connect" button displayed on the TV within 2 minutes.
- A router/settings that are compatible with WPS 2.0 standards are required. Set the encryption type to "None", "WPA-PSK (AES)" or WPA2-PSK (AES). (PP p. 239)
- If the router encryption method is WEP/WPA-TKIP/WPA2-TKIP, you cannot connect by using the WPS button on the router. In this case, use the "Scan Networks" or "Manual" method to connect.

Cannot connect to the network using iPhone/iPod touch/iPad.

- Update the iPhone/iPod touch/iPad firmware to the latest version.
- When configuring the settings via a wireless connection, iOS 10.0.2 or later needs to be supported.



When using HDMI ZONE2, the devices does not function properly

When using MAIN ZONE, video output is interrupted in HDMI ZONE2.

• With the same input source selected for MAIN ZONE and ZONE2, when you operate MAIN ZONE, video may be interrupted in HDMI ZONE2.

When using HDMI ZONE2, no video or audio is output from the TV in ZONE2.

- Check that the power is on for ZONE2. (@p. 160)
- Check the input source for ZONE2. (@p. 160)
- In ZONE2, playback is only possible when the input signals are HDMI signals.
- When the TV does not support the input audio format, audio is not output. Set the audio format to "PCM" on the playback device. Alternatively, set "ZONE2 Setup" "HDMI Audio" in the menu to "PCM". (FP p. 248)
- When the TV is not compatible with the resolution of the input video, no video is output. Set the output resolution on the playback device to a resolution that is compatible with the TV.

When using HDMI ZONE2, MAIN ZONE audio is played back as PCM.

• When the same input source is selected for MAIN ZONE and ZONE2, the audio format is limited according to the specifications of the TV in ZONE2.



Update error messages

If an update is interrupted or fails, an error message appears.

Display	Description
Connection failed. Please check your network, then try again.	The network connection is unstable. Connection to the server failed. Check your network environment and try the update again.
Update failed. Please check your network, then try again.	The download of the firmware failed. Check your network environment and try the update again.
Please check your network, unplug and reconnect the power cord, and try again.	The update failed. Press and hold the \odot on the main unit for more than 5 seconds, or remove and re-insert the power cord. The update restarts automatically.
Please contact customer service in your area.	This unit may be broken. Contact our Customer Service Center in your area.




Resetting factory settings

If the indicators are incorrect or the unit cannot be operated, restarting the unit may improve the problem. We recommend restarting the unit before returning the settings to the default settings. (27 p. 265)

If the operations are not improved by restarting the unit, follow the steps below.

Various settings are reset to the factory default values. Make settings again.

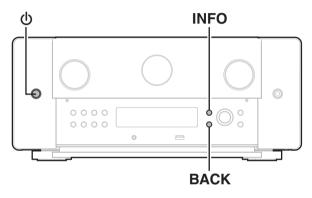

- 1 Turn off the power using **(b)**.
- 2 Press & while simultaneously pressing INFO and BACK.
- Remove your fingers from the two buttons when "Initialized" appears on the display.



- Before returning the settings to the default settings, use the "Save & Load" function from the menu to save and restore the details of various settings configured on the unit. (12) p. 258)
- You can also reset all settings to the factory defaults using "Reset" "All Settings" in the menu. (@p p. 259)




Resetting network settings

If network contents cannot be played or the unit cannot connect to the network, restarting the unit may improve the problem. We recommend restarting the unit before returning the settings to the default settings. (1257) p. 265)

If the operations are not improved by restarting the unit, follow the steps below.

Network settings are reset to the factory default values. Make settings again.

However, the menu "Speaker Layout" and "Video" settings are not reset.

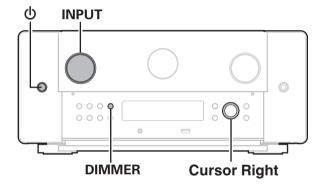

- 1 Press (b) to turn on power to the unit.
- **7** Turn INPUT selector to select "HEOS Music".
- Press and hold the main unit's DIMMER and cursor Right at the same time for at least 3 seconds.
- 4 Remove your fingers from the two buttons when "Network Reset..." appears on the display.
- 5 "Completed" is shown in the display when reset is complete.



 Before returning the settings to the default settings, use the "Save & Load" function from the menu to save and restore the details of various settings configured on the unit. (PF p. 258)

Index

You can also reset the network settings to the factory defaults using "Reset" "Network Settings" in the menu. (@p p. 259)

NOTE

• Do not turn the power off until reset is complete.




Factory Restore

When the unit or the network functions do not work properly, operation may be improved by performing the Factory Restore.

Do this when the unit still does not work properly even after trying the steps for "Resetting factory settings" or "Resetting network settings". (1267 p. 287, 288)

After performing the Factory Restore, various settings are reset to the default settings. Configure the network settings and update the firmware again.

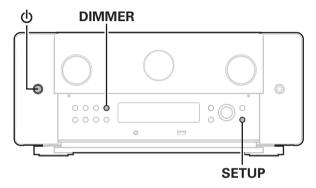

WARNING

By initiating Factory Restore mode, you will be installing limited recovery firmware on this unit. Functionality will remain limited until a firmware update is performed over the Internet. Do not perform a Factory Restore if you do not have this unit connected to your home network.

- 1 Press & while simultaneously pressing SETUP and DIMMER.
- When "Restoring" appears on the display, release the buttons.

When the Factory Restore is complete, "Completed" appears on the display for about 5 seconds, and the unit automatically restarts.



- This operation takes time because it requires reconnecting to the network, restoring and updating the firmware.
- If this operation does not improve the problem, contact our customer service center.

Index

NOTE

• Do not turn off the power until the Factory Restore is complete.



About HDMI

HDMI is an abbreviation of High-Definition Multimedia Interface, which is an AV digital interface that can be connected to a TV or amplifier. With the HDMI connection, high definition video and high quality audio formats adopted by Blu-ray Disc players (Dolby Digital Plus, Dolby TrueHD, DTS-HD) can be transmitted, which is not possible with the analog video transmission.

Furthermore, in the HDMI connection, audio and video signals can be transmitted through a single HDMI cable, while in conventional connections it is necessary to provide audio and video cables separately for connection between devices. This allows you to simplify the wiring configuration that tends to be quite complex in a home theater system. This unit supports the following HDMI functions.

• 4K / 8K

This unit supports input and output of 4K (3840 x 2160 pixels) and 8K (7680 x 4320 pixels) video signals of HDMI.

• Deep Color

An imaging technology supported by HDMI. Unlike RGB or YCbCr, which uses 8 bits (256 shades) per color, it can use 10 bits (1024 shades), 12 bits (4096 shades), or 16 bits (65536 shades) to produce colors in higher definition.

Both devices linked via HDMI must support Deep Color.

• VRR (Variable Refresh Rate):

VRR reduces or eliminates lag, stutter and frame tearing for more fluid and better detailed gameplay.

• QFT (Quick Frame Transport):

QFT reduces latency for smoother no-lag gaming, and real-time interactive virtual reality.



• ARC (Audio Return Channel)

This function transmits audio signals from the TV to this unit through the HDMI cable and plays back the audio from the TV on this unit based on the HDMI Control function.

If a TV without the ARC function is connected via HDMI connections, video signals of the playback device connected to this unit are transmitted to the TV, but this unit can not play back the audio from the TV. If you want to enjoy surround audio for TV program, a separate audio cable connection is required.

In contrast, if a TV with the ARC function is connected via HDMI connections, no audio cable connection is required. Audio signals from the TV can be input to this unit through the HDMI cable between this unit and the TV. This function allows you to enjoy surround playback on this unit for the TV.

• eARC (Enhanced Audio Return Channel)

The eARC function is an extension of the conventional ARC function. It utilizes dedicated eARC function control to play back television audio from this unit without passing through HDMI control. Furthermore, the eARC function can transmit multichannel linear PCM, Dolby TrueHD, Dolby Atmos, DTS-HD, DTS:X and other audio formats not compatible with conventional ARC. Connecting to an eARC function-compatible television also enables enjoyment of higher-quality surround playback of the audio content played from your television.

Auto Lip Sync

This function can automatically correct delay between the audio and video.

Use a TV that is compatible with the Auto Lip Sync function.

• ALLM (Auto Low Latency Mode)

This unit automatically switches to low latency mode depending on playback contents when using a combination of television and game console compatible with the ALLM function.

• HDMI Pass Through

Even when the power to this unit is set to standby, signals input from the HDMI input connector are output to a TV or other device that is connected to the HDMI output connector.



HDMI Control

If you connect the unit and an HDMI Control function compatible TV or player with an HDMI cable and then enable the HDMI Control function setting on each device, the devices will be able to control each other.

- Power off link
 This unit power off can be linked to the TV power off step.
- Audio output destination switching
 From the TV, you can switch whether to output audio from the TV or
 the AVP.
- Volume adjustment You can adjust this unit's volume in the TV volume adjustment operation.
- Input source switching
 You can switch this unit input sources through linkage to TV input
 switching.
 When playing the player, this unit input source switches to the
 source for that player.

Content Type

It automatically makes settings suitable for the video output type (content information).

• 3D

This unit supports input and output of 3D (3 dimensional) video signals of HDMI. To play back 3D video, you need a TV and player that provide support for the HDMI 3D function and a pair of 3D glasses.

NOTE

 Some functions may not operate depending on the connected TV or player. Check the owner's manual of each device for details beforehand.



■ Supported audio formats

2-channel Linear PCM	2-channel, 32 kHz – 192 kHz, 16/20/24 bit
Multi-channel Linear PCM	7.1-channel, 32 kHz – 192 kHz, 16/20/24 bit
Bitstream	Dolby Digital / DTS / Dolby Atmos / Dolby TrueHD / Dolby Digital Plus / DTS:X / DTS-HD / MPEG-H
DSD	2-channel – 5.1-channel, 2.8 MHz

Supported video signals

• 480i

• 480p

• 576i

• 576p

• 720p 60/50Hz

• 1080i 60/50Hz

• 1080p 120/100/60/50/30/25/24Hz • 4K 120/100/60/50/30/25/24Hz

8K 60/50/30/25/24Hz


Copyright protection system

In order to play back digital video and audio such as BD video or DVD video via HDMI connection, both this unit and the TV or player must to support the copyright protection system known as HDCP (Highbandwidth Digital Content Protection System). HDCP is copyright protection technology comprised of data encryption and authentication of the connected AV devices. This unit supports HDCP.

 If a device that does not support HDCP is connected, video and audio are not output correctly. Read the owner's manual of your television or player for more information.



Relationship between video signals and monitor output

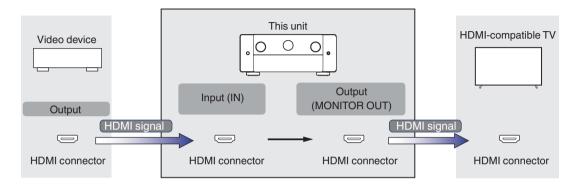

NOTE

• Only HDMI connections are available for the video input/output of this unit.



When "HDMI Upscaler" in the menu is set to "Auto", this unit upscales the input HDMI video signal and then outputs it to the TV. (127) p. 191)

	Output signal							HDMI					
Input signal		480i/576i	480p/576p	720p	1080i	1080p 30/25/24Hz	1080p 60/50Hz	1080p 120/100Hz	4K 30/25/24Hz	4K 60/50Hz	4K 120/100Hz	8K 30/25/24Hz	8K 60/50Hz
	480i/576i	✓											
	480p/576p		✓										
	720p			✓									
	1080i				✓								
	1080p 30/25/24Hz					✓			✓			✓	
НДМІ	1080p 60/50Hz						✓			✓			✓
UDIVII	1080p 120/100Hz							✓					
	4K 30/25/24Hz								✓			✓	
	4K 60/50Hz									✓			✓
	4K 120/100Hz										✓		
	8K 30/25/24Hz											✓	
	8K 60/50Hz												✓



Playing back a USB memory devices

- This unit is compatible with MP3 ID3-Tag (Ver. 2) standard.
- This unit can show the artwork that was embedded by using MP3 ID3-Tag Ver. 2.3 or 2.4.
- This unit is compatible with WMA META tags.
- If the image size (pixels) of an album artwork exceeds 500 × 500 (WMA/MP3/Apple Lossless/DSD) or 349 × 349 (MPEG-4 AAC), then music may not be played back properly.

Compatible formats

	Sampling frequency	Channel	Bit rate	Extension
WMA *1	32/44.1/48 kHz	2-channel	48 – 192 kbps	.wma
MP3	32/44.1/48 kHz	2-channel	32 – 320 kbps	.mp3
WAV	32/44.1/48/88.2/ 96/176.4/192 kHz	2-channel	-	.wav
MPEG-4 AAC*1	32/44.1/48 kHz	2-channel	48 - 320 kbps	.aac/.m4a
FLAC	44.1/48/88.2/ 96/176.4/192 kHz	2-channel	-	.flac
Apple Lossless*2	44.1/48/88.2/ 96/176.4/192 kHz	2-channel	-	.m4a
DSD	2.8/5.6 MHz	2-channel	_	.dsf/.dff

^{*1} Only files that are not protected by copyright can be played on this unit.

Content downloaded from pay sites on the Internet are copyright protected. Also, files encoded in WMA format when ripped from a CD, etc. on a computer may be copyright protected, depending on the computer's settings.

*2 The Apple Lossless Audio Codec (ALAC) decoder is distributed under the Apache License, Version 2.0 (http://www.apache.org/licenses/LICENSE-2.0).



Maximum number of playable files and folder

The limits on the number of folders and files that can be displayed by this unit are as follows.

Media Item	USB memory device
Number of folder directory levels *1	8 levels
Number of folders	500
Number of files*2	5000

- *1 The limited number includes the root folder.
- *2 The allowable number of files may differ according to the USB memory device capacity and the file size.

Playing back a Bluetooth device

This unit supports the following Bluetooth profile.

- A2DP (Advanced Audio Distribution Profile):
 When a Bluetooth device that supports this standard is connected, monaural and stereo sound data can be streamed at a high quality.
- AVRCP (Audio/Video Remote Control Profile):
 When a Bluetooth device that supports this standard is connected, the Bluetooth device can be operated from this unit.

■ About Bluetooth communications

Radio waves broadcast from this unit may interfere with the operation of medical devices. Make sure you turn off the power of this unit and Bluetooth device in the following locations as radio wave interference may cause malfunctions.

 Hospitals, trains, aircraft, petrol kiosks and places where flammable gases are generated

Index

· Near automatic doors and fire alarms



Playing back a file saved on a PC or NAS

- This unit is compatible with MP3 ID3-Tag (Ver. 2) standard.
- This unit can show the artwork that was embedded by using MP3 ID3-Tag Ver. 2.3 or 2.4.
- This unit is compatible with WMA META tags.
- If the image size (pixels) of an album artwork exceeds 500 × 500 (WMA/MP3/WAV/FLAC/Apple Lossless/DSD) or 349 × 349 (MPEG-4 AAC), then music may not be played back properly.
- A server or server software compatible with distribution in the corresponding formats is required to play music files via a network.
 For playing mentioned audio formats via a network a server software, for example Twonky Media Server or jRiver Media Server, needs to be installed on your computer or NAS for full support. There are other server software available too. Please check supported formats.

Specifications of supported files

	Sampling frequency	Channel	Bit rate	Extension
WMA *1	32/44.1/48 kHz	2-channel	48 – 192 kbps	.wma
MP3	32/44.1/48 kHz	2-channel	32 – 320 kbps	.mp3
WAV	32/44.1/48/88.2/ 96/176.4/192 kHz	2-channel	-	.wav
MPEG-4 AAC*1	32/44.1/48 kHz	2-channel	48 - 320 kbps	.aac/.m4a
FLAC	44.1/48/88.2/ 96/176.4/192 kHz	2-channel	-	.flac
Apple Lossless*2	44.1/48/88.2/ 96/176.4/192 kHz	2-channel	-	.m4a
DSD	2.8/5.6 MHz	2-channel	-	.dsf/.dff

^{*1} Only files that are not protected by copyright can be played on this unit.

Content downloaded from pay sites on the Internet are copyright protected. Also, files encoded in WMA format when ripped from a CD, etc. on a computer may be copyright protected, depending on the computer's settings.

*2 The Apple Lossless Audio Codec (ALAC) decoder is distributed under the Apache License, Version 2.0 (http://www.apache.org/licenses/LICENSE-2.0).



Playing back Internet Radio

■ Playable broadcast station specifications

	Sampling frequency	Bit rate	Extension
WMA	32/44.1/48 kHz	48 – 192 kbps	.wma
MP3	32/44.1/48 kHz	32 – 320 kbps	.mp3
MPEG-4 AAC	32/44.1/48 kHz	48 - 320 kbps	.aac/ .m4a

Personal memory plus function

The most recently used settings (input mode, HDMI output mode, sound mode, tone control, channel level, MultEQ® XT32, Dynamic EQ, Dynamic Volume, Dirac Live, M-DAX and audio delay, etc.) are saved for each input source.



• "Surround Parameter" settings are stored for each sound mode.

Last function memory

This function stores the settings which were made before going into the standby mode.



Sound modes and channel output

- O This indicates the audio output channels or surround parameters that can be set.
- ◎ This indicates the audio output channels. The output channels depend on the settings of "Speaker Layout". (☞ p. 212)

									Channel outp	out							
Sound mode	Front L/R	Center	Surround L/R	Surround Back L/R	Front Wide L/R	Front Height L/R	Top Front L/R	Top Middle L/R	Top Rear L/R	Rear Height L/R	Surround Height L/R	Center Height	Top Surround	Front Dolby Atmos Enabled L/R	Surround Dolby Atmos Enabled L/R	Back Dolby Atmos Enabled L/R	Subwoofer
Direct/Pure Direct (2-channel)	0																O*4
Direct/Pure Direct (Multi-channel)	0	0	0	© * 5	© * 5	© * 5	© * 5	◎*5	© * 5	© * 5	© * 5	© * 5	© * 5	© * 5	○*5	© * 5	0
DSD Direct (2-channel)	0																O*4
DSD Direct (Multi-channel)	0	0	0														0
Stereo	0																0
Dolby Atmos	0	0	0	0	0	0	0	0	0	0	0			0	0	0	0
Dolby TrueHD	0	0	0	© * 5													0
Dolby Digital Plus	0	0	0	© * 5													0
Dolby Digital	0	0	0														0
Dolby Surround *1	0	0	0	© * 6	© * 7	0	0	0	0	0	0			0	0	0	0
IMAX DTS:X	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
IMAX DTS	0	0	©*8	©*8													0
DTS:X	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
DTS-HD	0	0	0	© * 5	© * 5												0
DTS Surround	0	0	0	0													0
DTS Neural:X *2	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
DTS Virtual:X *3	0	0	0	0													0
Auro-3D	0	0	0	0		0	O*9	© * 9	© * 9	O*9	0	0	0	O*9	© * 9	© * 9	0
Auro-2D Surround	0	0	0	0													0
Multi Ch In	0	0	0	© * 5													0
MPEG-H	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Multi Ch Stereo	0	0	0	0	0	©*10	©*10	©*10	©*10	©*10	©*10	©*10	©*10	O*10	©*10	©*10	0
Virtual	0																0

*1 - *10: "Sound modes and channel output" (@pp. 301)



- *1 The applicable sound mode includes "Dolby Surround" and sound modes that have "+Dolby Surround" in the sound mode name.
- *2 The applicable sound mode includes "DTS Neural:X" and sound modes that have "+Neural:X" in the sound mode name.
- *3 The applicable sound mode includes "DTS Virtual:X" and sound modes that have "+Virtual:X" in the sound mode name.
- *4 Audio is output when "Low Frequency Effects" "Subwoofer Output" in the menu is set to "LFE + Main". (@Pp. 229)
- *5 A signal for each channel contained in an input signal is output as audio.
- *6 Audio is not output when the "Surround Parameter" "Speaker Virtualizer" in the menu is set to "On" and "Speaker Layout" "Surround Back" in the menu is set to "1 spkr". (F) p. 172, 213)
- *7 Audio is not output when the "Surround Parameter" "Speaker Virtualizer" is set to "On". (27 p. 172)
- *8 When "Speaker Layout" "Surround Back" is set to "2 spkrs", "Speaker Layout" "Center" is set to "Yes", and sound mode is set to "IMAX DTS", surround audio is output from the surround back speaker. Audio is not output from the surround speaker. (1287 p. 213)
- *9 For the best Auro-3D experience Front Height and Surround Height speakers are recommended, however you may substitute rear height, ceiling speaker or Dolby Atmos Enabled speakers.
- *10 Audio is output from the speakers specified in the "Surround Parameter" "Speaker Select" settings. (1257 p. 175)



Sound modes and surround parameters

							D							
			1				Surround Parar	neter						
Sound mode	Cinema EQ	Loudness Management *2	Dynamic Compression *3	Dialog Control *4	Low Frequency Effects *5	Speaker Select *6	Center Spread	Speaker Virtualizer *7	DTS Neural:X	IMAX	IMAX Audio Settings	High Pass Filter *8	Low Pass Filter *8	Subwoofer Output *8
Direct/Pure Direct (2-channel) *1		0	0											
Direct/Pure Direct (Multi-channel) *1		0	0	0	0									
DSD Direct (2-channel)														
DSD Direct (Multi-channel)														
Stereo		0	0	0	0									
Dolby Atmos	0	0	0		0			0						
Dolby TrueHD	0	0	0		0									
Dolby Digital Plus	0	0	0		0									
Dolby Digital	0		0		0									
Dolby Surround	0	0	0				0	0						
IMAX DTS:X	0		0	0	0				0	0	0	0	0	0
IMAX DTS	0		0		0					0	0	0	0	0
DTS:X	0		0	0	0				0	0				
DTS-HD	0		0		0					0				
DTS Surround	0		0		0					0				
DTS Neural:X	0	0	0											
DTS Virtual:X	0		0											
Auro-3D	0				0									
Auro-2D Surround	0				0									
Multi Ch In	0				0									
MPEG-H	0				0									
Multi Ch Stereo	0	0	0	0	0	0								
Virtual		0	0	0										

*1 - *8: "Sound modes and surround parameters" (@p. 304)



		Surround	Parameter				Subwoofer		Audy	ssey	-			
Sound mode	Auro-Matic 3D Preset	Auro-Matic 3D Strength	Auro-3D Mode	Subwoofer	Dialog Enhancer	Tone * 9	Level Adjust	MultEQ® XT32 *11*12	Dynamic EQ *13*14	Dynamic Volume *13*14	Audyssey LFC™ *13*14	Dirac Live	M-DAX *15	Bass Sync *5
Direct/Pure Direct (2-channel) *1				○*16			○*16					O*17		
Direct/Pure Direct (Multi-channel) *1							0					○*17		0
DSD Direct (2-channel)				○*16			○*16					O*17		
DSD Direct (Multi-channel)												O*17		0
Stereo				○*18		0	○*18	0	0	0	0	0	0	0
Dolby Atmos					0	0	0	0	0	0	0	0		0
Dolby TrueHD						0		0		0	0			0
Dolby Digital Plus					0	0	0	0		0	0	0		0
Dolby Digital					0	0	0	0		0	0			0
Dolby Surround					0	0	0	0		0	0	0	0	
IMAX DTS:X					0	0	0	0		0	0	0		0
IMAX DTS					0	0	0	0		0	0	0		0
DTS:X					0	0	0	0		0	0			0
DTS-HD					0	0	0	0		0	0	0		0
DTS Surround					0	0	0	0	0	0	0	0		0
DTS Neural:X					0	0	0	0	0	0	0	0	0	
DTS Virtual:X						0	0	0					0	
Auro-3D	○*19	○*19	○*20		0	0	0	0		0	0	0	0	0
Auro-2D Surround					0	0	0	0	0	0	0	0	0	0
Multi Ch In					0	0	0	0	0	0	0	0		0
MPEG-H					0	0	0	0	0	0	0	0		0
Multi Ch Stereo					0	0	0	0	0	0	0	0	0	0
Virtual						0	0	0	0	0	0	0	0	0

^{*1, *5, *9 - *20: &}quot;Sound modes and surround parameters" (@p. 304)



- *1 During playback in Pure Direct mode, the surround parameters are the same as in Direct mode.
- *2 This item can be selected when a Dolby Digital, Dolby Digital Plus, Dolby TrueHD or Dolby Atmos signal is played.
- *3 This item can be selected when a Dolby Digital, Dolby Digital Plus, Dolby TrueHD, Dolby Atmos, DTS:X, DTS-HD or DTS signal is played.
- *4 This item can be selected when a DTS:X signal that is compatible with the Dialog Control function is input.
- *5 This can be set when the LFE signal is included in the input signal.
- *6 This item can be selected when Height, Ceiling or Dolby Atmos Enabled speakers are used.
- *7 This item can be set when any Height, Ceiling or Dolby Atmos Enabled speakers are not used, or Surround speakers are not used.
- *8 This item can be selected when "Surround Parameter" "IMAX Audio Settings" in the menu is set to "Manual". (🕼 p. 173)
- *9 This item cannot be set when "Dynamic EQ" is set to "On". (PP p. 180)
- *10 This item cannot be set when "Speaker Layout" "Subwoofers" in the menu is set to "No". (FF p. 220)
- *11 This item cannot be set when Audyssey® Setup (Speaker Calibration) has not been performed.
- *12 This item cannot be selected when a DTS:X format with a sampling frequency of over 48 kHz is input.
- *13 This item cannot be set when sound mode is "DTS Virtual:X" or sound mode that have "+Virtual:X" in the sound mode name.
- *14 This item cannot be set when "MultEQ® XT32" in the menu is set to "Off". (@p. 179)
- *15 This item can be set when the input signal is analog, PCM 48 kHz or 44.1 kHz.
- *16 This setting is available when "Low Frequency Effects" "Subwoofer Output" in the menu is set to "LFE + Main". (127) p. 229)
- *17 Only the "Distances" and "Levels" settings are applied. The acoustic filter is not applied.
- *18 This item can be set when "Crossovers" "Front" is set to other than "Full Range" or "Low Frequency Effects" "Subwoofer Output" is set to "LFE + Main". (127) p. 227, 229)
- *19 This cannot be set if the input signal contains Auro-3D signals containing a Height channel.
- *20 This can be set if the input signal contains an Auro-3D signal.



Types of input signals, and corresponding sound modes

- This indicates the default sound mode.
- O This indicates the selectable sound mode.

				2-	channel sig	nal								Mul	ti-channel s	signal					
Sound mode	NOTE	Dolby TrueHD	Dolby Digital Plus	Dolby Digital	DTS-HD	DTS	Analog / PCM	DSD (Super Audio CD)	Dolby Atmos	Dolby TrueHD	Dolby Digital Plus	Dolby Digital (EX)	IMAX DTS:X	IMAX DTS	DTS:X	DTS-HD	DTS	Auro-3D	PCM multi- channel	MPEG-H	DSD (Super Audio CD)
Direct																					
Direct		0	0	0	0	0	0		0	0	0	0	0	0	0	0	0	0	0	0	
DSD Direct								0													0
Pure Direct																					
Pure Direct		0	0	0	0	0	0		0	0	0	0	0	0	0	0	0	0	0	0	
DSD Pure Direct								0													0
Stereo																					
Stereo		0	0	0	0	0		•	0	0	0	0	0	0	0	0	0	0	0	0	0
Dolby Surround																					
Dolby Atmos	*1								•												
Dolby TrueHD		0							O*2	0								O*3			
Dolby Digital Plus			0						○*4		0										
Dolby Digital				0								0									
Dolby (D+) (HD) + Dolby Surround										•	•	•						O*3			
Dolby (D+) (HD) + Neural:X										0	0	0						O*3			
Dolby Surround		•	•	•	0	0	0	0													

^{*1 - *4: &}quot;Types of input signals, and corresponding sound modes" (p. 307)



				2-	channel sign	nal								Mul	ti-channel :	signal					
Sound mode	NOTE	Dolby TrueHD	Dolby Digital Plus	Dolby Digital	DTS-HD	DTS	Analog / PCM	DSD (Super Audio CD)	Dolby Atmos	Dolby TrueHD	Dolby Digital Plus	Dolby Digital (EX)	IMAX DTS:X	IMAX DTS	DTS:X	DTS-HD	DTS	Auro-3D	PCM multi- channel	MPEG-H	DSD (Super Audio CD)
DTS Surround																					
IMAX DTS:X													● *5								
IMAX DTS														○*5							
DTS:X													○*6								
DTS-HD					0									O*6		0		O*7			
DTS Surround						0								○*6			0				
IMAX DTS + Neural:X														●*5							
IMAX DTS / IMAX DTS:X + Virtual:X													○*5	○*5							
DTS (-HD) + Dolby Surround														0		0	0	O*7			
DTS (-HD) + Neural:X														○*6		●*8	●*8	O*7			
DTS (-HD) / DTS:X + Virtual:X													O*6	○*6	○*9	0	0	O*7			
DTS Neural:X		0	0	0	●*9	● *9	0	0													
DTS Virtual:X					0	0	0	0													
Auro-3D																					
Auro-3D	*10	0	0	0	0	0	0	0		0	0	0		0		0	0	0	0		0
Auro-2D Surround	*10	0	0	0	0	0	0	0		0	0	0		0		0	0	0	0		0
Multi Ch In																					
Multi Ch In / Multi Ch In 6.1																		O*11	●*12		•
Multi In + Dolby Surround																			0		0
Multi In + Neural:X																			0		0
Multi In + Virtual:X																			0		0
MPEG-H																					
MPEG-H																					
Original sound mode																					
Multi Ch Stereo		0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
Virtual		0	0	0	0	0	0	0	○*13	0	0	0	0	0	0	0	0	0	0		0

*5 - *13 : "Types of input signals, and corresponding sound modes" (TeV p. 307)



*1 This item can be selected when using any of the Surround Back, Front Height, Top Front, Top Middle, Top Rear, Rear Height, Front Dolby, Surround Dolby or Back Dolby speaker. It can also be selected when the "Surround Parameter" - "Speaker Virtualizer" setting is turned "On".

- *2 This can be selected when the Dolby Atmos signal contains the Dolby TrueHD signal.
- *3 This item can be selected if the Auro-3D signal contains Dolby TrueHD.
- *4 This can be selected when the Dolby Atmos signal contains the Dolby Digital Plus signal.
- *5 Selectable when "Surround Parameter" "IMAX" is set to "Auto" in the menu. (@p p. 173)
- *6 Selectable when "Surround Parameter" "IMAX" is set to "Off". (Selectable sound modes vary depending on the type of input signal). (12) p. 173)
- *7 This item can be selected if the Auro-3D signal contains DTS-HD.
- *8 This item cannot be selected when a DTS(-HD) format with a sampling frequency of over 48 kHz is input.
- *9 This item cannot be selected when a DTS:X format with a sampling frequency of over 48 kHz is input.
- *10 This item cannot be selected if the sampling frequency of the input signal is 32 kHz.
- *11 This item can be selected if the Auro-3D signal contains Multi Channel PCM.
- *12 Multi ch In 7.1 can be selected only when the input signals include surround back signals and surround back speakers are being used.
- *13 This can be selected when the Dolby Atmos signal contains the Dolby TrueHD or Dolby Digital Plus signal.



Explanation of terms

Audyssey

Audyssey Dynamic EQ®

Audyssey Dynamic EQ® solves the problem of deteriorating sound quality as volume is decreased by taking into account human perception and room acoustics.

Audyssey Dynamic EQ® works in tandem with Audyssey MultEQ® XT32 to provide well-balanced sound for every listener at any volume level.

Audyssey Dynamic Volume®

Dynamic Volume solves the problem of large variations in volume level between television programs, commercials, and between the soft and loud passages of movies. Audyssey Dynamic $\mathsf{EQ}^{@}$ is integrated into Dynamic Volume so that as the playback volume is adjusted automatically, the perceived bass response, tonal balance, surround impression, and dialog clarity remain the same.

Audyssey LFC™ (Low Frequency Containment)

Audyssey LFC[™] solves the problem of low frequency sounds disturbing people in neighboring rooms or apartments. Audyssey LFC[™] dynamically monitors the audio content and removes the low frequencies that pass through walls, floors and ceilings. It then applies psychoacoustic processing to restore the perception of low bass for listeners in the room. The result is great sound that no longer disturbs the neighbors.

Audyssey MultEQ® XT32

Audyssey MultEQ® XT32 is a room equalization solution that calibrates any audio system so that it can achieve optimum performance for every listener in a large listening area. Based on several room measurements, MultEQ® XT32 calculates an equalization solution that corrects for both time and frequency response problems in the listening area and also performs a fully automated surround system setup.



■ Dirac Live

Dirac Live® room correction

Dirac Live® is an advanced room correction technology developed by Dirac Research. As the most advanced room correction technology available on the market, Dirac Live helps listeners to correct for one of the weakest components in the audio chain: the listening room. Dirac Live not only corrects the frequency response, but also the impulse response of the loudspeakers in a room, yielding improved imaging and timbre, better clarity, tighter bass, and less early reflections, as well as reduced resonances and room modes. The market leader in room correction, this sophisticated algorithm is used in high-end AVRs, in luxury car sound systems from companies such as Rolls Royce, BMW, and Bentley, as well as in thousands of high-end digital cinema theaters across the world.

■ Auro-3D

Auro-3D®

The Auro-3D® technology suite is a groundbreaking new audio technology that combines height-based listening formats with powerful creative tools to deliver an unrivaled three-dimensional sound experience. Auro-3D® is the general format name for Sound in 3D and its related speaker lay-outs.

Auro-Matic®

Auro-Matic® up-mixing technology software is a unique creative tool that transforms legacy Mono, Stereo and Surround content into a natural 3D or 2D listening experience.



■ Dolby

Dolby Atmos

Introduced first in the cinema, Dolby Atmos brings a revolutionary sense of dimension and immersion to the Home Theater experience. Dolby Atmos is an adaptable and scalable object based format that reproduces audio as independent sounds (or objects) that can be accurately positioned and move dynamically throughout the 3 dimensional listening space during playback. A key ingredient of Dolby Atmos is the introduction of a height plane of sound above the listener.

Dolby Atmos Stream

Dolby Atmos content will be delivered to your Dolby Atmos Enabled AVP via Dolby Digital Plus or Dolby TrueHD on Blu-ray Disc, downloadable files and streaming media. A Dolby Atmos stream contains special metadata that describes the positioning of sounds within the room. This object audio data is decoded by a Dolby Atmos AVP and scaled for optimum playback through Home Theater speaker systems of every size and configuration.

Dolby Digital

Dolby Digital is a multi-channel digital signal format developed by Dolby Laboratories.

A total of 5.1-channels are played: 3 front channels ("FL", "FR" and "C"), 2 surround channels ("SL" and "SR") and the "LFE" channel for low frequency effects.

Because of this, there is no crosstalk between channels and a realistic sound field with a "three-dimensional" feeling (sense of distance, movement and positioning) is achieved. This delivers a thrilling surround sound experience in the home.

Dolby Digital Plus

Dolby Digital Plus is an improved Dolby Digital signal format that is compatible with up to 7.1-channels of discrete digital sound and also improves sound quality thanks to extra data bit rate performance. It is upwardly compatible with conventional Dolby Digital, so it offers greater flexibility in response to the source signal and the conditions of the playback device.

Dolby Surround

Dolby Surround is a next generation surround technology that intelligently up mixes stereo; 5.1 and 7.1 content for playback through your surround speaker system. Dolby Surround is compatible with traditional speaker layouts, as well as Dolby Atmos enabled playback systems that employ inceiling speakers or products with Dolby speaker technology.



Dolby Speaker Technology (Dolby Atmos Enabled speakers)

A convenient alternative to speakers built into the ceiling, Dolby Atmos Enabled speakers employ the ceiling above you as a reflective surface for reproducing audio in the height plane above the listener. These speakers feature a unique upward firing driver and special signal processing. These features can be built into a conventional speaker or standalone speaker module. The features minimally impact the overall speaker footprint while providing an immersive listening experience during Dolby Atmos and Dolby Surround playback.

Dolby TrueHD

Dolby TrueHD is a high definition audio technology developed by Dolby Laboratories, using lossless coding technology to faithfully reproduce the sound of the studio master.

This format provides the facility to support up to 8 audio channels with a sampling frequency of 96 kHz/24 bit resolution and up to 6 audio channels with a sampling frequency of 192 kHz/24 bit resolution.

Speaker Virtualizer

Dolby Atmos height virtualization is a digital signal processing solution that leverages Dolby's deep understanding of human audio perception to create the sensation of overhead sound from the listener-level speakers. This signal processing applies height-cue filters to overhead audio components contained within the audio signal before they are mixed into the listener-level speakers.

These filters simulate the natural spectral cues imparted by our ears to sounds that originate from overhead.

For stereo and 3.1-channel speaker configuration, Dolby Atmos height virtualization is combined with surround virtualization to create an enveloping 360-degree audio minus the speakers that would ordinarily be employed behind or to the side of the listener.



DTS

Dialog Control

Gives you control of the listening experience. You can lift the dialog out from the background sounds when clarity and intelligibility are desired. This requires that content has been authored to support Dialog Control.

DTS

This is an abbreviation of Digital Theater System, which is a digital audio system developed by DTS. DTS delivers a powerful and dynamic surround sound experience, and is found in the world's finest movie theaters and screening rooms.

DTS 96/24

DTS 96/24 is a digital audio format enabling high sound quality playback in 5.1-channels with a sampling frequency of 96 kHz and 24 bit quantization on DVD-Video.

DTS Digital Surround

DTS™ Digital Surround is the standard digital surround format of DTS, Inc., compatible with a sampling frequency of 44.1 or 48 kHz and up to 5.1-channels of digital discrete surround sound.

DTS-ES™ Discrete 6.1

DTS-ES™ Discrete 6.1 is a 6.1-channel discrete digital audio format adding a surround back (SB) channel to the DTS digital surround sound. Decoding of conventional 5.1-channel audio signals is also possible according to the decoder.

DTS-ES™ Matrix 6.1

DTS-ES™ Matrix 6.1 is a 6.1-channel audio format that inserts a surround back (SB) channel to the DTS digital surround sound through matrix encoding. Decoding of conventional 5.1-channel audio signals is also possible according to the decoder.

DTS Express

DTS Express is an audio format supporting low bit rates (max. 5.1-channels, 24 to 256 kbps).

DTS-HD

This audio technology provides higher sound quality and enhanced functionality than the conventional DTS and is adopted as an optional audio for Blu-ray Disc.

This technology supports multi-channel, high data transfer speed, high sampling frequency, and lossless audio playback. Maximum 7.1-channels are supported in Blu-ray Disc.



DTS-HD High Resolution Audio

DTS-HD High Resolution Audio is an improved version of the conventional DTS, DTS-ES and DTS 96/24 signals formats, compatible with sampling frequencies of 96 or 48 kHz and up to 7.1-channels of discrete digital sound. High data bit rate performance provides high quality sound. This format is fully compatible with conventional products, including conventional DTS digital surround 5.1-channel data.

DTS-HD Master Audio

DTS-HD Master Audio is a lossless audio format created by Digital Theater System (DTS). This format provides the facility to support up to 8 audio channels with a sampling frequency of 96 kHz/24 bit resolution and up to 6 audio channels with a sampling frequency of 192 kHz/24 bit resolution. It is fully compatible with conventional products, including conventional DTS digital surround 5.1-channel data.

DTS:X

DTS:X produces a hemisphere of audio, where flyovers as well as ambient backgrounds become truly enveloping. DTS:X objects enable audio to move smoothly from one speaker to any other creating life-like realism.

DTS Neural:X

Enables an immersive audio experience for older content. DTS Neural:X can upmix your stereo, 5.1 or 7.1 content to take full advantage of all speakers in your surround sound system.

DTS Virtual:X

DTS Virtual:X allows you to enjoy multi-dimensional sound regardless of room size, layout, or speaker configuration.

IMAX®

IMAX® is well admired around the world for a premium large format movie experience. IMAX delivers the most advanced movie projection technology combined with rich, deep sound.



Audio

Apple Lossless Audio Codec

This is a codec for lossless audio compression method developed by Apple Inc. This codec can be played back on iTunes, iPod or iPhone. Data compressed to approximately $60-70\ \%$ can be decompressed to exactly the same original data.

Bass Sync

Audio sources such as BD and DVD inherently have time delay between the bass components of the satellite channel and the LFE channel. This function adjusts such a delay for reproducing (replaying) richer bass sound during playback. This function is by default set to 0 msec. Since the delay varies according to the title, play back the audio source and adjust to the most effective value for playback. For some audio sources that are played back, this function may have little effect.

FLAC (Free Lossless Audio Codec)

FLAC stands for Free lossless Audio Codec, and is a lossless free audio file format. Lossless means that the audio is compressed without any loss in quality.

The FLAC license is as shown below.

Copyright (C) 2000, 2001, 2002, 2003, 2004, 2005, 2006, 2007, 2008, 2009 Josh Coalson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.



THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

LFE

This is an abbreviation of Low Frequency Effect, which is an output channel that emphasizes low frequency effect sound. Surround audio is intensified by outputting 20 Hz to 120 Hz deep bass to the system subwoofer(s).

MP3 (MPEG Audio Layer-3)

This is an internationally standardized audio data compression scheme, using the "MPEG-1" video compression standard. It compresses the data volume to about one eleventh its original size while maintaining sound quality equivalent to a music CD.

MPEG (Moving Picture Experts Group), MPEG-2, MPEG-4

These are the names for digital compression format standards used for the encoding of video and audio. Video standards include "MPEG-1 Video", "MPEG-2 Video", "MPEG-4 Visual", "MPEG-4 AVC". Audio standards include "MPEG-1 Audio", "MPEG-2 Audio", "MPEG-4 AAC".

MPEG-H

MPEG-H 3D Audio is a new audio technology to truly immerse and envelop listeners in sound from all directions, which opens an entire next level of sound going beyond stereo and surround. With sound coming from above, a third dimension is added to the audio experience making it much more realistic and natural.

Thanks to its unique personalization features, MPEG-H 3D Audio also offers users a great flexibility to actively engage with the content and adapt it to their own preferences.

MPEG-H 3D Audio enables true object based sound and is also the basis of Sony's 360 Reality Audio for immersive music streaming services. 360 Reality Audio makes it possible for artists and creators to produce music by mapping sound sources such as vocals, chorus and instruments with positional information and placing them within a spherical space.



WMA (Windows Media Audio)

This is audio compression technology developed by Microsoft Corporation.

WMA data can be encoded using Windows Media® Player.

To encode WMA files, only use applications authorized by Microsoft Corporation. If you use an unauthorized application, the file may not work properly.

Sampling frequency

Sampling involves taking a reading of a sound wave (analog signal) at regular intervals and expressing the height of the wave at each reading in digitized format (producing a digital signal).

The number of readings taken in one second is called the "sampling frequency". The larger the value, the closer the reproduced sound is to the original.

Speaker impedance

This is an AC resistance value, indicated in Ω (ohms). Greater power can be obtained when this value is smaller.

Dialogue normalization function

This function operates automatically during playback of Dolby Digital, Dolby Digital Plus, Dolby TrueHD, Dolby Atmos, DTS or DTS-HD sources. It automatically corrects the standard signal level for individual program sources.

Dynamic range

The difference between the maximum undistorted sound level and the minimum discernible level above the noise emitted by the device.

Downmix

This function converts the number of channels of surround audio to a lower number of channels and plays back according to the system's configuration.



■ Video

Progressive (sequential scanning)

This is a scanning system of the video signal that displays 1 frame of video as one image. Compared to the interlace system, this system provides images with less flickering and jagged edges.

■ Network

AirPlay

AirPlay sends (plays) contents recorded in iTunes or on an iPhone/iPod touch/iPad to a compatible device via the network.

WEP Key (network key)

This is key information used for encrypting data when conducting data transfer. On this unit, the same WEP key is used for data encryption and decryption, so the same WEP key must be set on both devices in order for communications to be established between them.

Wi-Fi®

Wi-Fi Certification assures tested and proven interoperability by the Wi-Fi Alliance, a group certifying interoperability among wireless LAN devices.

WPA (Wi-Fi Protected Access)

This is a security standard established by the Wi-Fi Alliance. In addition to the conventional SSID (network name) and WEP key (network key), it also uses a user identification function and encrypting protocol for stronger security.



WPA2 (Wi-Fi Protected Access 2)

This is a new version of the WPA established by the Wi-Fi Alliance, compatible with more secure AES encryption.

WPA/WPA2-Personal

This is a simple authentication system for mutual authentication when a preset character string matches on the wireless LAN access point and client.

Network Names (SSID: Service Set Identifier)

When forming wireless LAN networks, groups are formed to prevent interference, data theft, etc. These groups are based on "SSID (network names)".

Others

HDCP

When transmitting digital signals between devices, this copyright protection technology encrypts the signals to prevent content from being copied without authorization.

MAIN ZONE

The room where this unit is placed is called the MAIN ZONE.

Pairing

Pairing (registration) is an operation that is required in order to connect a Bluetooth device to this unit using Bluetooth. When paired, the devices authenticate each other and can connect without mistaken connections occurring.

When using Bluetooth connection for the first time, you need to pair this unit and the Bluetooth device to be connected.



Trademark information



Apple, AirPlay, iPad, iPad Air, iPad Pro and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

The trademark "iPhone" is used in Japan with a license from Aiphone K.K.

Use of the Works with Apple badge means that an accessory has been designed to work specifically with the technology identified in the badge and has been certified by the developer to meet Apple performance standards.



trademarks of Audyssev Laboratories.



LFC

Manufactured under license from Audyssey Laboratories™. U.S. and foreign patents pending. Audyssey MultEQ® XT32, Audyssey Dynamic EQ®. Audyssey Dvnamic Volume® and Audyssey LFC™ are registered



Manufactured under license from NEWAURO, BV.

AURO-3D® and the related symbols are registered trademarks of NEWAURO, BV. All materials contained in this work are protected by copyright law and may not be reproduced, distributed, transmitted, displayed, published or broadcast without the prior written permission of NEWAURO, BV or in case of third-party materials, the owner of that content. You may not alter or remove any trademark, copyright or other notice from copies of the content.

Index

NEWAURO, BV: mail info@auro-3d.com, phone +32 2 793 25 50, www.auro-3d.com





The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by D&M Holdings Inc. is under license. Other trademarks and trade names are those of their respective owners.



COMPATIBLE WITH

■■Dolby Vision

Manufactured under license from Dolby Laboratories.
Dolby, Dolby Atmos, Dolby Audio, Dolby Vision, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.
Confidential unpublished works. Copyright © 1992-2022 Dolby Laboratories. All rights reserved.



Contents **Connections Playback Settings Tips Appendix**



For DTS patents, see http://patents.dts.com. Manufactured under license from DTS, Inc. DTS, DTS:X Pro. DTS:X, Virtual:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. in the United States and other countries. © 2021 DTS, Inc. ALL RIGHTS RESERVED.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

HDR10+™ logo is a trademark of HDR10+ Technologies, LLC.

ENHANCED



Manufactured under license from IMAX Corporation. IMAX® is a registered trademark of IMAX Corporation in the United States and/or other countries. All Rights Reserved. For DTS patents, see http:// patents.dts.com. Manufactured under license from DTS. Inc. DTS. the Symbol, DTS and the Symbol together are registered trademarks or trademarks of DTS. Inc. in the United States and/or other countries © DTS. Inc. All Rights Reserved.



The Wi-Fi CERTIFIED logo is a registered trademark of the Wi-Fi Alliance.

Wi-Fi Certification provides assurance that the device has passed the interoperability test conducted by the Wi-Fi Alliance, a group that certifies interoperability among wireless LAN devices.





The MPEG-H TV Audio system logo is a trademark of Fraunhofer IIS and is registered in Germany and other countries.



App Store $^{\text{@}}$ is registered trademark of Apple, Inc. in the U.S. and other countries.



Google Play and the Google Play logo are trademarks of Google LLC.



© 2018 Dirac Research AB. All rights reserved. Dirac, Dirac Live and the Dirac logos are trademarks of Dirac Research AB.



Specifications

Audio section

Analog

Input sensitivity: Unbalanced RCA input : 200 mV

Balanced XLR input: 400 mV

Frequency response: 10 Hz – 100 kHz — +1, –3 dB (Direct mode)

S/N: 105 dB (IHF–A weighted, Direct mode)

Distortion: 0.005 % (20 Hz - 20 kHz) (Direct mode)

Rated output: Unbalanced RCA pre-output: 1.2 V

Balanced XLR pre-output: 2.4 V

Digital

D/A output: Rated output — 2 V (at 0 dB playback)

Total harmonic distortion — 0.002 % (1 kHz, at 0 dB)

S/N ratio — 110 dB

Dynamic range — 110 dB

Digital input: Format — Digital audio interface

· Phono equalizer

Input sensitivity: 2.5 mV

RIAA deviation: ±1 dB (20 Hz to 20 kHz)

S/N: 74 dB (IHF–A weighted, with 5 mV input)

Distortion factor: 0.03 % (1 kHz, 3 V)



Wireless LAN section

Network type (wireless LAN standard): Conforming to IEEE 802.11a/b/g/n/ac

(Wi-Fi® compliant) *1

Security: WEP 64 bit, WEP 128 bit

WPA/WPA2-PSK (AES) WPA/WPA2-PSK (TKIP)

WPA3-SAE (AES)

Used frequency range: 2.4 GHz, 5 GHz

*1 The Wi-Fi® CERTIFIED Logo and the Wi-Fi CERTIFIED On-Product Logo are registered trademarks of the Wi-Fi Alliance.



Bluetooth section

Communications system: Bluetooth Specification Version 5.4

Transmission power: Bluetooth Specification Power Class 1

Maximum communication range: Approx. 30 m in line of sight *2

Used frequency range: 2.4 GHz

Modulation scheme: FHSS (Frequency-Hopping Spread Spectrum)

Supported profiles: Receiver function

A2DP (Advanced Audio Distribution Profile) 1.4 AVRCP (Audio Video Remote Control Profile) 1.5

Transmitter function

A2DP (Advanced Audio Distribution Profile) 1.4

Corresponding codec: SBC

Transmission range (A2DP): 20 Hz – 20,000 Hz

*2 The actual communication range varies depending on the influence of such factors as obstructions between devices, electromagnetic waves from microwave ovens, static electricity, cordless phones, reception sensitivity, antenna performance, operating system, application software etc.



General

Operating temperature: 5 °C - 35 °C

Power supply: AC 230 V, 50/60 Hz

Power consumption: 100 W

Power consumption in standby modes:


		Setting items i	in the menu		
Standby modes	Network Control (译 p. 241)	Wi-Fi and Bluetooth (1287 p. 244)	Allow Update (図 p. 255)	HDMI Pass Through (译 p. 185) / HDMI Control (译 p. 187)	Power consumption
Normal standby	Off In Standby	_	Off	Off	0.2 W
Network control (Bluetooth)	Always On	Wi-Fi:Disabled / Bluetooth:Enabled	-	Off	2.0 W
Network control (Ethernet)	Always On	Wi-Fi:Disabled / Bluetooth:Disabled	_	Off	2.0 W
Network control (Wi-Fi)	Always On	Wi-Fi:Enabled / Bluetooth:Disabled	_	Off	2.0 W
Network control (Wi-Fi, Bluetooth, CEC)	Always On	Wi-Fi:Enabled / Bluetooth:Enabled	_	On	2.5 W
CEC standby	Off In Standby	-	Off	On	0.5 W
RS-232C standby *	Off In Standby	_	Off	Off	0.5 W

^{*} When this unit is in standby mode by sending a standby command from the external controller via the RS-232C connector of this unit.

For purposes of improvement, specifications and design are subject to change without notice.



■ **Dimensions** (Unit : mm)

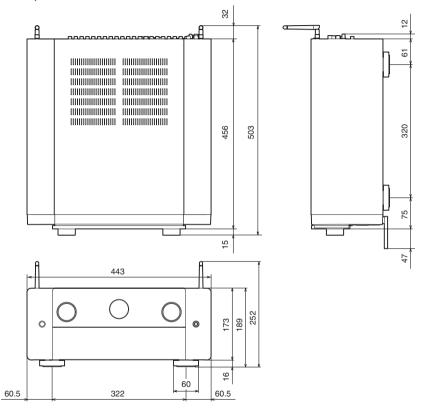

■ Weight: 16.8 kg



Index

™ Numerics
11.1-channel 55
13.1-channel 58
15.1-channel 6
17.1-channel 65
3D
4K/8K 290
5.1-channel 50
7.1-channel 5
9.1-channel 53

RE A	
AirPlay	11
All Zone Stereo	12
AMP CONTROL	7
Audio formats 293, 29	96, 298, 29
Audio settings	163, 16
Audyssey Dynamic EQ®	30
Audyssey Dynamic Volume®	30
Audyssey LFC™	30
Audyssey MultEQ® XT32	30
Audyssey settings	
Audyssey Sub EQ HT™	20
Audyssey® Setup	20
Auto sound mode	13
Auto Standby	25

ØF B		
3i-amp		6
Bluetooth device		9
Blu-ray Disc player	73,	8

ØF C	
Cable TV 7	1
Ø₹ D	
Dirac Live 23	
Direct sound mode 13	6
Display 2	5
Dolby Atmos 31	0
Dolby sound mode 132, 31	
DTS sound mode 133, 31	2
DVD player 73, 8	7
© E	
External control device	9
Ø₽ F	
Factory Restore	9



© G	
Game console	74
General settings	166, 246
₽ H	
HDCP	293
HDMI Control	142, 187
HEOS Account	106, 245
HEOS Favorites	119
EF	
Input Assign	196
Input settings	164, 196
Input source	
Internet Radio	99
Œ L	
Listening position	201

₽ M	
M-DAX	177
Menu map	163
Muting	87
Ø N	
NAS	101
Network settings	237
3 0	
Original sound mode	135
Ø P	
Pairing 93	3, 94
PC	101
PCM multi-channel sound mode	135
Power amp connection	43
Pure direct	130

Ø₹ Q	
Queue	89, 102, 109
© R	
Rear panel	28
Remote control unit	32
Resetting factory settings	287
Resetting network settings	288
Ø₹ S	
Satellite tuner	7 ⁻
Set-top box	7 ⁻
Setup Assistant	
Sleep timer	143
Smart select	145
Sound mode	129
Speaker settings	164, 20
Spotify	117



© T
TIDAL Connect
Tips
Troubleshooting
TV 67, 68
Ø U
USB memory device
₽ V

 Video Select
 125

 Video settings
 163, 185

 Volume
 87, 121

™ W	
Web control	15
Wi-Fi settings	23
Wired LAN	77, 23
Wireless LAN	78, 23
væ7	



marantz

3520 10842 00ASE ©2022 Sound United. All Rights Reserved.