

Search

nordichifi.com/

English

[Home](#) / [Turntables](#) / [Argon Audio TT-3 PLUS](#) / [Manual: Argon Audio TT-3 PLUS](#)



Manual: Argon Audio TT-3 PLUS

Last updated on May 27, 2025 at 9:41 PM

Here's a short unboxing & setup video

Argon Audio TT-3 Turntable | Unboxing & Setup (DA, DE, EN, FI, FR, IT, PL)




1. Included Items

NOTE: Before setting up the TT-3 Plus Turntable, please check thoroughly and make sure you find the following items that are included in the box:

- Turntable
- Turntable Lid
- Adaptor with EU plug end
- Counterweight
- Platter with Drive Belt
- 45 RPM Adapter
- Turntable Mat
- Quick Guide
- Drive Belt Hook
- Head shell Ortofon 2M Red pickup pre-mounted
- RCA-to-RCA cable

We recommend that you keep the original box and packing material for future transportation.

2. Components, Features and Connections

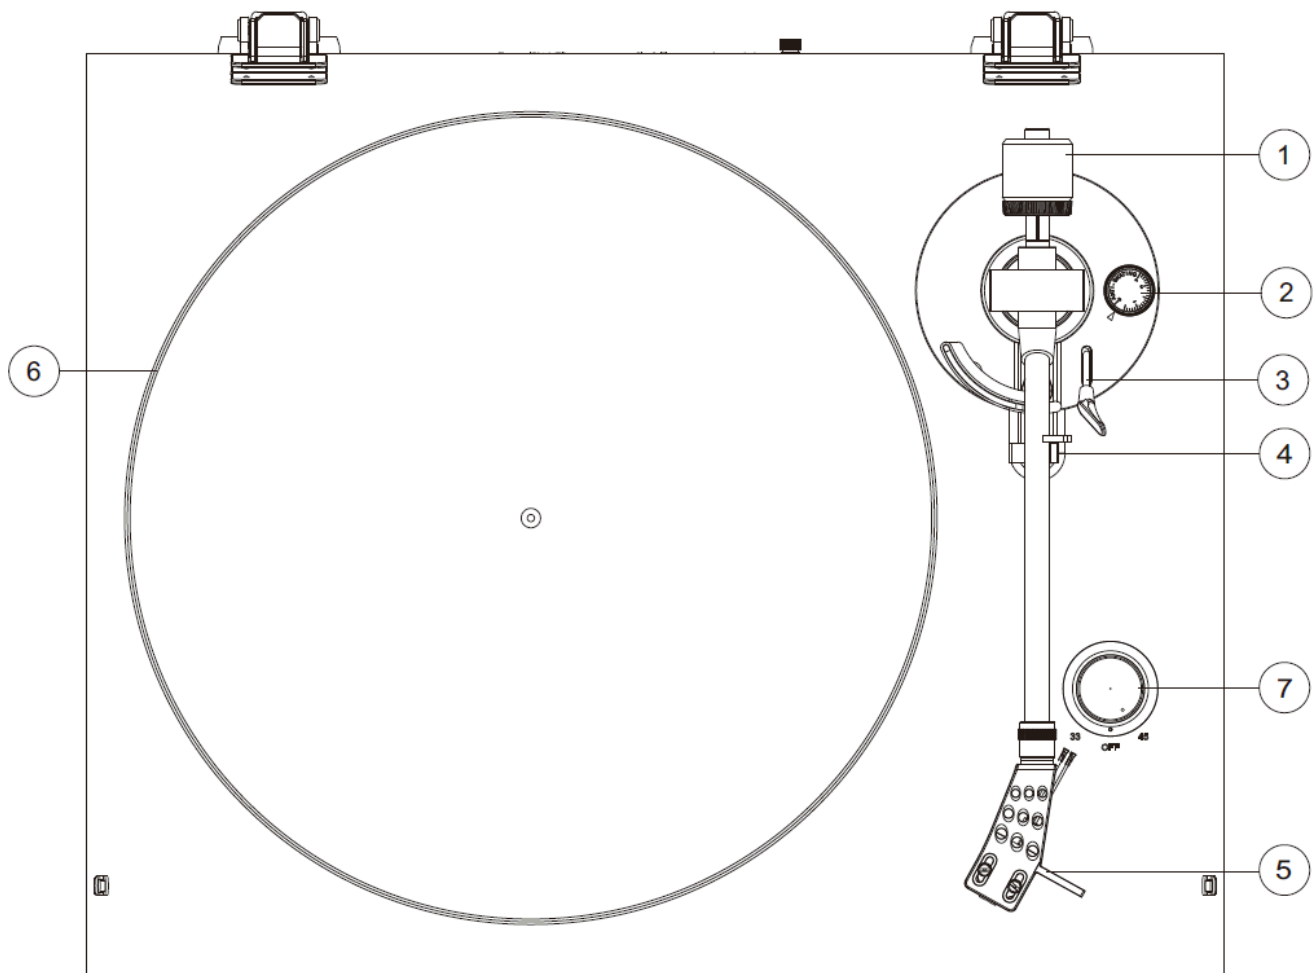

1. Counterweight

The counterweight is used to precisely adjust the stylus pressure on the vinyl record, ensuring the tonearm is properly balanced

2. Anti-Skating Control

Use this to set the anti-skating function of the tonearm.

3. Tonearm Lever

Use this lever to lower or raise the tonearm.

4. Tonearm Lock (arm rest)

Use this to lock the tonearm in place when not in use.

5. Headshell


This holds the stylus ("needle") in place and provides protection by means of its removable stylus protection cap (not shown)

6. Platter

Put the slip mat onto this platter before placing vinyl record.

7. 33/45 RPM Switch (33/off/45)

Select 33 or 45 rpm for playing a vinyl record, switch to "OFF" to stop the platter from spinning.

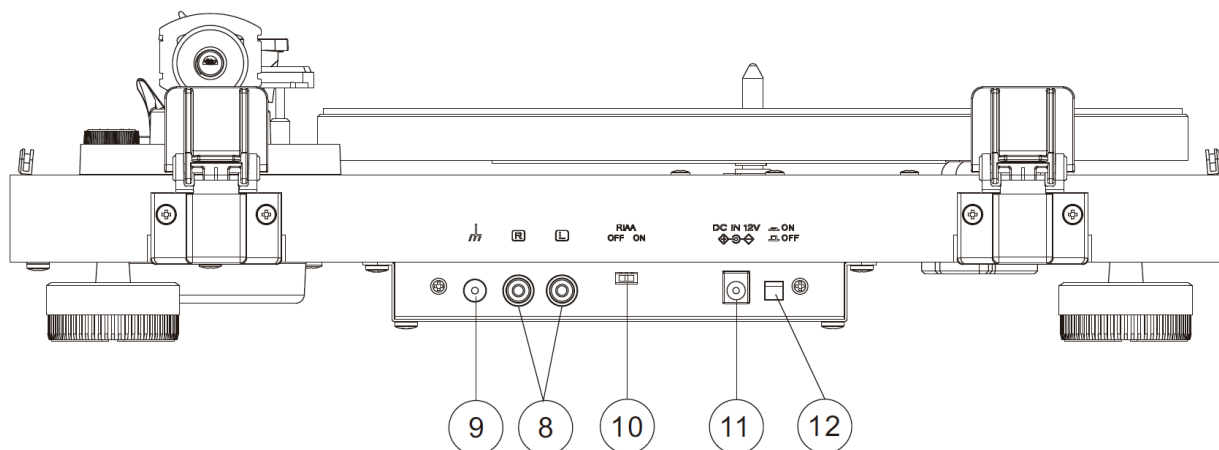

8. Signal Connectors

Plug in the RCA cable, and connect the cable to audio amplifier.

9. Ground Terminal

Connect a ground wire. (If used with an external phono stage/RIAA)

10. Phono ON/OFF

If used with an external phono stage/RIAA, set this to off.

11. Power Supply Jack

Plug-in DV12/0.5A switching adaptor for power supply.

12. Power Switch

3. Turntable Platter and Belt Setup



1. Install the drive belt over the inner ring under the platter and make sure it won't fall off during the setup.
 2. Place the platter through the turntable spindle, then rotate the platter until you see the drive motor pulley through the window at the top left corner.
 3. Carefully grab the drive belt and put it around the slot of the motor pulley.
 4. Connect the power adapter to the turntable and power on the turntable. Set the speed to either 33 or 45. If the platter does not spin, try the steps listed above again.
 5. Remember to place the slip mat on the platter before playing records.
-

4. Cartridge Downforce Adjustment

1. Gently push and turn the Counterweight onto the rear of the tonearm (with the scale facing toward the front of the turntable).
2. Remove the cartridge protection cap.
3. Lower the tonearm lift and position the cartridge in the space between tonearm rest and platter.
4. Carefully rotate the Counterweight until the tonearm balances out. The tonearm should return to the balanced position if it is moved up or down. This adjustment must be done carefully.
5. Once the tonearm is correctly balanced return it to its rest. Hold the Counterweight without moving it, and gently rotate the Downforce Scale ring (the part with numbers on it) to **0**. Check whether the arm still balances out.
6. Rotate the counterweight counterclockwise (seen from the front) to adjust the downforce according to the cartridge manufacturer's recommendations.

NOTE: The recommended downforce for the factory-fitted cartridge is **1.8 g**

5. Anti-Skating Adjustment

Adjust the **Anti-Skating Control** to match the downforce value (1.8g). This initial setting serves as a good starting point for further adjustments.

Determining the appropriate level of anti-skating is relatively simple. As you lower the cartridge into the groove, carefully observe the cartridge and cantilever from the front. They should descend straight down into the groove without being pulled to either side. If you notice any deviation, it's likely that the anti-skating is set incorrectly.

6. Power Supply

An external switching power adapter (DC12V 0.5A) is supplied with this turntable. Connect the turntable to a mains voltage of 110V/60Hz or 230V/50Hz.

7. Amplifier Connection

External Phono Stage/RIAA

Locate the **RCA outputs** on the rear panel of the turntable. Connect the **RCA cable** to this output and your

(amplifier's) **PHONO INPUT**.

Red plug into **Right** channel input, **White** plug into **Left** channel input. remember to connect the ground cable between the turntable and the external phono stage, and make sure (**RIAA ON/OFF**) is turned **OFF** on the back of the turntable

Internal Phono Stage

If your amplifier doesn't have a Phono Input, you can turn **ON** the internal phono stage on the back of the TT-3 Plus. In this case, you will need to use an **ANALOGUE INPUT** on the amplifier

NOTE: The TT-3 Plus features a high-grade phono stage that pairs excellently with the pre-installed Ortofon 2m Red cartridge.

In many setups, utilizing the internal phono stage provides optimal performance.

8. Playing a Record

1. Place the record on the turntable. If it is a 45 rpm, you need to place the adapter on the record spindle.
 2. Switch on the power.
 3. Pull up the arm lifter, and then release the arm lock clip.
 4. Place the cartridge vertically over the first track of the record.
 5. Rotate the RPM knob to the speed you want to play, which will cause the platter to start turning.
 6. Lower the arm lifter. The stylus will touch the record and start playing music.
 7. When the record is done, lift the tone arm, lead it back to the armrest, and lock it.
 8. To pause the playing, lift the tone arm by pulling up the arm lifter, and then turn the speed knob to "OFF".
-

9. Replacing the Cartridge

NOTE: If you are unfamiliar or uncomfortable with completing this procedure, we recommend consulting with a professional/your point of purchase to perform the installation.

REMEMBER: If you're using the internal RIAA, ensure you use either a MM pickup or a MC High Output pickup.

1. Unscrew the headshell from the tonearm.

2. Unscrew the cartridge from the headshell, and disconnect the 4 wires to take off the cartridge as below:

i. **White Wire:** Left Channel, Positive Pole

ii. **Blue Wire:** Left Channel, Negative Pole

iii. **Red Wire:** Right Channel, Positive Pole

iv. **Green Wire:** Left Channel, Negative Pole

3. Tightly screw the new cartridge to the headshell, and connect the wires correctly using the information above.

4. Remember to adjust the counter weight stylus pressure and anti-skate value according to the new cartridge specifications.

10. Tips & Tricks

We aim to ensure you experience the full potential of your turntable. Therefore, we've put together an article containing valuable Tips & Tricks to help you achieve optimal performance with your turntable.

Article: [Tips & Tricks: TURNTABLES](#)

11. Specifications

These specifications are based on the factory-mounted cartridge of **Ortofon 2M Red**.

Drive Method	Belt c
Motor	DC m
Speed	33-1/ rpm, · rpm
Rotation Speed Variation	±2%
Wow And Flutter	0.2%
Platter	Alum die-c

	(Diam 30 cm)
Platter weight	600 g
Output Level	RIAA 528 mV RIAA 5.5 mV
Signal To Noise Ratio	67 dB high weigh 20 kHz LPF)
Tonearm	Carbo static balan straig tonea
Effective Arm Length	223.6
Effective Tonearm Mass	23.42
Overhang	18.6 mm
Acceptable Cartridge Weight	15.5- (inclu head)
Cartridge Type	MM t
Output Voltage	5.5 mV 1 kHz cm /
Stylus Pressure	1.6 - 1.8

Cartridge Weight	7.6 g
	9.3 g
Headshell Weight	(inclu
	screw
	nuts,
	wires
Output Terminal	RCA:
	on/of
Power Consumption	1.5 W
Dimension (W×H×D)	420 r
	126 r
	355 r
Weight	5.0 kg

12. Colors



Black



White



Walnut

Was this article helpful?



Argon Audio TT-3 PLUS

Manual: Argon Audio TT-3 PLUS

Troubleshooting: Argon Audio TT-3 PLUS

FAQ: Argon Audio TT-3 PLUS

Related Articles

Manual: Argon Audio TT-4

Manual: Argon Audio TT-4 MK2

Manual: Argon Audio TT-4 SE

Manual: Argon Audio TT-3

Manual: Argon Audio TT SIGNATURE