



THE MOMENTUM J6 LOUDSPEAKER

INSTRUCTIONS FOR USE

Congratulations on choosing the Momentum J6 loudspeakers. Used correctly, they will provide a lifetime of beautiful music. Please read the following notes in order to get the best from them.

RUNNING IN

A 'running in' period of at least 200 hours is necessary to stabilise performance. After this period, a further gradual improvement will occur over a period of several weeks.

ASSEMBLY

The Momentum J6 loudspeakers are packed in two cartons, with the plinths and fixings in a third carton.

Place the speaker upside down on a clean, non-abrasive surface. Place the spacers and plinths on the bottom of the cabinet and line up the screw-holes with those on the cabinet. Fit the screws with the supplied 4mm allen key.

Return to upright, place the Momentum J6 in the desired position, then loosen the locking collars on the spikes (the 4mm allen key can be inserted into a hole in the side of the locking ring to release it, if necessary).

Level the speaker by turning the spikes with the supplied 6mm allen key. When level, tighten the locking collars. (They can be easily tightened by hand.)

YOUR SYSTEM

It is important to extract the maximum of recorded information from your chosen source components. This means using the very best possible electronics. Cabling should also be of appropriate quality as the Momentum J6 may reveal deficiencies in this area.

CONNECTIONS

Connect the cables from the amplifier using 4mm binding posts, spade connectors or bare wire. Always ensure correct polarity at amplifier and speaker terminals (black to black; red to red).

Where bi-amplification is being considered, it is advisable to consult a dealer, or Neat Acoustics, for advice.

PLACEMENT IN THE ROOM

There are no firm rules regarding placement, as acoustics will vary from room to room. A degree of experimentation is necessary for optimum placement but a starting point of 30-50cm from rear walls and 60cm from side walls is suggested, with a toe-in of 10-15 degrees. Generally, bass output increases as distance from the rear wall, or room corner, decreases. Stereo depth and associated effects improve as the speaker is brought away from room boundaries. Move the loudspeaker in small increments (2-3 cm) and assess the changes until satisfied with the in-room balance. *(Often, very small changes of the loudspeaker position can result in a huge improvement in performance.)*

MAINTENANCE

The Momentum J6 has no user-replaceable parts and requires no maintenance.

To clean, brush lightly with a soft, lint-free cloth. Should a fault condition arise, consult your dealer.

WARNING: DO NOT ATTEMPT TO GAIN ACCESS TO THE INSIDE OF THE ENCLOSURE.

WARRANTY

The Momentum J6 is guaranteed against defects in materials and workmanship for a period of five years. This warranty is limited to the original purchaser.

SPECIFICATIONS

ENCLOSURE TYPE.....	2.5 way, isobaric/reflex.
BASS/MIDRANGE.....	168mm treated paper cone type with aluminium phase correction plug.
BASS.....	2 x 170mm treated paper cone type in iso-baric configuration.
HIGH FREQUENCY UNIT.....	Air Motion Transformer
DIMENSIONS (h/w/d).....	105 x 22 x 32cm (Footprint: 36 x 37)
WEIGHT.....	31 Kilos (SHIPPING WEIGHT: 78 Kilos)
SENSITIVITY (2.83v/1m).....	.87 dB/1 watt
RECOMMENDED AMPLIFIER POWER.....	25 to 200 watts
IMPEDANCE.....	8 Ohms average. Minimum 5 Ohms

(Specification is subject to change without notice)