



USER MANUAL

NOBLE FOKUS APOLLO ACTIVE HEADPHONES NOISE CANCELLING

FIRST TIME SETUP: BLUETOOTH PAIRING

1 Turn on the Bluetooth in your device settings.




2 Press and hold button for 5 seconds. Release. Lights will flash blue/red.




Power on 3S, Pairing 5S.

3 Select " Noble FoKus Apollo " in your device Setting to connect.

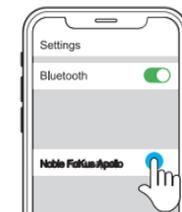

Once successfully connected, the headphone will memorize your device and automatically pair when turned on in the future.


BUTTON FUNCTIONS

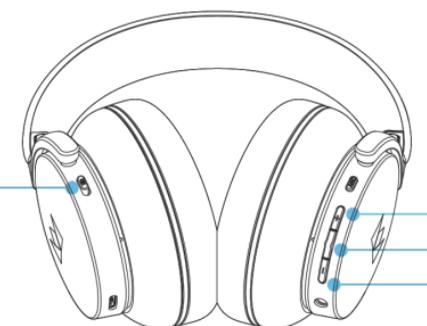

Connected to Bluetooth : Push up – Mic on
Push down – Mic off
ANC button: Press once to cycle ANC on/ ANC off / Transparency
Volume Up: Press Once **Track Forward:** Press & Hold 1+ Seconds

Power on / Off: Press & Hold 3+ Seconds
Play/Pause/Answer/Hang up Calls: Press Once
Active Siri(iOS) or "Ok Google" (Andriod): Press Twice
Bluetooth Pairing: See First Time setup
Volume Down: Press Once **Track Backward:** Press & Hold 1+ Seconds

CHARGING

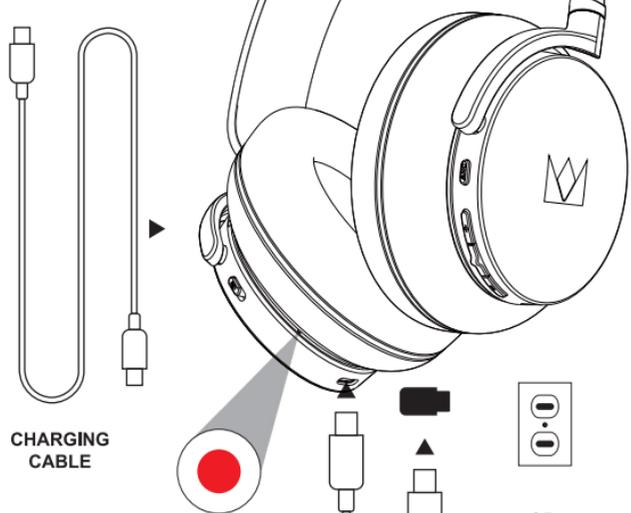


CHARGING CABLE

Red light when charging, blue light when fully charged.

Connect to computer or USB 5V 1A (or less) output device.

AUX INPUT

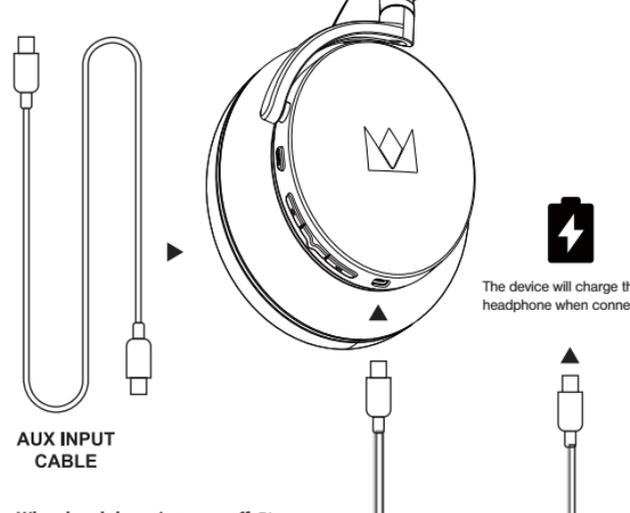


AUX INPUT CABLE

When headphone is power off: Plug into type-c cable: only charging (Press and hold MFB for 5s, and then can control the volume up or down, pause and play, the ANC on - Normal mode - Transparency mode can works)

When headphone was connecting with device: Plug into type-c cable: Bluetooth was disconnected, volume up and down, and pause and play can works, ANC on - Normal mode - Transparency mode works.

AUX INPUT

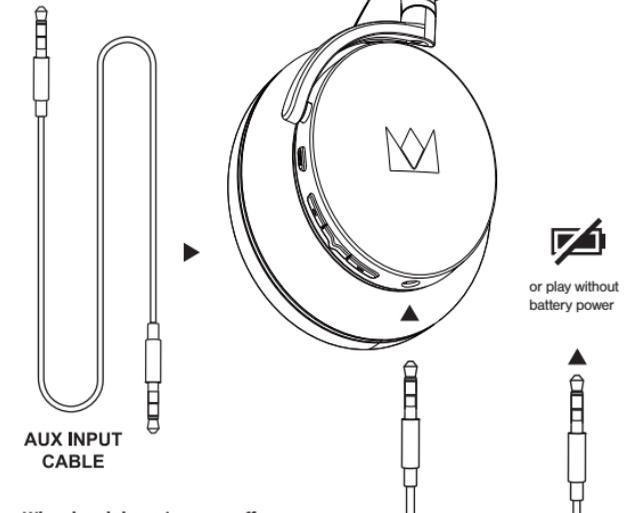

AUX INPUT CABLE

When headphone is power off: Plug into Aux cable: can listen the music, but headphone's function doesn't work, only operate in the device. - The music stop for 4s when clicking MFB (Press and hold MFB for 5s, and then can only control the volume up or down, the ANC on - Normal mode - Transparency mode can works)

When headphone was connecting with device: Plug into Aux cable: bluetooth was disconnected, volume up and down can work, ANC on - Normal mode - Transparency mode works.

Troubleshooting

- If the headphones are not working correctly, turn them on/off or hold "+" and "-" button at the same time for 5 seconds when headphones are on to reset.
- If the headphones won't turn on, recharge the battery and try again.
- If the headphones won't charge, make sure the power supply works, is 5V 1A, and not damaged.
- If the headphones make no sound or do not show as an available device, make sure they are not paired to a different device already.
- To re-enter pairing mode hold the power button for 5 seconds when headphones are off.

need some help?
Can't get it to pair? Have a question or comment?



Important Safety Information

- Avoid dropping.
- Do not disassemble.
- Do not submerge in water.
- The product should not be exposed to dripping or splashing.
- Avoid extreme temperatures.
- The product should not be exposed to excessive heat such as sunshine, fire or the like.
- Use original or certified cables.
- Clean with a dry, soft lint-free cloth. Do not use any corrosive cleaner or oil.
- Do not use the product outdoors during thunderstorms.

Dispose of the product if it becomes swollen or cracked as it may be an indication that the battery is degraded and may burst and cause a fire.



Hearing Safety

- To avoid hearing damage, do not listen for extended periods at high volume.
- Do not turn the volume so high that you're unable to hear your surroundings.
- Do not use headphones while driving.
- You should use caution or temporarily discontinue use in potentially hazardous situations.

Notice

CE This product complies with the radio interference requirements of the European Community.

CAUTION

Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion; Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas; A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of old products and rechargeable batteries helps prevent negative consequences for the environment and human health.