

PHILIPS

Soundbar

8000 Series

TAB8200



User manual

Register your product and get support at
www.philips.com/support

Contents

1	Important safety instructions	3	5	Product specifications	19
	Safety	3			
	Care for your product	4			
	Care of the environment	4	6	Troubleshooting	20
	Declaration of conformity	5			
	Help and support	5	7	Trademarks	21
2	Your Soundbar	6			
	What's in the box	6			
	Soundbar	6			
	Connectors	7			
	Wireless subwoofer	7			
	Remote control	8			
	Prepare the Remote Control	8			
	Placement	9			
	Wall mount	10			
3	Connect	11			
	Dolby Atmos®	11			
	Connect to HDMI socket	11			
	Connect to Optical socket	11			
	Connect to AUX socket	12			
	Connect to power	12			
	Pair up with the subwoofer	13			
4	Use your soundbar	14			
	App download	14			
	Turn on and off	14			
	Select modes	14			
	Adjust the Volume	15			
	Select Equalizer (EQ) Effect	15			
	LEDs display On/Off Indicator	16			
	DTS Virtual X / Dolby Atmos virtualiser	16			
	Auto. volume leveling	16			
	Play from Bluetooth devices	16			
	Listen to an external device	17			
	Play audio through USB	18			
	Factory reset	18			

1 Important safety instructions

Read and understand all instructions before you use your product. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

Know these safety symbols

The marking information is located at the bottom or back of product.



-  This is CLASS II apparatus with double insulation, and no protective earth provided.
-  AC voltage
-  The symbol indicates DC voltage
-  The symbol indicates polarity of d.c. power connector
-  **WARNING!**
Warning: Risk of electric shock!
-  The exclamation mark is intended to alert the user to the presence of important operating instructions.
-  Use only the power supplies listed in the user manual.

Risk of electric shock or fire!

- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.
- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilled on or into the product, disconnect it from the power outlet immediately. Contact Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Battery (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.
- Use the product in tropical and/or moderate climates.

Risk of short circuit or fire!

- For identification and supply ratings, see the type plate at the back or bottom of the product.
- Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

Risk of injury or damage to this product!

- For wall mounting, this product must be securely attached to the wall in accordance with the installation instructions. Use only the supplied wall mount bracket (if available). Improper wall mounting may result in accident, injury or damage. If you have any query, contact Consumer Care in your country.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Parts of this product can be made of glass. Handle with care to avoid injury and damage.

Risk of overheating!

- Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

Battery usage CAUTION

- CAUTION: Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be recycled or disposed of as per state and local guidelines.
- Install all batteries correctly, + and - as marked on the apparatus.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon-Zinc) or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Don't disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a Battery.
- To avoid battery subjected to extremely low air pressure.



Note

- The rating label is pasted on the bottom or back of the equipment.

Care for your product

Use only microfiber cloth to clean the product.

Care of the environment

Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of

the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

Removing the disposable batteries

To remove the disposable batteries, see battery installation section.

Declaration of conformity

This product complies with the radio interference requirements of the European community.

Hereby, TP Vision Europe B.V. declares that the product is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/EU and UK Radio Equipment Regulations SI 2017 No 1206. You can find the Declaration of Conformity on www.philips.com/support.

Help and support

For extensive online support, visit www.philips.com/support to:

- download the user manual and the quick start guide
- watch video tutorials (available only for selected models)
- find answers to frequently answered questions (FAQs)
- email us a question
- chat with our support representative.

Follow the instructions on the website to select your language, and then enter your product model number.

Alternatively, you can contact Consumer Care in your country. Before you contact, note down the model number and serial number of your product. You can find this information on the back or bottom of your product.


2 Your Soundbar

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your soundbar at www.philips.com/support.

What's in the box

Check and identify the items in the package:


- Soundbar x 1
- Wireless subwoofer x 1
- Remote control (AAA batteries x 2) x 1
- AC adapter (for soundbar) * x 1
- Power cord (for subwoofer) * x 1
- Wall mount kit x 1
- Quick start guide/ Warranty card / Safety sheet x 1

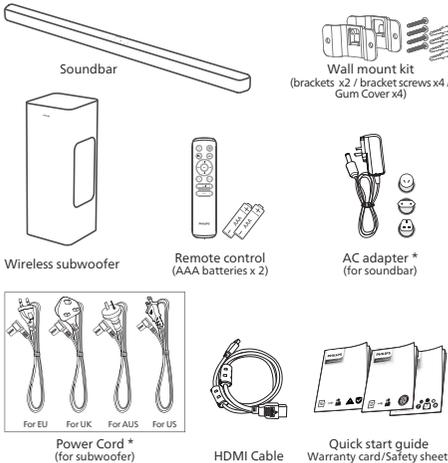

- Power cord quantity and plug type vary by regions.
- Images, illustrations and drawings shown on this User Manual are for reference only, actual product may vary in appearance.

Soundbar

This section includes an overview of the soundbar.

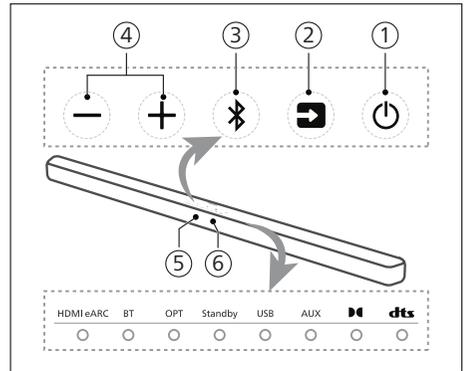


- ① **⏻ (Standby-On)**
 - Switch the soundbar On or to Standby.
 - Long press for 8 seconds in power on state to enable or disable Auto-Standby (15 minutes Auto-Standby).
- ② **⏮ (Source) button**
Select an input source for the Soundbar.
- ③ **📶 (Bluetooth) button**
 - Press to select the Bluetooth mode.
 - Long press for 3 second to enter the Bluetooth pairing mode.
 - Long press for 8 second to disconnect all devices and clear the BT connect history list, then enter pairing mode.
- ④ **+/- (Volume) button**
Increase or decrease volume.
- ⑤ **Remote control sensor**
- ⑥ **Soundbar's LED indicator**

LED State	Status
HDMI eARC	Solid White HDMI eARC mode

BT	Solid Blue Solid White	Bluetooth (Classic) mode Bluetooth (LE Audio) mode
OPT	Solid White	OPTICAL mode
Standby	Solid Red	Standby mode
USB	Solid White	USB mode
AUX	Solid White	AUX mode
	Solid White	Dolby Atmos
	Solid White	DTS Audio

Connectors

This section includes an overview of the connectors available on your soundbar.

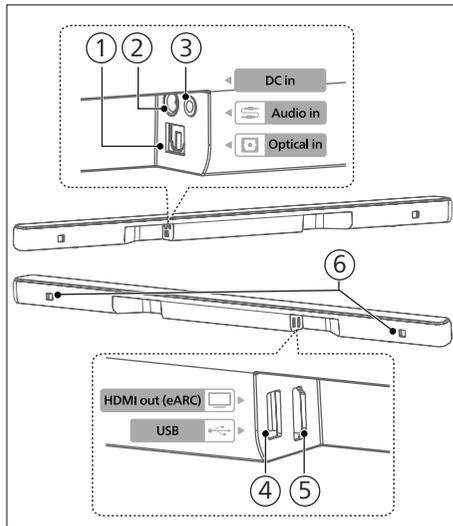


- ① **Optical in socket**
Connect to an optical audio output on the TV or a digital device.
- ② **DC in socket**
Connect to adapter.
- ③ **Audio in socket**
Audio input from, for example, an MP3 player (3.5mm jack).

- ④ **USB**
 - Connect to a USB storage device for audio media play.
 - Upgrade software of this product.
- ⑤ **HDMI eARC socket**
The port supports the eARC/ARC HDMI feature, connect to the HDMI (eARC/ARC) input on the TV.
- ⑥ **Wall bracket slot**

Wireless subwoofer

This section includes an overview of the wireless subwoofer.

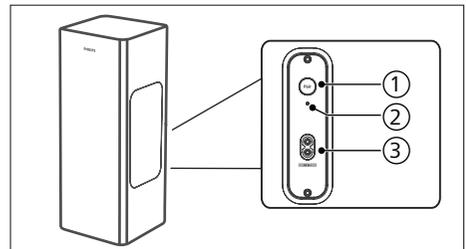

- ① **Pair button**
Press and hold to enter the pairing mode for the subwoofer, which is used for manual pairing only. (Don't press **Pair** button as bar and subwoofer would be paired automatically after the unit is switched ON)
- ② **Subwoofer indicator**
Determine the status based on the wireless subwoofer indicator.


LED State	Status
Fast blink	Subwoofer in pairing mode
Solid	Connected / Pairing successful
Slow blink	Unpaired status

- ③ **AC in ~ socket**
Connect to the power supply.

Remote control

This section includes an overview of the remote control.


- ① **⏻ (Standby-On)**
 - Switch the soundbar on or to standby.
 - Long press for 8 seconds in power on state to enable or disable Auto-Standby (15 minutes Auto-Standby).
- ② **🔊 (Surround)**
Virtualiser ON/OFF.
- ③ **Vol + / Vol - (Soundbar's Volume)**
Increase / decrease the soundbar's volume.
- ④ **EQ**
 - Select Equalizer (EQ) effect.
 - Press and hold for 3 second to turn on/off dialogue enhancement.
- ⑤ **Treble +/-**
Adjust treble level.
- ⑥ **Bass +/- (Subwoofer's Volume)**
Adjust subwoofer's volume.
- ⑦ **📺 (Source)**
Press to select an input source for soundbar.
- ⑧ **🔇 (Mute)**
Mute or restore volume.
- ⑨ **⏮ / ⏭ (Previous/Next)**
Skip to the previous or next track in USB / BT mode.
- ⑩ **▶⏸ (Play/Pause)**
Start, pause or resume play in USB / BT mode.
- ⑪ **AVL**
Auto volume leveling ON/OFF and night mode.

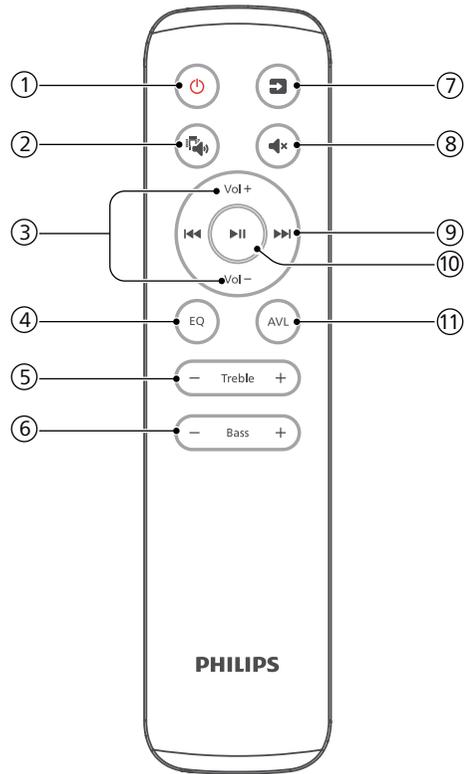

Prepare the Remote Control

- The provided Remote Control allows the unit to be operated from a distance.
- Even if the Remote Control is operated within the effective range 19.7 feet (6m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the Remote Control is operated near other products which generate infrared rays, or if other remote control devices using infra-red rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

Replace the Remote Control Battery

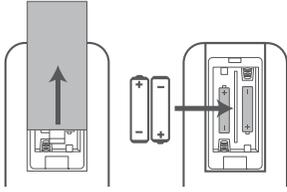

- 1 Press and slide the back cover to open the battery compartment of the remote control.
- 2 Insert two AAA size batteries (included). Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.
- 3 Close the battery compartment cover.

Precautions Concerning Batteries


- Be sure to insert the batteries with correct positive “⊕” and negative “⊖” polarities.
- Use batteries of the same type. Never use different types of batteries together.
- Either rechargeable or non-rechargeable batteries can be used. Refer to the precautions on their labels.
- Be aware of your fingernails when removing the battery cover and the battery.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.

- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- Do not use any batteries other than those specified.
- Do not mix new batteries with old ones.
- Never recharge a battery unless it is confirmed to be a rechargeable type.

Placement

Place the subwoofer at least 1 meter (3 feet) away from your soundbar, and 10 centimeters away from the wall.

For best results, place your subwoofer as shown below.

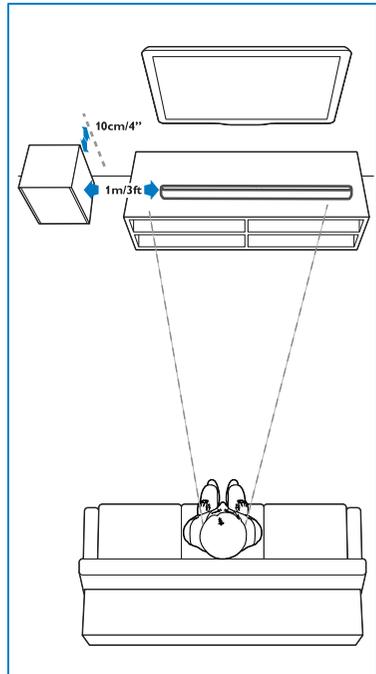

Wall mount

Note

- Improper wall mounting may result in accident, injury or damage. If you have any query, contact Consumer Care in your country.
- Before wall mounting, make sure the wall can support the weight of your soundbar.
- Before wall mounting, you need not remove the rubber feet at the bottom of the soundbar, otherwise the rubber feet cannot be fixed back.
- Depending on the type of wall mounting, make sure that you use screws of a suitable length and diameter.
- Please check whether the USB port on the back of the soundbar is connected to a USB device. If it is found that the connected USB device affects the wall-mount, you need to use another USB device of the appropriate size.

Screw length/diameter

Suggested wall mounting height


You are recommended to install the TV first before wall mounting the soundbar. With a TV preinstalled, wall mount the soundbar 50mm/2.0" in distance from the bottom of the TV.

! WARNING!

- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Suggested wall mounting height: ≤ 1.5 meters.

- 1 Drill 4 parallel holes (diameter 3-8mm each according to wall type) on the wall.
 - ↳ The distance between the holes are: **664mm / 26"**
 - ↳ You can use the wall mount template provided for helping the drilling holes position on the wall.

- 2 Tighten the wall mount brackets on the wall with screws (included) and screwdriver (not included). Make sure that they are securely installed.
- 3 Lift the unit onto the wall mount brackets and slot into place.

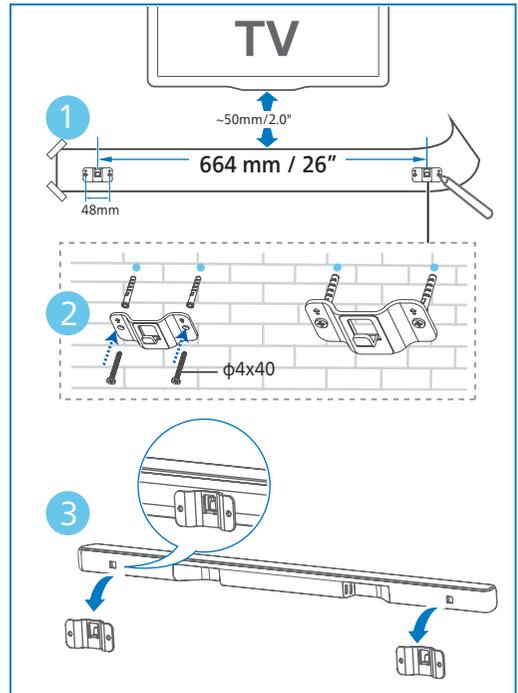

3 Connect

This section helps you connect your soundbar to a TV and other devices, and then set it up.

Note

- For identification and supply ratings, see the type plate at the back or bottom of the product.
- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.

Dolby Atmos®


Dolby Atmos gives you immersive listening experience by delivering sound in three dimensional space, and all the richness, clarity, and power of Dolby sound.

For more information, please visit dolby.com/technologies/dolby-atmos

Connect to HDMI socket

HDMI eARC (Enhance Audio Return Channel)

Your soundbar supports HDMI with eARC/ARC (Enhance Audio Return Channel). If your TV is HDMI eARC/ARC compliant, you can hear the TV audio through your soundbar by using a single HDMI cable.

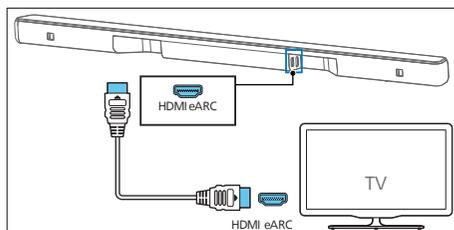


- 1 On your TV, turn on HDMI-CEC operations. For details, see the TV user manual.
 - The **HDMI ARC** connector on the TV might be labeled differently. For details, see the TV user manual.
- 2 Using a High Speed HDMI cable, connect the **HDMI eARC** connector on your soundbar to the **HDMI eARC** connector on the TV.

Note

- Your TV must support the HDMI-CEC and ARC function. HDMI-CEC and ARC must be set to On.
- The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about ARC function, please refer to your TV user manual.
- Make sure to use the HDMI cables can support the ARC function.

Connect to Optical socket

- 1 Using an optical cable, connect the **Optical** connector on your soundbar to the **Optical out** connector on the TV or other device.

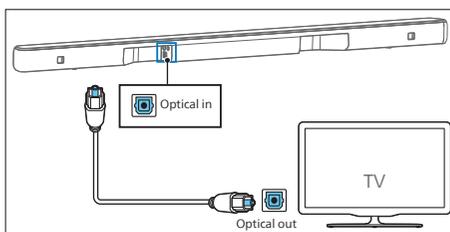


- The digital optical connector might be labeled **Spdif** or **Spdif out**.

Connect to AUX socket


a. Use 3.5mm audio cable

- Use a 3.5mm to 3.5mm audio cable to connect the TV's headphone socket to the **Audio in** socket on the soundbar.

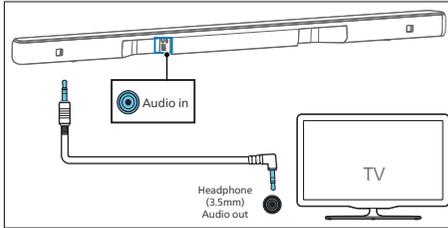

b. Use 3.5mm-RCA audio cable

- Use a RCA to 3.5mm audio cable to connect the TV's audio output sockets to the **Audio in** socket on the soundbar.

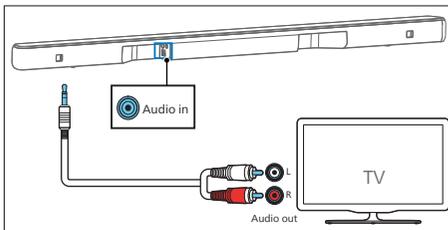


Connect to power

- Before connecting the AC power cord, ensure you have completed all other connections.
- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.

Conversion plug

Choose the adapter for your region.

If needed, snap on the adapter for your region.

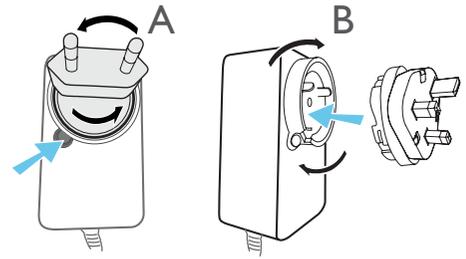


Soundbar

- 1 Unwind the mains adapter and mains cable to their full length. Connect the mains adapter to the **DC IN 24V** socket of the soundbar.
- 2 Then connect the mains adapter into a mains socket.

Subwoofer

- 3 Connect the mains cable to the AC~ socket of the Subwoofer and then into a mains socket.
- Power cord quantity and plug type vary by regions.

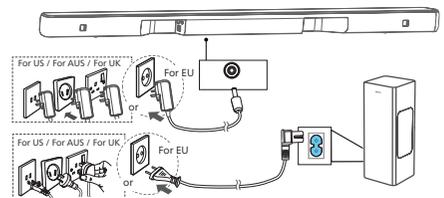

- * Power cord quantity and plug type vary by regions.


Pair up with the subwoofer

Tips

- The subwoofer should be within 6 meters, of the soundbar in an open area.

Automatic pairing

Plug the soundbar and the subwoofer into the mains sockets and then press  on the unit or remote control to switch the unit to **ON** mode. The subwoofer and soundbar will automatically pair.

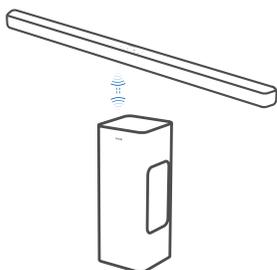

↳ Determine the status based on the wireless subwoofer indicator.

LED State	Status
Fast blink	Subwoofer in pairing mode
Solid	Connected / Pairing successful
Slow blink	Unpaired status

Tips

- Do not press **Pair** button on the rear of the subwoofer, except for manual pairing.

Manual pairing

If no audio from the wireless subwoofer can be heard, manually pair up the subwoofer.

- 1 Unplug both the subwoofer and soundbar from the mains sockets again, then plug them in again after 3 minutes.
- 2 Press and hold the **Pair** button on the rear of the subwoofer for 3 seconds.
↳ The indicator on the subwoofer will rapidly blink.
- 3 Then press  on the soundbar or remote control to switch the soundbar ON.
↳ The indicator on the subwoofer will become solid when successful.
- 4 If the indicator still keeps blinking, repeat step 1-3.

Tips

- The subwoofer should be within 6 m of the soundbar in an open area (the closer the better).
- Remove any objects between the subwoofer and the soundbar.
- If the wireless connection fails again, check if there is a conflict or strong interference (e. g. interference from an electronic device) around the location. Remove these conflicts or strong interferences and repeat the above procedures.

4 Use your soundbar

This section helps you use the soundbar to play audio from connected devices.

Before you start

- Make the necessary connections described in the quick start guide and the user manual.
- Switch the soundbar to the correct source for other devices.

App download

Scan the QR code or search “**Philips Entertainment**” in the Apple App Store or Google Play to download and install the app.



With the Philips Entertainment app, you can set Volume level, Sound Style (EQ), Dialogue Enhancement, Surround Sound, Auto. volume leveling, AV sync, LED Light, Source selection etc.

Turn on and off

- When you first connect the soundbar to the main socket, the unit will be in standby mode.
- Press the  button on the remote control or on the soundbar to switch the soundbar ON or OFF.
- Disconnect the mains plug from the mains socket if you want to switch the soundbar off completely.

Auto Standby

- The soundbar automatically turns to Standby mode after about 15 minutes if the TV or the external soundbar is disconnected (or USB, BT function bit playback pause), or switched off.
- Long press the  button for 8 seconds in power on state to enable or disable Auto-Standby (15 minutes Auto-Standby).

Note

- In HDMI (ARC) mode will enter network standby mode after approx. 15 minutes, if it has no audio playback.
- In Aux in, USB, Optical and Bluetooth mode, the unit will automatically go to Standby mode approx 15 minutes, if it has no audio playback.
- When the EUT is no audio signal operated under Aux in, USB, Optical and Bluetooth mode, the unit entered standby mode within 20minutes
- The EUT operated on “Networked standby mode” when the equipment under HDMI (ARC) mode and cutting off play signal via TV remote control during the equipment work normally.

Select modes


Press the  (Source) button repeatedly on the soundbar or on the remote control to select the **HDMI eARC, BT, BT (LE Audio), OPT, USB, AUX** mode.

- ↳ Switch the playback source and the front indicator lights up accordingly.

Adjust the Volume

Adjust the Soundbar's Volume

- Press **Vol+ / Vol- (Volume)** to increase or decrease a volume level.
 - ↳ When adjusting the volume, the indicator will increase / decrease the amount of light. According to the corresponding light display / blinking (Fig), determine the current volume level.

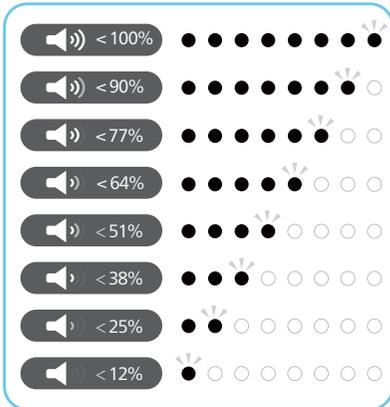

- To mute sound, press **Mute**.
- To restore the sound, press **Mute** again or press **Vol+ / Vol- (Volume)**.

Adjust the Subwoofer's Volume

- Press **Bass +/- (subwoofer)** to increase or decrease the subwoofer's volume level.

Adjust Treble level


- Press the **Treble +/-** button to change the high frequency (treble).

Bass/Treble	LED State
+5	○ ● ● ● ● ● ● ● ● ● ●
+4	○ ● ● ● ● ● ● ● ● ● ●
+3	○ ● ● ● ● ● ● ● ● ● ●
+2	○ ● ● ● ● ● ● ● ● ● ●
+1	○ ● ● ● ● ● ● ● ● ● ●
0	● ● ● ● ● ● ● ● ● ● ● ●
-1	○ ● ● ● ● ● ● ● ● ● ●
-2	○ ● ● ● ● ● ● ● ● ● ●
-3	○ ● ● ● ● ● ● ● ● ● ●
-4	○ ● ● ● ● ● ● ● ● ● ●
-5	○ ● ● ● ● ● ● ● ● ● ●

Select Equalizer (EQ) Effect

Select predefined sound modes to suit your video or music.

- 1 Press the **EQ** button on the remote control to select your desired preset equalizer effects.
 - ↳ All LEDs lights up for 0.5 second to indicate entering EQ selection menu.
- 2 Press the **EQ** button to switch among the modes.
 - ↳ Light up LEDs for 3 second to show current EQ mode according to the EQ mode definition.

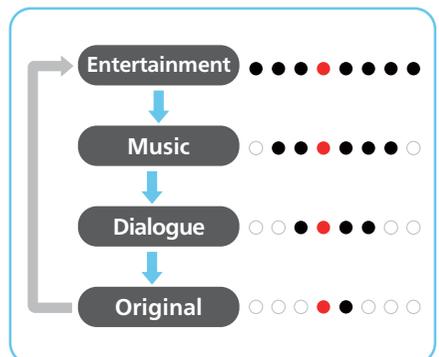

LEDs display On/Off Indicator

Press and hold  (Mute) button on the remote control for 5 second will enable/disable LEDs display.

- **OFF:** The LEDs brightness will return normal once you press any button. LEDs should be turned off automatically after idling for 10 second.
- **ON:** The LEDs brightness will not self-extinguish.



Tips

- During standby, the Standby LED shall turn on regardless LEDs display OFF setting.

DTS Virtual X / Dolby Atmos virtualiser

DTS Virtual:X / Dolby Atmos virtualiser allows you to enjoy multi-dimensional sound regardless of room size, layout, or speaker configuration.

DTS Virtual:X technology features DTS's proprietary virtual height and virtual surround processing to deliver an immersive sound experience from any type of input source and speaker configuration.

Press the  button on the remote control to enable or disable virtual on.

Status	LED State
ON	 (Two center LEDs spread out to right/left)
OFF	 (left / right LEDs close to the center)

- **ON:** This mode uses DTS Virtual:X with virtual height and virtual surround processing to realize a

three-dimensional sound field when the height speakers are not used.

- **OFF:** Do not use "DTS Virtual:X".

Auto. volume leveling

Press the **AVL** button to switch Auto volume leveling ON/OFF or night mode.

Status	LED State
OFF	
ON	
NIGHT	

- **OFF:** Do not use "Auto volume".
- **ON:** Responds in real time to different sources and types of content to maintain consistent loudness.
- **NIGHT:** Maintain even loudness for all sources and types of content, and enhanced vocal and dialogue to make it easier to hear in a quite listing environment.

Play from Bluetooth devices

Through Bluetooth, connect the soundbar with your Bluetooth device (such as an iPad, iPhone, iPod touch, Android phone, or laptop), and then you can listen to the audio files stored on the device through your soundbar speakers.

- 1 Press the  button on the soundbar or  (Source) on the remote control to select the **BT** (Bluetooth) mode.
→ The **BT** indicator will blink blue.
- 2 On the Bluetooth device, switch on Bluetooth, search for and select **Philips TAB8200** to start connection (see the user manual of the Bluetooth device on how to enable Bluetooth).

- ↳ During connection, the BT indicator will blink blue.
- 3 Wait until you hear voice prompt from the soundbar.
 - ↳ If the successfully connected, the BT indicator will light up solidly blue.
 - 4 Select and play audio files or music on your Bluetooth device.
 - During play, if a call is coming, music play is paused. Play resumes when the call ends.
 - If your Bluetooth device supports AVRCP profile, on the remote control you can press **⏮ / ⏭** to skip to a track, or press **⏸** to pause/resume play.

If your mobile phone supports LE Audio, you can experience and enjoy this new feature.

- 1 Press the **🔗** button on the soundbar or **📺 (Source)** on the remote control to select the **BT (LE Audio)** mode.
 - ↳ The **BT** indicator will blink white.
- 2 On the LE Audio device, open settings and switch on Bluetooth (Ensure the LE Audio function is activated on your LE Audio device), search for and select **Philips TAB8200-LEA** to start connection.

LED	Status	Name
Blue	BT	Philips TAB8200
White	BT (LE Audio)	Philips TAB8200-LEA

To exit Bluetooth, you can:

- Switch the unit to another source.
- Disable the function from your Bluetooth device. Or place your Bluetooth device out of the maximum operational range. The Bluetooth device will be disconnected from the unit after the voice prompt.

- Press and hold the **🔗** button on the soundbar.

Note

- In an open space without obstructions. The maximum operational range between the soundbar and a Bluetooth device is approximately 10 meters (30 feet).
- Compatibility with all Bluetooth devices is not guaranteed.
- The music streaming may be interrupted by obstacles between the device and soundbar, such as wall, metallic casing that covers the device, or other devices nearby that operate in the same frequency.

Listen to an external device

Ensure that the soundbar is connected to the TV or audio device.

- 1 Press the **📺 (Source)** button repeatedly on the soundbar or on the remote control to select the **HDMI eARC, OPT, AUX** mode.
 - ↳ The indicator light on the soundbar will show which mode is currently in use.
- 2 Operate your audio device directly for playback features.
- 3 Press the **+/- (Volume)** buttons to adjust the volume to your desired level.


Note

- While in OPTICAL/HDMI ARC mode, if there's no sound output from the unit, you may need to activate **PCM** or **Dolby Digital** signal output on your source device (e.g. TV, DVD or Blu-ray player).

Play audio through USB

Enjoy audio on a USB storage device, such as an MP3 player and USB flash memory, etc.

- 1 Insert the USB device.

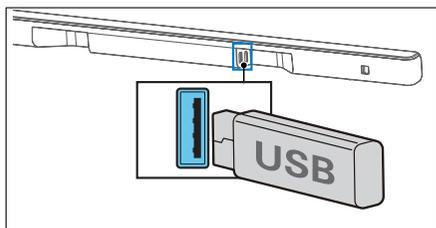

- 2 Press the **Source** button repeatedly on the soundbar or on the remote control to select the **USB** mode.

- 3 During playback:

Button	Action
▶	Start, pause or resume play
◀◀	Skip to the previous track
▶▶	Skip to the next track

Note

- This product may not be compatible with certain types of USB storage devices.
- If you use a USB extension cable, USB hub, or USB multifunctional card reader, the USB storage device may not be recognized.
- Do not remove the USB storage device while reading files.
- The system can support USB devices with up to 128 GB of memory.
- This system can play MP3/WAV/FLAC.
- Support a USB port: 5V === 500mA.

Factory reset

Reset device to default setting.

- Turn on the soundbar, press and hold the **+** and **-** buttons at the same time for 8 seconds.
 - ↳ All LEDs light up for 5 seconds, standby LED in Red.

Item	Default settings
EQ	Movie
Master Volume	10
Subwoofer Volume	0
Treble	0
Surround	OFF
Auto Volume	OFF
Night	OFF
Source	HDMI-ARC
BT pairing info	Clear
AV SYNC	0
DISPLAY	ON
Auto Standby (Auto Power Down)	ON
Dialogue enhancement	OFF

5 Product specifications

☰ Note

- Specifications and design are subject to change without notice.

Bluetooth / Wireless

Bluetooth profiles	A2DP, AVRCP
Bluetooth version	V 5.3
Bluetooth frequency range / Transmitter power (EIRP)	2402 ~ 2480MHz < 10dBm
2.4G wireless frequency range / Transmitter power (EIRP)	2402 ~ 2480MHz < 10dBm

Amplifier Section

Total	RMS 160W @THD <=10% Max. 320W
-------	----------------------------------

Soundbar

Power supply	DC 24V \equiv 1.5A
AC Adapter (for Main Unit)	
Model:	KA3601A-2401500DE (Interchangeable 3 Pin BS 1363-1 and 2 pin (EN 50075))
Input:	100-240V~ 50/60Hz 1.0A Max
Output:	24V \equiv 1.5A 
Power consumption	36 W
Standby power consumption	Standard standby mode < 0.50 W Networked standby mode < 2.0 W
Frequency response	180Hz - 20KHz

Speakers impedance	8Ω x 4
USB direct version	2.0 Full Speed
USB	5V \equiv 500mA
Dimension (WxHxD)	811 x 37 x 42 mm
Weight	0.61 kg
Operating temperature	0°C - 40°C

Subwoofer

Power supply	100-240V~ 50/60 Hz
Power consumption	40 W
Standby consumption	< 0.50 W
Frequency response	35Hz - 180Hz
Impedance	3 Ω
Dimensions (W x H x D)	155 x 391 x 161 mm
Weight	3.69 kg
Operating temperature	0°C - 40°C

Remote control

Distance/Angle	6m/30°
Battery type	AAA (1.5V X 2)

Supported audio formats

HDMI eARC	LPCM 2ch, LPCM 5.1ch, LPCM 7.1ch, Dolby Digital, Dolby Digital plus, Dolby True HD, Dolby MAT, Dolby Atmos - Dolby Digital Plus, Dolby Atmos - TrueHD, Dolby Atmos - Dolby MAT, DTS Digital surround 5.1
HDMI ARC	LPCM 2ch, LPCM 5.1ch, Dolby Digital, Dolby Digital plus, Dolby Atmos - Dolby Digital Plus, DTS Digital surround 5.1
Optical	LPCM 2ch, LPCM 5.1ch, Dolby Digital, DTS Digital surround 5.1
Bluetooth	SBC
USB	MP3 / WAV / FLAC

6 Troubleshooting



Warning

- Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, get support at www.philips.com/support.

Main unit

The buttons on the main unit do not work.

- Disconnect from the power supply for a few minutes, then connect again.

No power

- Ensure that the AC cord is properly connected.
- Ensure that there is power at the AC outlet.
- Press  button on the remote control or soundbar to turn the soundbar on.

Sound

No sound from the soundbar speaker.

- Connect the audio cable from your soundbar to your TV or other devices. However, you do not need a separate audio connection when:
 - the soundbar and TV are connected through HDMI ARC connection, or
 - a device is connected to the HDMI in connector on your soundbar.
- On the remote control, select the correct audio input.
- Make sure that the soundbar is not muted.

Distorted sound or echo.

- If you play audio from TV through this product, make sure that the TV is muted.

No sound from the wireless subwoofer.

- Manually connect the subwoofer to the main unit.
- Increase the volume. Press + (Volume Up) on the remote control or on the soundbar.
- When using either of the digital input, if there is no audio:
 - Try setting the TV output to PCM or
 - Connect directly to your Blu-ray/ other sources.
 - Some TVs do not pass through digital audio.
- Your TV may be set to variable audio output. Confirm that the audio output setting is set to FIXED or STANDARD, not VARIABLE. Refer to your TV's user manual for more detailed information.
- If using Bluetooth, ensure that the volume on your source device is turned up and that the device is not muted.

Bluetooth

A device cannot connect with the soundbar.

- The device does not support the compatible profiles required for the soundbar.
- You have not enabled the Bluetooth function of the device. See the user manual of the device on how to enable the function.
- The device is not correctly connected. Connect the device correctly.
- The soundbar is already connected with another Bluetooth device. Disconnect the connected device, and then try again.

Quality of audio play from a connected Bluetooth device is poor.

- The Bluetooth reception is poor. Move the device closer to the soundbar, or remove any obstacle between the device and the soundbar.

I can't find the Bluetooth name of this unit on my Bluetooth device.

- Ensure the Bluetooth function is activated on your Bluetooth device.
- Re-pair the unit with your Bluetooth device.

Remote control does not work

- Before you press any playback control button, first select the correct source.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/-) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

The subwoofer is idle or the indicator of subwoofer does not light up

- Unplug power cord from the mains socket, and plug it in again after 3 minutes to reset the subwoofer.

7 Trademarks



The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



Dolby, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license. Other trademarks and trade names are those of their respective owners.



FOR DTS PATENTS, SEE [HTTP://XPERI.COM/DTS-PATENTS/](http://XPERI.COM/DTS-PATENTS/). MANUFACTURED UNDER LICENSE FROM DTS, INC. AND ITS AFFILIATES. DTS, THE DTS LOGO, DIGITAL SURROUND, VIRTUAL:X, AND THE DTS VIRTUAL:X LOGO ARE REGISTERED TRADEMARKS OR TRADEMARKS OF DTS, INC. AND ITS AFFILIATES IN THE UNITED STATES AND/OR OTHER COUNTRIES. © DTS, INC. AND ITS AFFILIATES. ALL RIGHTS RESERVED.



If you have a Roku TV™ model, setup is easy. Just use a cable to connect your soundbar to the HDMI ARC port on your TV and follow the on-screen instructions.

Roku, the Roku logo, Roku TV, Roku TV Ready, and the Roku TV Ready logo are trademarks and/or registered trademarks of Roku, Inc.

FCC information

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

FCC&IC Warning:

- This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC & IC Attention

- Cet appareil est conforme à FCC et IC l'exposition aux rayonnements limites fixées pour un environnement non contrôlé. Cet appareil doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur

et votre corps. Cet transmetteur ne doit pas être co-situé ou opérant en liaison avec toute autre antenne ou transmetteur.

- Des câbles blindés doivent être utilisés avec cet appareil pour assurer la conformité avec les limites de la classe B de la FCC. fonctionnement de l'appareil.

IC-Canada:

CAN ICES (B)/NMB(B)

This device contains licence-exempt transmitter(s) / receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1 This device may not cause interference.
- 2 This device must accept any interference, including interference that may cause undesired operation of the device.

Avis d'Industrie Canada:

CAN ICES (B)/NMB (B)

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1 L'appareil ne doit pas produire de brouillage;
- 2 L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



Specifications are subject to change without notice. Please visit www.Philips.com/support for the latest updates and documents.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.

This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.

