


# Poly

Wireless streaming module

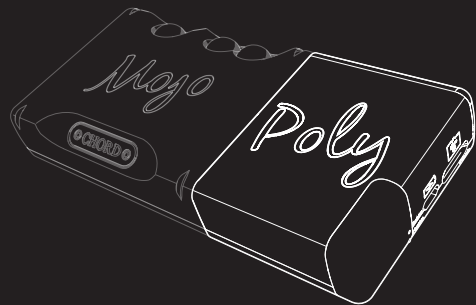

## Content

### User manual

- 1 Introduction
  - 2 Product description
  - 3 Charging Poly
  - 4 Powering on Poly
  - 5 GoFigure app - Configuration
  - 6 Connectivity modes
  - 7 Audio playback
- ### Extended manual
- 8 Manual configuration
  - 9 Browser configuration
  - 10 GoFigure app - Extra features
  - 11 Updating Poly
  - 12 Registering Poly
  - 13 Technical Specifications

## 5 GoFigure app - Configuration

Poly can be configured with the GoFigure app, available for download on the App Store or Google Play.



### 5.1 Requirements

- Your control device must have Bluetooth® Low Energy (BLE) compatibility.
- Your Poly must have firmware 1.0.11 or higher.

If these requirements are not met, see the **Extended Manual** for the manual configuration method.

### 5.2 First use

When using the GoFigure app to configure a new Poly, the Setup Wizard can be used to quickly set Poly's most important settings.

When using the GoFigure app for the second time, it will open on the Poly's Near You page. Select your Poly and press **Skip This Wizard** to go straight to the configuration menu.

## 1 Introduction

This user manual is intended for Poly users. It contains all the information necessary to safely and successfully use Poly and consists of two sections:

- The user manual describes Poly and provides the essential user instructions.
- The extended manual contains information that is not directly related to everyday use.

### 1.1 Safety

Please take note of the following safety instructions before using the Poly.

- Never allow Poly to come into contact with water or other liquids.
- Never spray cleaner onto Poly. Only use a clean microfibre cloth clean the Poly.

### 1.2 Warranty


Poly comes with a comprehensive twelve month warranty. To activate this warranty, please register your Poly via the Chord Electronics website: [www.chordelectronics.co.uk/register-product](http://www.chordelectronics.co.uk/register-product)

1. Enable Bluetooth® on your control device.
2. Make sure Poly is within range of your control device (< 5 m).
3. Open the GoFigure app and press **Select Device**. The app will scan for nearby Poly's.
4. Select Poly once it appears on your screen and press **Select Device**.
5. Please wait while the app loads your Poly.
6. Enter a custom name for your Poly (optional). Press **Audio Playback** to continue.
7. Select Wi-Fi or Bluetooth® as the initial connectivity mode. This can be changed later.
  - After selecting Wi-Fi, press **Connect Normally** to connect to a regular Wi-Fi network. Press **Create Hotspot** to allow your Poly to create a Wi-Fi hotspot
  - Select your Wi-Fi network and enter the password. Press **Continue/Submit**.
8. Select **Roon Ready** or **Everything else** as your preferred audio playback mode. This can be changed later.
9. The configuration is now complete! Press **Register Your Device** to register your Poly or press **Finish** to go to the Select Your Device menu.

## 2 Product description

Poly is a portable music streamer and player. Combined with Mojo, it can wirelessly stream from connected devices and play back audio via Roon, AirPlay or from a Micro SD card, all with smartphone control. Poly provides access to hi-fi sound quality at home or on-the-go, via Wi-Fi and Bluetooth®.

### 2.1 Main parts

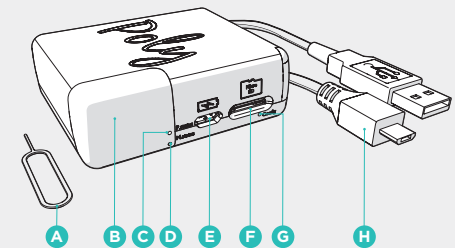

Please take a moment to familiarize yourself with Poly's main parts.

<b>A</b>	Configuration pin	<b>E</b>	Micro USB input
<b>B</b>	Antenna	<b>F</b>	Micro SD input
<b>C</b>	P-status LED	<b>G</b>	Configuration button
<b>D</b>	M-status LED	<b>H</b>	USB cable

### P-status LED

	Poly is in Hotspot mode and is available as a W-Fi connection for an external device.
	Poly is searching for a known Wi-Fi network.
	Poly has successfully read the inserted Micro SD card.
	Poly displays its battery level in a variety of colours when connected to a known network in Network mode. See §3.1 for more information.
	Poly is charging.
	Polys P.status will flash Yellow when there is no DAC detected (the attached DAC may be switched OFF)

### 2.2 Modes

Poly's functionality is made up of two settings; audio playback modes and connectivity modes. Both modes can be selected in the GoFigure app. See chapters 6 & 7 for instructions and more information.

#### Audio playback modes

- Bluetooth® audio
- Roon
- Micro SD card
- Airplay

#### Connectivity modes

- Bluetooth®
- Wi-Fi
  - Network
  - Hotspot

## 6 Connectivity modes

The GoFigure app allows you to select which wireless connection method Poly uses to connect to an external device. All configuration is done in the **Settings** menu.


### 6.1 Bluetooth®

Poly's Bluetooth® connection is always available, no matter which mode is selected.

- Select **Airplane\Bluetooth® Mode** **1** to optimize Poly for Bluetooth® playback.

**NOTICE** Bluetooth® wireless technology is a user-friendly wireless connection method, but can result in some loss of sound quality. The use of a Wi-Fi connection is recommended for optimal sound quality.


**NOTICE** Poly has a maximum Bluetooth® range of 5 metres. Sound distortion may occur beyond this range.

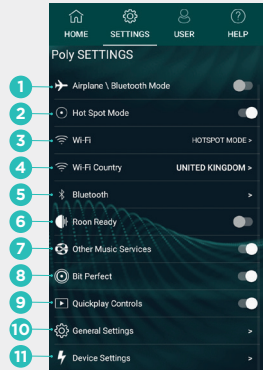

## 3 Charging Poly

To charge Poly:

1. Insert the USB cable **H** into the Micro USB input **E**.
2. Insert the other end of the USB cable into a suitable power outlet. This wakes Poly up.
3. Remove and reinsert the USB cable. Poly now starts charging and the P-status LED will emit a solid white light.

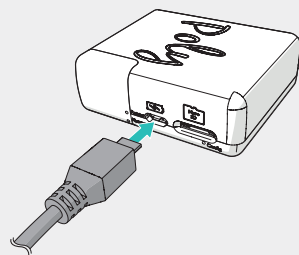

It takes approx. 5 hours to charge Poly with a 5V/2A charger. Poly and Mojo can be charged simultaneously, with an estimated charge time of 8 hours. The devices can be charged while playing back audio, but this increased the charging time.

### 6.2 Wi-Fi

Wi-Fi is the Poly's preferred connectivity method because it ensures the best sound quality. The Poly can establish a Wi-Fi connection via two different modes.

**TIP** For optimal Wi-Fi performance, keep the antenna window **B** clear of obstacles.

**NOTICE** Poly communicates only via 2.4 GHz networks and has a maximum Wi-Fi range of 10 metres.

#### Network mode

Network mode allows the Poly to connect to an available Wi-Fi network. It is active when **Airplane\Bluetooth® Mode** **1** and **Hotspot Mode** **2** are deselected.

1. Press **Wi-Fi** **3** to select or manually add a network.
2. Press **Wi-Fi Country** **4** to select the a country.

**TIP** The Poly can connect to a Wi-Fi hotspot generated by smartphone.

**TIP** You can add multiple networks to the Poly. They will be automatically remembered and connected to when in range.

 
**NOTICE** We recommend that you fully charge Poly for 5 hours before using it for the first time.

**NOTICE** Poly's microprocessor remains active when the device is switched off. This causes the battery to slowly empty over time.

**NOTICE** To charge Poly, the charger must deliver at least 1A of current. To charge Poly and Mojo simultaneously, an input of at least 2A is required. Using a 1A charger to charge both devices simultaneously will result in only Mojo being charged.

### 3.1 Battery level

When Poly is connected to a network, the P-status LED will glow in 1 of 4 colours. These colours indicate Poly's battery level. The M-status LED will always indicate Mojo's battery level using the same colour code.



**TIP** Poly's battery level is also displayed on the GoFigure app's home screen.

## 7 Powering on Poly

The GoFigure app allows you to select which mode is used by the Poly to playback audio. All configuration is done in the Settings menu.

### 7.1 Roon

The Poly can act as a Roon Ready device and play back audio from your personal Roon server.

1. Make sure the Poly is connected to the same network as your Roon remote device.
2. Select **Roon Ready** **6**. **The Other Music Services** **7** option will be automatically deselected.
3. Navigate to your Roon Output settings and enable Poly. Poly is now a registered output.

### 7.2 Airplay

The Poly supports AirPlay, which allows it to connect to your Apple devices.

1. Select **Other Music Services** **7**.
2. Make sure Poly and your Apple device are connected to the same Wi-Fi network.
3. Navigate to your Apple device's audio output options and select Poly. All audio will now route to Poly.

## 4 Powering on Poly

To power on Poly:

1. Attach Poly to Mojo.
2. Press and hold Mojo's power button until the buttons start to glow.
3. Wait approx. 10 seconds. Poly's P-status LED will become active when the connection has been registered.



**TIP** We recommend using Poly case to protect the connection between the two devices.

### 4.1 Powering off

To power off Poly:

1. Press and hold Mojo's power button to turn off both devices.
2. Wait 20 seconds for Poly to power off.

### 7.3 Bluetooth® audio


The Poly can play back audio via a Bluetooth® connection.

1. In the GoFigure app's Settings menu, select **Airplane\Bluetooth® Mode** 1.
2. Enable Bluetooth® on your control device and select the Poly to connect.
3. Play music from your control device.

**NOTICE** If there are two Poly's visible as available Bluetooth® devices, close the GoFigure app and select the one that remains.

### 7.4 Micro SD card

This Poly is able to play back music stored on a Micro SD card via DLNA, UPnP or MPD.

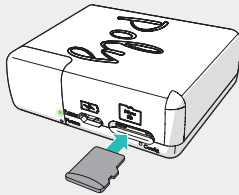

1. Select **Other Music Services** 7.
2. Insert a Micro SD card into the Poly's Micro SD slot F. The P-status LED C flashes green when the card is detected.

**NOTICE** If the Poly does not detect the Micro SD card, insert the card into a computer and make sure it is formatted to ExFat.

3. On your control device, open a DLNA, UPnP or MPD app of your choice (e.g. BubbleUPnP (Android) or 8 Player (iOS)).
4. In the app, select the Poly as the audio output.
5. Select a song from the Micro SD card's directory and begin playback.

**TIP** The Poly supports an unlimited amount of Micro SD storage capacity.

#### Quickplay

The Quickplay option allows you to look at any MPD playlists stored on the Micro SD card. See §10.3 for more information.


1. Press the **LAUNCH QUICKPLAY** button in the app's home screen.
2. Select one of the available playlists and begin playback.

## 8 Manual configuration

If your Poly or control device do not meet the requirement for configuration via the GoFigure app, the connectivity and audio playback modes can be manually configured.

### 8.1 Connecting Poly

Poly can be wirelessly connected to external devices in three ways: Bluetooth®, Wi-Fi network and a Wi-Fi hotspot. Bluetooth® is always available, while the other two connectivity modes can be manually selected via the Config button G.

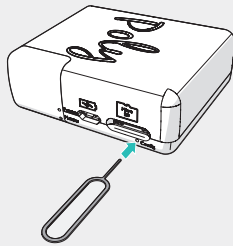

**TIP** The use of a headset is necessary while progressing through the options. This allows you to receive spoken feedback and instructions during the process.

1. Use the provided pin A to reach the Config button G.
2. Press the Config button once to start the sequence:

» "mode: press for mode"

3. Press the Config button repeatedly to progress through the options:

» "mode: current mode" → "mode: enter Hotspot mode" → "mode: enter Network mode" → "mode: Hotspot password reset" → "mode: Bluetooth® PIN reset" → "factory reset" → "firmware update".

4. After reaching the desired option, wait 5 seconds. Press the Config button one last time when instructed:

» "mode: press to enter XXXX mode" → "mode: entering XXXX mode"

**TIP** Selecting "mode: current mode" will prompt the Poly to tell you the current connectivity mode.

**TIP** Selecting one of the three reset options requires you to hold the Config button for several seconds.

**Bluetooth® connection**  
Poly's Bluetooth® connection is always available, no matter which mode is selected.

**NOTICE** Bluetooth® is a user-friendly wireless connection method, but can result in some loss of sound quality. We recommend using a Wi-Fi connection for optimal sound quality.

1. Enable Bluetooth® on your control device.
2. Select **Poly** from the list of available devices.
3. When asked, enter **0000** as the input code.

**TIP** The P-status LED flashes purple when connected via Bluetooth®.

**TIP** The PIN can be changed in the GoFigure app.

#### Wi-Fi network mode

Network mode allows Poly to connect to an available Wi-Fi network.

- Select **Network mode** by using the Config button G. Poly is available for Wi-Fi connection when the P-status LED C starts to flash blue.

Poly will automatically look for or connect to a known Wi-Fi network. A new Wi-Fi network must first be added in the browser configuration menu. See §9.1 on how to connect to a Wi-Fi network.

#### Wi-Fi hotspot mode

W-Fi hot spot mode allows you to connect to a Wi-Fi network created by your Poly. It acts as a replacement for Wi-Fi when no external network is available.

1. Select **Hotspot mode** by using the Config button G using the instructions above. The P-status LED C will flash blue and green when the Poly is in Hotspot mode.
2. Enable Wi-Fi on your control device.
3. Select the Poly-xxxx\* to connect to the hotspot.

\* All digits in the Poly's hotspot name are unique to each device.

#### Factory reset

The factory reset option allows you to erase all user adjustable information from Poly's memory (e.g. Wi-Fi networks, passwords and playlists).

**NOTICE** Remove your Micro SD card from Poly before running a factory reset. Poly will otherwise re-index the card as soon as the reset is complete.

- Select **Factory Reset** with the Config button G.

**NOTICE** Your Poly's name may not have reset when re-connecting Poly to a previously connected control device. The name will reset once the Bluetooth® cache is updated.

## 9 Browser configuration

As an alternative to the GoFigure app, Poly can also be configured in a browser menu. This menu is only available on a control device that is connected to the Wi-Fi hotspot generated by Poly.

- Make sure Poly is in Hotspot mode. See §8.1 for instructions.
- In the network settings, select Poly's WiFi network and select the URL (<http://192.168.1.1>).
- **OR**
- Open your browser and go to **www.poly.audio**

The configuration menu has three sections:

- **Wi-Fi settings**
- **Manage Connections**
- **Play Mode settings**

### 9.1 Wi-Fi settings

The **Wi-Fi settings** section allows you to:

- Name your Poly.
- Enter the network name and password of the WiFi-network you wish to use.
- Save a Wi-Fi network to add it to Poly's memory.
- Assign a password to the Wi-Fi hotspot created by your Poly when in Hotspot mode.
- Select the country that matches the used Wi-Fi network.

### 9.2 Manage Connections

The **Manage Connections** section allows you to:

- Delete a previously saved Wi-Fi network from Poly's memory.


### 9.3 Play Mode settings

The **Play Mode settings** section allows you to:


- Select an audio playback mode. Information about these options can be found at the bottom of the page or in chapter 7 of this manual.
- Select **Roon Ready** to use Roon as the audio playback mode.
  - Select **DSD** to use Roon DSD mode. See §10.2 for more information.
- Select **Other** to use Micro SD, Airplay or Bluetooth® audio as the audio playback mode.
  - Select **MPD Bit Perfect Audio** if you wish to only use Mojo for volume control.
  - Select **Keep in Hotspot Mode** if you wish to stay connected to Poly's hotspot.
- Save your settings.

**TIP** Deselect **Keep in Hotspot Mode** if you want to connect to a newly added Wi-Fi network.

#### Play mode settings

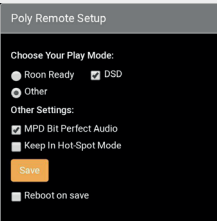


#### Wi-Fi settings

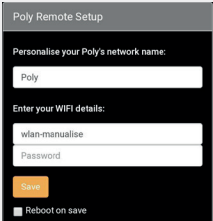

#### Manage connections



#### Hotspot settings

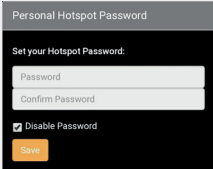

**TIP** When switching between Hotspot mode and Network mode, press **Save** and **Reboot** to ensure Poly reboots in the new mode.

## 10 GoFigure app - Extra features

The GoFigure app's Settings menu has some additional modes that allow you to customize your Poly audio playback experience.

### 10.1 Bit Perfect

Adjusting the volume with the physical controls of your control device can compromise the quality of the digital signal. Bit Perfect mode disables the physical volume control on your control device and prevents this from happening.

- Select **Other Music Services** 7. The Bit Perfect playback mode now becomes available.
- Select **Bit Perfect** 8.

**TIP** Bit Perfect mode will not disengage the digital in-app volume control.

### 10.2 Roon DSD

This mode must be enabled for DSD playback via Roon.

**NOTICE** Enabling Roon DSD will disable the in-app volume control.

- Select **Roon Ready** 6. The DSD mode becomes available.
- Select **Roon DSD** 8.

### 10.3 Quickplay

The Quickplay option allows you to look at any MPD playlists stored on the Micro SD card.

- Select **Quickplay Controls** 9.
- In the app's home screen, press **LAUNCH QUICKPLAY**.
- Select one of the available playlists to begin playback.

**TIP** Quickplay uses the BLE connection between Poly and your control device, so no Wi-Fi connection is required.

**TIP** MPD playlists can be created in applications such as MPD Deluxe (iOS), Glider (iOS) or M.A.L.P. (Android).

### 10.4 General Settings

The **General Settings** 10 menu contains information about Poly's networks and the contents of its MicroSD card.

- Press **Refresh DLNA Database** to retrieve information about a newly inserted MicroSD card.

### 10.5 Device Settings

The **Device Settings** 11 menu allows you to change Poly's settings.

- Press **Re-run Wizard** to repeat the initial configuration process.
- Press **Factory Reset** to reset Poly back to its default factory settings.

## 11 Registering Poly

Registering your Poly is important because it activates the free 12 month warranty period that comes with the purchase of Poly.



Register your Poly in one of these two ways:

- Register your Poly via the Chord Electronics website: [www.chordelectronics.co.uk/register-product](http://www.chordelectronics.co.uk/register-product)
- Register your Poly after completing the Setup Wizard in the GoFigure app. See §5.2 for instructions.

## 12 Updating Poly

New firmware is periodically issued to guarantee high performance and introduce new features to Poly. These updates can be found in the GoFigure app.

1. In the GoFigure app's Settings menu, press **Device Settings**.
2. Press Firmware Update and select the update you wish to install.

Poly can also be updated via manual configuration.

- Select **Firmware Update** by pressing the Config button G. See §8.1 for instructions.

**NOTICE** The GoFigure will not actively notify you of new updates. Check the app regularly to keep your Poly up to date.

**NOTICE** Updates cannot be downloaded when Poly is connected to a network with internet access.

## 13 Technical Specifications

We are invested in keeping Poly up to date. Please refer to [www.chordmojo.com](http://www.chordmojo.com) or [www.chordelectronics.co.uk](http://www.chordelectronics.co.uk) for the most recent specifications.

Dimensions	50 x 62 x 22 mm
Weight Poly	91 g
Total weight	180 g
Playback time	Approx. 9 hours
Charging time	Approx. 5 hours
Charging input	5V / 2A
Wi-Fi	2.4 GHz
Bluetooth®	4.1 / A2DP
PCM sample rates	44.1 kHz – 768 kHz
DSD via DoP	DSD64 – DSD256
Storage	MicroSD (unlimited capacity)

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Chord Electronics is under license. Other trademarks and trade names are those of their respective owners.