



# TVM 7675 (PRO) Series

## Full Installation Guide

Everything you need to get your TV safely on the wall, in no time

### Before you start

...we just wanted to say thanks for choosing Vogel's. Smart choice.

And you're already making another smart choice – reading the manual! Keep reading to learn all about safe, efficient installation, and how to use your new mount.

## Stay safe

---



### Warning

Always read these safety instructions carefully before installing and using this product.

Following these instructions is strictly required. Incorrect mounting and/or installation could put you, your TV, and your family at substantial risk.


### Don't dare risk it... Read all

- Vogel's recommends that the mounting and/or installation of this product should be carried out by a suitably qualified expert.
- Vogel's cannot be held responsible for any injury and/or damage caused by incorrect installation.
- Please consult the manual for your TV and ensure that the weight and size of the TV is within the maximum weight and size limits specified for this product, and that the TV mounting bolts used are of a suitable length and diameter. Note that not all the TV mounting accessories provided are required for the installation of any one TV.
- The wall mounting accessories provided are exclusively intended for installation on walls made of solid brick, solid concrete or solid wood columns. Surfaces should be flat and level.
- Any material covering the wall must not exceed 3mm/ 0.12 inch.
- For mounting on walls made of other materials, such as hollow bricks, wood panels or plasterboard, please consult your installer and/or specialist supplier.

- Clean the product with a dry, lint-free cloth. Do not use detergents or other solvents to clean the product.
- Only qualified, certified personnel may repair the product. Use only original spare parts. The use of other parts will result in voiding the warranty, and could lead to injuries.
- Alterations to the product and technical modifications are not permitted. This will void the warranty, and could lead to injuries.
- Always store the product in a dry and safe place with a temperature between -10°C to +50°C.
- Handle and transport the product with care.
- Repack the product when transporting or not using it for a longer period of time.
- Lifting your TV is a two-person job. Don't be bold!

## What's in your box?

---

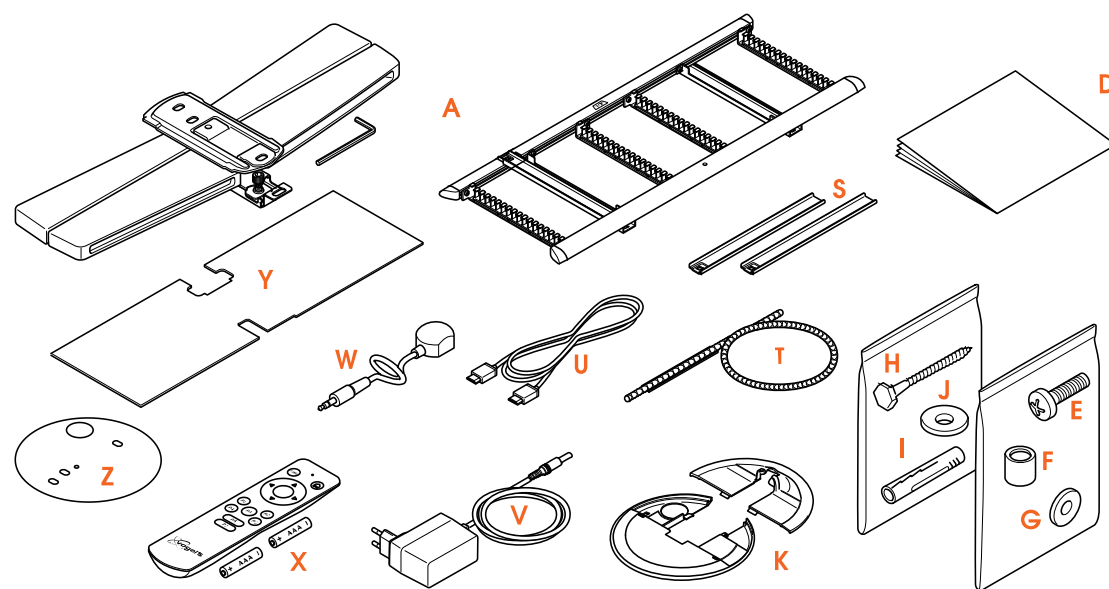

- Something missing? Make sure your packaging has everything in place:

A. Wall mount, with interface attached

D. Safety instructions

E. Bolts for fastening strips on TV (see contents below)

F. Spacers

G. Washers Ø 26mm

H. Screws

I. Plugs

J. Washers Ø 26mm

K. Wall plate cover

S. Interface extension strips

T. Cable sleeve

U. HDMI cable – 2m

V. Power cable and adaptor including international socket attachments

W. Infra-red receiver

X. Infra-red remote control – including 2x AAA batteries

Y. Interface cover

Z. Drilling template


- Contents of the TV fasteners kit:

- 4x M6x12mm
- 4x M6x25mm
- 4x M6x35mm
- 4x M8x12mm
- 4x M8x25mm
- 4x M8x45mm
- 4x M6x18mm washer
- 4x spacer 10mm
- 4x spacer 5mm



Need a long HDMI cable? Or a Cable Cover to hide your wall cables? Visit us online and order the right accessories directly through our website (<https://www.vogels.com/en-gb/c/tv-bracket-accessories>).

## Got your tools ready?

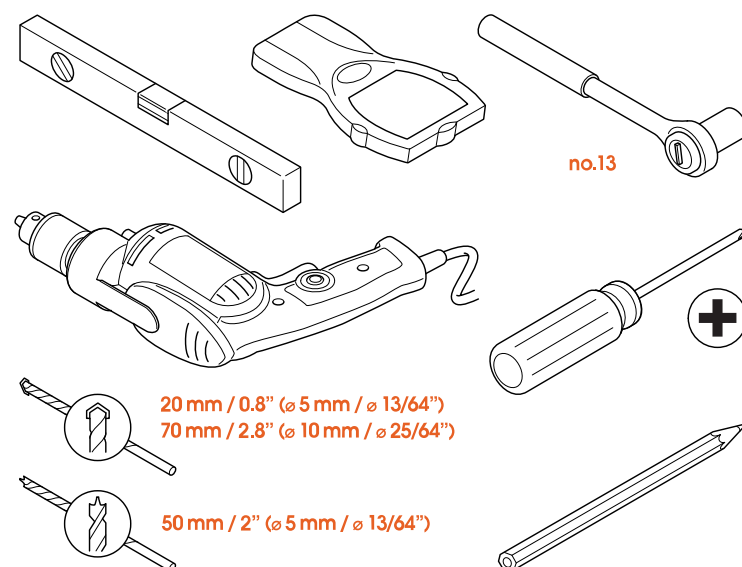

- Don't start without all the necessary tools:

- Spirit level
- Stud finder (for walls with wooden studs only)
- Socket wrench no. 13
- Large crosshead screwdriver
- Drilling machine
- For stone walls:
  - 20mm / 0.8" (ø 5mm / ø 13/64") masonry drill bit (for predrilling)
  - 70mm / 2.8" (ø 10mm / ø 25/64") masonry drill bit
- For walls with wooden studs:
  - 50mm / 2" (ø 5mm / ø 13/64") wood drill bit

- Pencil

## Take care of your safety

---



- Who cares about looking cool? Always wear personal protective equipment:
  - Eye protection
  - Ear protection
  - Safety shoes




Lifting your TV is a two-person job. Don't be bold!

## Ready, set, get installing!


---

### Step 1: Attach the interface to the TV


1. Carefully place the **wall mount** ① with the attached **interface**, and the TV face down on a clean surface without any obstacles.

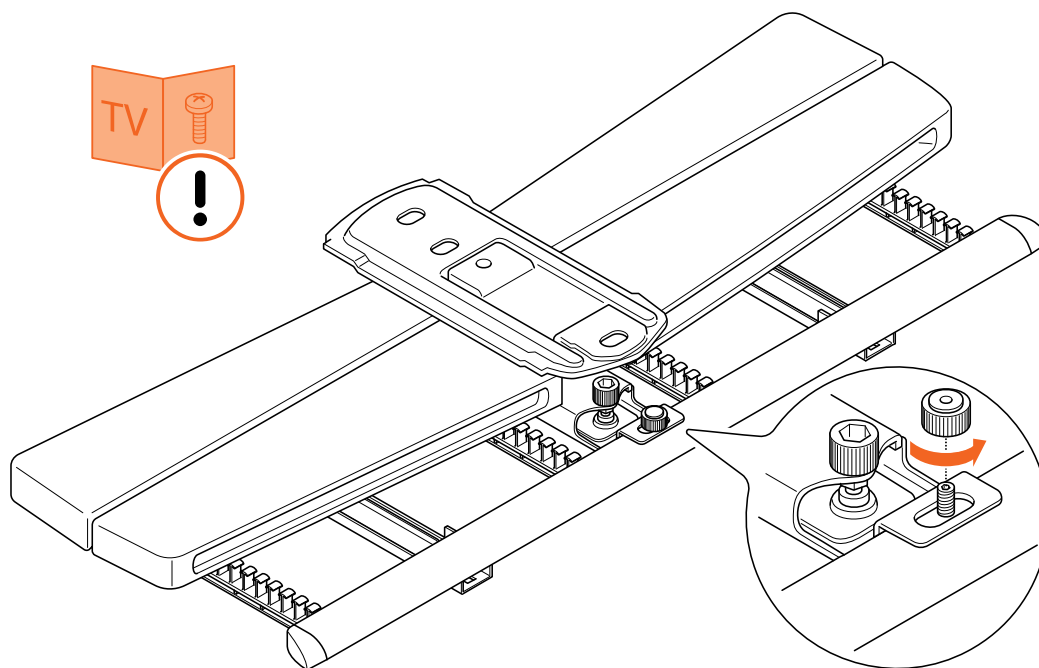

2. Remove the **thumbnut** and detach the **wall mount** ① from the **interface**. Keep the **thumbnut** for later use.

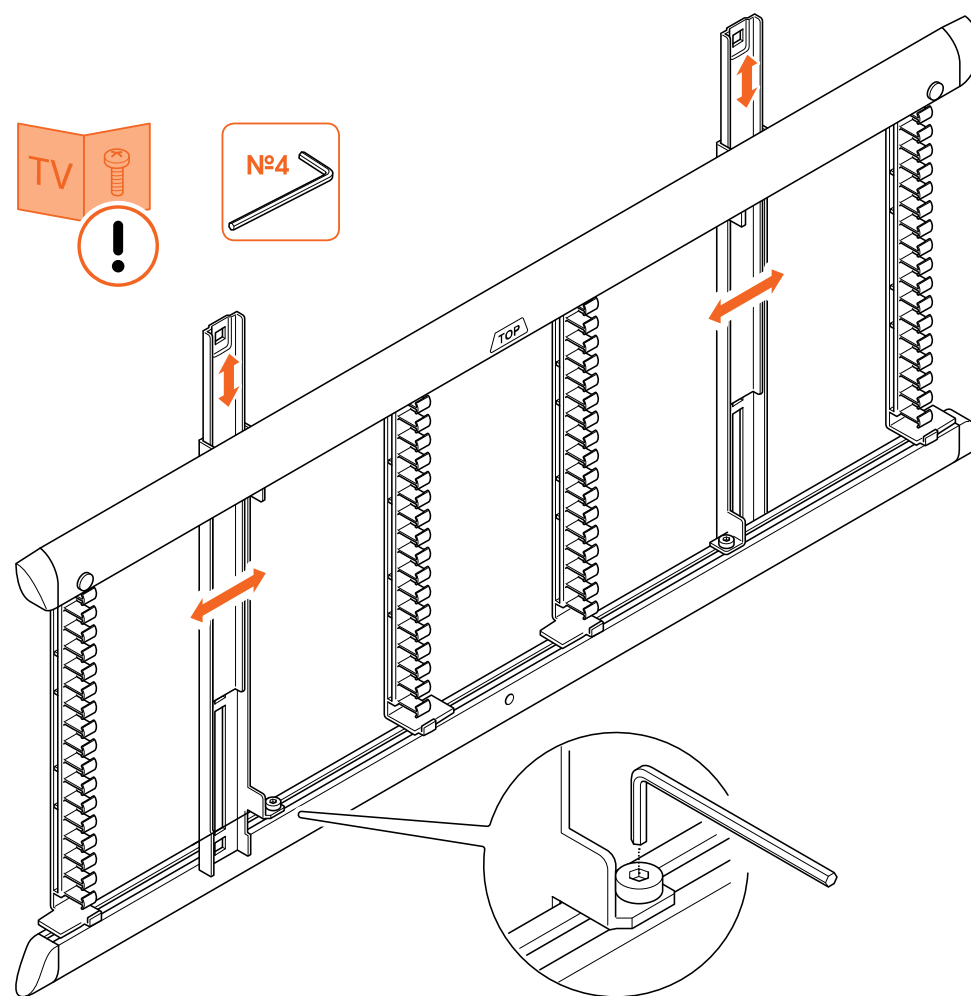

3. Check the mounting holes on the TV screen. Adjust the dimensions of the **interface** accordingly, after loosening the **pre-attached bolts** with the **Allen key**.
4. Additionally, **interface extension strips** ⑤ can be inserted into the top or bottom side of the vertical strips to increase the height of the **interface**. Make sure both **interface extension strips** ⑤ are at the same height and do not stick out.

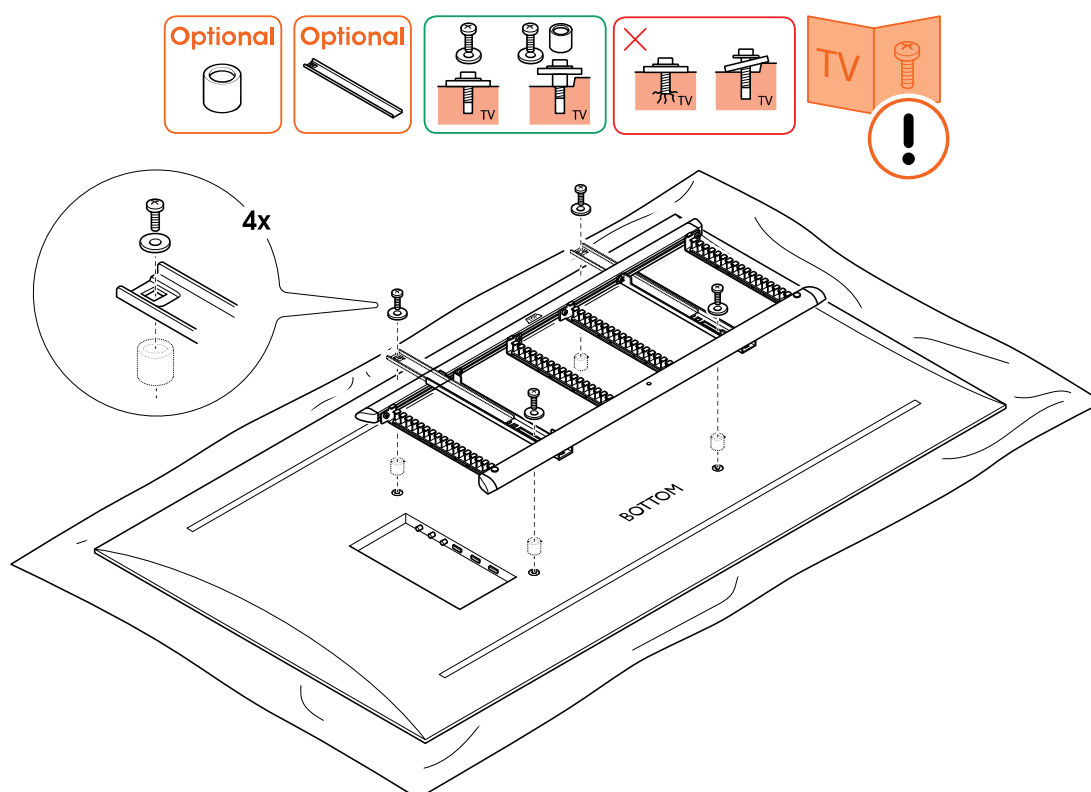



5. Attach the **interface** to the TV screen with the **bolts** ⑤ and **spacers** ⑥. Make sure the top side of the frame is positioned correctly, as indicated by the word 'top' on the **interface**.
6. After adjusting the dimensions of the **interface**, make sure to tighten the **pre-attached bolts** with the **Allen key**.



Are you missing any bolts? Or need different ones? The friendly team at Vogel's Consumer Care are waiting to help: [vogels.com/contact](http://www.vogels.com/contact) (<http://www.vogels.com/contact>).



Make sure bolts and spacers are positioned correctly.

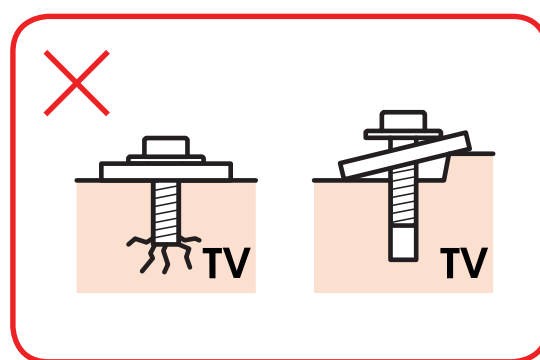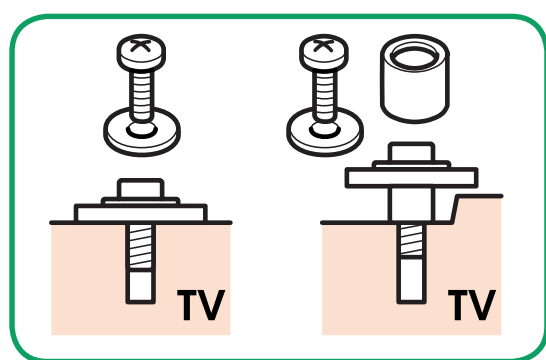

Refer to the user manual of your TV for the correct mounting material.

## Step 2: Attach the wall mount to the wall

How well do you know your walls? What they're made of matters more than you think...

### Solid concrete / brick wall




If you are mounting your TV screen onto a wall with wooden studs, please follow the instructions in the *Wall with wooden studs* section.

For this step you will need:

- Drilling template ②
- Drilling machine
- 20mm / 0.8" (ø 5mm / ø 13/64") masonry drill bit (for predrilling)
- 70mm / 2.8" (ø 10mm / ø 25/64") masonry drill bit
- The contents of the wall mounting kit ④ ① ③


- Spirit level
- Pencil

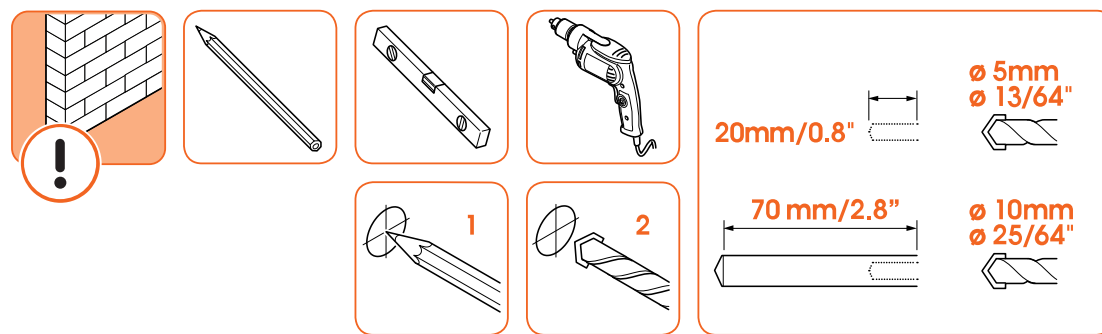

### 1. Determine where to mount your TV screen.

Use the **drilling template** ② to mark the correct position on the wall if you're using the TVA 7000 cable column or if the connecting cables protrude from the wall. The **drilling template** ② can be found on the back of the inlay card provided in the package.

In other situations, download and use our free DrillRight app to find the perfect mounting height and mark the first drilling hole. Always use the **drilling template** ② to mark the other drill holes.

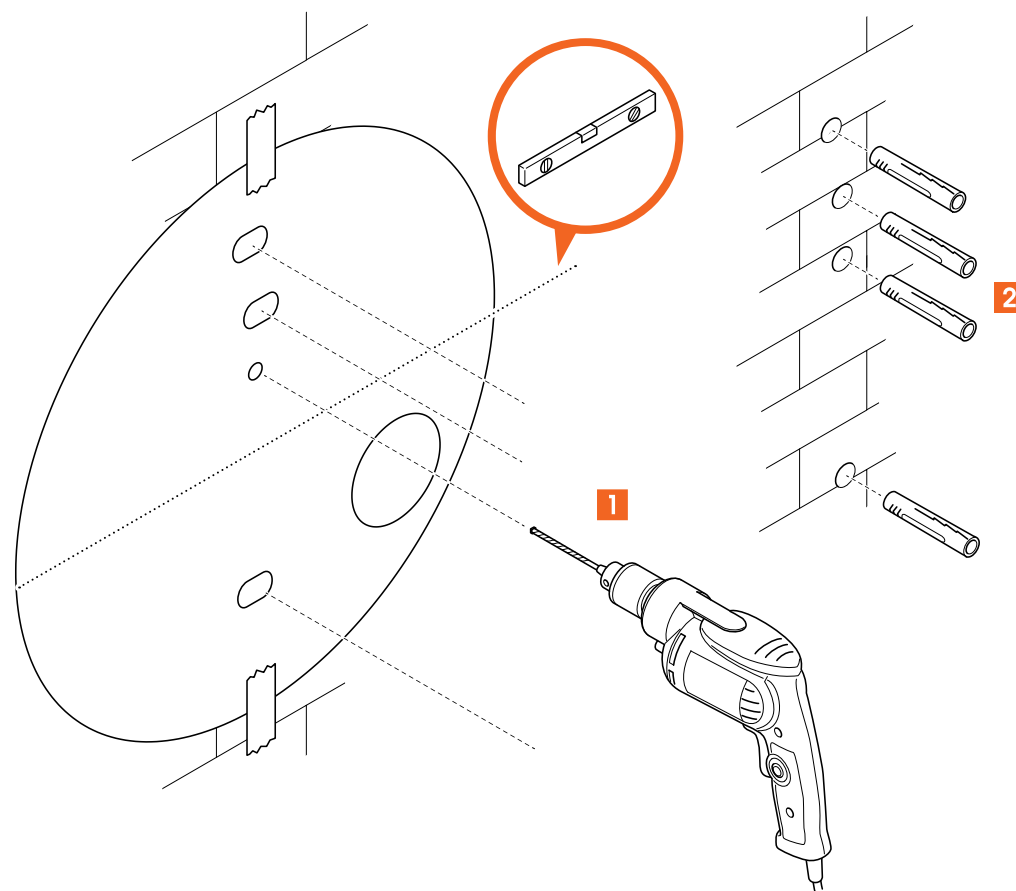


### 2. Drill the holes. Make sure to drill the positioning hole first. Pre-drill with a smaller drill to avoid damage to the wall.

### 3. Put the **plugs** ① in the holes.




 How deep do you drill? Check if the entire screw (except its head) fits in the hole before placing the plugs. This stops things from breaking. Vacuum the hole after drilling.





The cable hole should only be used to lead cables that come out of the wall through the wall mount. Do not use the cable hole to attach the wall mount to the wall.

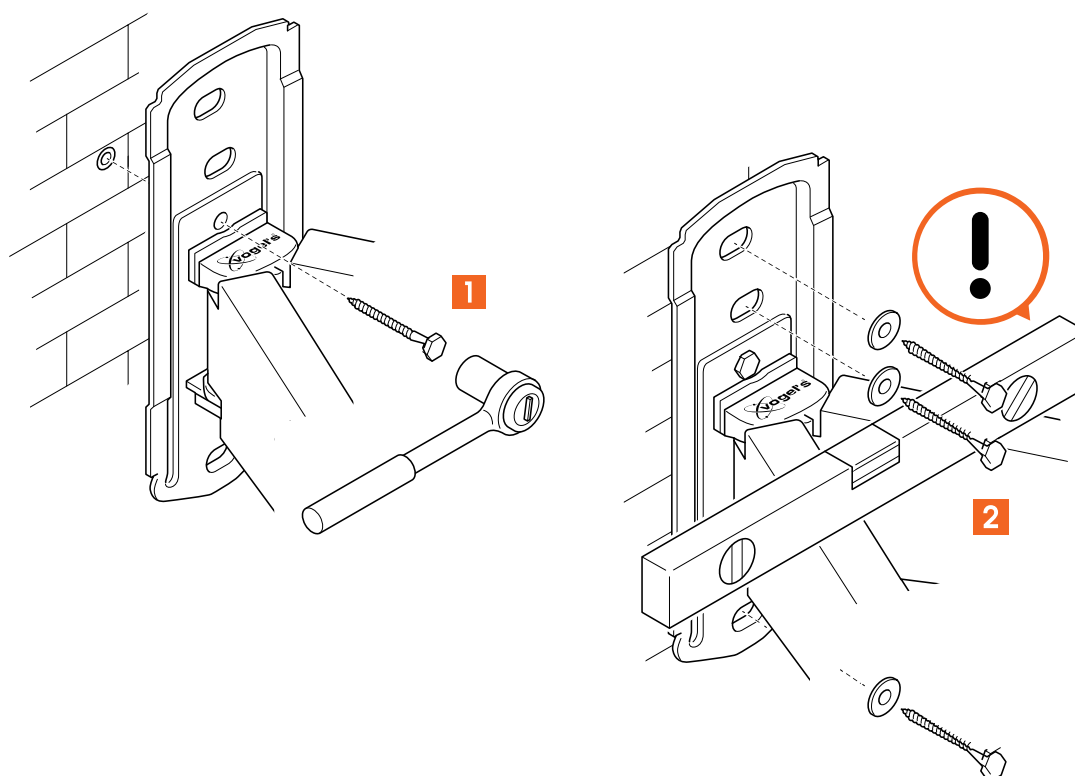


4. Attach the wall mount to the wall while making sure to:

- begin with the hole directly above the Vogel's logo on the **wall mount** ①
- use the spirit level to level the wall mount
- attach the **wall mount** ① to the wall with the provided **screws** ② and **washers** ③



Lubricate the screws for easy screwing in.



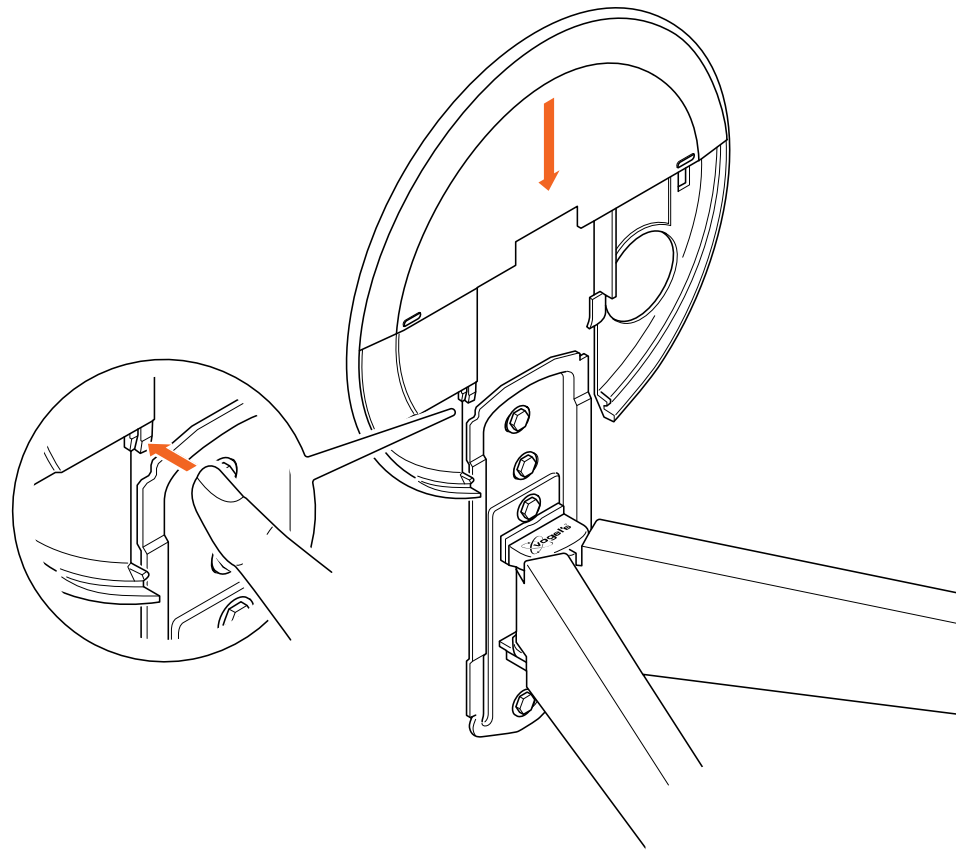

5. Slide the **wall plate cover** ① onto the **wall mount** ②. To remove the cover plate, press the left tab and slide it off the wall mount.


## Wall with wooden studs



If you are mounting your TV screen onto a concrete/brick wall, please follow the instructions in the Solid concrete/Brick wall section.

For this step you will need:

- Drilling template ③
- Drilling machine
- 50mm / 2" (ø 5mm / ø 13/64") wood drill bit
- The contents of the wall mounting kit ④ ⑤
- Spirit level
- TVA 6950 Stud adapter (optional, available on [www.vogels.com](http://www.vogels.com))
- Stud finder (for walls with wooden studs only)
- Pencil

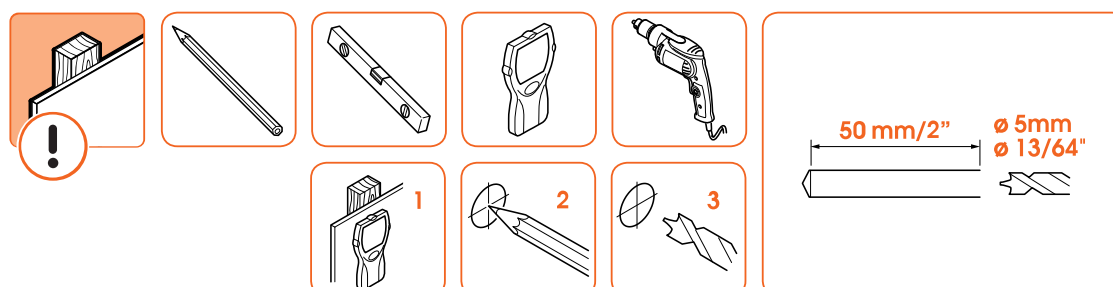




Don't just guess! The wall mount must always be attached to the studs. Always use a stud finder to determine the position of studs. Don't destroy your belongings!


#### 1. Determine where to hang your TV screen.

Use the **drilling template** ② to mark the correct position on the wall if you're using the TVA 7000 cable column or if the connecting cables protrude from the wall. The **drilling template** ② can be found on the back of the inlay card provided in the package.

In other situations, download and use our free DrillRight app to find the perfect mounting height and mark the first drilling hole. Always use the **drilling template** ② to mark the other drill holes.

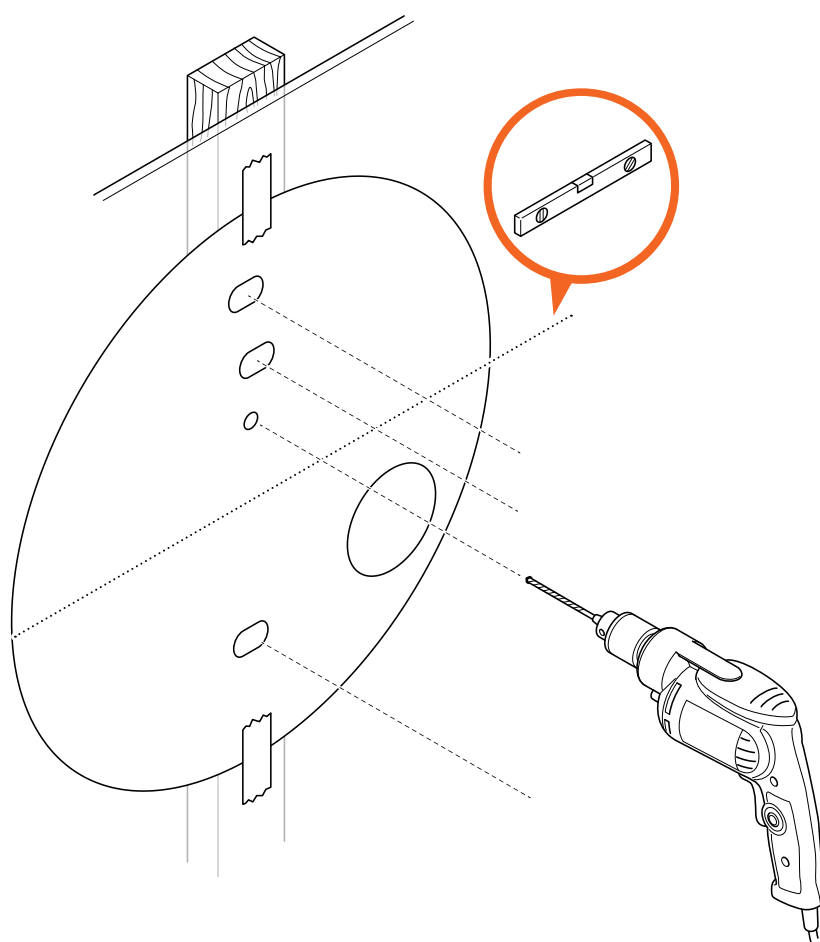

#### 2. Now for the fun part... drilling the holes. Make sure to drill the positioning hole first.

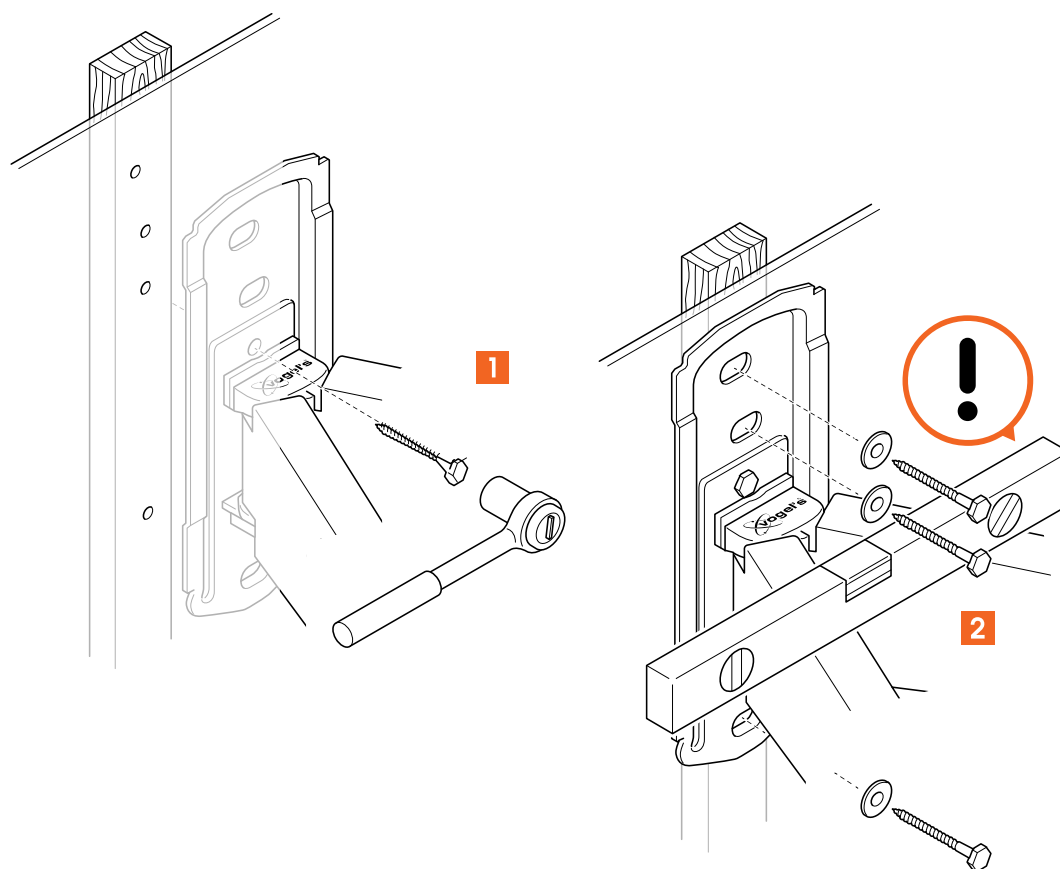


3. Attach the wall mount to the wall while making sure to:

- begin with the hole directly above the Vogel's logo on the **wall mount** ①
- use the spirit level to level the wall mount
- attach the **wall mount** ① to the wall with the provided **screws** ② and **washers** ③



Lubricate the screws for easy screwing in.

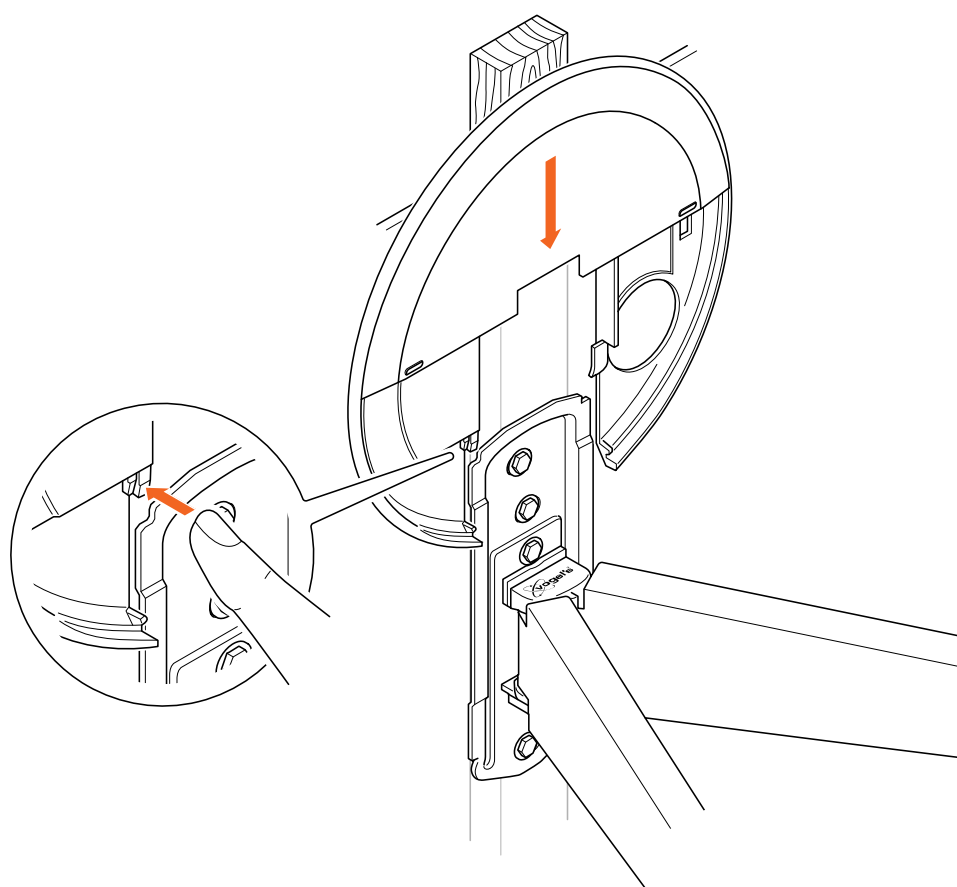

- Slide the **wall plate cover** ⑫ onto the **wall mount** ①. To remove the cover plate, press the left tab and slide it off the wall mount.


## Other wall type / I don't know my wall type



If your wall is a little special – for example, hollow bricks, metal stud walls, wood panels or plasterboard – visit [information for different wall types](https://www.vogels.com/en/c/tv/tv-on-the-wall) (<https://www.vogels.com/en/c/tv/tv-on-the-wall>).

If you aren't sure, don't worry! Just ask your installer, specialist supplier or the Vogel's Consumer Care team at [www.vogels.com/contact](http://www.vogels.com/contact) (<http://www.vogels.com/contact>).


## Step 3: Attach the TV to the wall mount

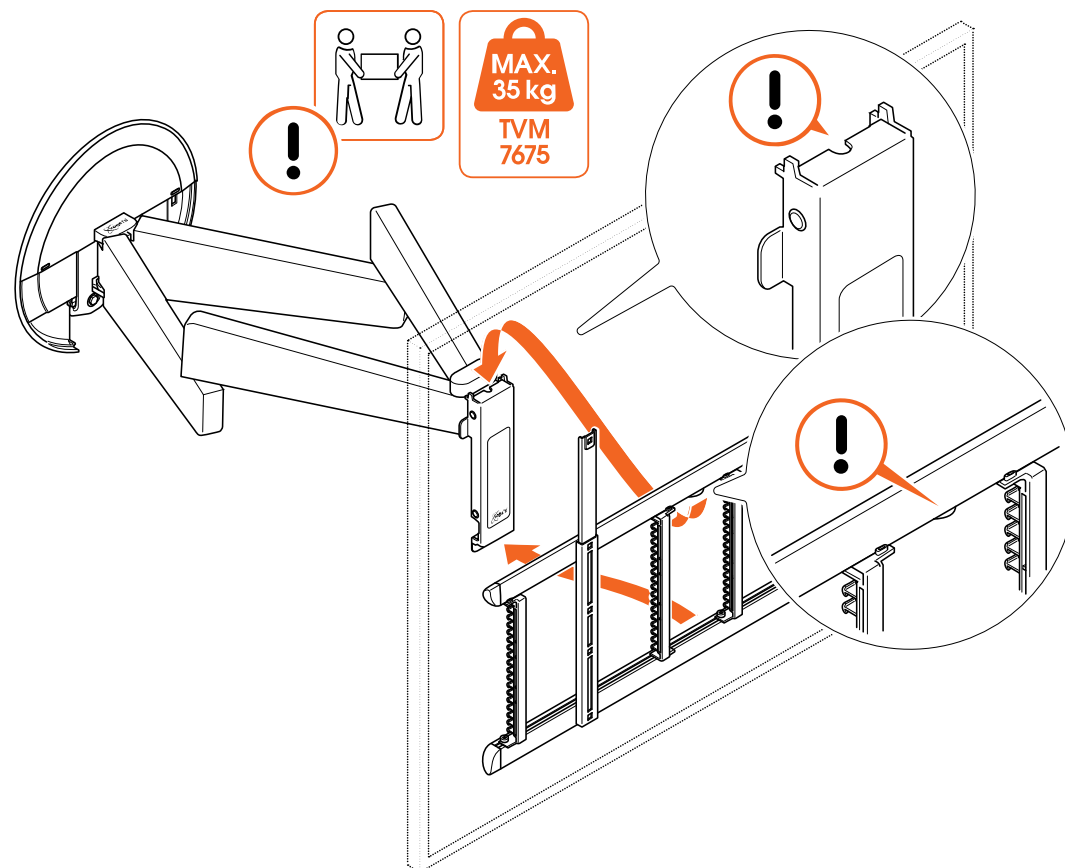


- Carefully lift and attach the TV onto the interface bracket on the **wall mount** ①. Make sure the plug on the interface falls into the notch on the wall mount.




Lifting your TV is a two-person job. Don't be bold!

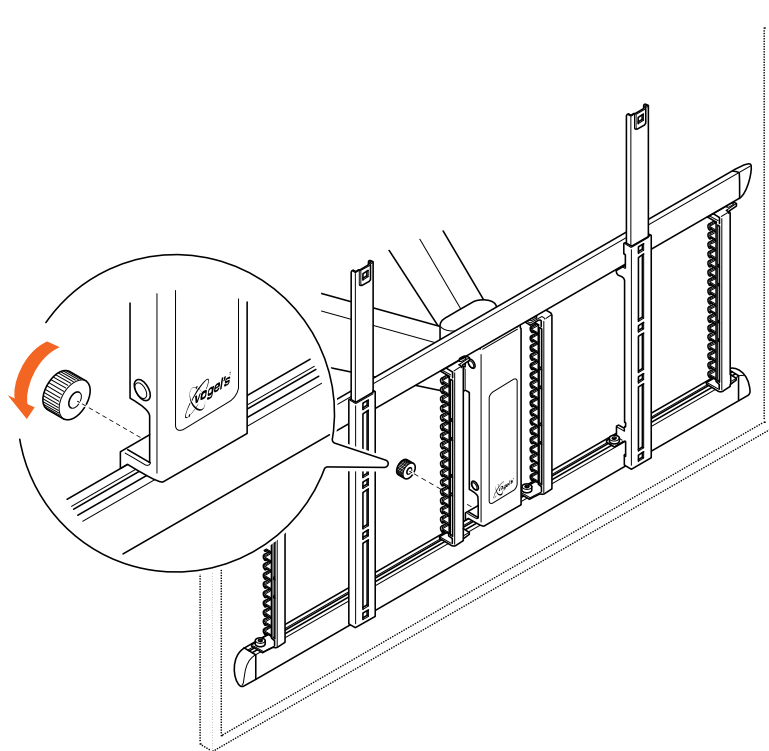

2. Secure the interface to the **wall mount** with the saved **thumbnut** from step 1.

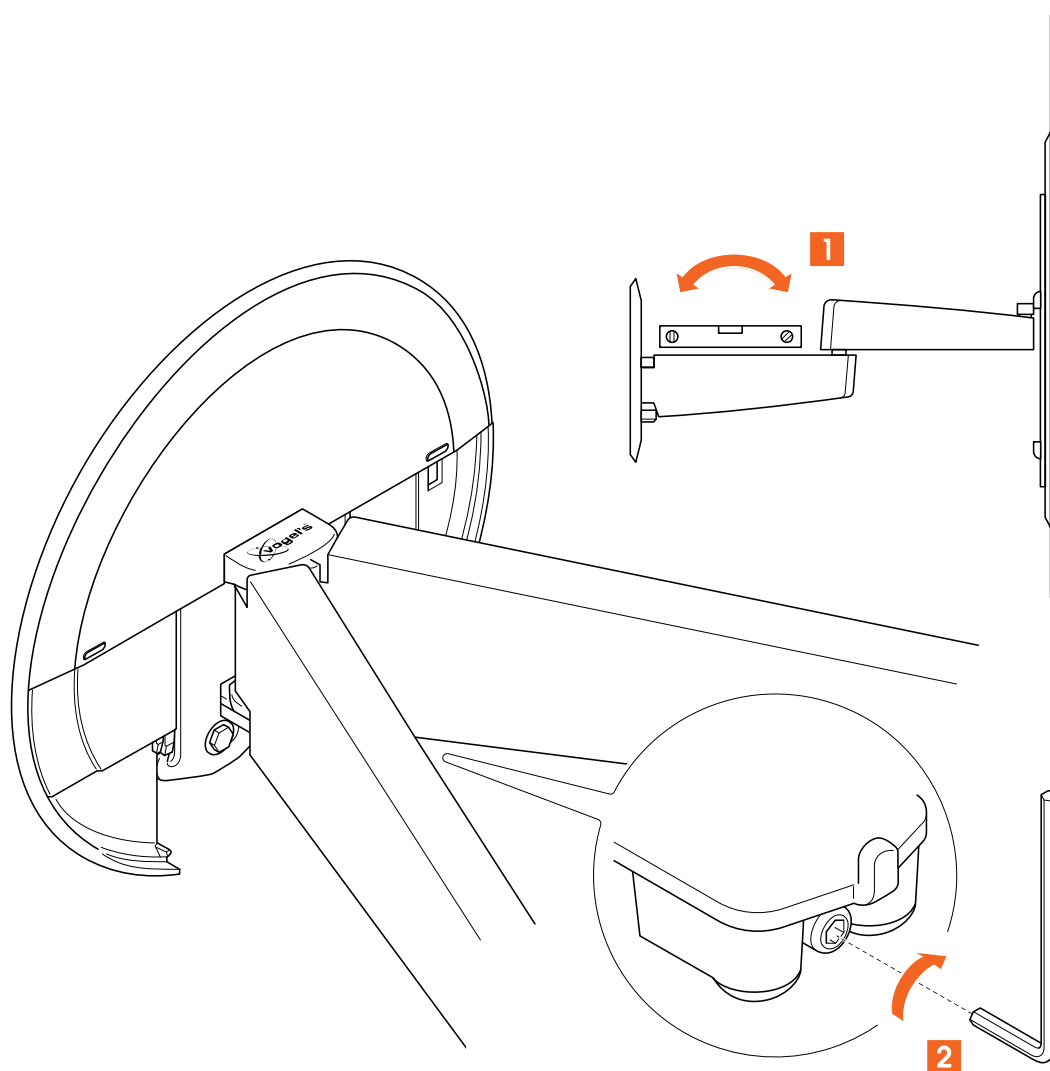

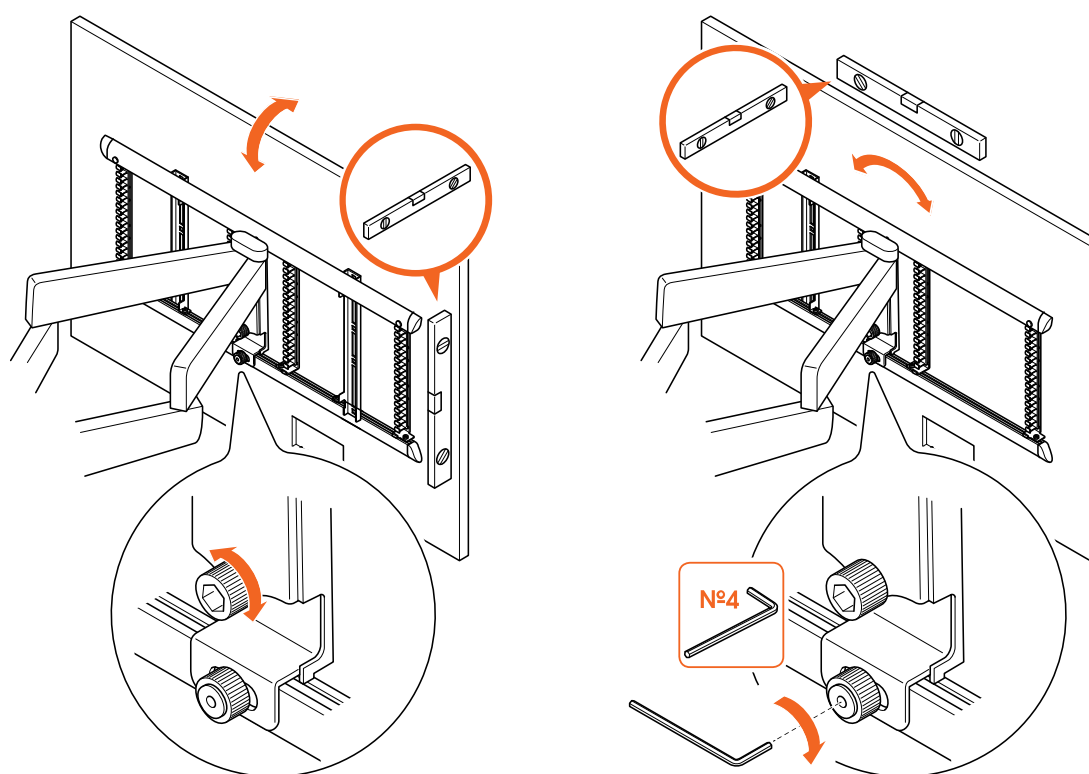


3. Level the **wall mount** and the TV screen. Use a spirit level and the **Allen key** to correct the position. Tighten the **thumbnut** and the **thumb bolt** with the **Allen key** when finished.




The wall mount and TV must be leveled vertically and horizontally before using the wall mount!

## Step 4: Attach the cables to the wall mount

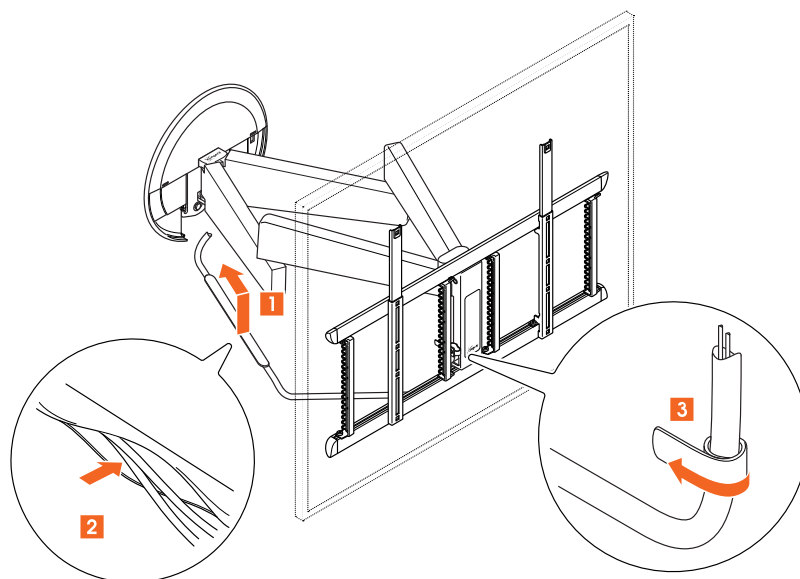


1. Attach the **cable sleeve** ① to the **wall mount** ②, by sliding it into the holes on the bottom side of the right arm.
2. Put the TV power cable and the provided **HDMI 2.0 (2 meter) cable** into the **cable sleeve** ①. Note that if you use a connectbox you need a **4.5 meter HDMI cable** (available on [www.vogels.com](http://www.vogels.com), art. no. 999985).
3. Secure one end of the **cable sleeve** ① to the frame by using the velcro strip.

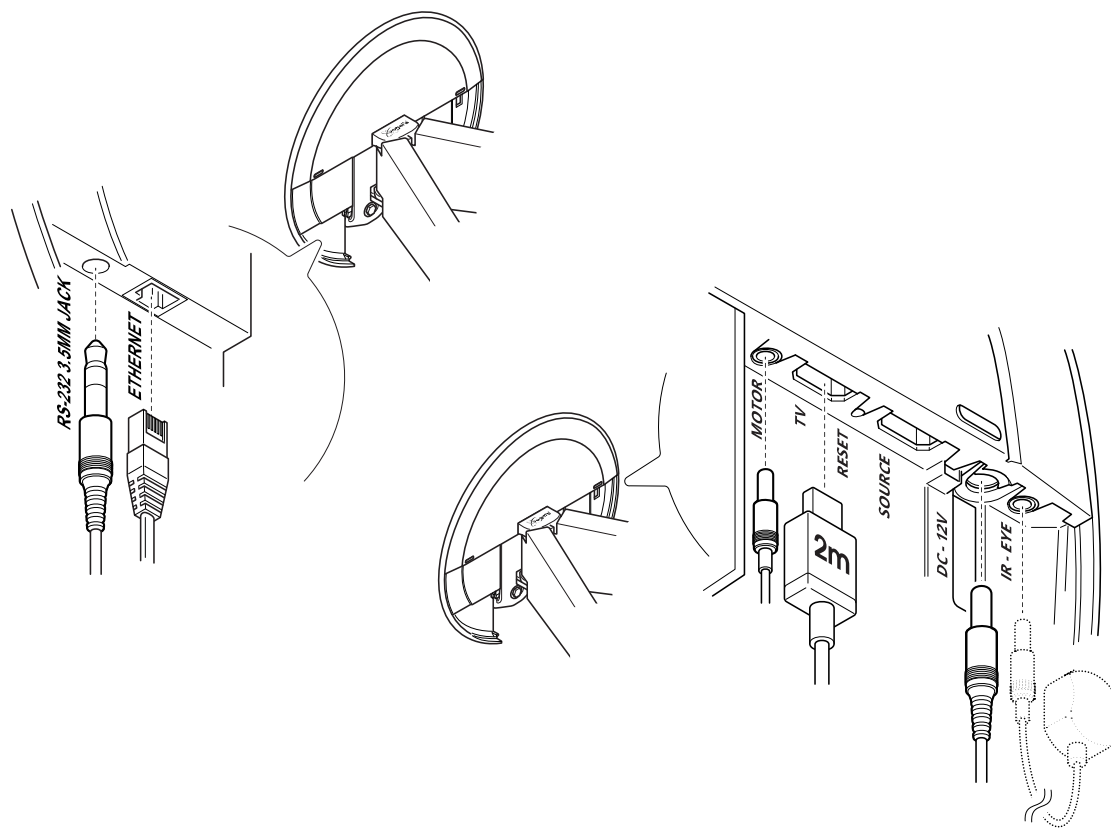


4. Connect the following cables to the wall mount:


- a. Internal motor cable (attached to the bottom side of the wall mount arm)
- b. HDMI 2.0 (2 meter) cable
- c. Power adapter cable
- d. Infra-red eye cable (optional, when using the remote control)
- e. RS-232 3,5mm Jack (TVM 7675 PRO only; cable not included)
- f. Ethernet cable (TVM 7675 PRO only; cable not included)

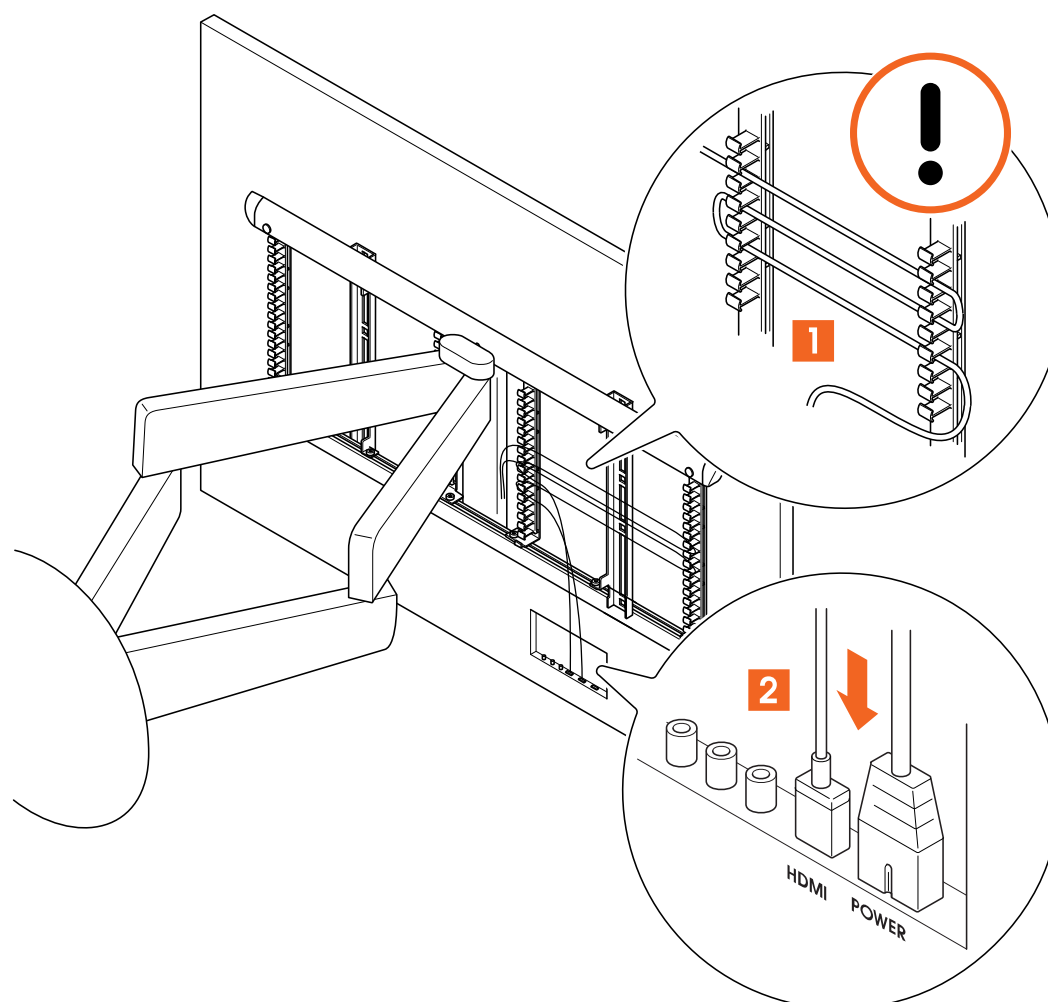

5. Connect the power cable and the **HDMI 2.0 (2 meter) cable** to the TV. Make sure all other cables are neatly stowed away by using the vertical cable clip strips on the **interface**.

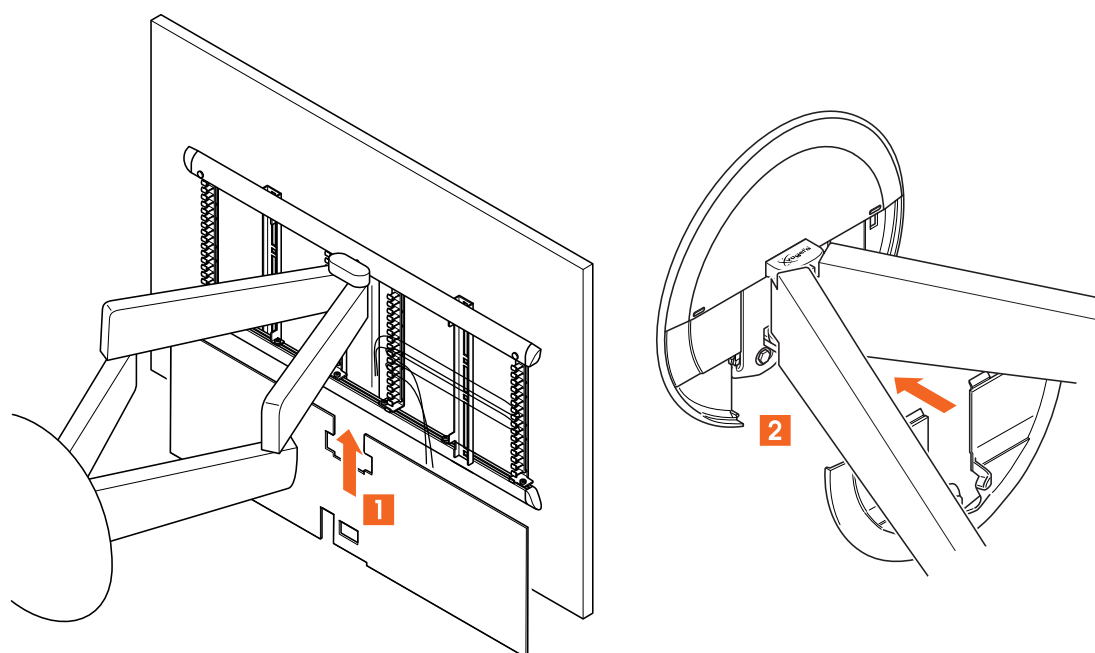

6. Put the **wall plate cover** (K) onto the wall mount and the **interface cover** (Y) onto the back of the interface.

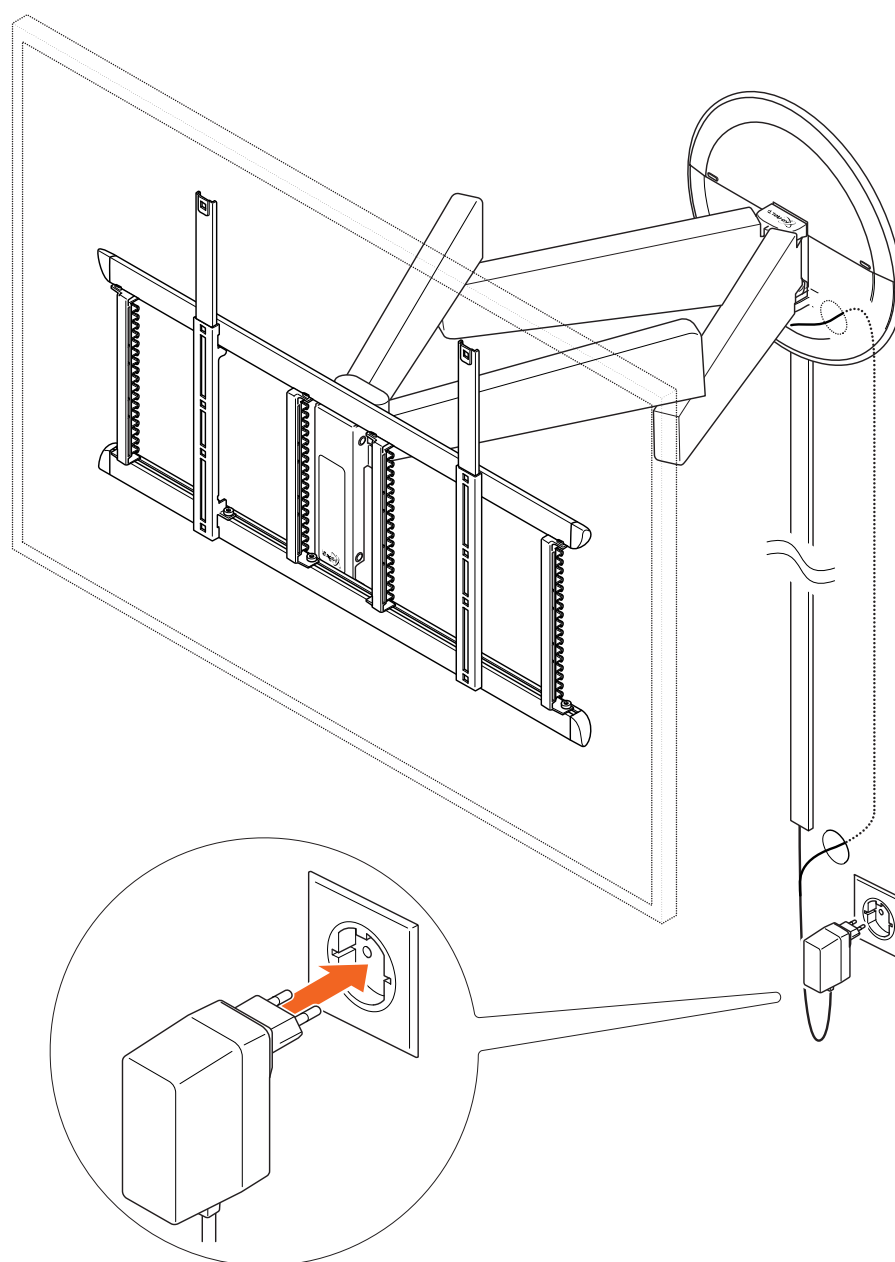

7. Connect the **power cable** (V) to the power outlet.

8. Your MotionMount is now ready to be used!





Need a long HDMI cable? Or a Cable Cover to hide your wall cables? Visit us online and order the right accessories directly through our website (<https://www.vogels.com/en-gb/c/tv-bracket-accessories>).

## Step 5: Connect to the MotionMount SIGNATURE app

The Vogel's MotionMount SIGNATURE app functions as a remote control for the Vogel's TVM 7675 (PRO). It features:

- 7 memory positions for your TV
- Automatic motion management
- Analysis & support
- Sliders for forward/backward and left/right motion

### Set-up the MotionMount SIGNATURE app

1. Make sure your MotionMount is connected to your TV with the provided HDMI cable and that HDMI-CEC is enabled on your TV.



Automatic operation of the MotionMount when the TV is turned on or off is controlled by the HDMI (CEC) setting on the TV.

Note that some TV manufacturers have different names for HDMI-CEC:

- Samsung – AnyNet(+)
  - Sharp – Aquos Link
  - Sony – BRAVIA Link and/or BRAVIA Sync
  - Toshiba – CE-Link and Regza Link
  - LG – SimpLink
  - Panasonic – HDAVI Control, EZ-Sync and VIERA Link
  - Phillips – EasyLink
2. Download and install the MotionMount SIGNATURE app to your tablet or smartphone in the Google Play Store (Android (<https://play.google.com/store/apps/details?id=nl.vogels.motionmount>)) or Apple App Store (iOS (<https://itunes.apple.com/nl/app/motionmount/id1178996865?mt=8>)). Make sure you are always using the latest version of the app.

### Configure your MotionMount

1. Open the MotionMount SIGNATURE app.  
Make sure Bluetooth® is activated on your tablet or smartphone.

2. Select the desired MotionMount.  
The MotionMount SIGNATURE app connects to the selected MotionMount.
3. Follow the set-up procedure to configure your new MotionMount.
4. Add presets by using the **Remote Control button** or the **(+) symbol** from the main menu of the selected MotionMount.
5. Edit the options of a preset by using the **(...) symbol** on the presets panel.  
Pro tip: iOS users can create a Siri command for even greater convenience!

## Manage your settings


To access and manage your settings choose **Settings** from the main menu of the selected MotionMount. From this menu you can:

- Change the name of your MotionMount
- Remove your MotionMount
- Change the configuration of your MotionMount
- Change the HDMI settings
- Manage access to your MotionMount
- Receive support for your MotionMount

## Step 6: Set up the remote control

The infrared remote control (IRC) is specially designed for Vogel's TVM 7675 (PRO). It features:

- 7 memory positions for your TV that match the preset positions in your MotionMount SIGNATURE app
- a home button to bring the MotionMount into a safe position against the wall
- a 4-way touchpad for forward/backward and left/right motion

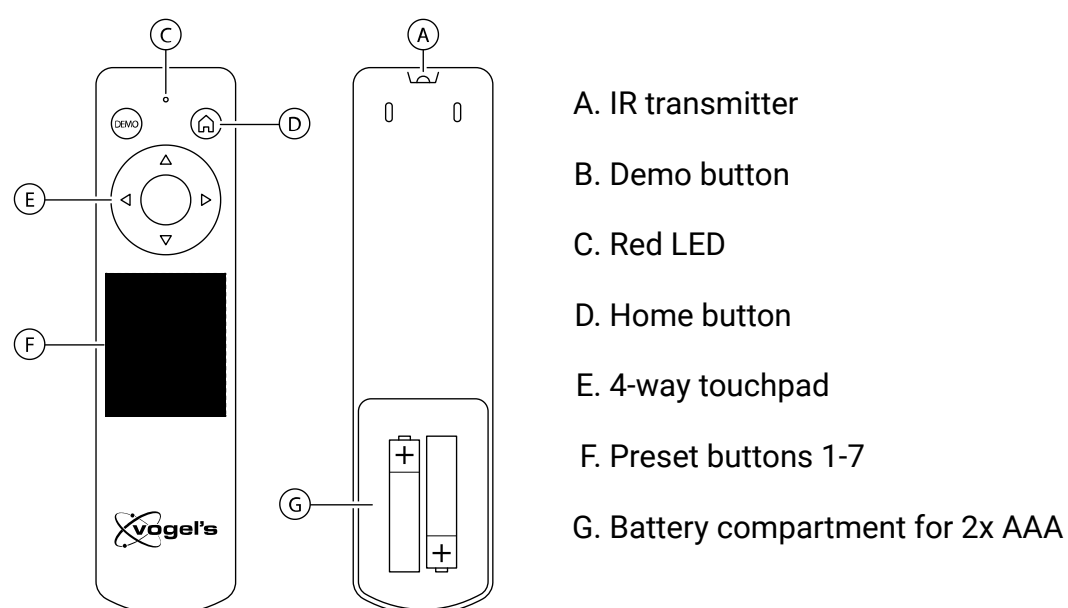

To set up the IRC:

1. Connect the provided **infrared eye cable** to your MotionMount.  
Make sure its **infrared eye** is in view.
2. Put the 2 AAA batteries in the battery compartment of the IRC.

To configure a memory position:

1. Put the MotionMount to the preferred position using the **4-way touchpad** on the IRC.
2. Push and hold one of the seven **preset buttons** (P1-P7) for 5 seconds.


#### Precautions concerning batteries

- When the remote control is not going to be used for a long time, remove the batteries from the remote control to prevent them from leaking.
- If the batteries leak, wipe away the leakage inside the battery compartment and replace the batteries with new ones.
- Do not use any batteries other than those specified.
- Do not heat or disassemble batteries.
- Never throw them in fire or water.
- Do not carry or store batteries with other metallic objects as this may cause the batteries to short-circuit, leak or explode.
- Never recharge a battery unless it is confirmed to be rechargeable.

#### WEEE disposal instructions

Do not dispose of this remote control or its batteries with unsorted household waste. Improper disposal may be harmful to the environment and human health. Please refer to your local waste authority for information on return and collection services in your area.

## Removing your TV

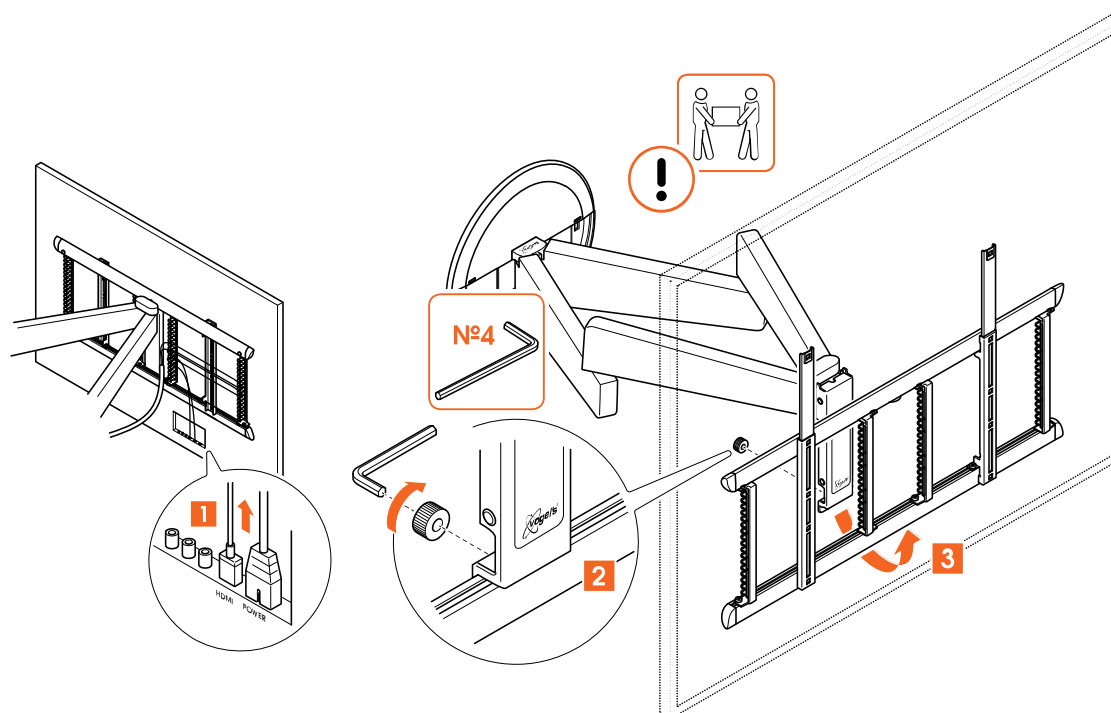

1. Remove all cables from your TV and **interface**.
2. Remove the bottom thumbnut from the **interface**.
3. Lift your TV off of the **interface** bracket, and put it down somewhere safe.



Again, lifting your TV is a two-person job. Always get help.

# Overview of LED states

If the MotionMount is	The status light
On	Is green
Off	Is off
In an error condition	Is red
Accepting a command from the infrared remote	Flashes once
Accepting a 'store preset' command from the infrared remote	Flashes 2 times
Rejecting a command from the infrared remote	Flashes 5 times
Identifying itself	Pulsates green
Applying a firmware update	Pulsates red
Waiting in the bootloader	Is greenish white
Receiving a firmware update	Is purplish
Preparing for reset	Is yellow
Preparing for a network reset	Flashes slowly in yellow
Preparing for a factory reset	Flashes quickly in yellow
Wholly missing a bootloader and firmware	Is faint red

Note: After connecting and switching on the MotionMount for the first time, it is possible that the LED will pulsate red for about 15 seconds. This is the case if a firmware update has become available in the meantime. The firmware is then updated. After this the LED should glow green.

# Technical specifications

	BLE	WiFi (2.4 GHz)
Frequency	2402-2480 MHz	2412-2472 MHz
Power output	-0.4 dBm	19.98 dBm
Antenna gain	2 dBi	3.7 dBi



Please keep separation distance between the antenna and human body of at least 20cm. Operation is prohibited while within this range of exposure.

## Confused? Unsure? Going crazy?

There's plenty of help waiting for you, online:



[info@vogels.com](mailto:info@vogels.com) (<mailto:info@vogels.com>)  
[www.vogels.com/contact](http://www.vogels.com/contact) (<http://www.vogels.com/contact>)



[facebook.com/  
VogelsForSure/](https://www.facebook.com/VogelsForSure/) (<https://www.facebook.com/VogelsForSure/>)



[instagram.com/  
vogels\\_official/](https://www.instagram.com/vogels_official/) ([https://www.instagram.com/vogels\\_official/](https://www.instagram.com/vogels_official/))



[www.youtube.com/  
c/VogelsForSure](https://www.youtube.com/c/VogelsForSure) (<https://www.youtube.com/c/VogelsForSure>)

## Troubleshooting

Found a problem you can't fix? Don't panic... try these!

### Problem

I don't have the right bolts for my TV!

### Cause

The world of TV technology is always changing – it can be hard to keep up sometimes. So, it might be the case that the correct bolt size is not included... you're just too advanced!

### Solution

Just ask Vogel's Consumer Care to request a service kit, and we'll send everything you need. [Click here](http://www.vogels.com/contact) (<http://www.vogels.com/contact>) to contact Vogel's Consumer Care.

---

**Problem**

My wall screws have snapped!

**Cause**

You might not be drilling deep enough... or your drill could be too blunt, so that the hole is too narrow and the screw gets stuck.

**Solution**

Use another hole in the wall plate to fix the wall mount to the wall. Make sure you use a sharp drill of the correct size. Vacuum the hole after drilling. Check if the entire screw (except its head) fits in the hole before placing the plugs.

---

**Problem**

The app is unable to detect the MotionMount. What is the problem?

**Cause**

It is important that the smartphone / tablet's Bluetooth is switched on.

**Solution**

Immediately after starting the MotionMount app, the MotionMount will be detected: Vogel's MotionMount. The app will then continue searching for any other MotionMount. Since the MotionMount has already been detected, this search can be ignored. This is only relevant in the case of multiple MotionMounts.

When operating the MotionMount via the app, a low-power Bluetooth connection is created between the smartphone/tablet and the MotionMount. This means that if the app is not used for 45 seconds, the Bluetooth connection between the smartphone/tablet and the MotionMount will be broken. This saves the smartphone/tablet's battery life. This also allows others to use the MotionMount app. Only one Bluetooth connection is possible at the same time!

---

**Problem**

Occasionally, the TV moves without the TV being switched on or off or the app or remote control being operated. What can I do?

**Cause**

The Automatic movement of the MotionMount when turning on and off the TV is controlled by HDMI (CEC) communication from the TV. Depending on TV brand and/or TV type, it may be necessary to select a different HDMI (CEC) setting.

**Solution**

Choose and try one of the other settings (HDMI-modes) in case MotionMount shows unexpected behavior. As a guide, select mode 1 for a Samsung TV, mode 2 for LG and mode 3 for a Philips TV. Default is mode 3. You can change the mode in the app: Presets > Settings > Automatic Motion > HDMI Detection Method

---

**Problem**

The MotionMount does not return all the way to the wall and/or does not turn completely to the desired position. What is the problem?

**Cause**

- The cable sleeve is not properly installed.
- The wall to which the MotionMount is mounted is not perpendicular.
- The TV has not been specified

### Solution

- Install cable sleeve according to the mounting instructions and make sure that all cables to the TV are routed through the cable sleeve.
- Any slope to the wall must not exceed half a degree. If the wall is sloped more than half a degree, the mount must still be suspended vertically. This can be done by setting the slanted wall correction mechanism in the wall plate of the MotionMount. See mounting instructions.
- In case the correct TV has not been specified (or correct TV width has not been entered during installation/onboarding in the MotionMount app), the turn angle could be limited.

---

### Problem

The automatic movement of the MotionMount when turning on and off the TV is not working. What is the cause of this?

### Cause

The HDMI socket in the wall plate is not connected to one of the HDMI sockets on your TV.

### Solution

This connection is necessary to make the Automatic movement feature work (via HDMI-CEC). And further it is necessary that the HDMI-CEC (Consumer Electronics Control) function is activated in the setup menu of your TV. This function has different name for each TV brand: Anynet+ (Samsung), Aquos Link (Sharp), Bravia Link / Bravia Sync (Sony), CE-Link / Regza Link (Toshiba), Simplink (LG), HDAVI Control / EZ-Sync / VIERA Link (Panasonic), EZ-Sync (JVC), Easylink (Philips), Netcommand (Mitsubishi), Digital Link HD (Loewe).

If all works well, when the TV is turned on/off, the LED in the wall plate will flash twice when the MotionMount detects that the TV is turned on, and will flash 3 times when the TV is turned off. Given the latency of HDMI-CEC, this may take a while.

---


### Problem

I forgot the PIN code. How can I reset the MotionMount to factory settings?

### Solution

Use a small stick or ballpoint to reset the MotionMount. The reset button you will find in the wall plate of the MotionMount.

Note: The default PIN code for both PINs is 0000, which means that the PIN code is disabled.

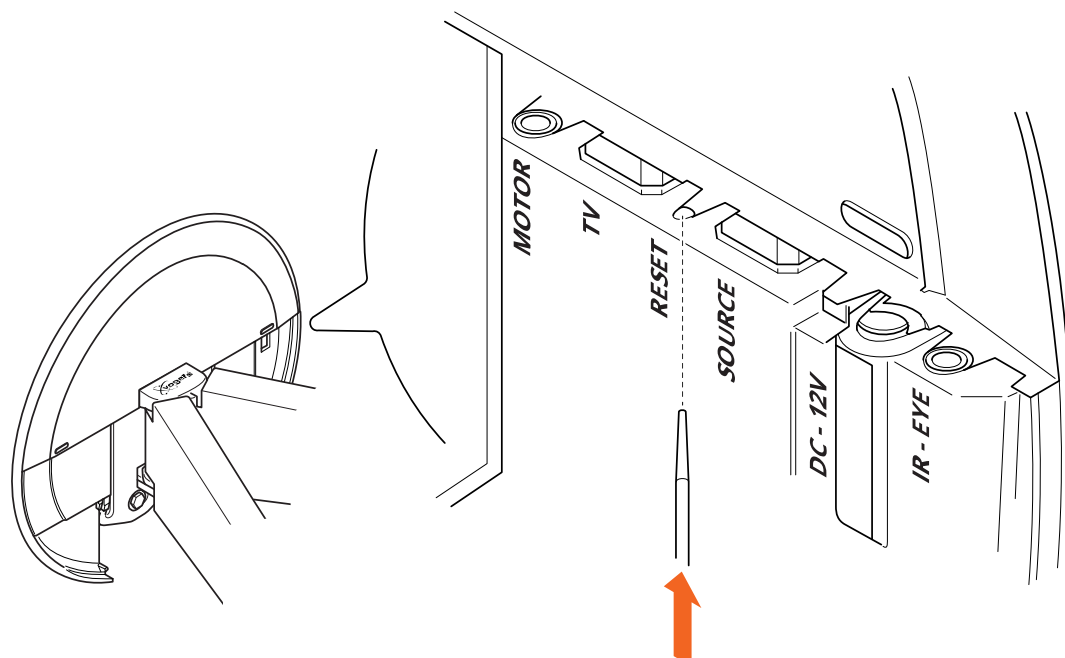

---

**Problem**

The MotionMount is not working at all. What can be the matter?

**Cause**

- The LED on the wall plate is not lit: the mains adapter is not plugged in.
- The LED on the wall plate lights up red: the motor cable is not plugged in properly.

**Solution**

- Plug in the mains adapter.
  - Plug in the motor cable properly.
- 

**Problem**

The infrared remote control is not working. What can be the matter?

**Cause**

The infrared eye is not plugged-in properly.

**Solution**

Check if the infrared eye is plugged-in properly. Make sure that you point the remote control, direct or via reflection, towards the infrared eye.

---

**Problem**

I bought the MotionMount Bluetooth remote control (article number 999965) in the Vogel's webshop, but it is not working with my SIGNATURE MotionMount. What should I do?

**Cause**

The name of your MotionMount in the MotionMount app is not correct.

**Solution**

The Bluetooth remote control can only work with the SIGNATURE MotionMount in case the MotionMount name is Vogel's MotionMount. You can change the name of your MotionMount in the MotionMount app: Presets > Settings > Change MotionMount Name > change to: "Vogel's MotionMount"

**Problem**

The MotionMount does not turn the full range of 120°. What is the matter?

**Cause**

To prevent the TV from hitting the wall, the MotionMount is set at the factory for the largest TV allowed (77 inch TV with width of 170 cm)

**Solution**

As a result, the total angle of rotation is less than 120 degrees. By specifying the correct TV (or entering the correct TV width) during installation/onboarding in the app, the angle of rotation will increase (up to 120 degrees for screens of 65 inches and smaller).

In case of other issues / questions, please contact: [consumercare@vogels.com](mailto:consumercare@vogels.com)  
(<mailto:consumercare@vogels.com>)

## FAQs

---

Where can I request the correct bolts for my TV (a service kit)?



Whatever you need, simply contact your local Vogel's dealer or Vogel's. [Click here \(http://www.vogels.com/contact\)](http://www.vogels.com/contact) to contact Vogel's Consumer Care.

---

Where can I find installation videos?

Click or tap the button on the front page of this manual. The installation video can be found at the product page of your product on our website. It can also be found on our YouTube channel: [www.youtube.com/c/VogelsForSure](http://www.youtube.com/c/VogelsForSure) (<http://www.youtube.com/c/VogelsForSure>).

---

What if I need spare parts?

You can buy some spare parts on our webshop. Please visit the service kits/spare parts page from the bottom menu [on our website \(https://www.vogels.com/\)](https://www.vogels.com/) or enter the product type number in the search bar. If you require a different part or if a part is missing, please contact your local dealer or [Vogel's Consumer Care \(http://www.vogels.com/contact\)](http://www.vogels.com/contact).

---

Where can I find the drilling template?

The drilling template is printed on the inlay card in the box. You can cut it out for your convenience.

---

How high do I need to hang my TV?

The center of your TV should ideally be positioned at eye level, while seated. When a wall mount with tilt function is used, your TV can be mounted above eye level. Download and use the free [DrillRight app \(https://www.vogels.com/DrillRight\)](https://www.vogels.com/DrillRight) to determine the height of the TV and to mark the first hole.

If you cannot use the app or want to calculate the height, please see our [instructions for manual positioning \(https://downloads.vogels.com/en/FAQ-drillrightapp-2024.pdf\)](https://downloads.vogels.com/en/FAQ-drillrightapp-2024.pdf) (available online in English only, available upon request in French, German and Dutch).

---

'I'm stuck in the DrillRight app, what should I do?'

Please check out our [Frequently Asked Questions about the DrillRight app \(https://downloads.vogels.com/en/FAQ-drillrightapp-2024.pdf\)](https://downloads.vogels.com/en/FAQ-drillrightapp-2024.pdf) (available in English only).

---

Which bolts or screws do I need to use?

Vogel's offers a complete assembly kit with all mounting materials included in the box, for both your TV and wall. Vogel's offers a complete assembly kit with all mounting materials included in the box. Do you miss the correct bolts for your TV? Please contact your local Vogel's dealer. [Click here \(http://www.vogels.com/contact\)](http://www.vogels.com/contact) to contact Vogel's Consumer Care.

---

Why do you use Fischer® plugs?

The Fischer® DuoPower plug is widely regarded as the best standard in plugs. Don't settle for less!

---

What is VESA?

VESA is a standard pattern of mounting location holes on the back of a TV which allows many standard TV mounts to be easily fitted to your TV.

---

What is the minimum screen size of the TV in combination with the wall mount?

The minimum screen size is 40 inch (102 cm).

---

What is the maximum screen size and weight of the TV in combination with the tv wall mount?

The maximum screen size is 77 inch (196 cm) and maximum weight is 35 kg (77 lbs). The Electronic Screen Protection System (ESPS®) prevents your TV bumping onto the wall.

---

Does this product have a tilt function?

There is no tilt in this product.

---

Can the DesignMount TVM 7655 be upgraded to MotionMount?

No, that's not possible.

---

What is the guarantee of this wall mount?

Vogel's gives you a 15 year guarantee for defects in materials and manufacturing of the wall mount. The guarantee is 2 years for the motor units and electronics.

---

What is the standby power consumption of this wall mount?

The standby power consumption is less than 0.5 Watt.

---

Is it possible to turn the TV manually ('manual override')?

Yes, it is possible to turn the TV manually.

---

What is the maximum turn angle?

The maximum turn angle is 120° (2x 60°).

---

What is the maximum distance the TV can move from the wall?

The maximum distance from the wall is 72 cm.

---

Is there any risk for trapping, squeezing or injury to people while the mount is moving automatically?

The integrated slip-hinge and electronic protection circuit (which switches off the motors in case of too much friction), pinching will be prevented.

---

Is there also a special OLED version of the MotionMount?

No, there is no dedicated OLED version. The VESA interface is also optimized for OLED.

---

Do I need to adjust settings to my TV after installation?

Yes. To make the Automatic movement feature working, it is important that the HDMI-CEC (Consumer Electronics Control) function is activated in the setup menu of your TV. This function has different name for each TV brand: Anynet+ (Samsung), Aquos Link (Sharp), Bravia Link / Bravia Sync (Sony), CE-Link / Regza Link (Toshiba), Simplink (LG), HDAVI Control / EZ-Sync / VIERA Link (Panasonic), EZ-Sync (JVC), Easylink (Philips), Netcommand (Mitsubishi), Digital Link HD (Loewe).

---

Do I need to connect my TV to the MotionMount?

Yes. To make the Automatic movement feature working, an HDMI cable needs to be connected between the HDMI connector in the wall plate of the MotionMount and one of the HDMI connectors of your TV. A 2m HDMI cable is included in the MotionMount packaging.

---

Can I use the MotionMount in combination with a TV with 'connect box' (f.e. Samsung TV with One Connect Box)?

Yes, the MotionMount can be used with TV and connect box. Vogel's offers a 4,5m thin white colored HDMI cable which can be connected between the HDMI connector in the wall plate of the MotionMount and one of the HDMI connectors of the TV connect box. This long HDMI cable is available in the Vogel's Webshop (Vogel's article number 999985).

---

Is the MotionMount provided with a remote control?

Yes. An infrared remote control is included in the packaging of the MotionMount. The MotionMount can also be controlled by Bluetooth remote control. This Bluetooth remote control is available in the Vogel's Webshop (Vogel's article number 999965).

---

Which devices support the SIGNATURE MotionMount app?

- Apple iOS 13 and newer / iPhone 6S and newer
- Apple iPadOS 13 and newer / iPad Pro, iPad Air 2 and newer, iPad mini 2019, iPad mini 4, 9.7-inch iPad 2017 and newer
- Android OS 10.0 and newer

Note: Only the latest iOS and Android OS version is actively supported and tested by Vogel's.

---

How many preset positions can be stored with the app and remote control?

Up to seven preset positions can be stored.

---

Does the app control make use of Bluetooth connection with the MotionMount?

Indeed, the app control makes use of Bluetooth ('low energy') 5.0 connection. The Bluetooth of your smartphone / tablet needs to be switched on while using the app.

---

What does the 'Freeze position' function do?

The Freeze position function can be found in the app (Settings – Automatic Motion Management). In case Freeze position is disabled, your TV will return to last used position when TV is switched on. In case Freeze position is enabled, your TV will always return to the same position when TV is switched on.

---

Is it possible to control the MotionMount by voice?

Yes, this is possible for Apple users. With iPhone and iPad it is possible to move your TV to one of the presets by voice. This is based on Siri Shortcuts.

---

Is it possible to control the MotionMount via RS-232 and/or Ethernet connection?

With the MotionMount PRO (TVM 7675 PRO), it is possible to control the MotionMount by RS-232 and Ethernet commands.

---

How many wall sockets for powering the TV and this product do I need?

You need two wall sockets. One for your TV and one for the MotionMount (mains adapter).

---

Why are there 2 HDMI sockets in the wall plate of the SIGNATURE MotionMount?

One of the HDMI sockets is for the connection of the MotionMount with your TV. The HDMI socket in the wall plate needs to be connected with one of the HDMI sockets on your TV. This connection is necessary to make the Automatic movement feature work (via HDMI-CEC). The second HDMI socket in the wall-plate allows you to connect a peripheral device to your TV

without having to route an HDMI cable through the mount to the TV. This second connector is a so-called 'HDMI loop-through' connection. Your digital set-top box, Blu-ray player, etc. can therefore be connected in the wall plate.

---

Can a soundbar or AV receiver be connected to the second HDMI connector in the wall plate?

Yes. In this case, the HDMI cable between MotionMount and TV must be connected to the HDMI ARC (Audio Return Channel) socket on your TV (or TV connect box).

---

Can I use the Vogel's cable cover TVA 7000 together with this product?

Yes, the TVA 7000 cable cover is specially developed for the SIGNATURE MotionMount (and DesignMount). This cable cover fits seamlessly with the wall plate of your SIGNATURE wall mount. The cable cover is available in black and white. Please mount the wall mount at a height of 115 cm from the floor.

---

Are all cables and mounting materials included?

Yes, all cables and mounting materials are included.

---

Is the drilling template of the SIGNATURE MotionMount (TVM 7675) the same as of the DesignMount (TVM 7655)?

Yes, the drilling template is the same for all SIGNATURE Series products.

---

Are the drilling holes of the SIGNATURE TV wall mounts (wall plate) in the same position as those of the NEXT TV wall mounts?

Yes, although the wall plate has a different shape, the positioning of the four holes has remained the same.

---

What mains voltage range and frequency are suitable for the MotionMount?

The mains (AC) voltage range of the adapter is 100 – 240 Volt, 50 / 60 Hz.

---

Can I level this mount both in horizontal and vertical direction?

Yes, with 3D-LEVELING™ you always get your TV level. This feature includes slanting wall correction and precise after-installation leveling (horizontally and vertically).

---

How high is the quality of HDMI signal that comes out of the 'HDMI loop-through' in the MotionMount wallplate?

Full-HD (1080p) signals can be transmitted without problems. HDMI signals up to 4K/60Hz can be transmitted depending on the quality of the HDMI cable and source. In case you want a higher quality HDMI signal it is recommended that you connect the source directly to your TV.

In case of other issues / questions, please contact: [consumercare@vogels.com](mailto:consumercare@vogels.com)  
(<mailto:consumercare@vogels.com>)

## Go green!

---

We care about the planet. If you're getting rid of the packaging or the TV mount itself, please check your municipality's guidelines for the best disposal options near you. For information about the materials used in the packaging, visit [www.vogels.com/recycle](http://www.vogels.com/recycle) (<https://www.vogels.com/recycle>). Recycling matters!



## Guarantee

---



Thanks again for choosing Vogel's! Durability is paramount in the development and production of our products. That is why Vogel's gives you a 15 year guarantee for defects in materials and manufacturing. For defects in electronic parts we provide a guarantee of 2 years, unless local statutory law and regulation dictate a longer minimum period. We resolve any issues regarding product complaints or returned products and assess all complaints based on usage.

If your product is not functioning properly due to material faults or manufacturing defects, we will repair it free of charge or replace it at our own discretion.

If you have any problems with our product or want to know whether the guarantee is applicable, please:

1. Complete the contact form or mail our Consumer Care Team. Preferably, please add a picture.
2. Within 2 business days you will be contacted by our local Vogel's distributor.
3. If the guarantee is invoked, the product should be returned, together with the original purchase document (invoice, sales slip or cash receipt). The purchase document should clearly show the name of the supplier and the date of purchase. You will be informed about the specific return address and further procedure.

Vogel's guarantee shall lapse in the following cases:

- If the product has not been installed or used in accordance with the instructions;
- If applicable, if the holes in the wall have not been properly drilled in accordance with the Vogel's installation instructions for the applicable wall type;
- If the product has been altered or repaired by someone other than Vogel's;
- If a fault arises due to external causes (outside the product) such as for example lightning, water nuisance, fire, scuffing, exposure to extreme temperatures, weather conditions, solvents or acids, wrong use or negligence;
- If the product is used for different equipment than is mentioned on or in the packaging.

Do you have any other questions? Please make use of our contact form.