

CELLO

WebOS TV

 
Operating Instructions

All Models With DVD

Contents


- 3 What's in the box
- 3 Fitting the stand
- 4 Connecting the Aerial
- 5 First time installation
- 20 How to switch between satellite and TV
- 21 Changing Source
- 22 How to download apps from the WebOS store
- 25 How to access FreeviewPlay catchup
- 27 How to set up and manage Favourites
- 33 How to move channels in your favourite list
- 36 Recording & Playback
- 47 DVD Function
- 48 Maintenance, Disposal & Recycling

What's in the box

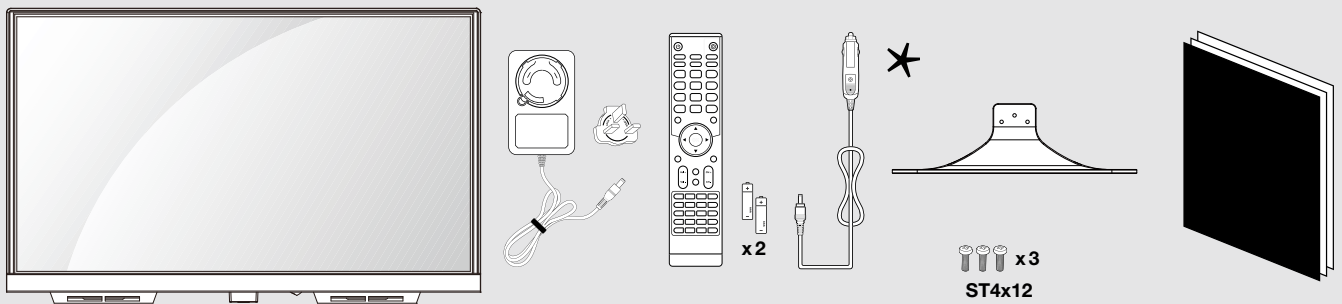


Fitting the stand


 
1

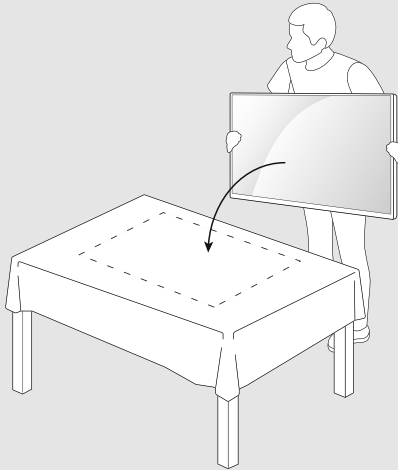

2

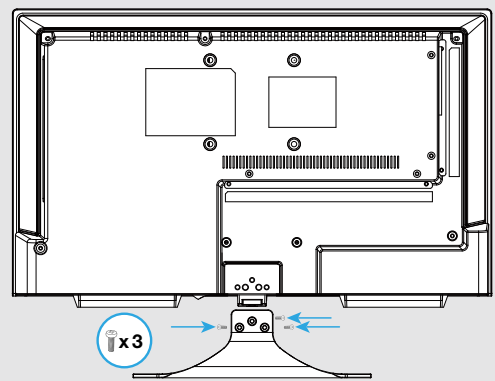 


3

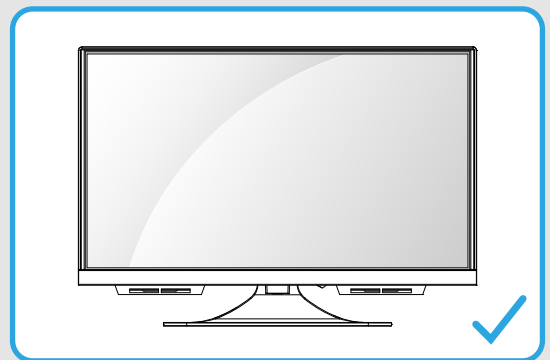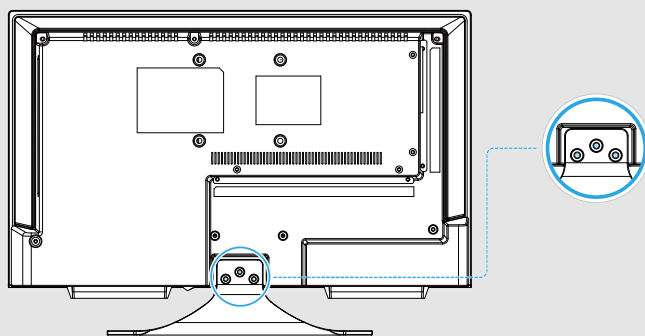  

★ Only on Traveller model

 Aerial installation

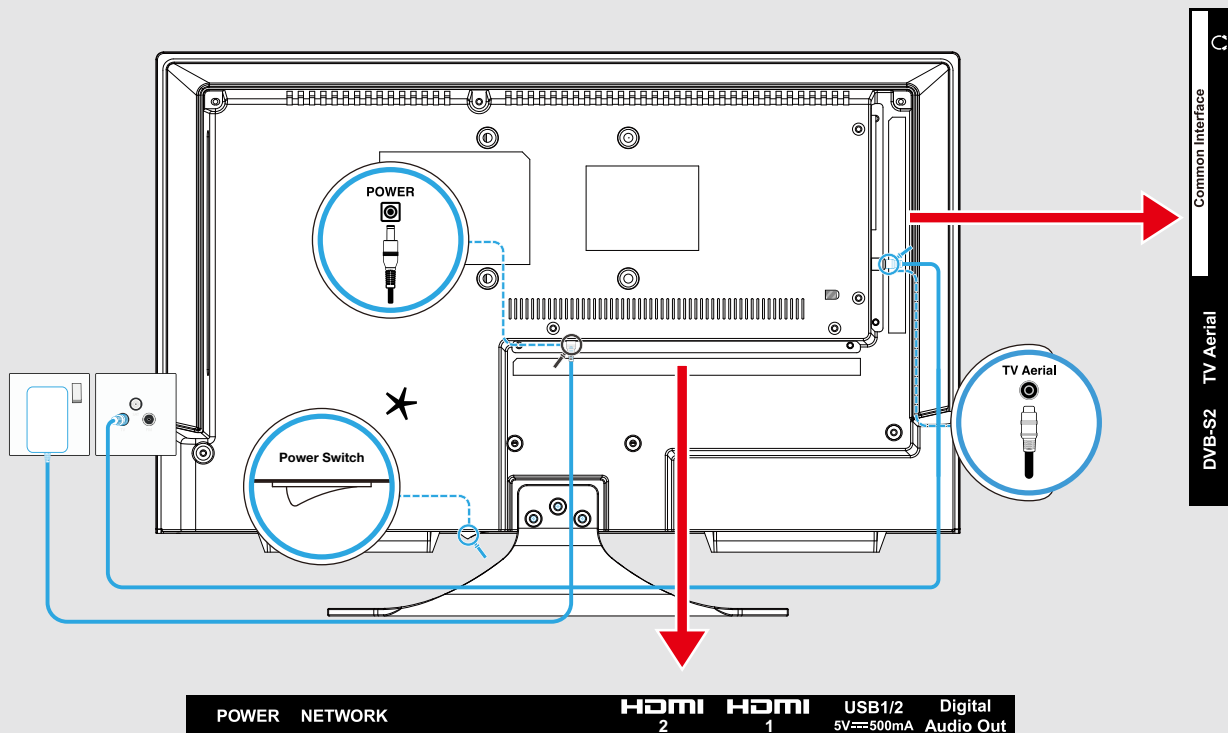


We invite you to read this user manual carefully and completely before installing and using your device.

It is important that this user manual be kept with the device for further consultation. If this device is to be transferred to another person, make sure the user manual follows the device so that the new user can be informed of the operation of the device.

✳ Only on Traveller models

 First Time Installation Instructions

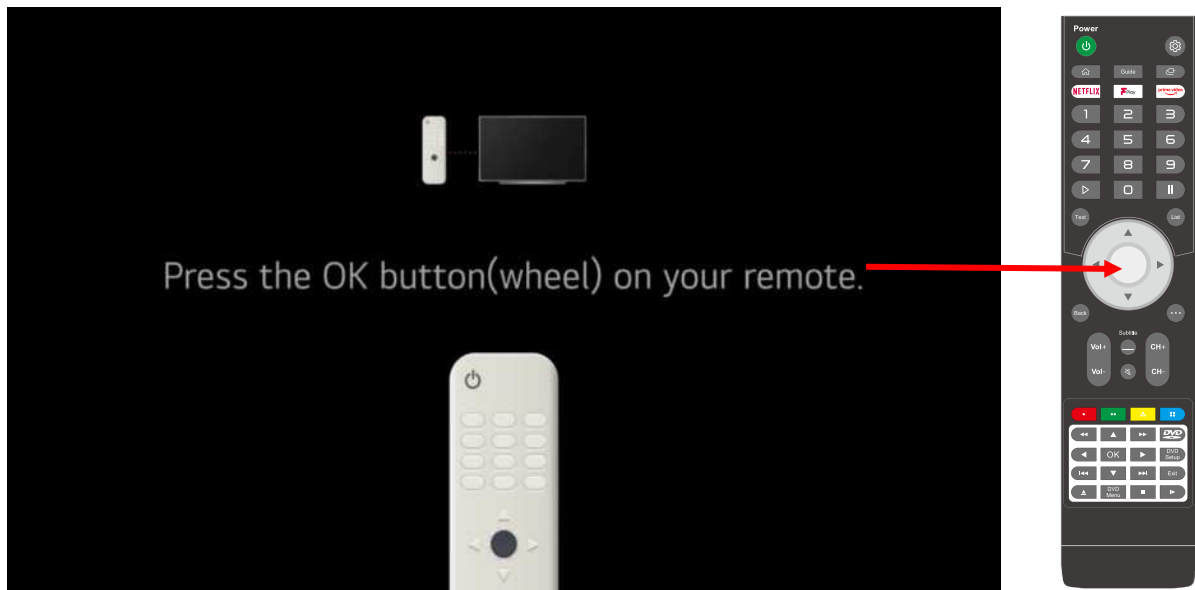

After switching on this screen will be displayed, press the OK button on the remote



 
Select you language then press the right arrow on the remote to select Next and then press the OK button




Select your country and press the right arrow to select Next button then press OK




If you want to turn off the Audio Guidance function then select No if you want to keep the Audio Guidance turned on then select Yes. Whatever you decide it can be reversed later in the Menu functions. Click OK button when you have made your choice.

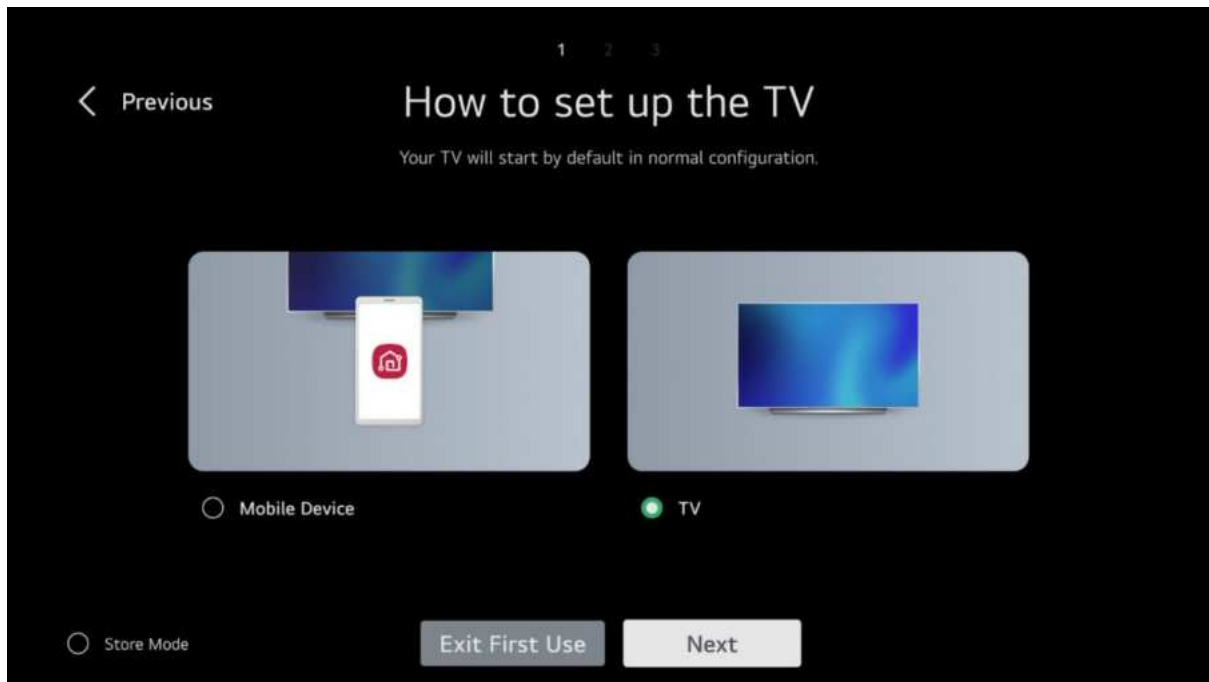

 
If you already have a ThinQ account then you can set up the TV using your mobile otherwise select TV (default) to continue TV set up select Next and press the OK button.

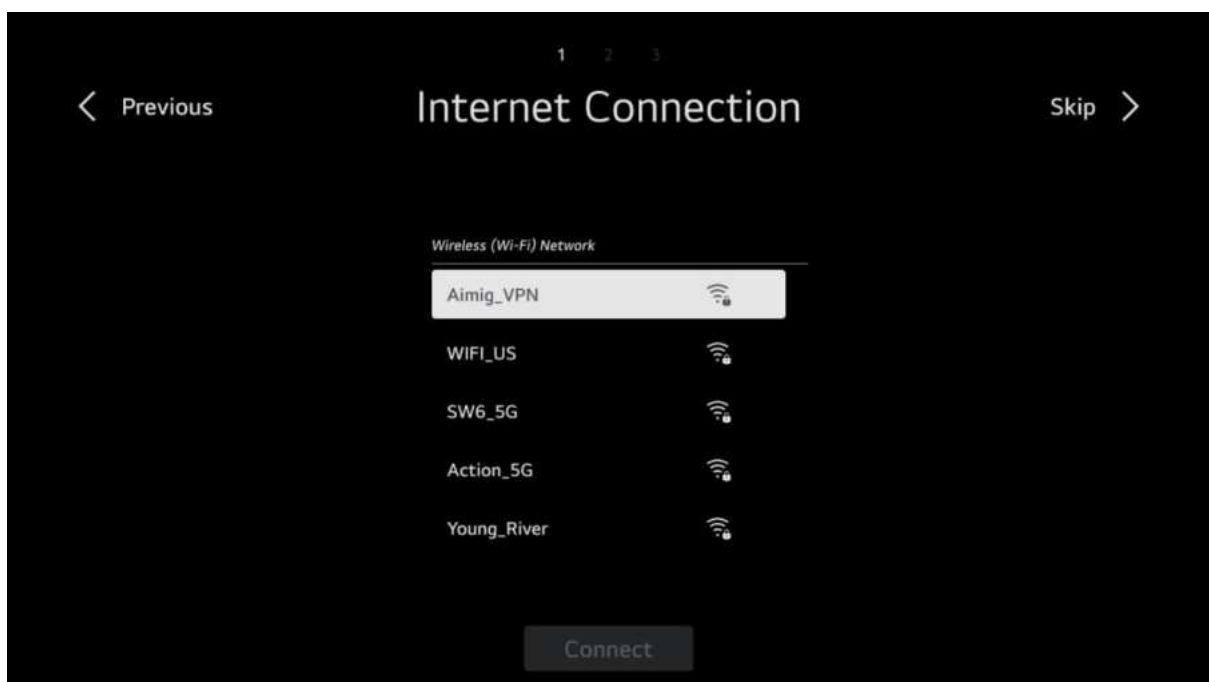

 
Select your WiFi from the displayed list. Please note you can Skip this step but if you do you cannot use any Freeview Play functions or any Apps, both of which require an internet connection.

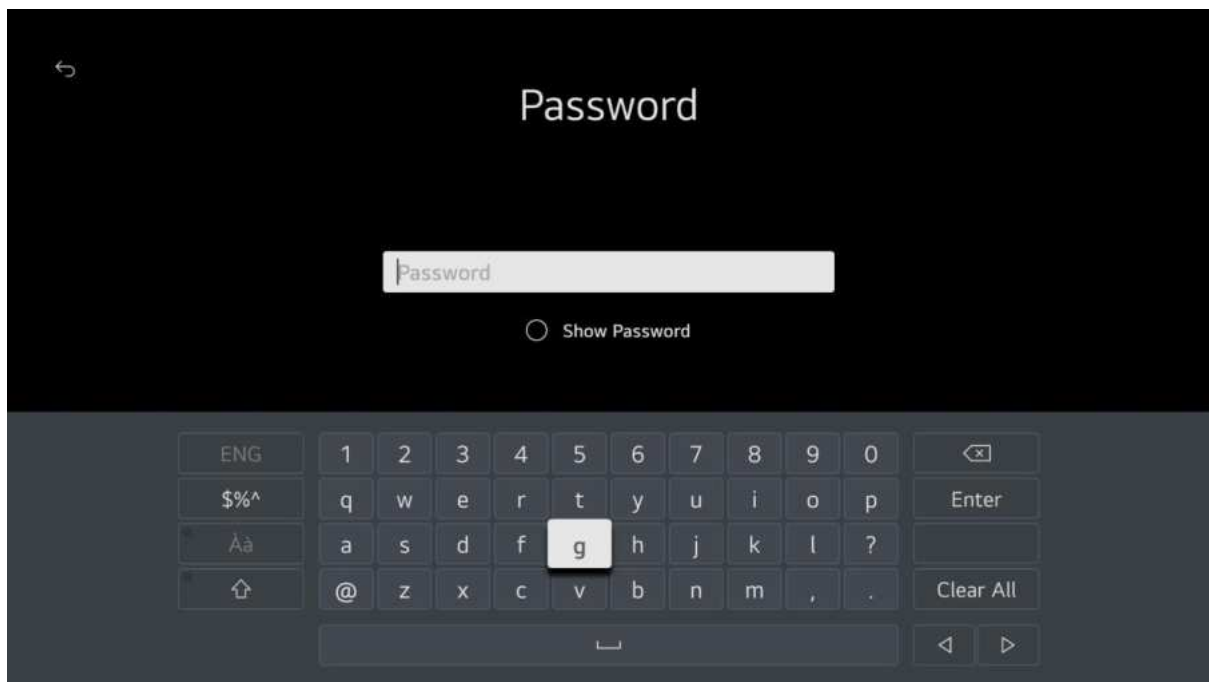

 
Enter the password for you WiFi using the on screen keyboard and the arrow keys on your remote.

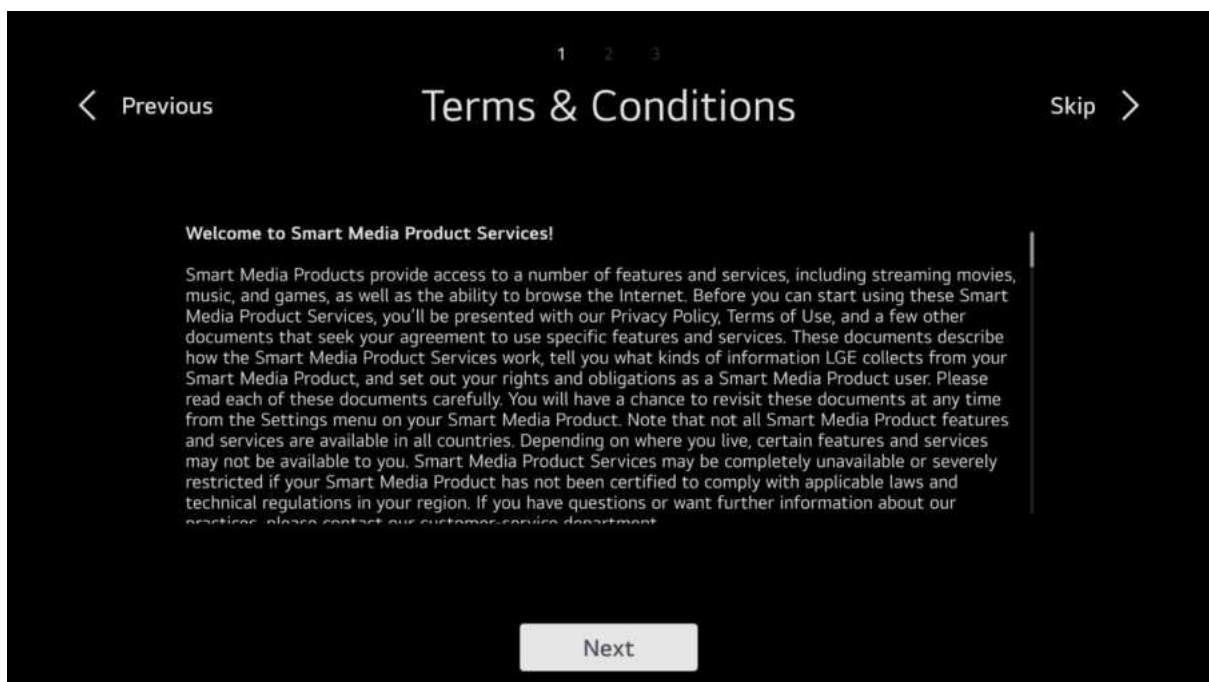

 Select Next and press OK to accept the terms and conditions, please note you can skip this by selecting Skip at the top right but if you do that some functions of the TV will not be available and the TV might not work as you expect.

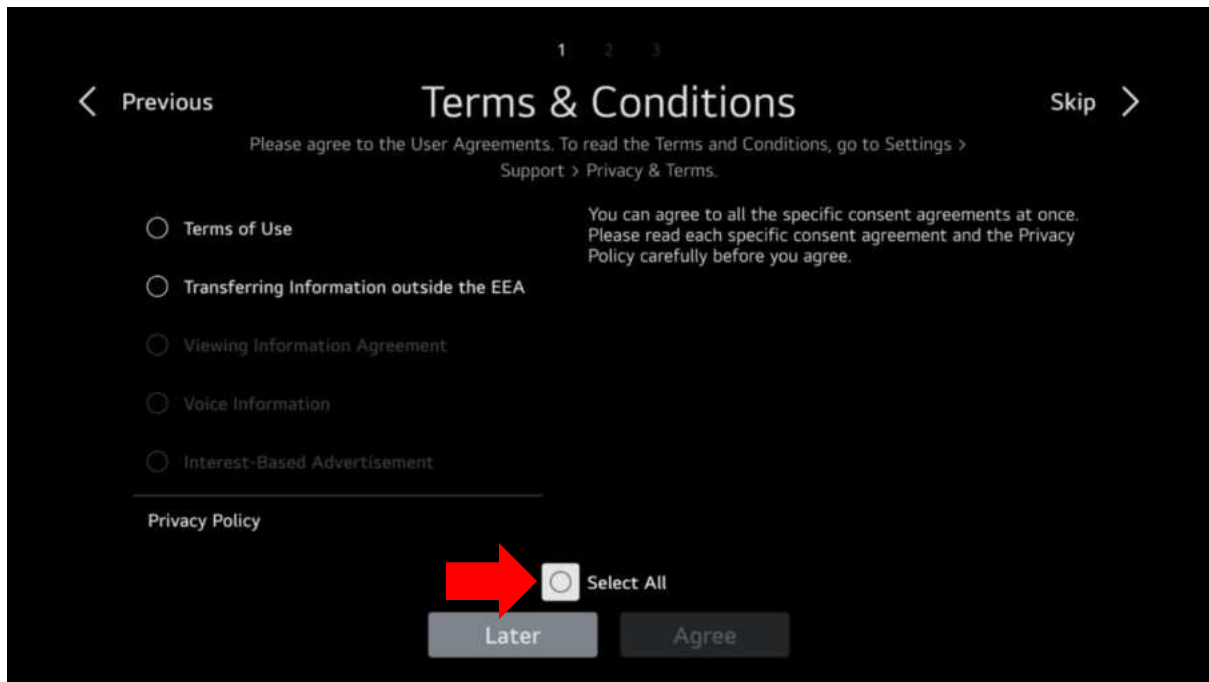

 
Please select 'Select All' and press OK, you can skip this but as mentioned previously this could result in some functions not working.

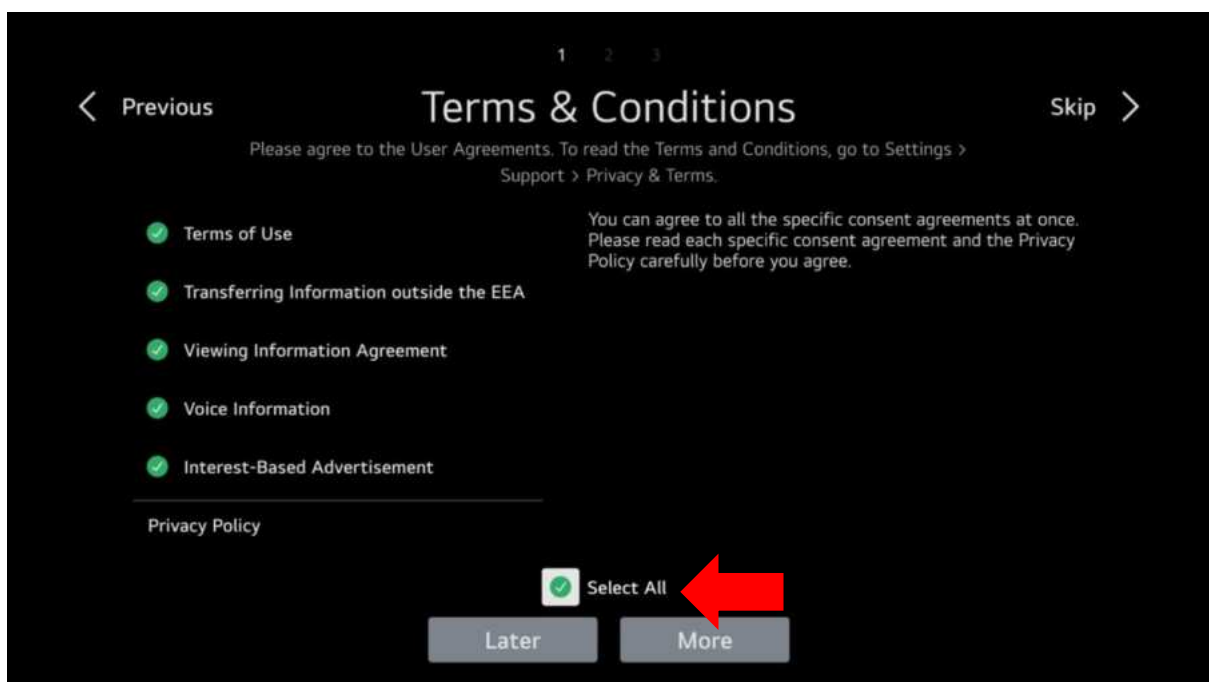

Click Select All Then select more and press OK



 Then Click Agree

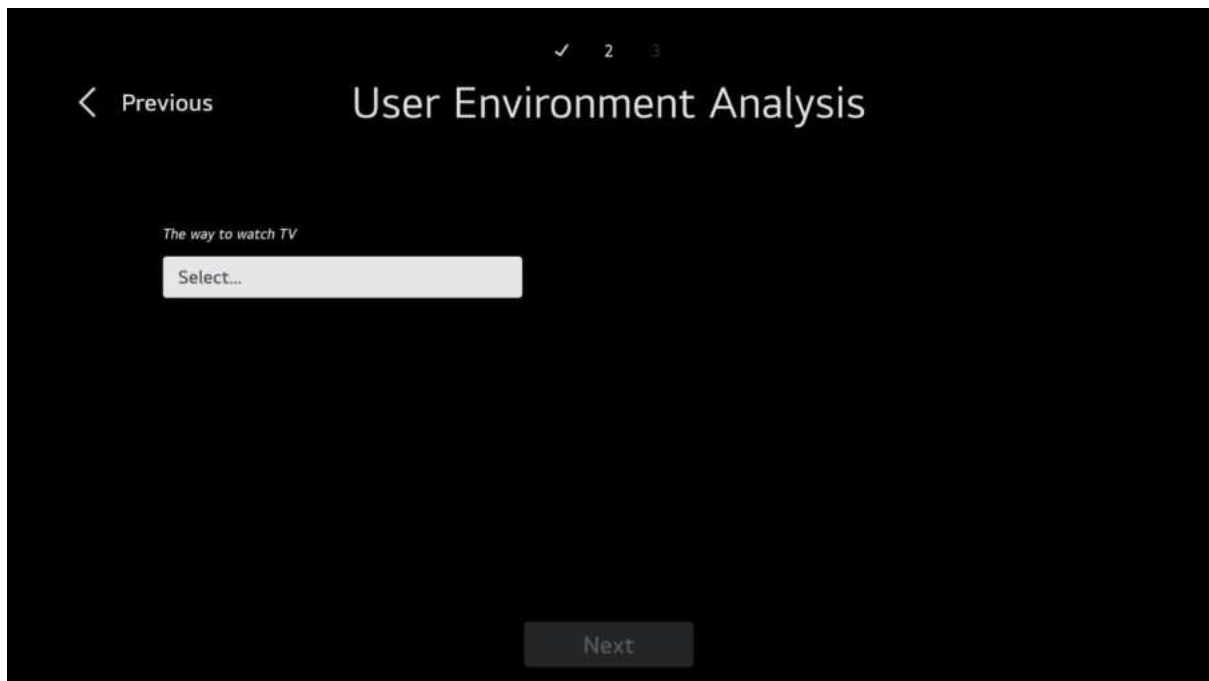

Click OK to open the options

✓ 2 3

< Previous

User Environment Analysis

The way to watch TV

Select...

- Set-Top Box Only
- TV Only
- TV & Set-Top Box
- None

Next

You need to specify how you will use the TV, if you will use an external box such as SKY or Virgin then choose set top box only, if you have no external box then choose TV only or if you will use both the set top box and the TV then choose TV & Set Top Box, if you will not watch any kind of TV and only use apps/DVD then select None. Please note you may only get 2 options depending on what is connected to the TV at the time of installation. Whatever you choose select Next then press OK.

✓ 2 3

< Previous

Broadcast Address Settings

Service Area Postcode

Enter...

ENG 1 2 3 4 5 6 7 8 9 0

\$%^ q w e r t y u i o p

Àà a s d f g h j k l ?

⌂ @ z x c v b n m , .

Enter

Clear All

⏪ ⏩

Please enter your postcode, this is required for getting the correct regional broadcast variations. Then select Next and press OK on your remote.

✓ 2 3

< Previous **Check Settings and set your address**

Select the following setting item and set it.

Service Area Postcode

Enter...

ENG	1	2	3	4	5	6	7	8	9	0	⌫
\$%^	q	w	e	r	t	y	u	i	o	p	Enter
Àà	a	s	d	f	g	h	j	k	l	?	🔊
↵	@	z	x	c	v	b	n	m	,	.	Clear All

⌂

⏪ ⏩

Enter your postcode, this is used to get the correct regional programmes on satellite

✓ 2 3

< Previous **Check Settings and set your address**

Select the following setting item and set it.

 
Service Area Postcode

dl14 6xw


Next

ⓘ Help


After entering your postcode click Next

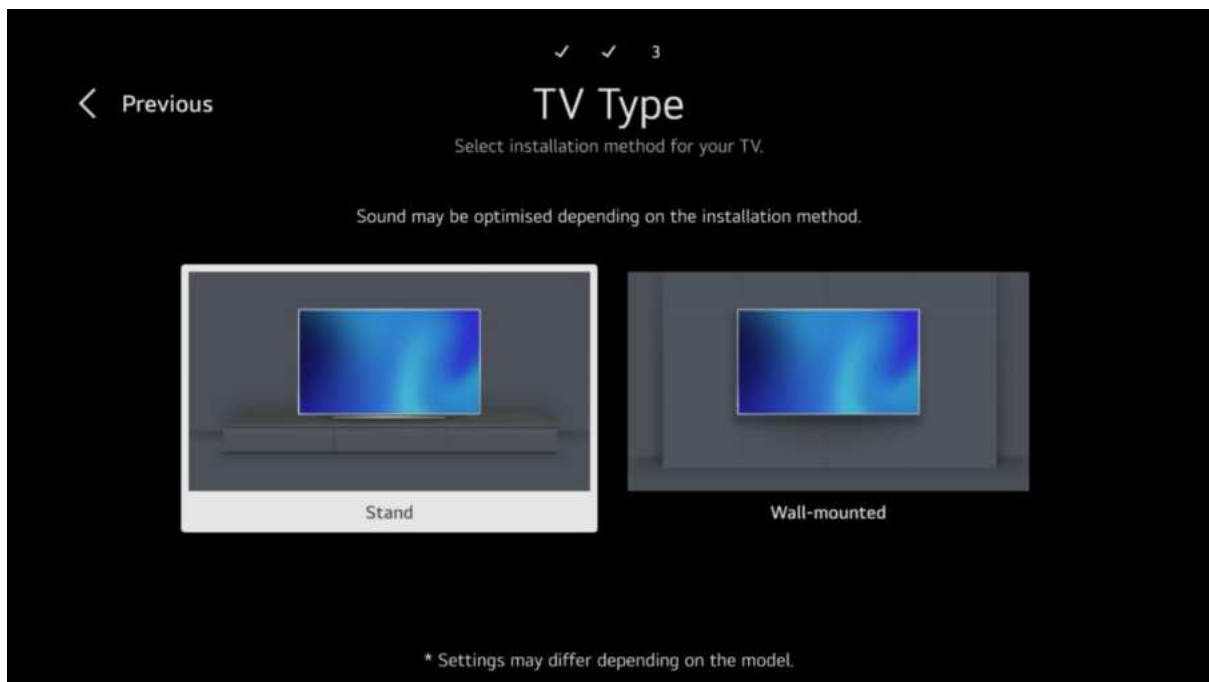

 
Select whether your TV is fitted to the stand or wall mounted, this affects the sound settings.

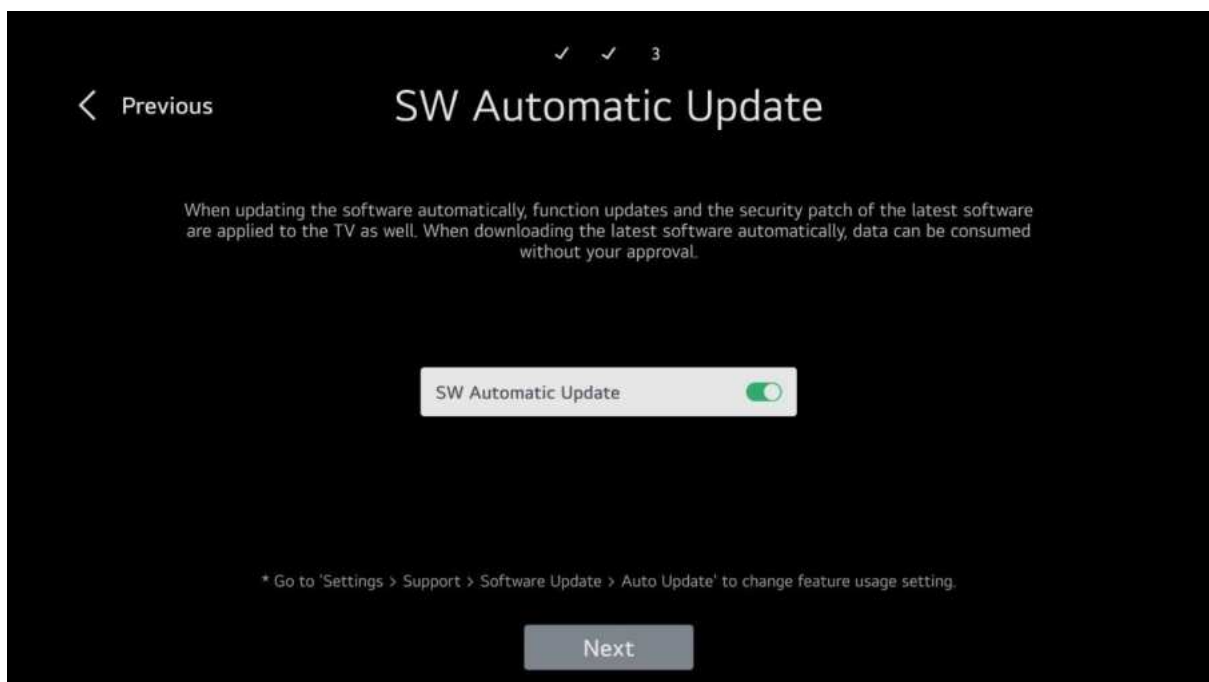

 
You can choose whether or not to have automatic software updates, it is usually best to leave set to On as it does not affect the operation of the TV and means you are always running the latest software version. Whatever you choose can be changed at a later date from the menu.

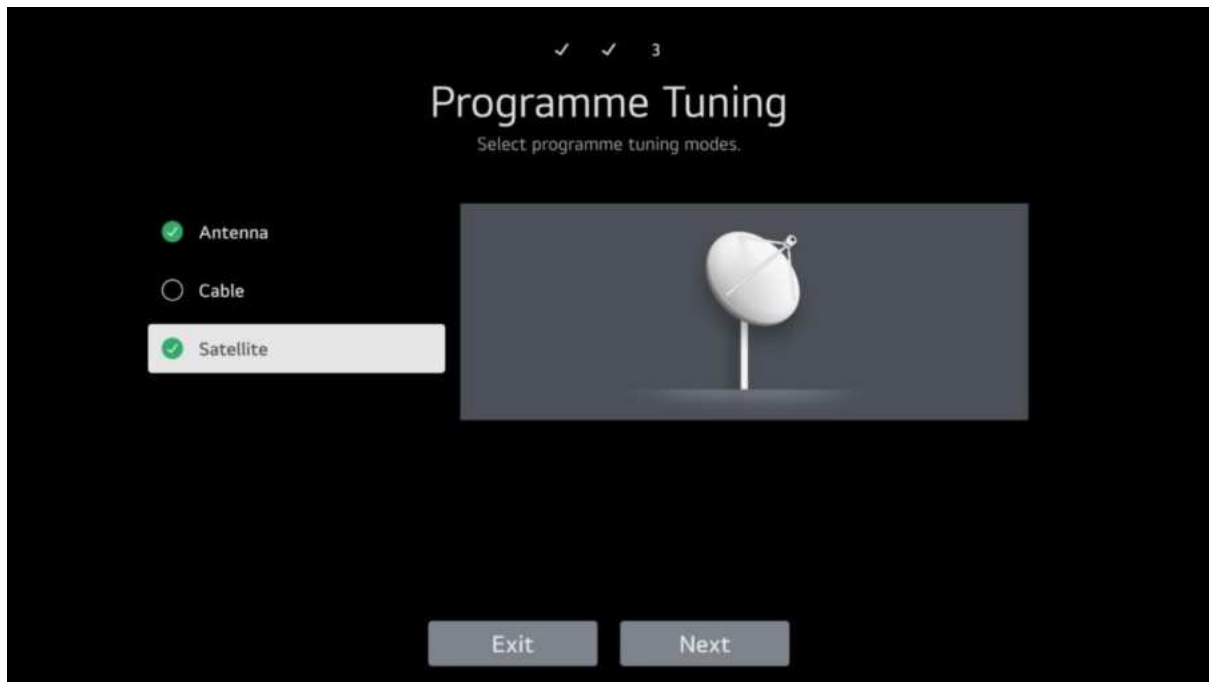

 
Select what antennas you are using, Antenna & Satellite or Just Antenna or Just Satellite. Do not select Cable in the UK (If you have cable TV in the UK you will use an external box and connect via HDMI, the same is true if you have SKY TV).

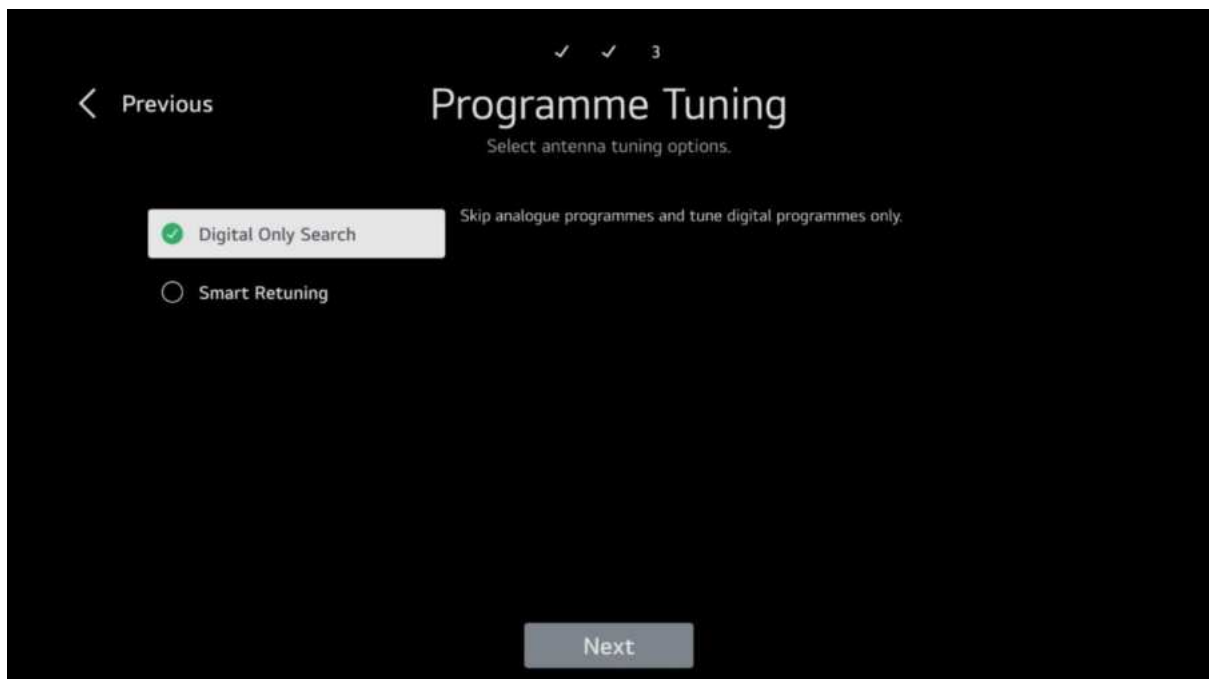

 
Select Digital Only Search and then click Next

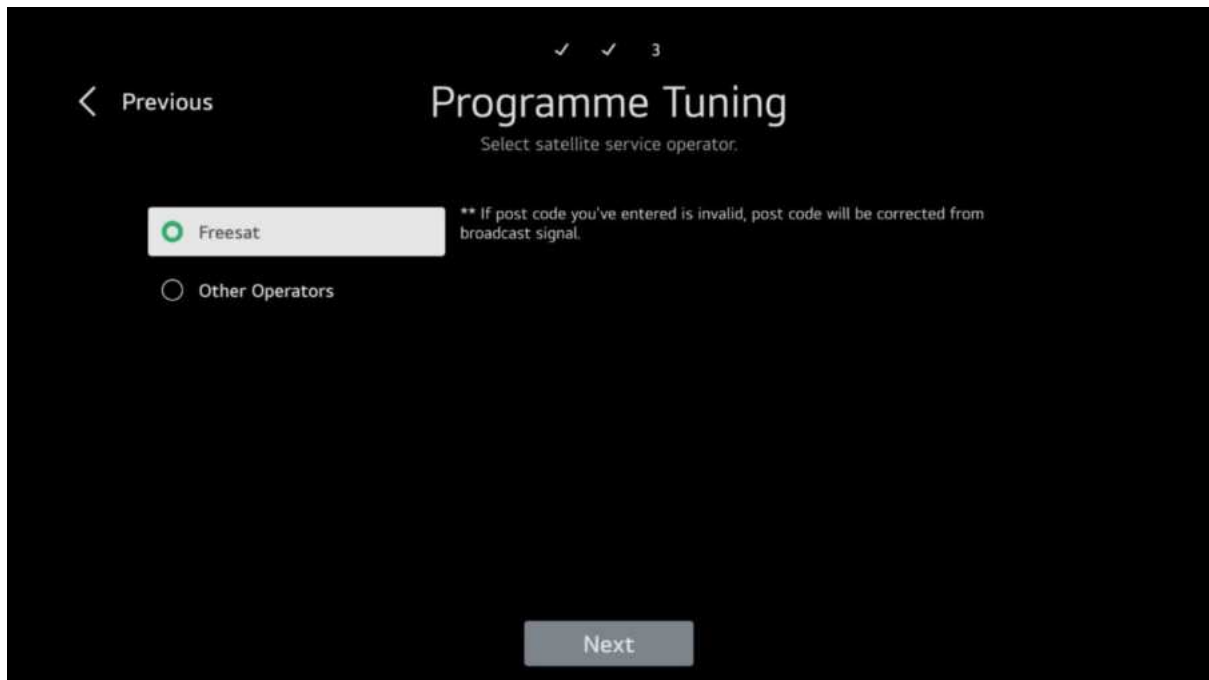

 
If you selected Satellite then you need select service operator in the UK we only have Freesat in other countries there are more options. Then click Next

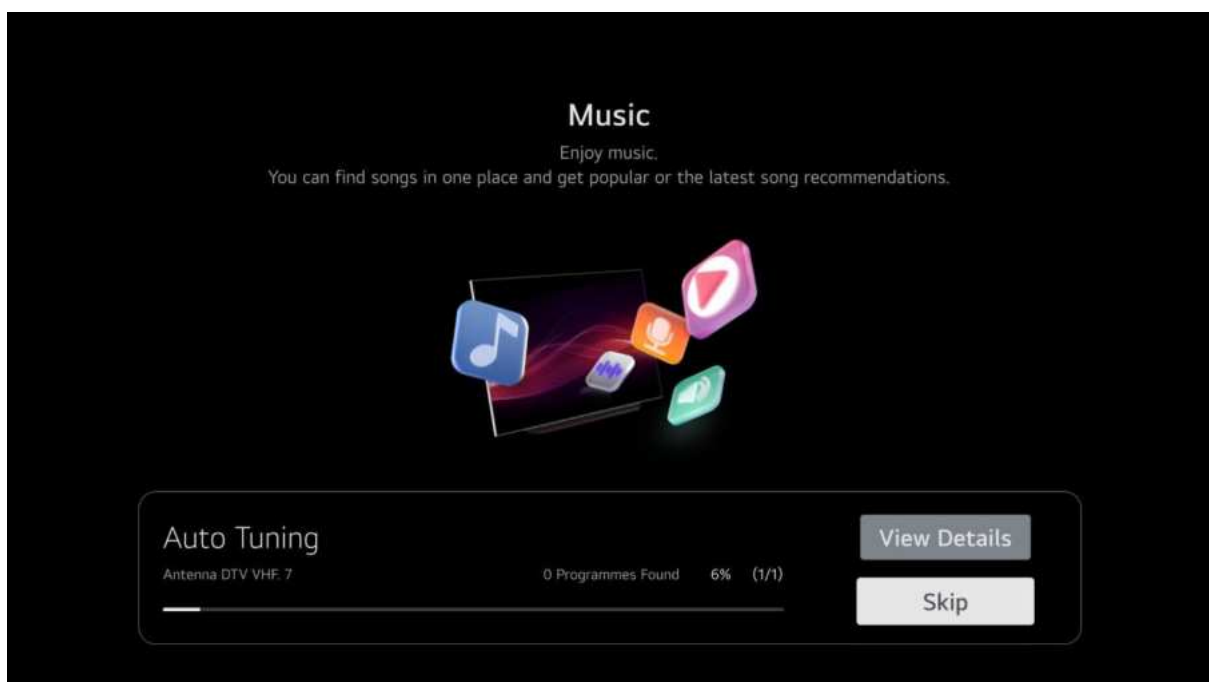

 
The TV will tune all the channels, this may take a few minutes.

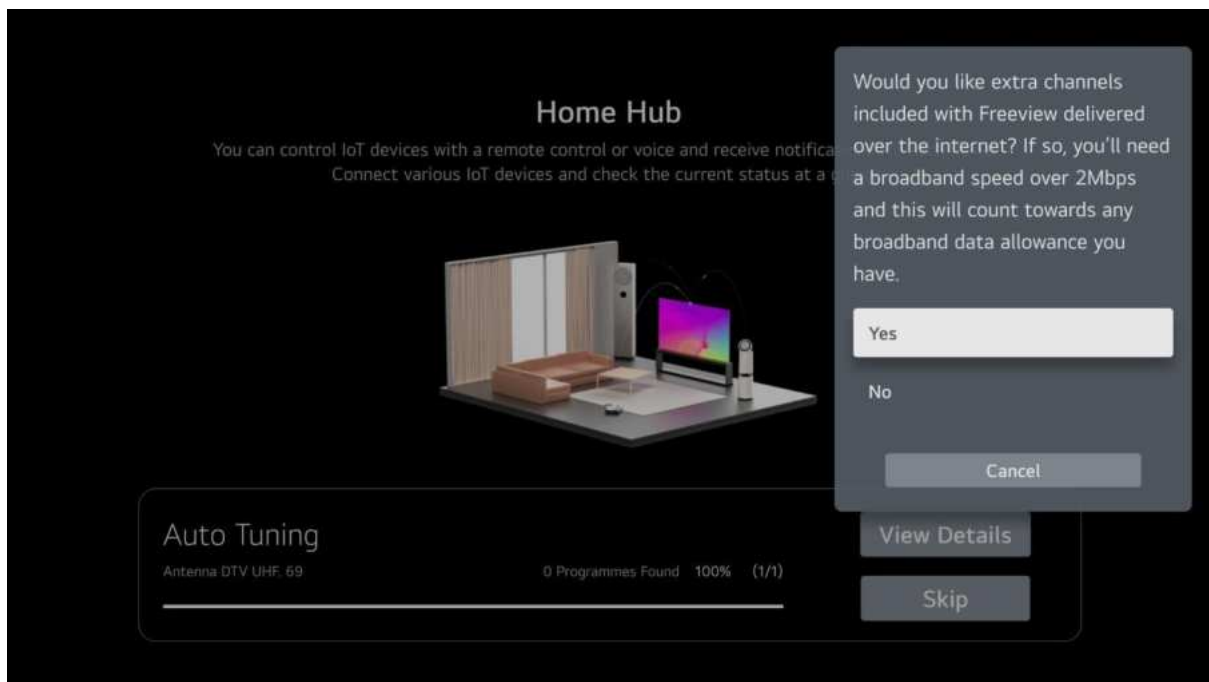

 
When the tuning is complete you will be asked if you would like to add extra channels, these are internet based channels and can only be accessed if you have an internet connection. If you would like to add them select Yes otherwise select No.

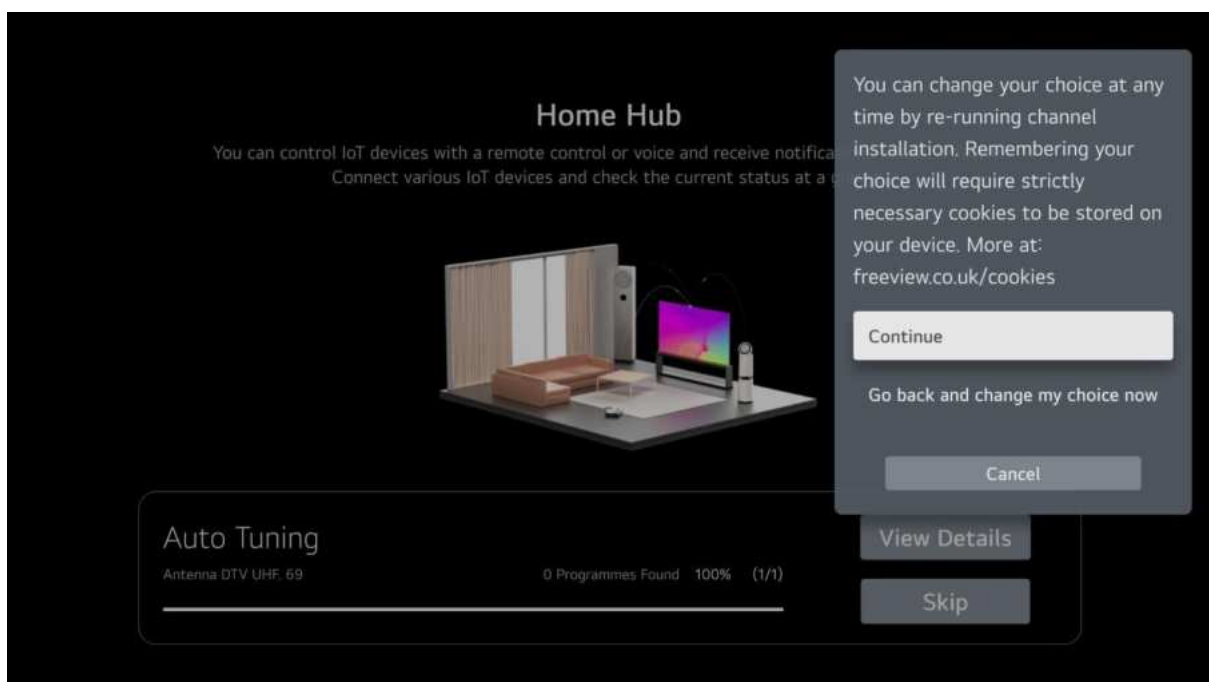

 If you selected Yes this screen will appear, select continue and then wait while it installs the channels.

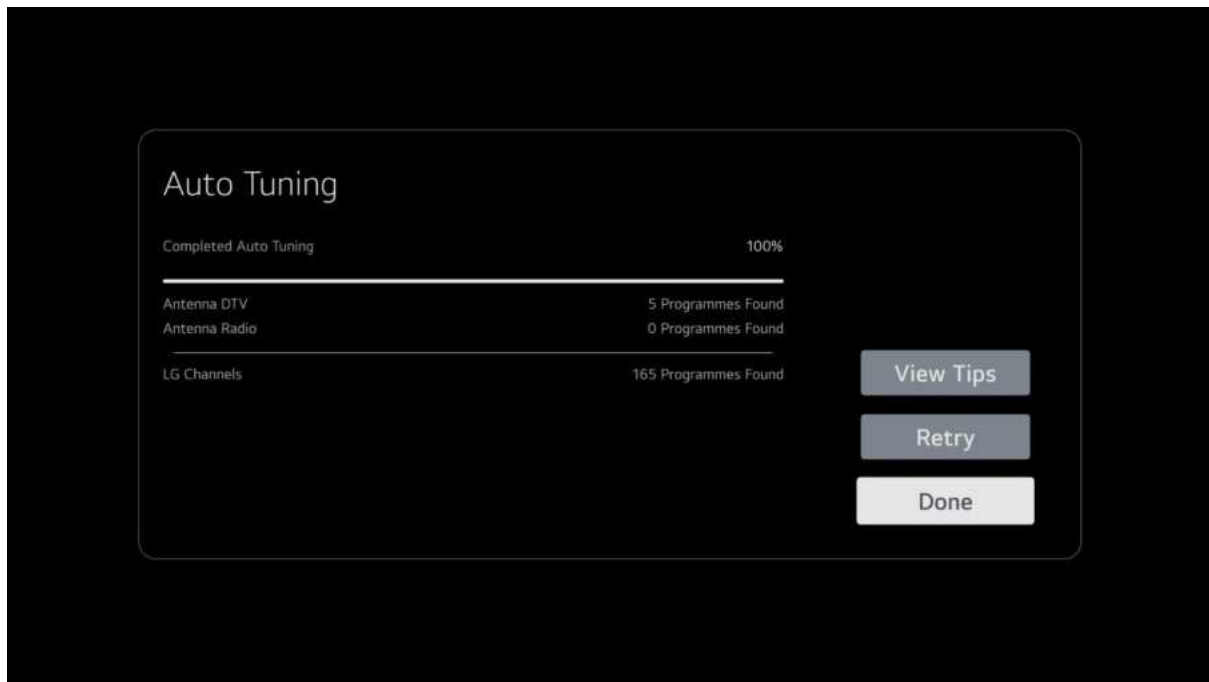


 Once this screen appears the tuning is finished please select done and press your OK button.

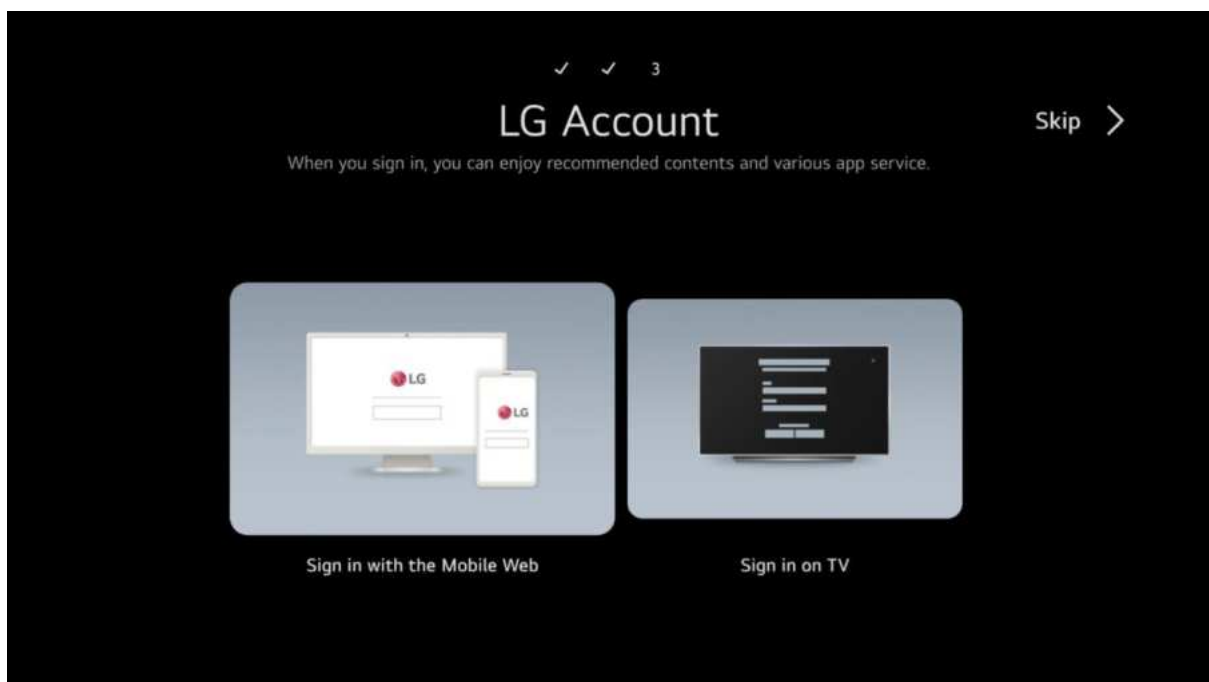

You will need to sign in or create an LG account, you can skip this step but you will need to sign in before you can access the app store.

 
If you use the mobile app follow the instructions in the app. Otherwise follow the instructions below to sign in on the TV

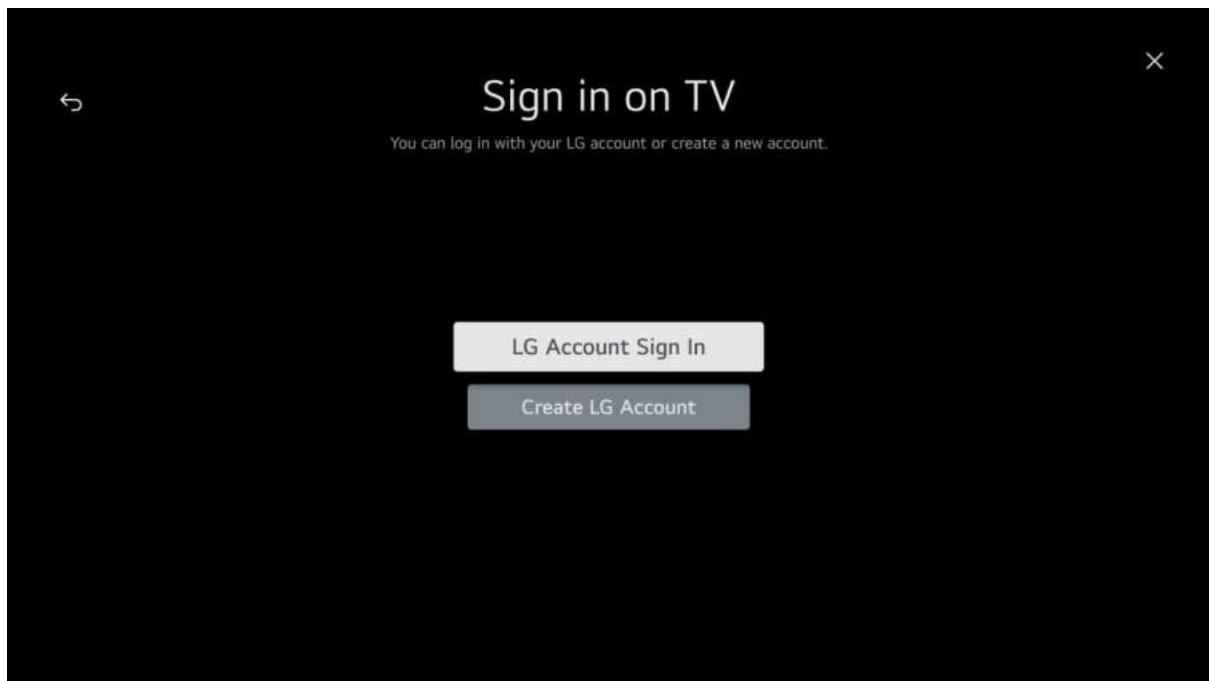


If you have an LG account select the top option, if you don't you will need to create one so select the bottom option. Whichever you choose you will need to enter an email address and a password. Please follow the on screen prompts to complete your sign in.



 When you have signed in this Screen will appear and a tune will be played

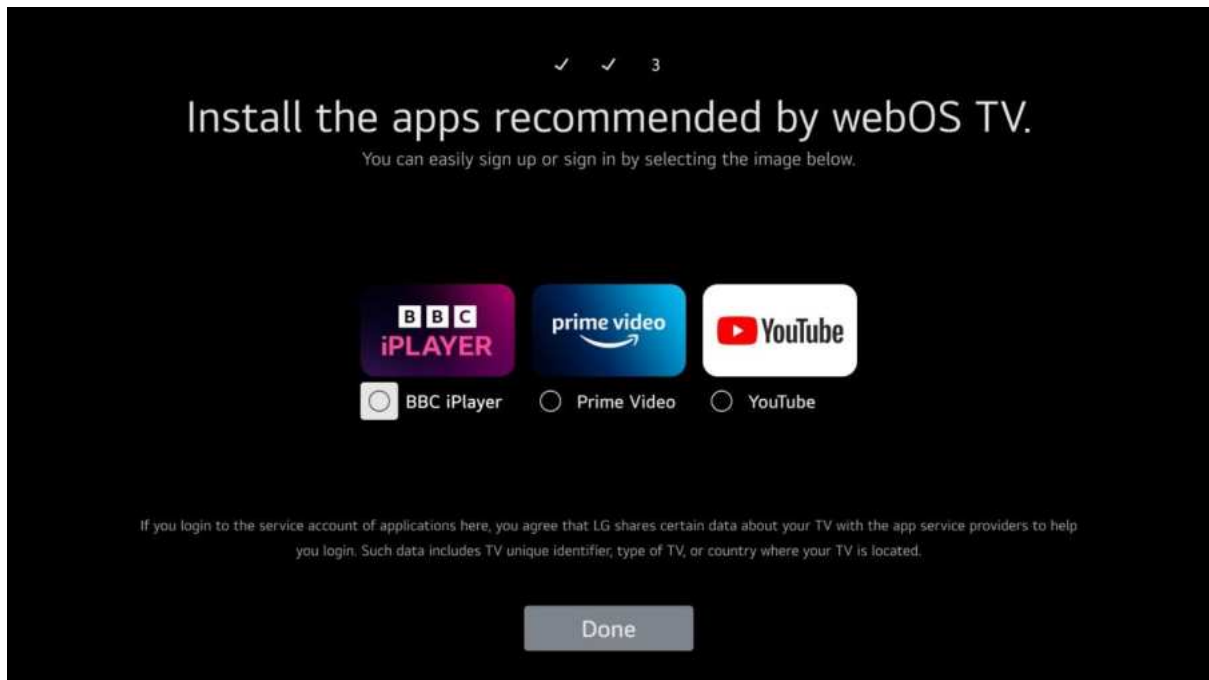

 
You can use this page to sign into some apps but this can be done later when launching the app. Select Done and click OK

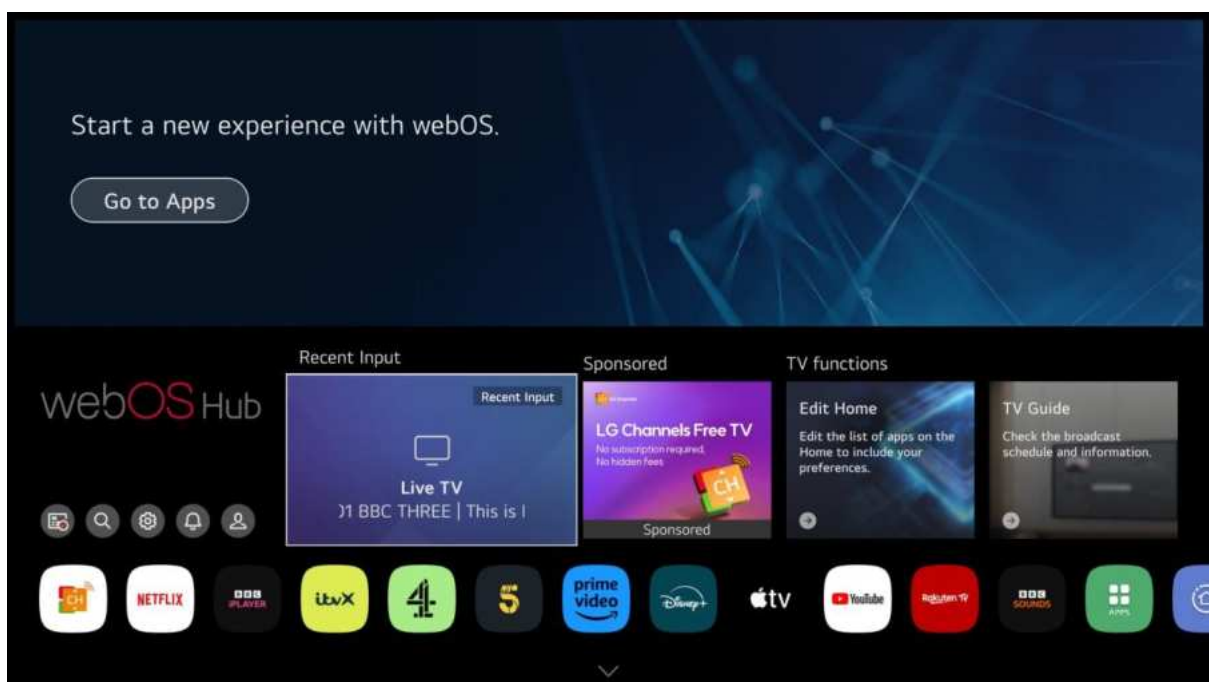

The Home screen will be displayed and the first-time installation is complete.

WebOS TV how to switch between TV and Satellite

 When watching TV press List on the remote control

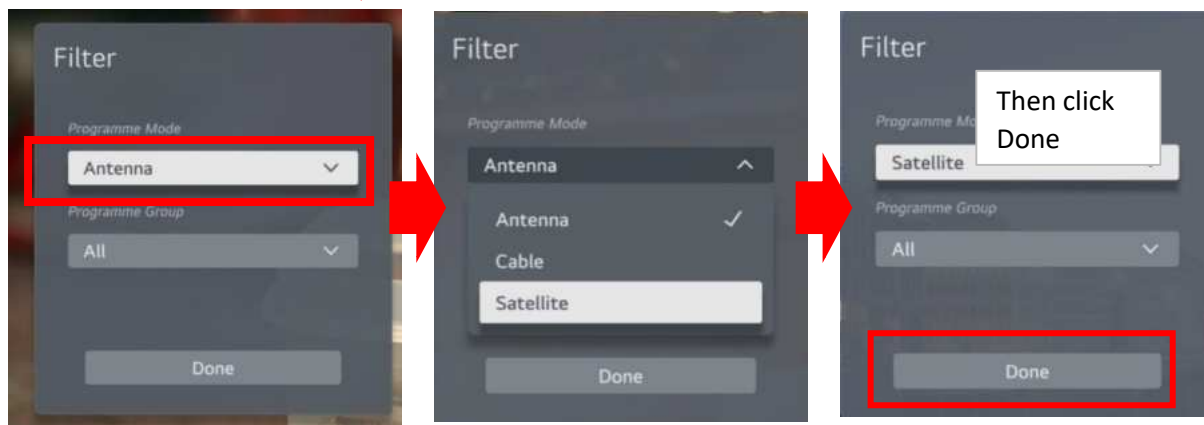

The Tv will now be on Satellite, to go back to TV reverse the process.

Changing Source

To change source on the TV press this button on the TV and a row of options will appear at the bottom of the screen.



The actual list will depend on what you have plugged in

 
The actual options you will see will vary depending on what is currently plugged into the TV sockets

1. Home Hub. If you have any items also connected to ThinQ you can see them here.
2. Live TV. This is either Aerial channels or satellite depending on what is tuned in and viewed last.
3. LG Channels if you accepted extra channels during First time installation you can view them here.
4. AV. This is the built in DVD you can also access this by pressing the DVD button on the remote.
5. Storage if you have a USB or other storage device plugged in it will show here otherwise you will not see this.


If you have things plugged in via HDMI you will see them. You can select what input you want and press OK on your remote to go to that item.


How to download apps from the WebOS App Store (WiFi is required to use apps)

You can quickly jump to Netflix or Prime Video by pressing the appropriate button on your remote control.

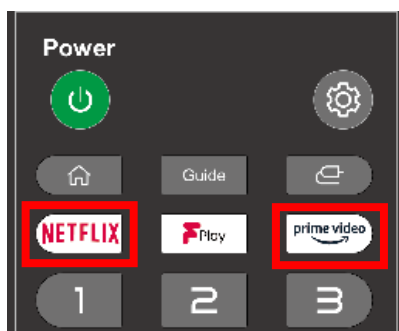

These apps require subscriptions to be able to access them, if you are accessing them for the first time you will need to log in or sign up to a subscription.

 If you press the Home button  on the remote you will see the Home Screen with a row of apps along the bottom of the screen

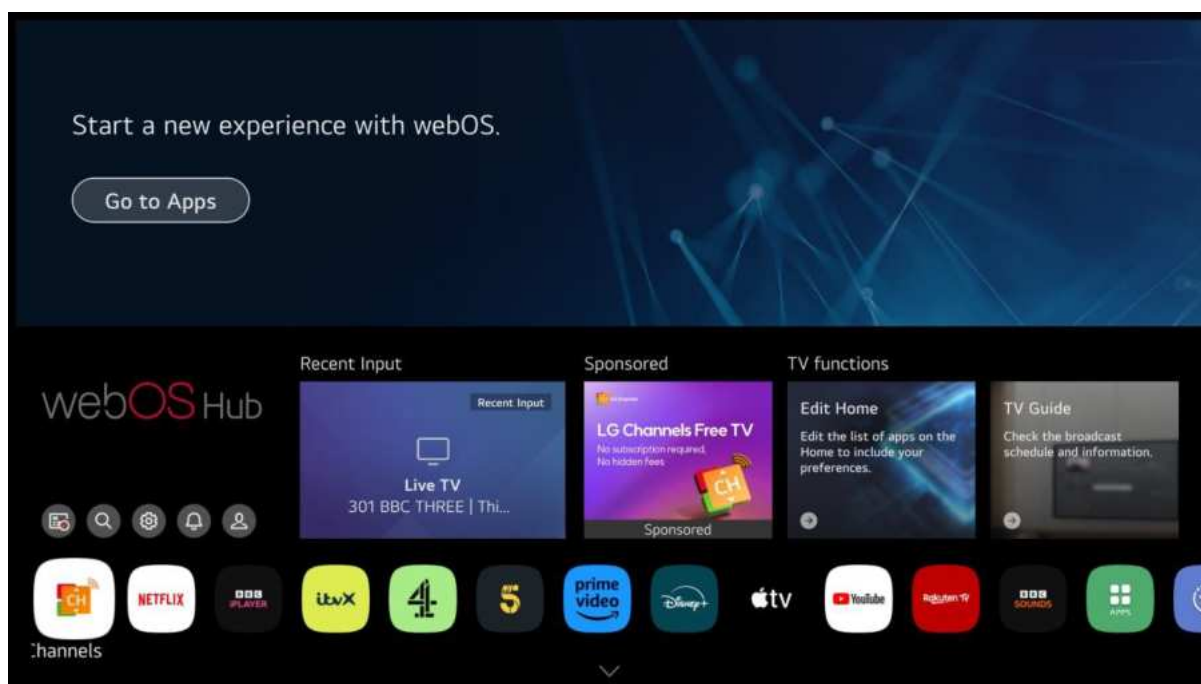

You can select any of the apps and press the OK button to enter that app, some apps require a paid subscription to be able to use them. Most apps require a login even if they are free like BBC iPlayer. You will need to login to the following apps for Freeview Play to work properly:

BBC iPlayer, ITV X, More 4, My 5 and UKTV play.

 
The first 4 can be found on the apps already installed but UKTV Play you need to get from the app store.

This is the process to find and install it, the same process can be used to install any app you can find in the app store, if you can't find it in the app store it is not available.




On the row of app icons select the apps one:

If you can't see the app you want in our case UKTV play then you need to search for it so select the search at the top of the screen

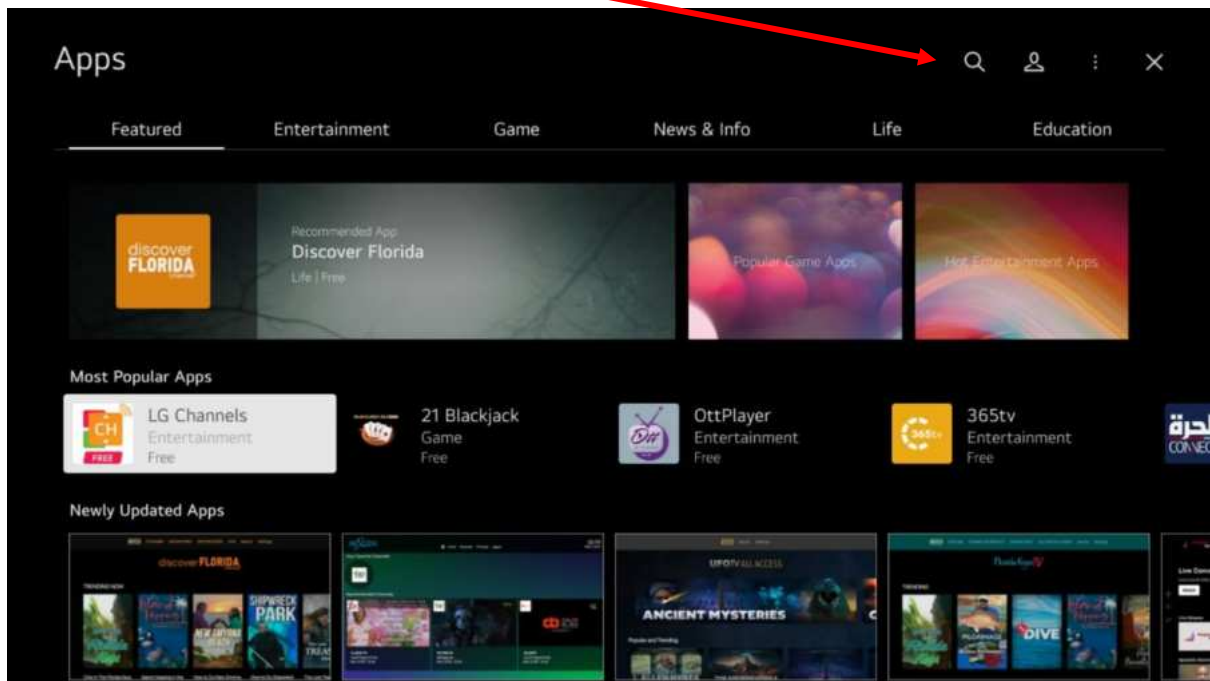


 Then type in UKTV play and press the OK button

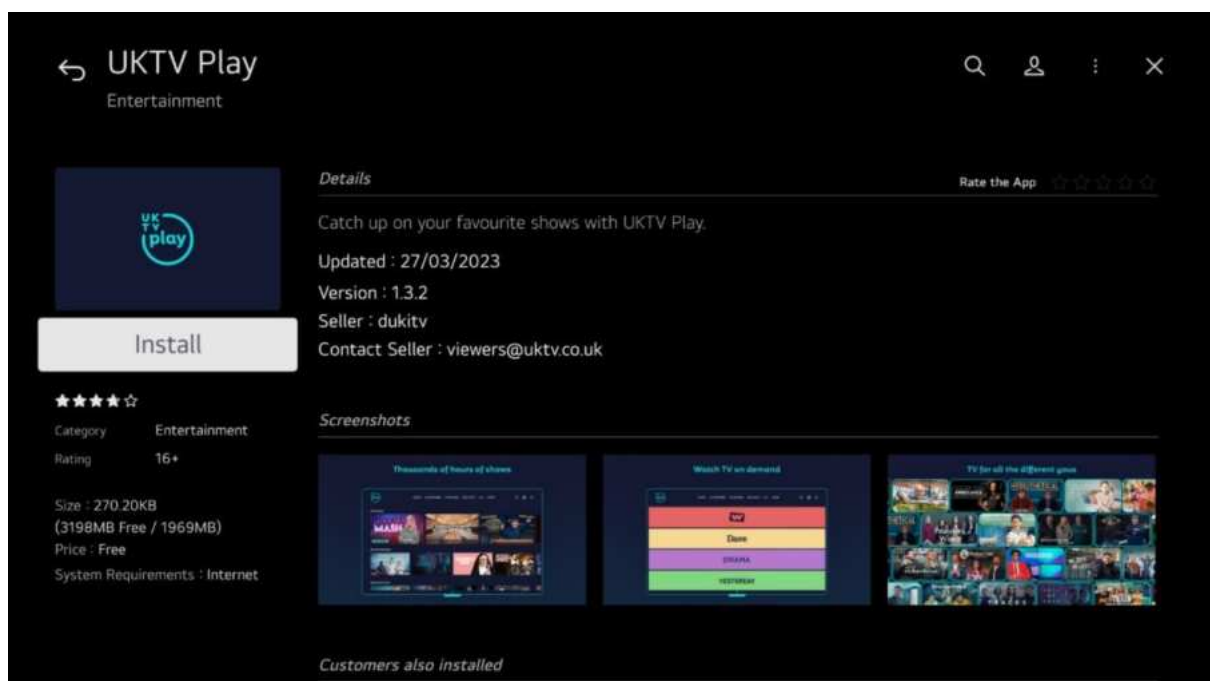

Select it and press OK button to install it, it will then appear on the list of apps on the Home screen.

 This process can be used to find and install any app from the app store.


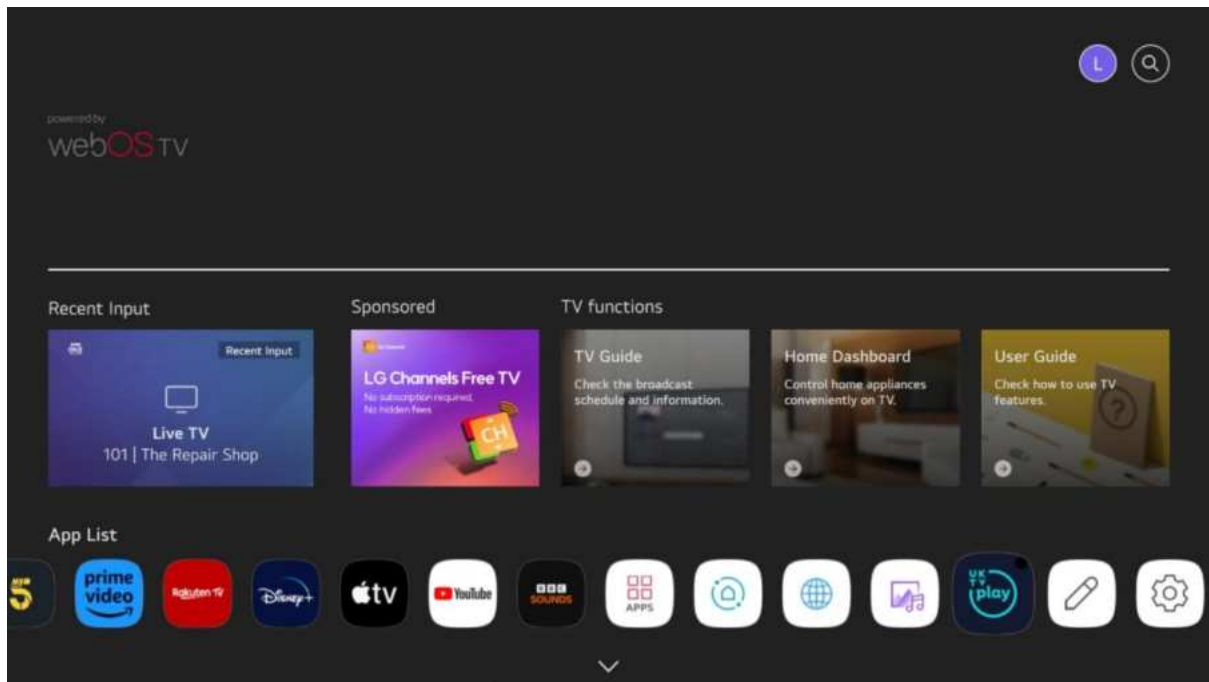




You can also set the apps into the Quick Access Menu

If you enter for instance BBCiPlayer then press and hold the 0 button, then the Quick access edit will appear move the highlighted segment to the button you want to store it on (1-9) then click OK and the app will then be on that for quick access. Then to access it from anywhere press and hold the button for the app (so if you stored BBCiPlayer on 1 then press and hold 1 and the BBCiPlayer app will open. You can store up to 9 things in the quick access menu. Long press on 0 will access the quick menu in future and you can select your favourite app from here.

How to access FreeviewPlay catchup

    When watching TV press the Guide button on the remote

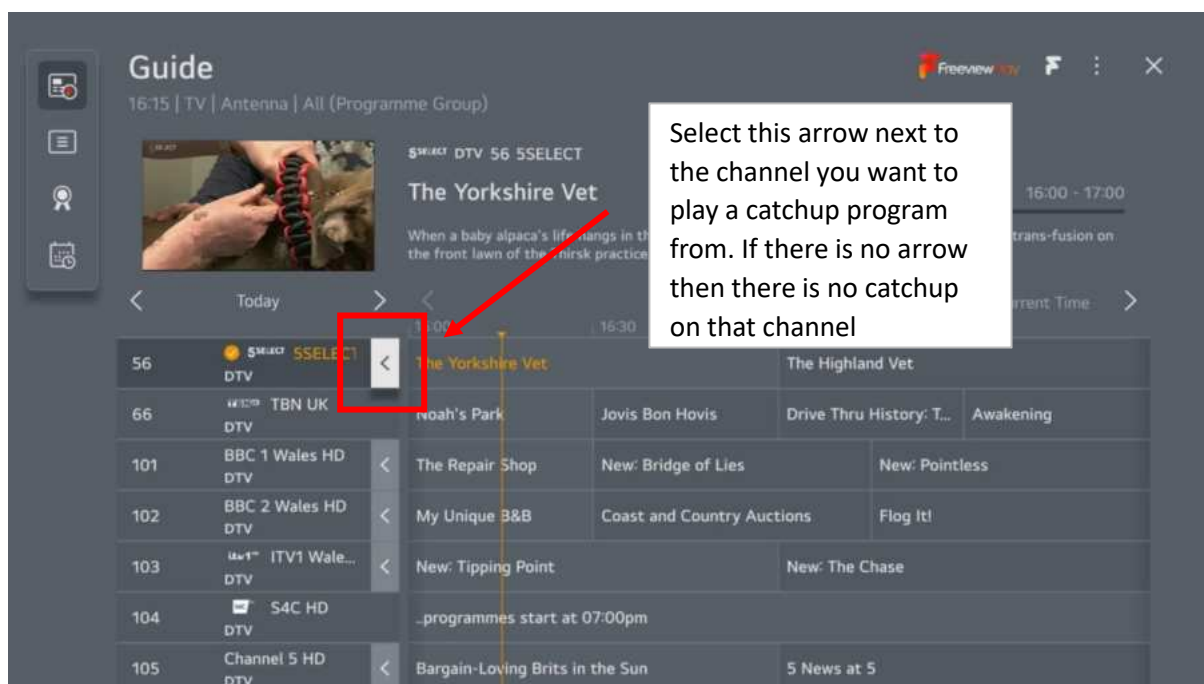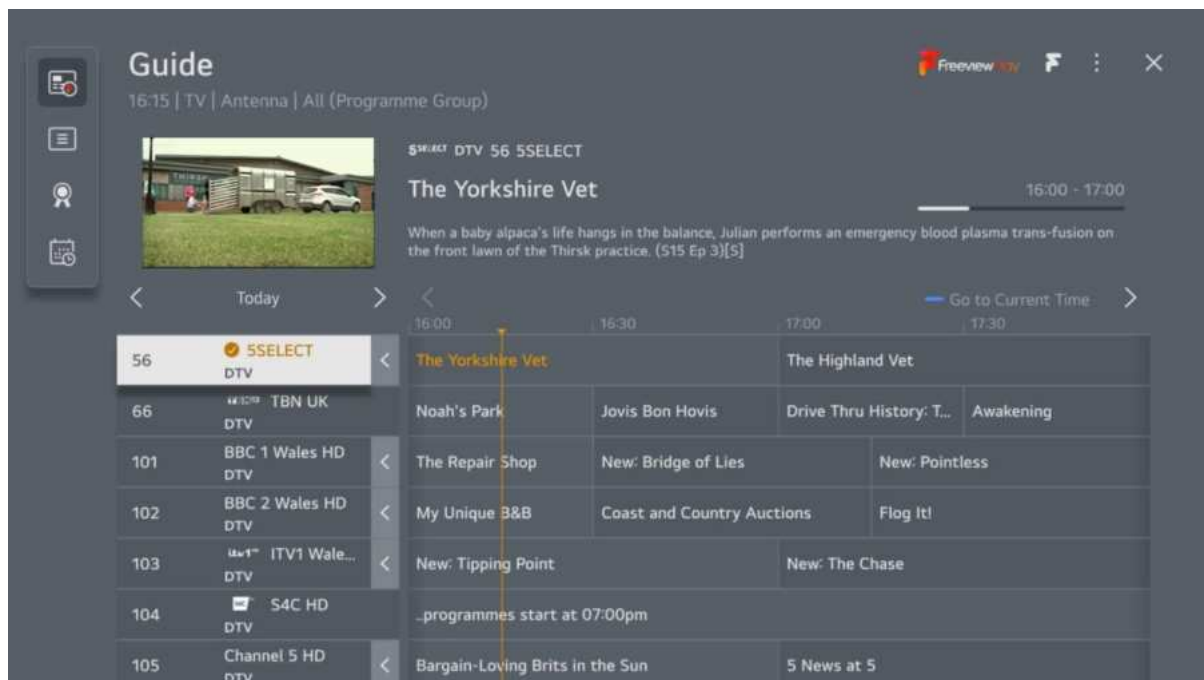

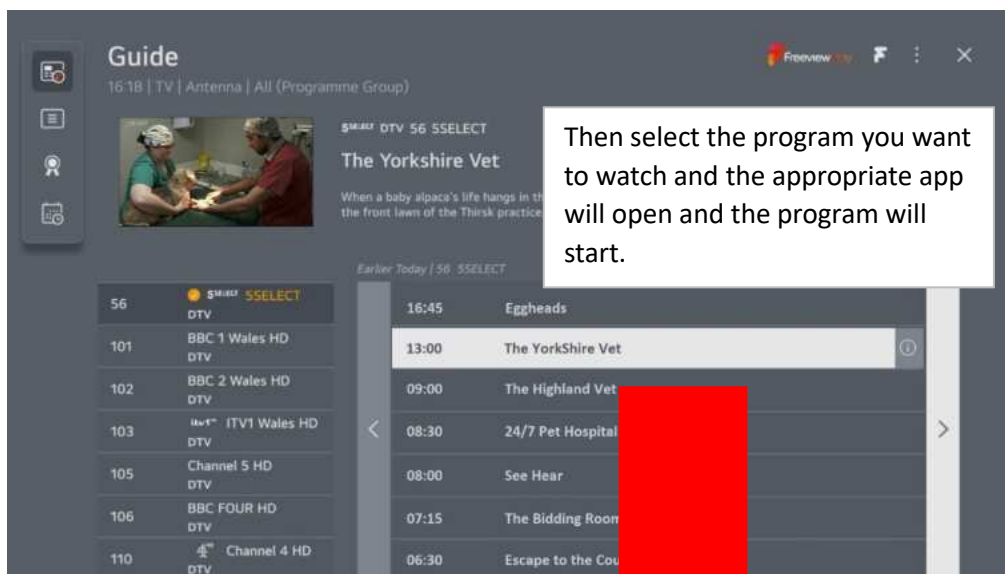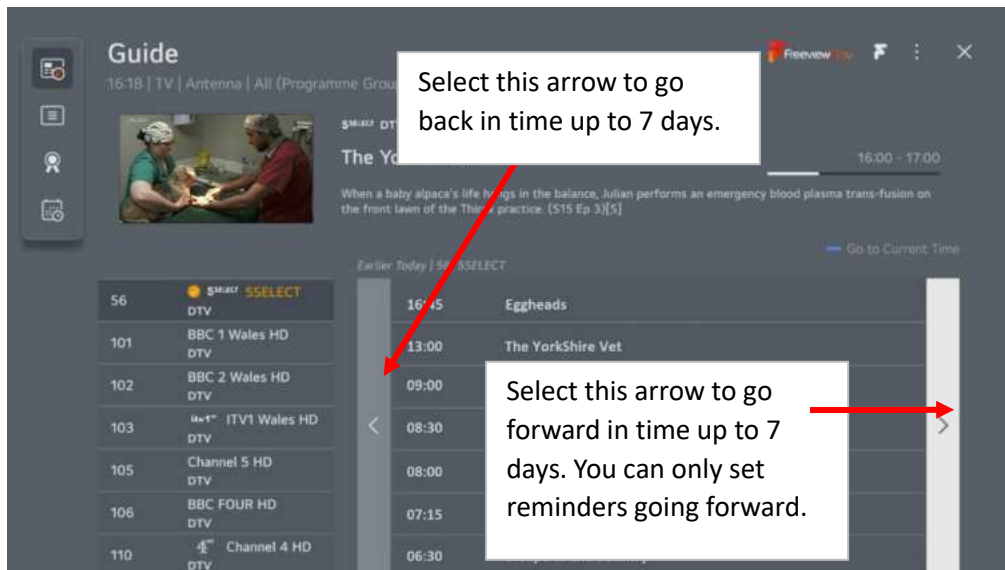

How to set up and manage Favourites

While watching TV or satellite press either LIST or Guide button on the remote:

The diagram illustrates the process of setting up and managing Favourites on a TV. It starts with a remote control showing the 'Guide' and 'List' buttons. A red arrow points from the 'Guide' button to a 'GUIDE' screen displaying a list of programs. Another red arrow points from the 'List' button to a 'LIST' screen showing a list of programs. A third red arrow points from the '3 dots' button on the remote to a 'Filter' screen. The 'Filter' screen has two dropdown menus: 'Programme Mode' (set to 'Antenna') and 'Programme Group' (set to 'All'). A red box highlights the 'All' option in the 'Programme Group' dropdown. A red arrow points from the 'Filter' screen to a 'Filter' screen showing a list of Favourites: 'All', 'DTV', 'Radio', 'Favourite 1', 'Favourite 2', and 'Favourite 3'. A text box explains that there are 8 Favourites for different people or program types.

GUIDE

LIST

Then press the 3 dots ...

Filter

Programme Mode
Antenna

Programme Group
All

Done

Filter

 
Programme Mode
Antenna

Programme Group
All


All
DTV
Radio
Favourite 1
Favourite 2
Favourite 3

Then select All and select which Favourite you want to set up/manage.


There are 8 Favourites for different people or program types.

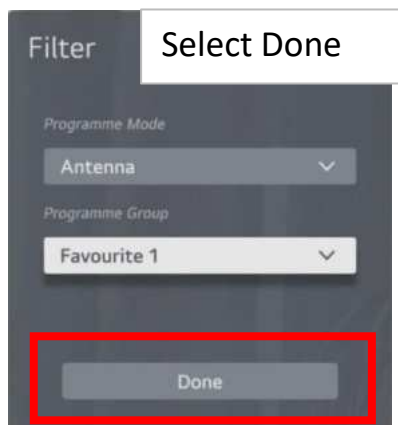

 
If this is the first time the list is selected there will be nothing in it so select Edit Favourites

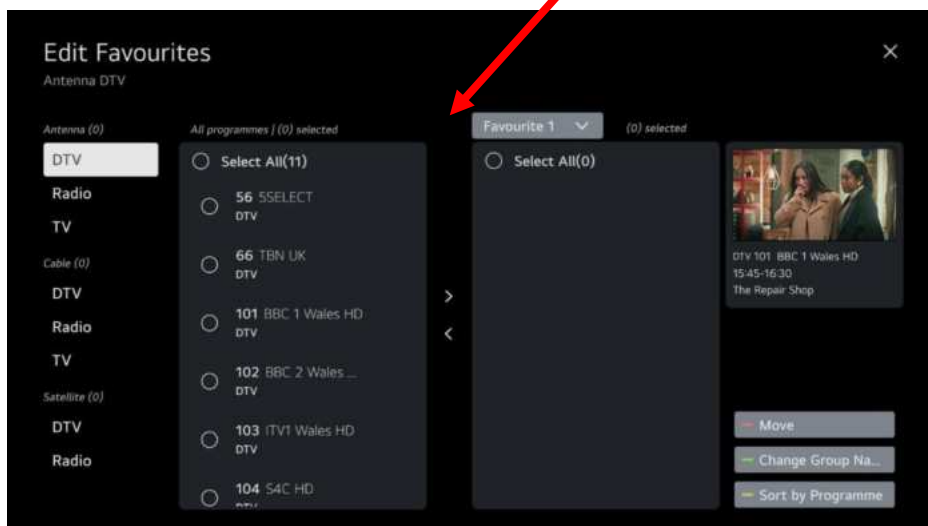

 
Select the programs you want to add to your list by highlighting them and pressing the OK button, once selected the circle will turn green.

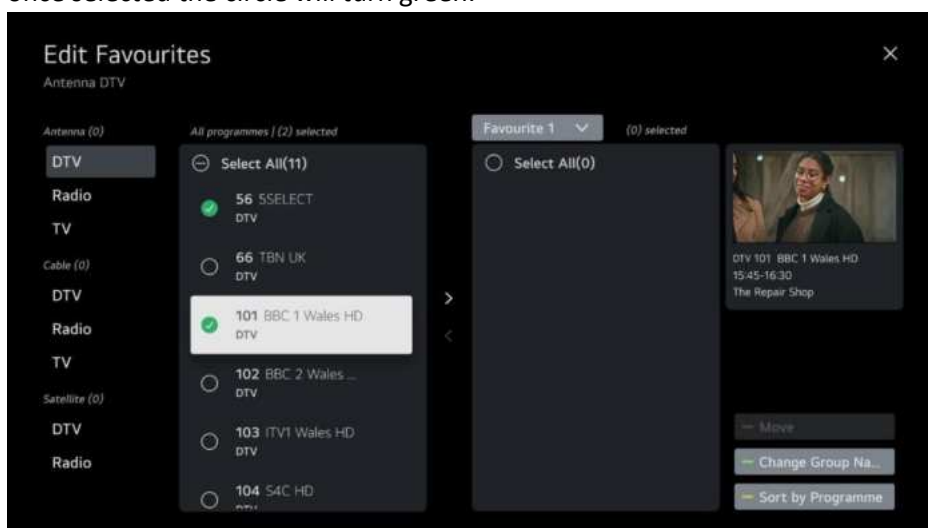

 After selecting the programs you want in your list select the right arrow between the 2 boxes and click OK.




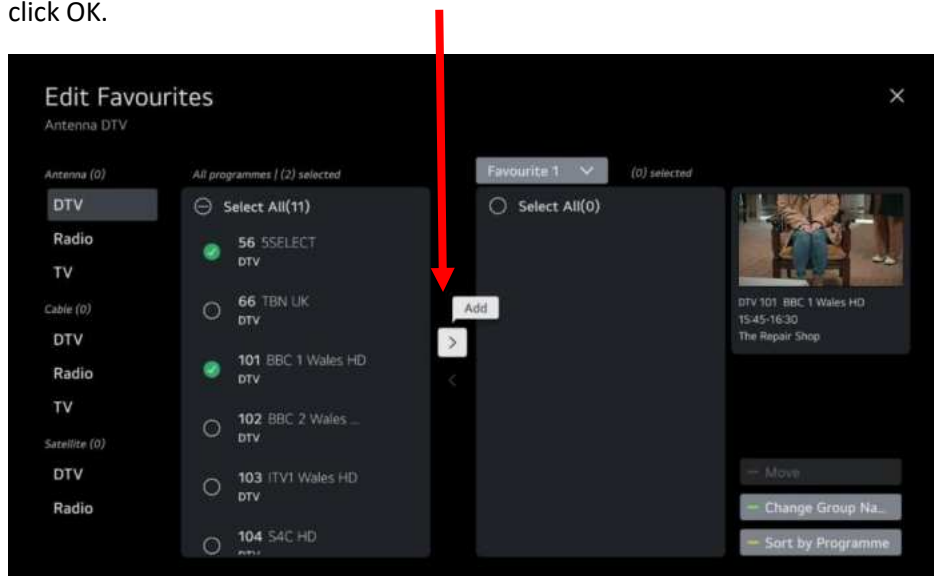


 This will move the selected programs to the Favourite List


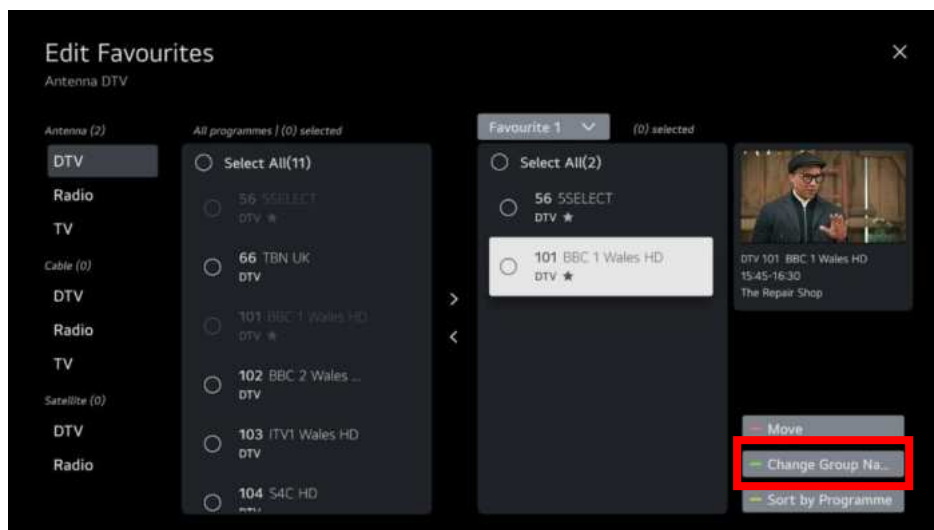


You can change the name of your list by clicking the green button on your remote.

    
This will open an on screen keyboard for you to type the new name of your Favourite List

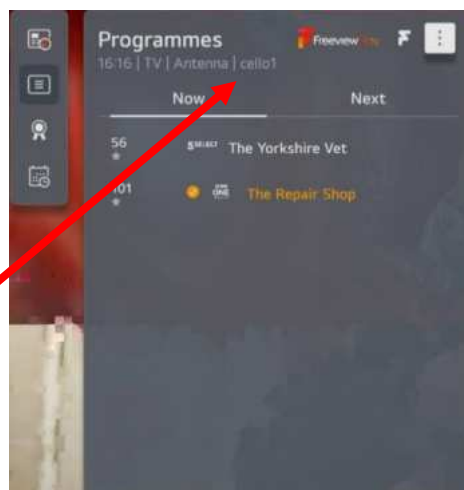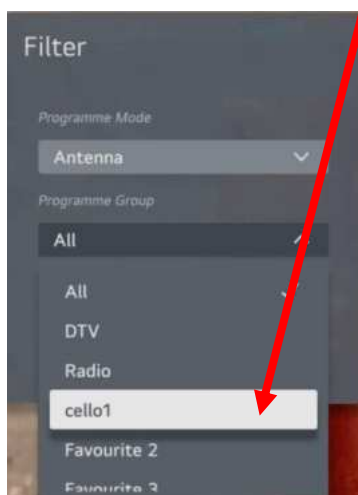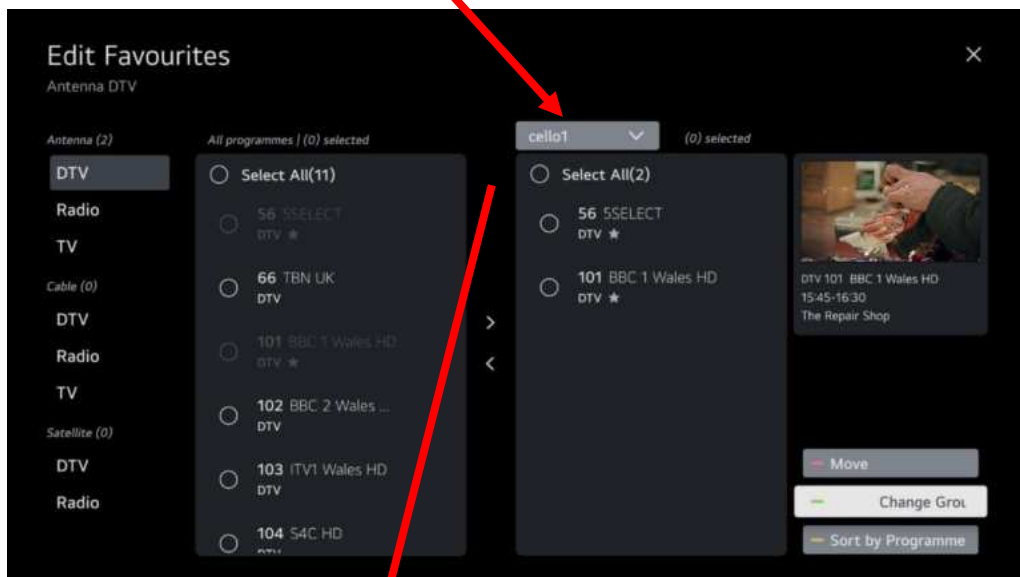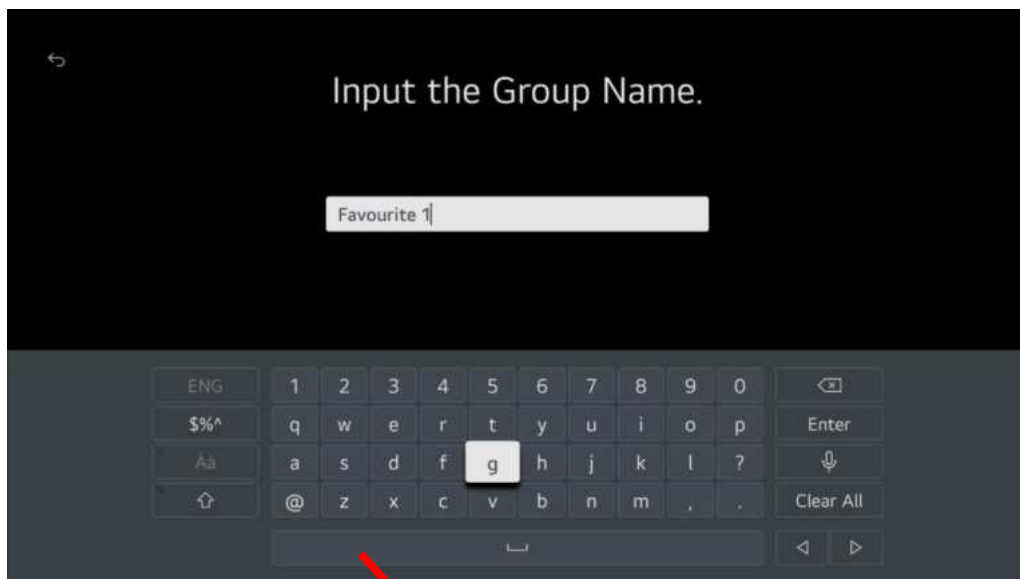


  To edit a Favourite List press Guide and select the list to edit

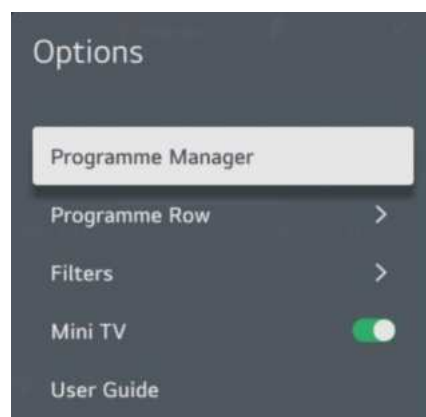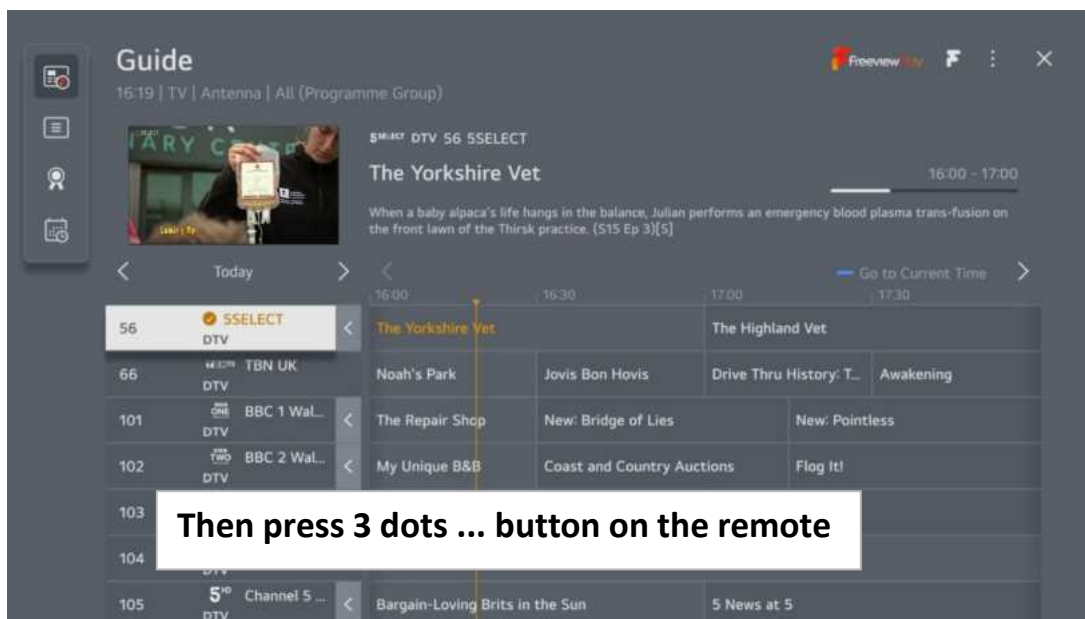

Then select Program Manager

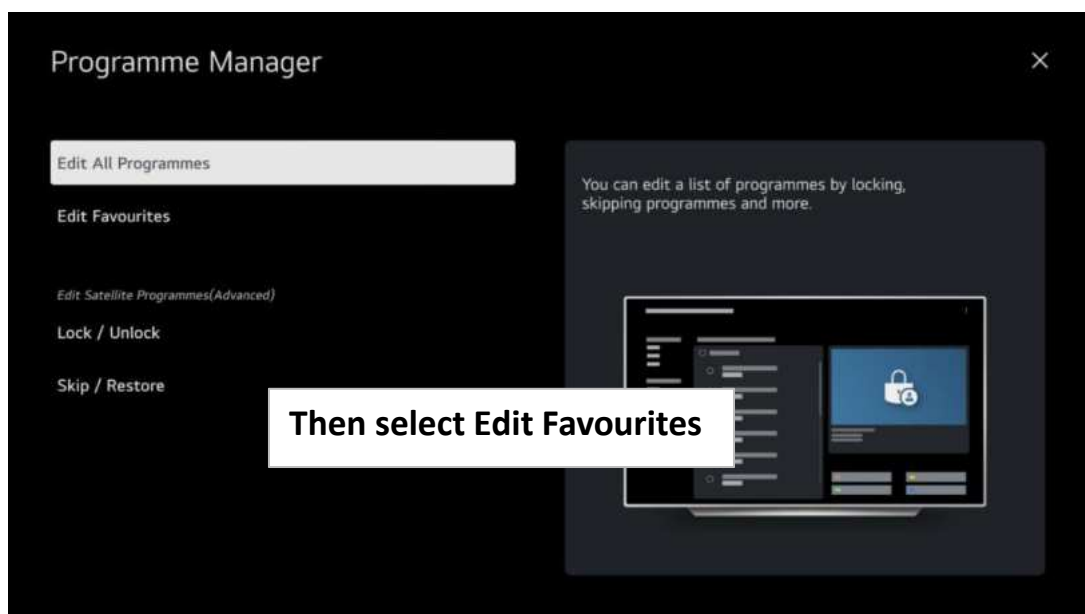 

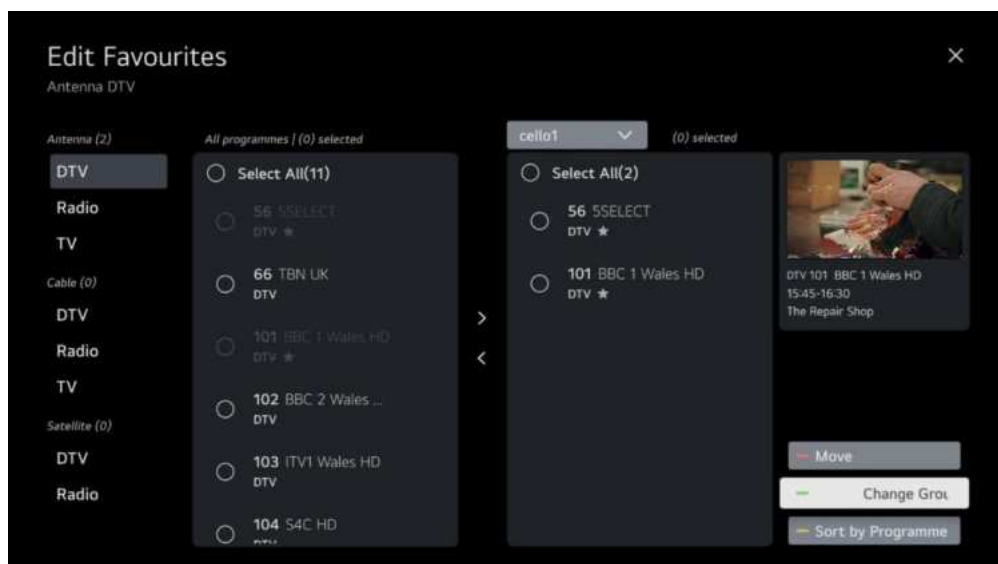 



To add programs to your list highlight them in the left hand list and click OK for the circle to turn green and then use the right arrow between the two lists to transfer them.

To remove programs from your list highlight them in the right hand list and click OK for the circle to turn green and then use the left arrow between the two list to remove them.


To edit your list name press the green button on your remote and follow the steps from earlier in the guide for naming your list.


How to move Channels in your Favourite List on the WebOS TV

  You can change the order that channels appear in your favourite list as follows

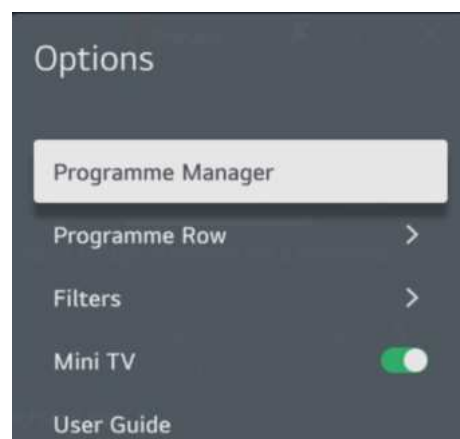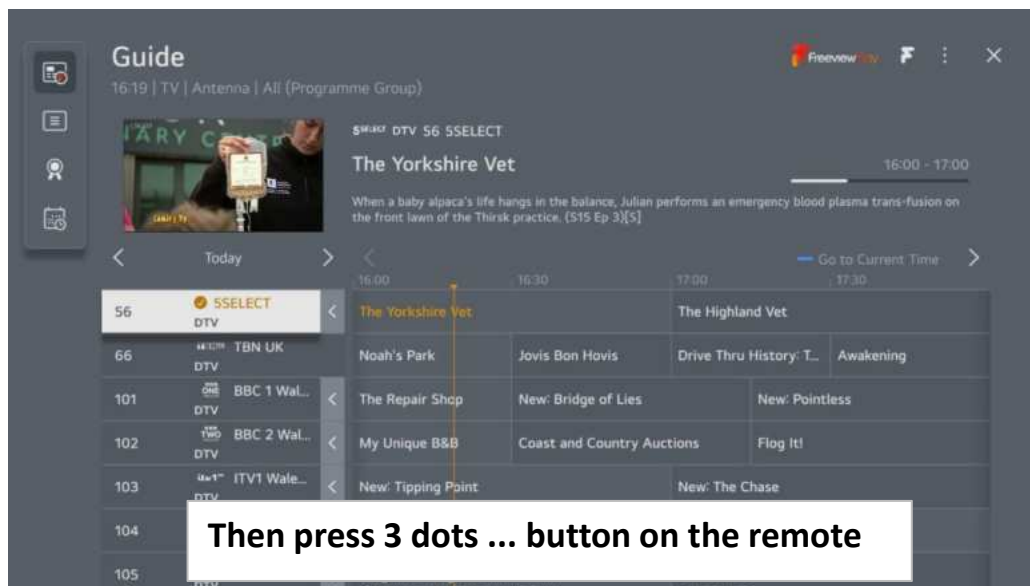


And select Programme Manager

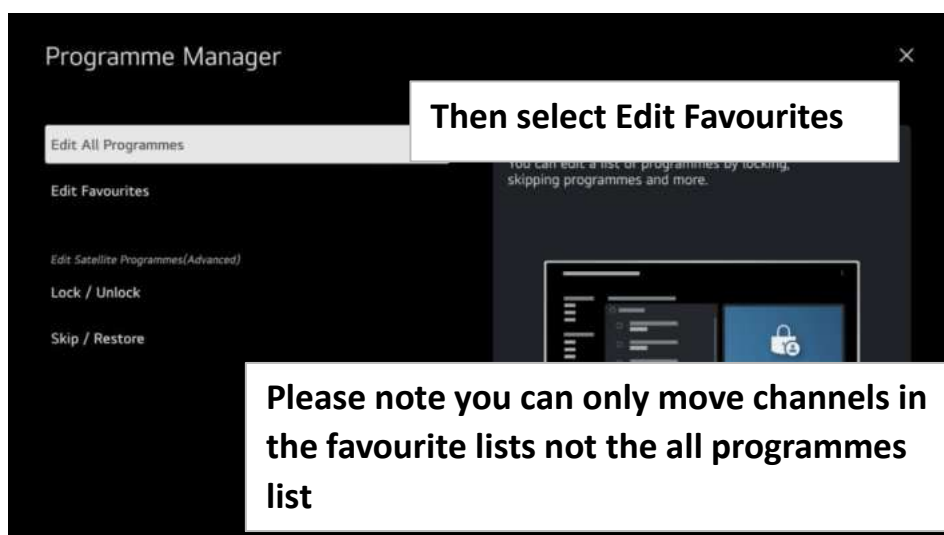 


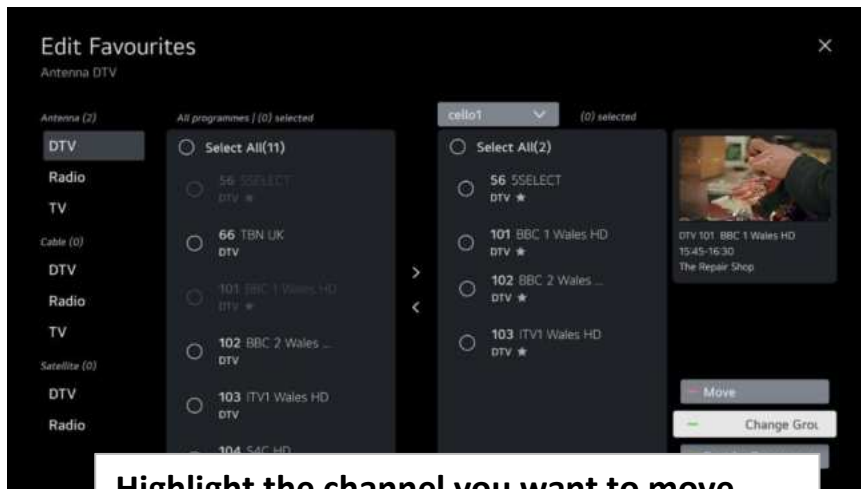 

 
**Highlight the channel you want to move
and Click OK to turn the circle green**

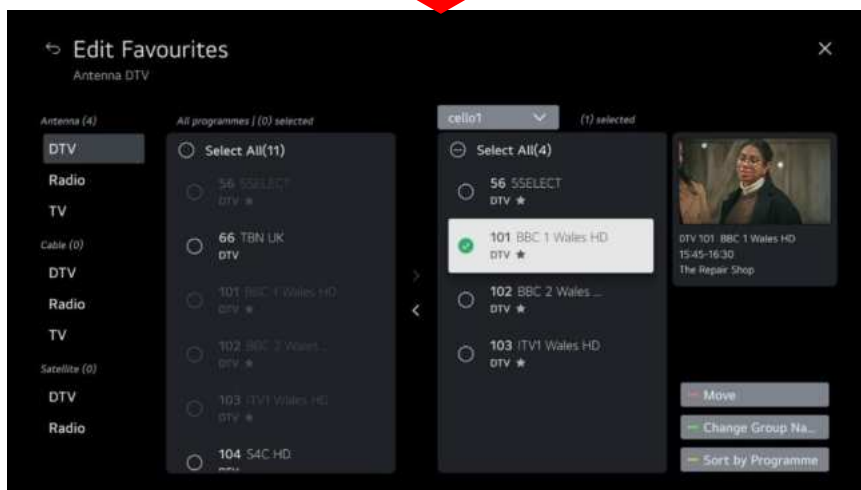


Then press the red button on the remote

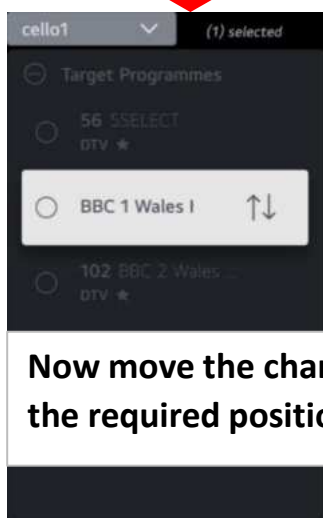 

  **Now move the channel to
the required position**

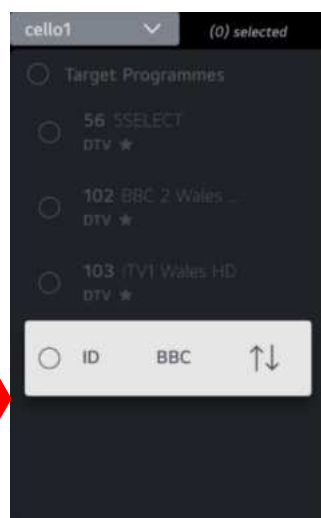

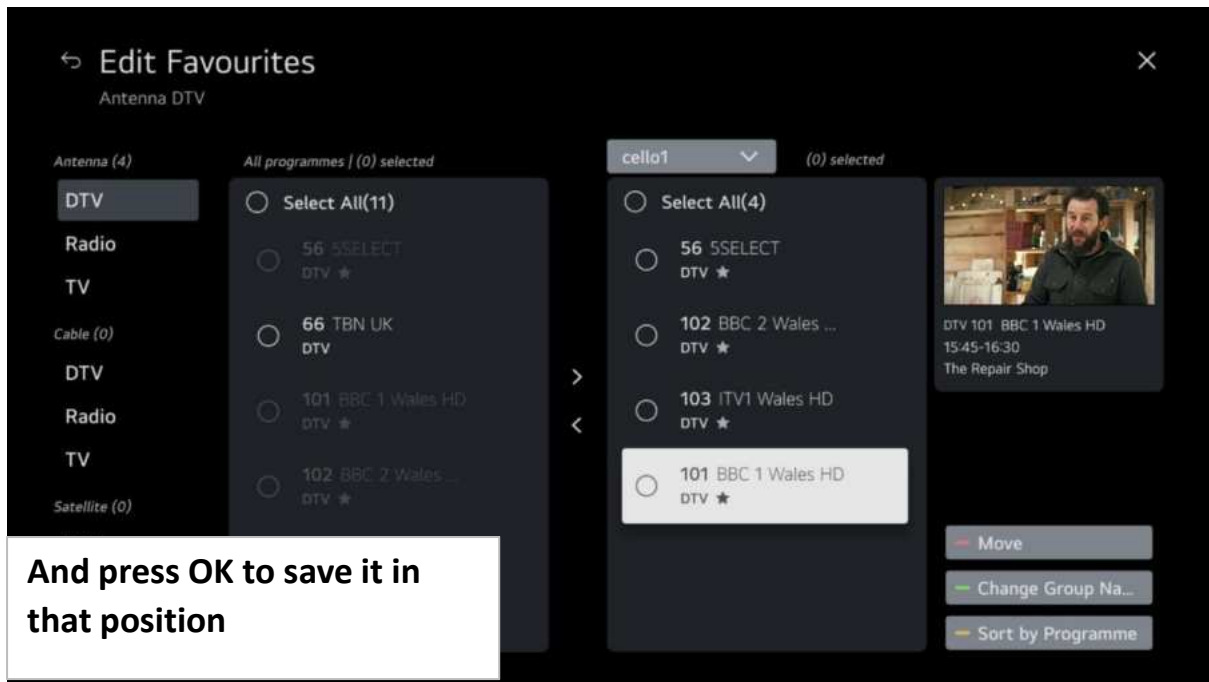

The channels will now be in that order whenever you select that Favourite List, it does not affect other Favourite Lists or the All Channel List.

 
Recording & Playback

You will need an external storage device such as a USB or an HDD, the recommended size for the USB is 32GB and the HDD should be no more than 2TB.

Please Note you can only record TV programs or satellite programs you can't record from an app, the DVD player or any other external source such as HDMI.

First time installation of External storage

When you first plug in your USB or HDD the TV will ask if you what you want to search the device for files, if it is empty then select Cancel.

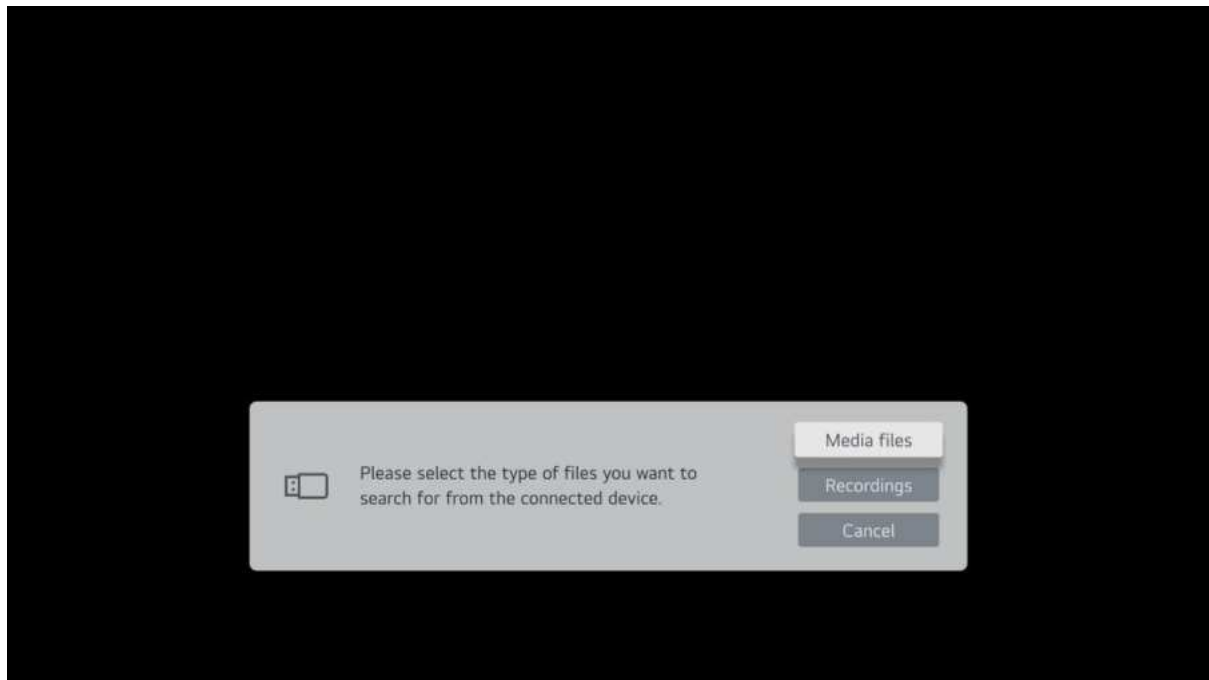


Recording the current Program

While watching a TV or Satellite channel press the 3 dots ... button on the remote control. This will bring up a menu on the right of the screen.




 Select record from the list. Then the following pop up box will appear.

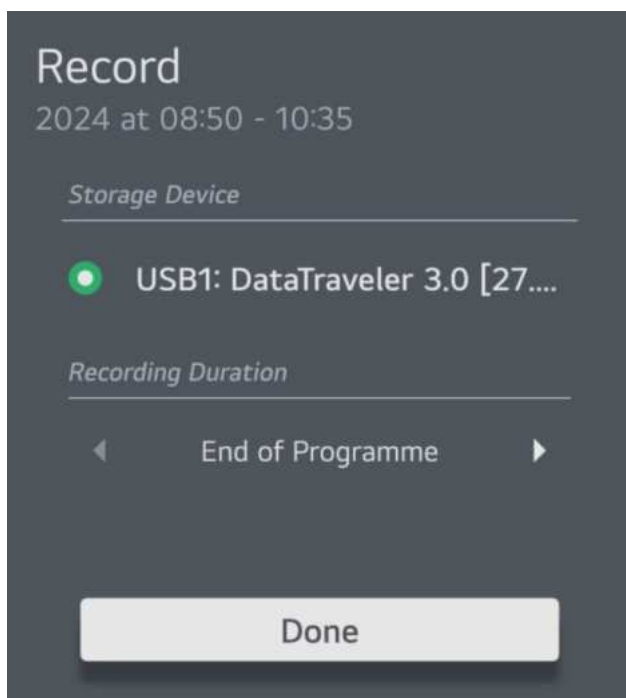


You can change the duration and it will let you select from 30 minutes upwards in 30 minute intervals or just record to the end of program, once you have selected your duration select done and press the OK button.

 If this is the first time recording on this storage device the TV will run a check to ensure the device is suitable for recording to.

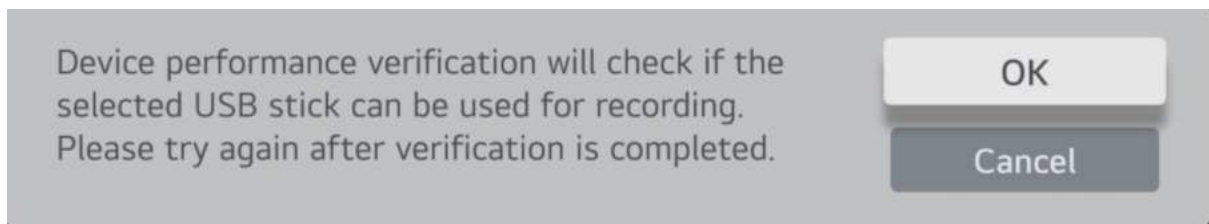

Click OK to run verification test.

 Once completed this message will appear.

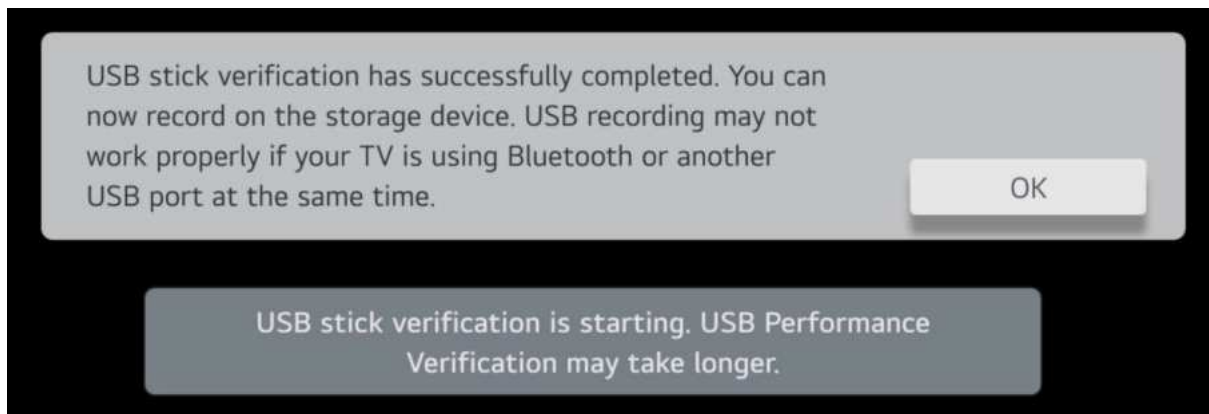


Click OK and restart the recording.

A message will appear to say recording has started and if there are more episodes of the same program this message will pop up to ask if you want to record other episodes.

If you want to stop the recording before it reaches the scheduled end then press the OK button on the remote and a button will pop up at the bottom left press OK to stop the recording.



 This screen will then pop up and you have several options to save the recording or discard it.

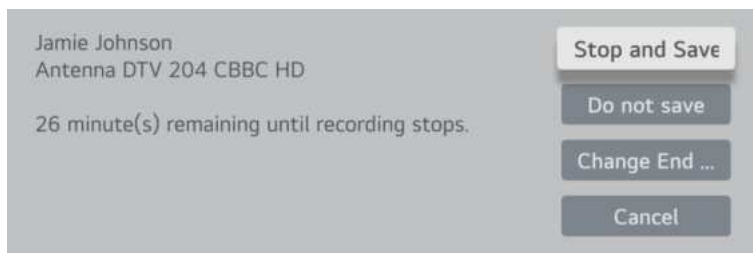

The top option is stop and save the recording to this point.

The second option is do not save, discard the recording.

 
3rd option is to change when the recording is scheduled to stop

And the last one cancels the stop request and continues recording until the original specified end point.

Playing recorded programs will be covered in a later section as it is the same regardless of how you recorded it.


Scheduling a Timed Recording

If you want to set a program to record in the future you can set the timer to start and stop the recording. To schedule a timed recording press the 3 dots ... button on the remote.

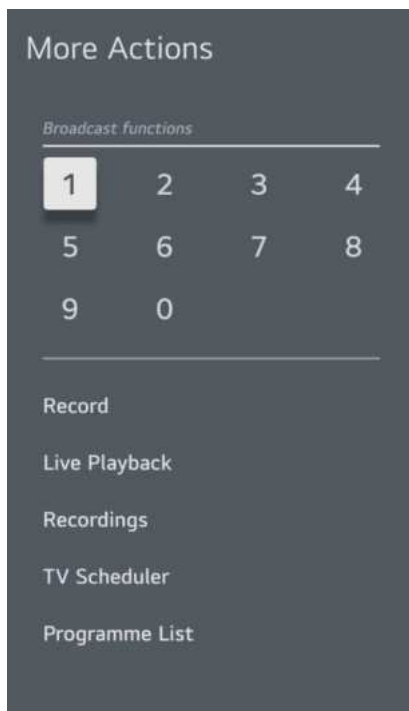

Select TV Scheduler from the list

 The TV scheduler will be blank unless you have used it before.

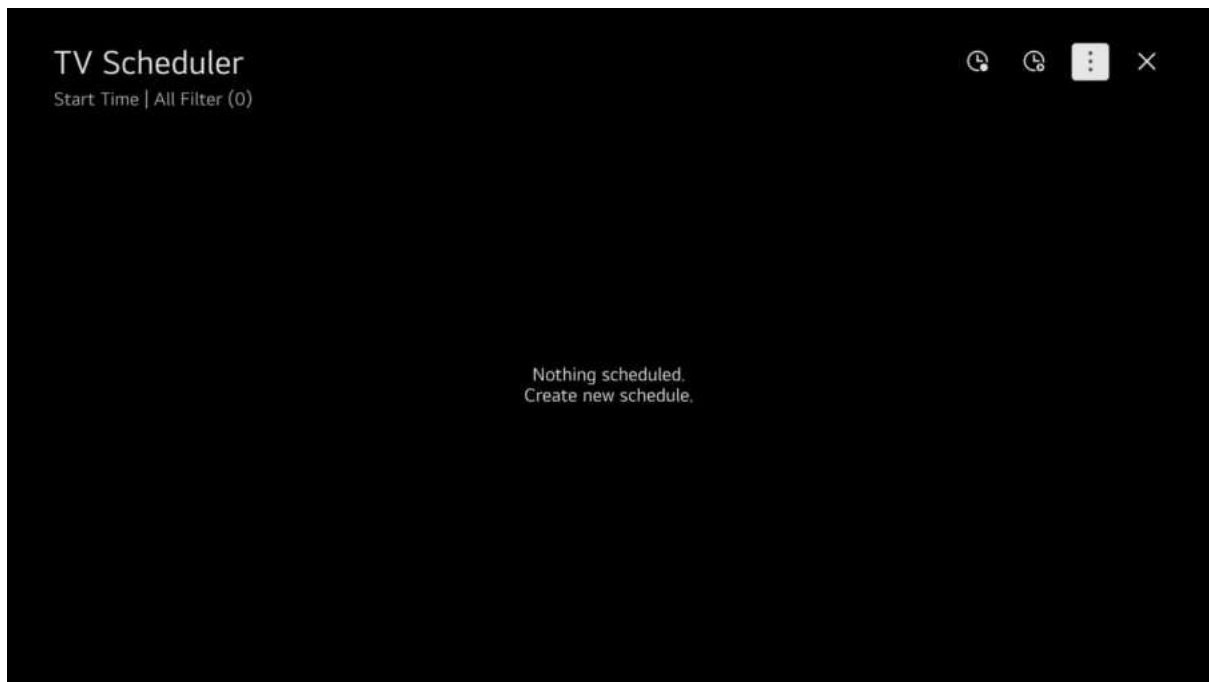

At the top right there are 2 clock icons, 3 vertical dots and a cross.

 
The clock furthest left is the schedule recording clock.

The next clock is schedule a reminder, this can be used to remind you when a program is about to start so you don't miss it.

The 3 vertical dots is for editing entries in the schedule.

The cross is to exit the scheduler and return to the TV.

Select the clock furthest left to schedule a recording and this pop-up screen will appear.

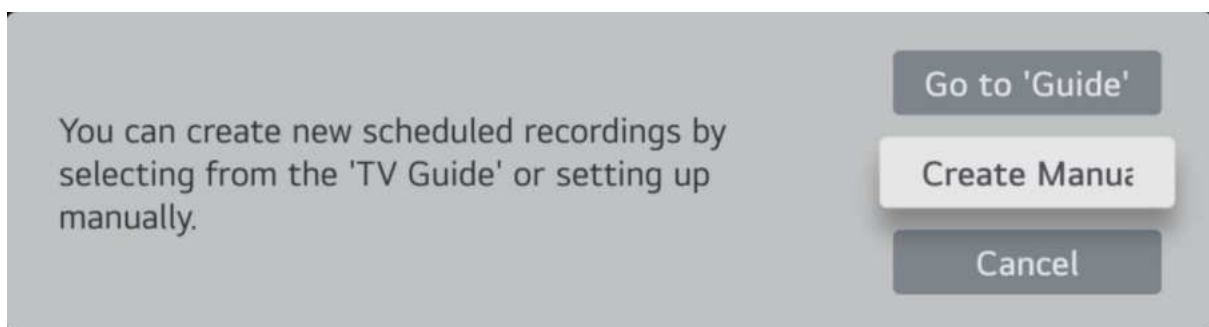

Select manually schedule a recording, using the guide is explained later.

New Scheduled Recording
 e, time, and programme for recording.

25 April 2024 at 09:07

Storage Device >
 USB1: DataTraveler 3.0 [27.2GB Free /

Recurring >
 Not Recurring

Date >
 Thursday, 25 April 2024

Start Time >
 09:09

End Time >
 09:39

Programme >

This pop-up screen can be used to enter the details of your scheduled recording.

If you have more than one storage device connected you can select which one to use, otherwise skip the top row, then set whether you want it to happen more than once so you can select daily or weekly, remember this is manually set so if something changes in the broadcast schedule you might miss the intended program. Then set the date of the recording (first recording if you have set recurring), set the start time and the end time, the programme for example DTV 3 ITV1, if you wish you can manually type in a title for your recording. When you are satisfied with your settings you will be here

New Scheduled Recording
 age device, time, and programme for rec

29 April 2024 at 09:35

Date >
 Monday, 29 April 2024

Start Time >
 09:37

 
End Time >
 10:07

Programme >
 Antenna DTV 204 CBBC HD

Programme Title
 1 programme except for Jamie Johnson

Done


Select done to schedule the recording and it will appear in the scheduled recording list.

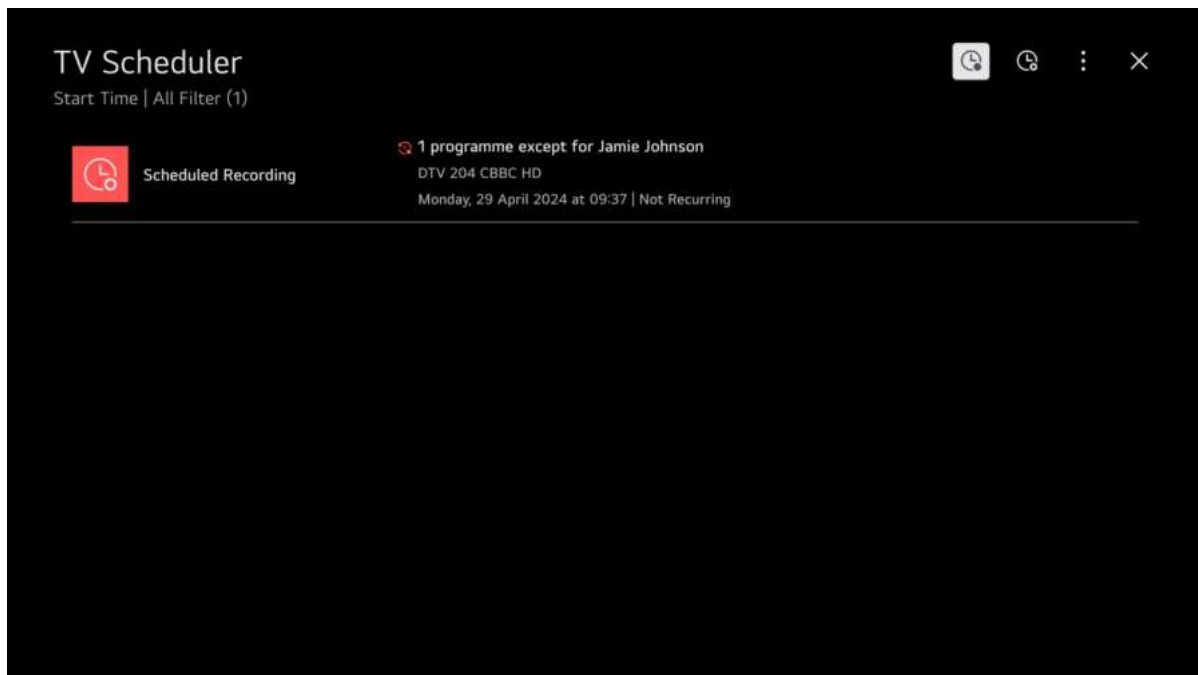

Please note for the recording to happen the TV must either be in standby or on another source or you have to watch the channel you are recording, you cannot record one channel and watch another at the same time. You can record a TV program and watch a satellite channel or a DVD or something on an app or something via HDMI.


Scheduling a Recording using the Guide

 The easiest way to schedule a recording is to use the TV guide. Press the guide button on the remote to bring up the TV guide.

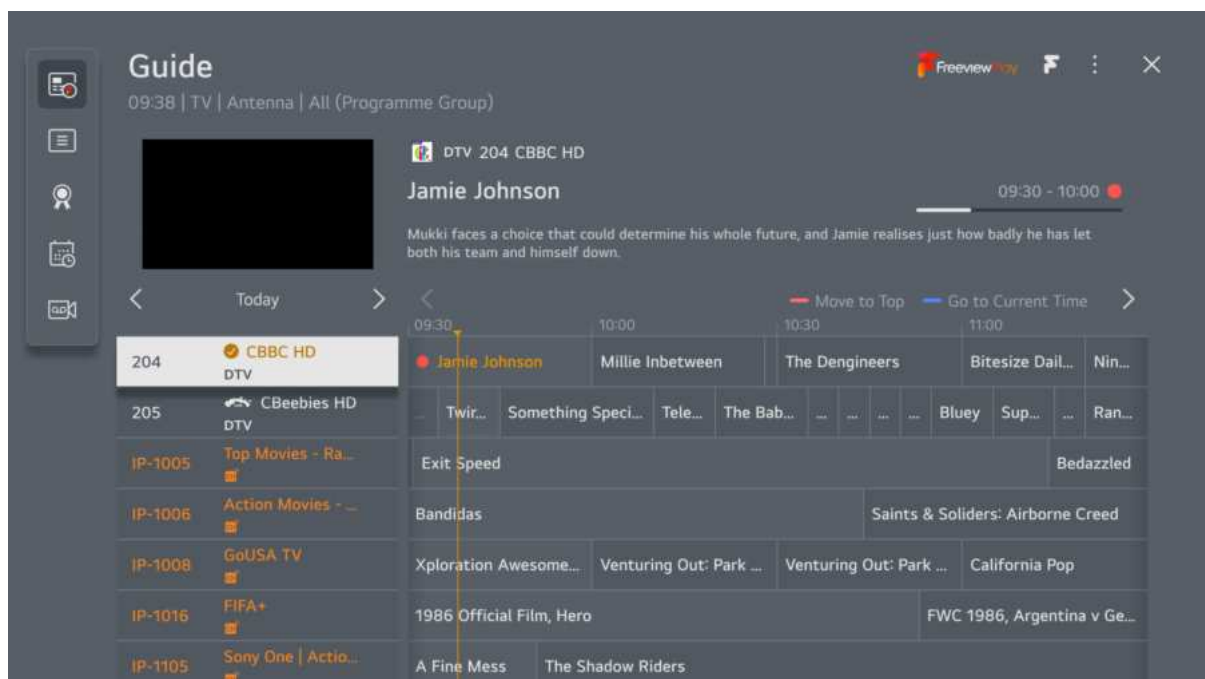

Use the arrow keys on your remote to navigate to the desired program to record, you can use up and down arrows to move to different channels and the right arrow to move forward in time, you cannot record something in the past you can only watch that on catchup where available.

 
Once you find the program you want to record then highlight it

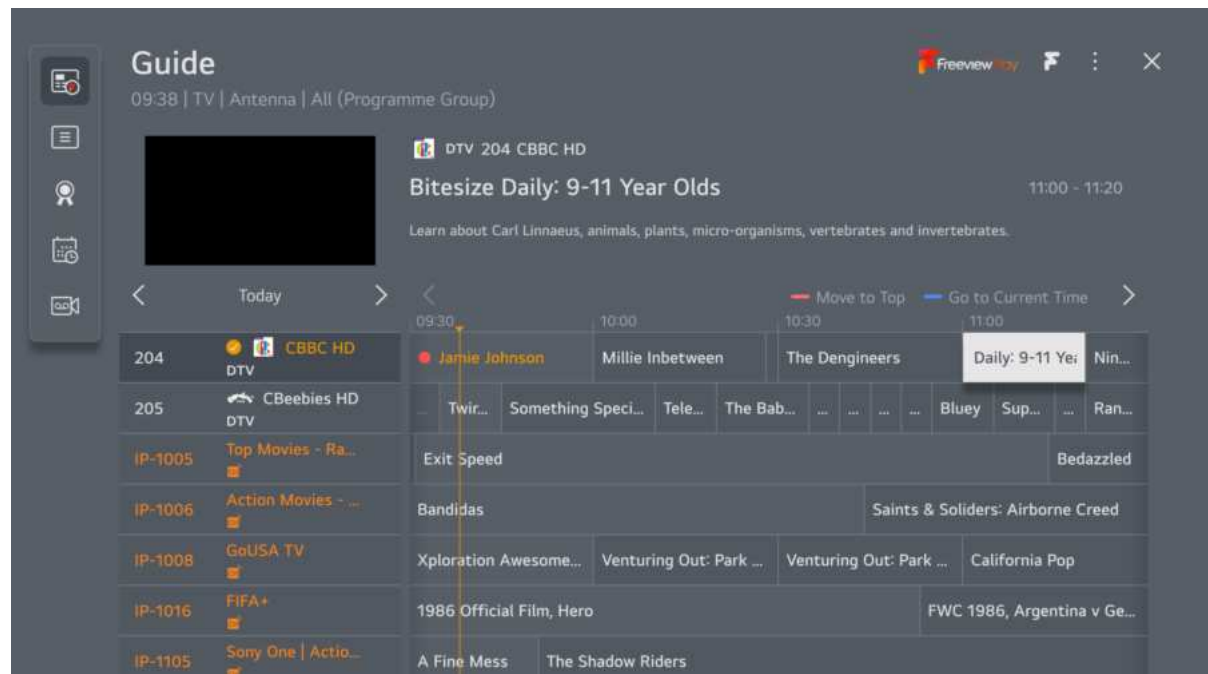


Click the Ok button and the following message will be displayed.



 You can choose to set a reminder or schedule a recording, to schedule a recording choose the second option and press OK.

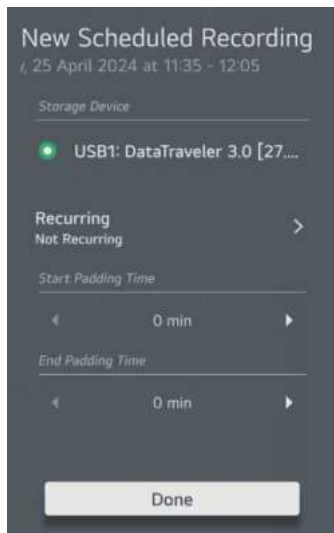

 This box will pop up on the right of the screen, you can choose either this episode only or record the whole series. Whichever you choose a red clock will appear next the program on the guide.

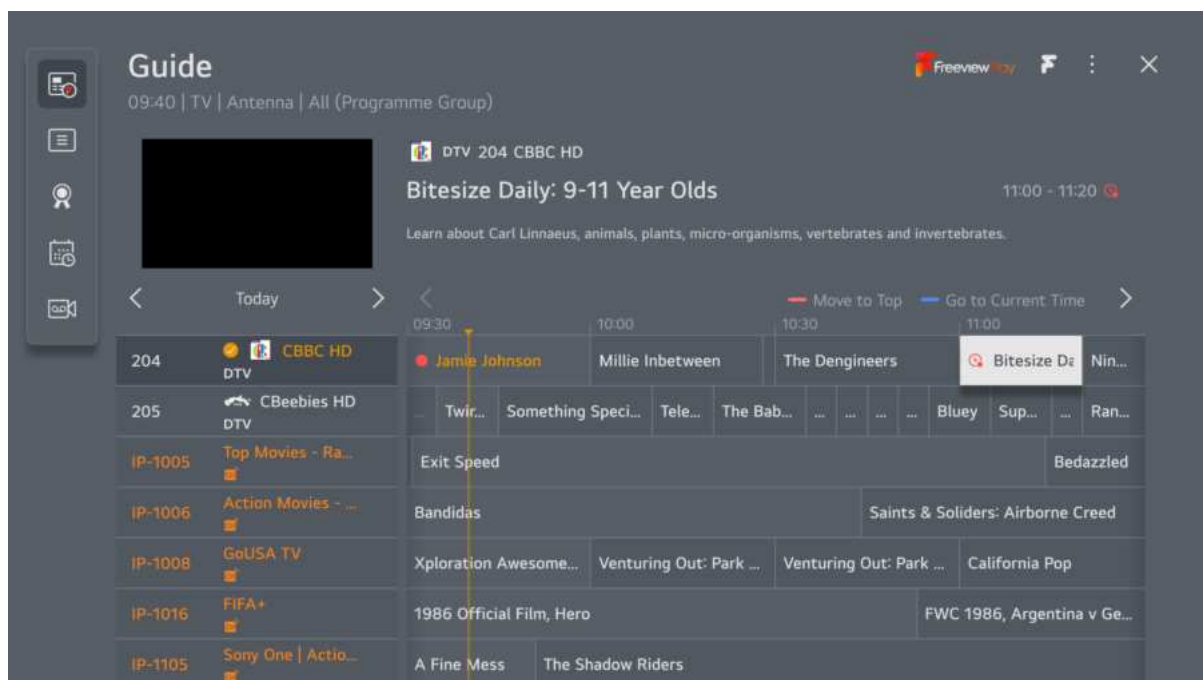


The program is now set for recording, please remember you can't record a program and watch another program on the same source at the same time, you can watch something on another source while the recording is taking place or the TV can be in standby.

How to playback recorded programs.

You need to have the external storage device on which you made your recordings plugged into the USB socket on the TV.

 
When watching TV or satellite press the 3 dots button and select recordings from the pop-up menu.

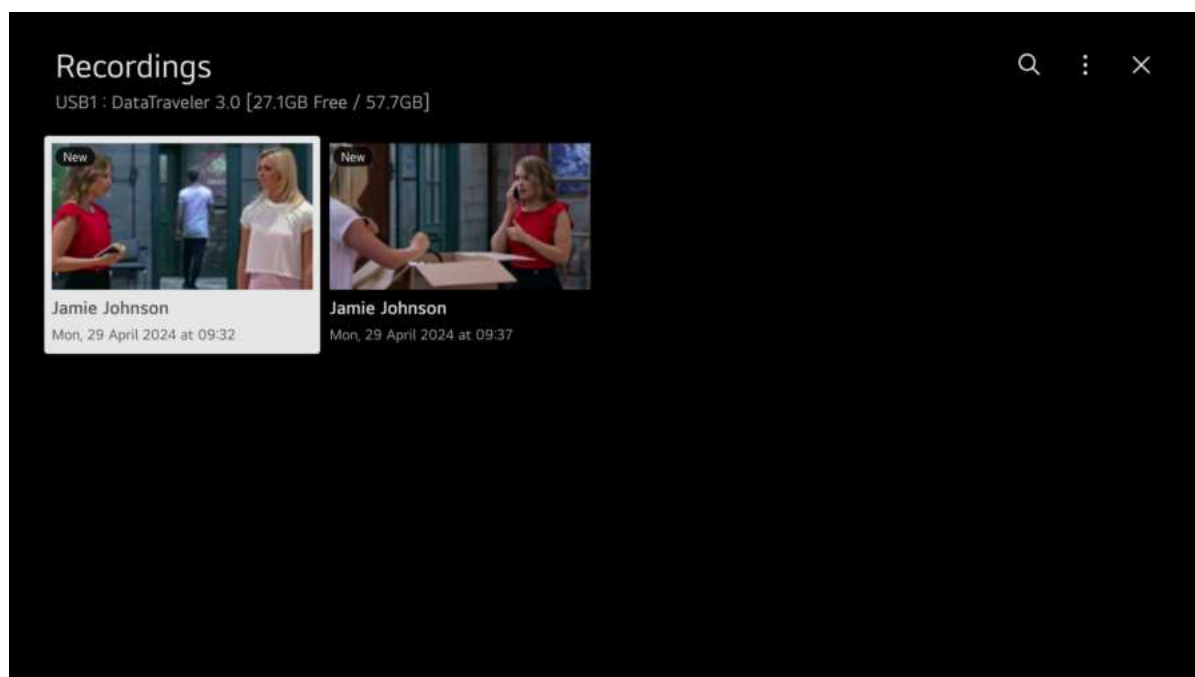


Use the arrow keys on your remote to select the program you want to watch and press the OK button and the program will start playing. To control the playback you must use the on screen controls. Press OK to bring up the on-screen controls.



 select the down arrow to find more options.

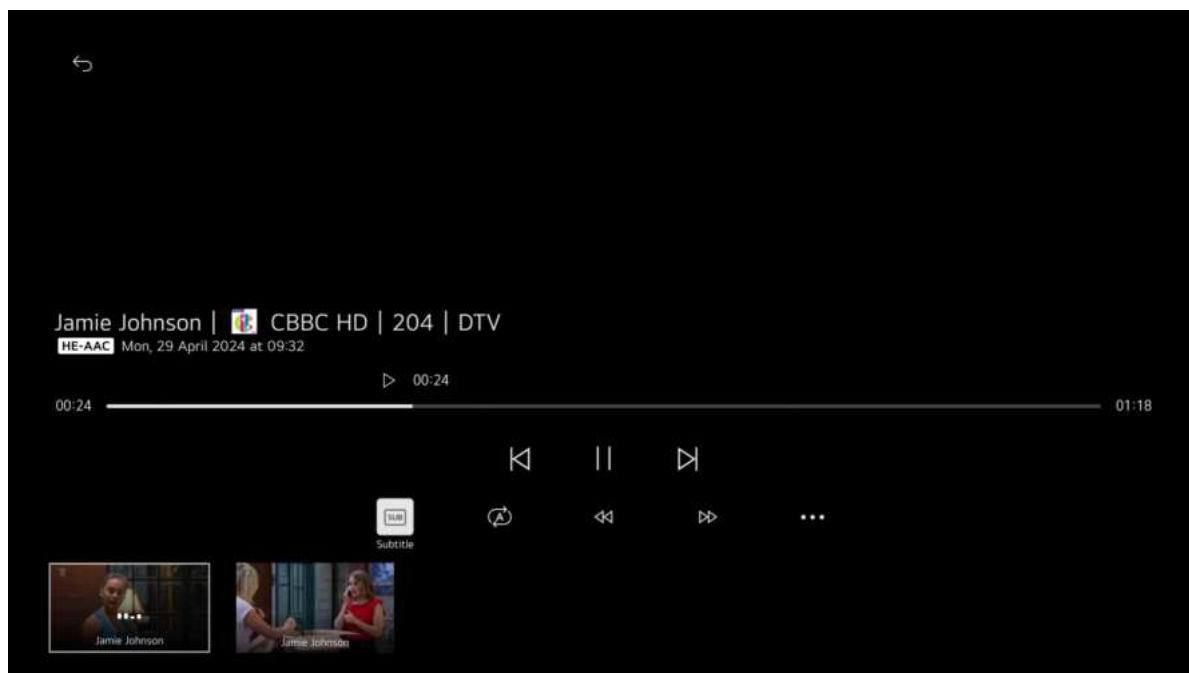

 If you are not watching TV or satellite and want to see your recordings then you can press the source button and select your storage device from the USB input. Then select Recordings from the pop-up message.

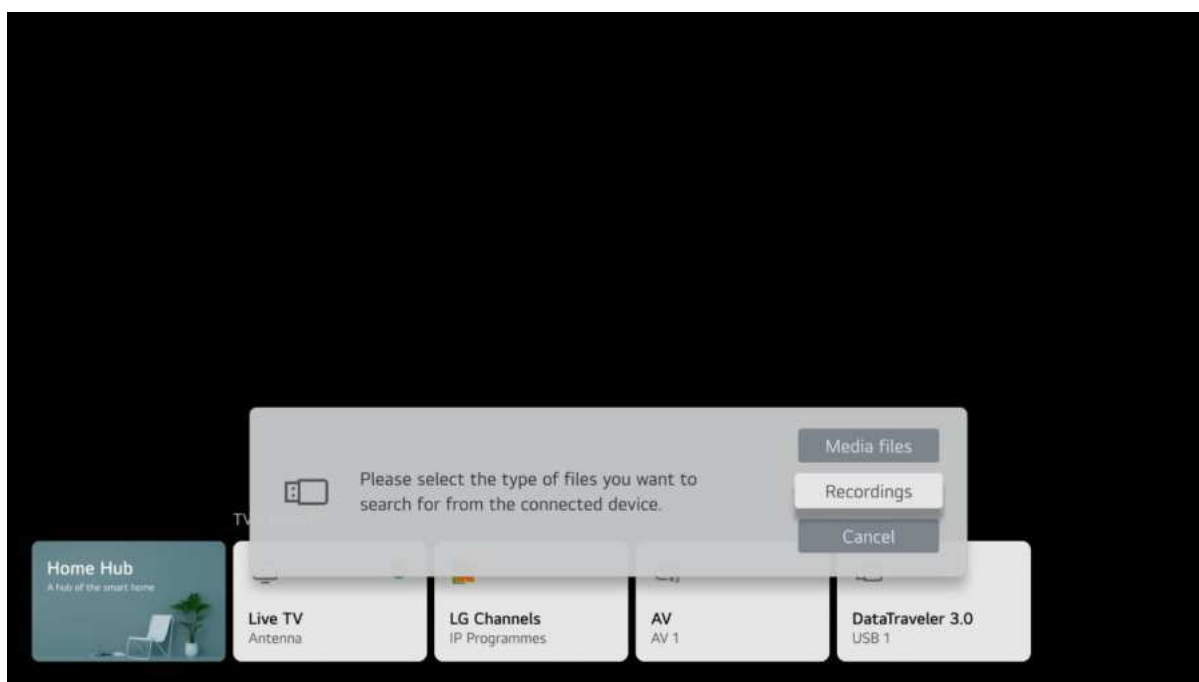


To stop the playback of any recorded program press the Back button on the remote control.

DVD Function

The built in DVD player can be controlled with the buttons on the remote with the white background.



From any screen on the TV press the DVD button  to go to the DVD player.

To insert a disc hold this disc with the shiny side facing you and the label side facing away from you, gently push the disc into the DVD opening on the side until the mechanism catches it and takes it inside. Do not force the disc as you may cause damage to the disc or the mechanism or both.

The disc will load and the disc menu page will be displayed, use the arrow keys to make your choice and then use the OK button. NB only buttons on the area of the remote with a white background will work with the DVD none of the other keys will have any effect on the DVD operation. Please see the remote-control leaflet enclosed with the TV for a full list of remote control button functions.

To eject the disc press .

To exit DVD press the exit key or press the source key and select where you want to go.

 
Maintenance

Careful and regular cleaning can prolong the life of your TV.

Be sure to Disconnect the mains cable from the mains socket before any cleaning.

1. Use a soft dry cloth to wipe away the dust from the screen and surfaces.
2. If the surfaces are extremely dirty, clean the TV with a cloth which has been dipped in a weak soapy water. Wring the cloth until it is almost dry, then use it to wipe the TV.
3. Ensure there is no excess water on the screen. Allow any water or dampness to evaporate before switching the TV on.

Never use alcohol, benzine, paint-thinner, cleaning fluid or other chemicals. Do not use compressed air to remove dust.

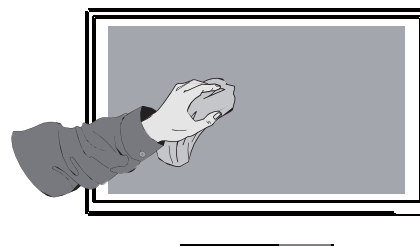

Disposal



This logo on the product means that it is an appliance whose treatment as waste falls within the framework of the European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), which requires that used household appliances be collected separately in order to optimize the recovery rate and recycling of the materials they contain, and reduce the impact on the environment and human health.

Thus, at the end of the life of this device, it must not be disposed of with unsorted household waste. It must be disposed of in the return and collection systems made available to you by local authorities (waste collection centres) and distributors.

As an end consumer, your role is essential in the reuse, recycling and other forms of recovery cycle of this Electrical and Electronic Equipment.

You are required to use the selective collection systems available to you.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

