

**SUB S4**

USER GUIDE

[www.orbitsound.com](http://www.orbitsound.com)

[orbitsound.com/support/subs4](http://orbitsound.com/support/subs4)

For an online version of this guide please visit the above link.

Eine deutsche Version dieses Leitfadens finden Sie unter dem oben. aufgeführten Link.

Pour une version Français de ce guide, veuillez consulter le lien ci-dessus.

Per una versione italiano di questa guida, visitare il link di cui sopra.

Para obtener una versión en Español de esta guía, visite el enlace que aparece arriba.

 
如需中文版本的指南, 請瀏覽上述連結。

Thank you for purchasing the SUB S4. The SUB S4 is exclusively designed to extend the bass and power of compatible Orbitsound products. Use this guide to wirelessly connect the SUB S4 to your Orbitsound speaker, and enjoy superb bass from all your media and music.

# SUB S4 overview


FRONT

REAR

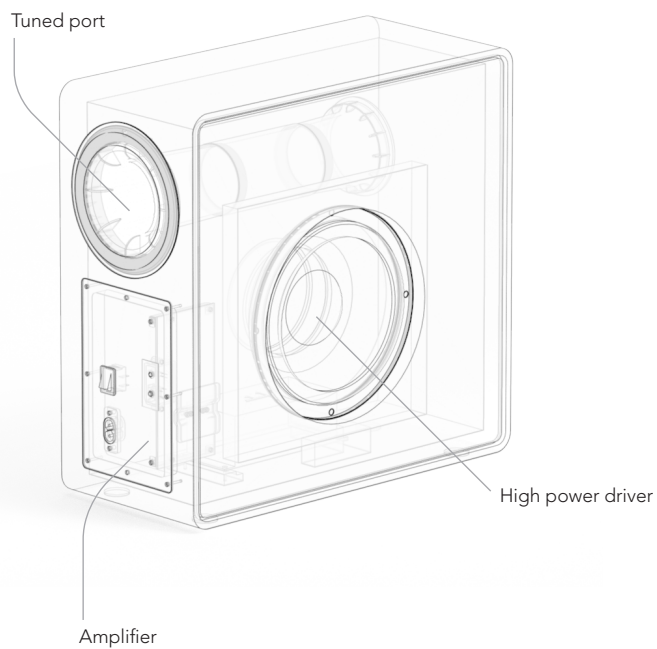


## Connection

 The status light shows the connection status:




### Off

 Subwoofer is switched off or disconnected



### Flashing

 Subwoofer is seeking a connection (pairing mode)



### On

Subwoofer is connected to a host speaker

## Pairing, 123

To use the SUB S4, you need to pair it to a compatible host 'master' speaker.

### 1.

Switch on the subwoofer, and then press and hold the PAIR button for 3 seconds, until the STATUS light starts to flash.

### 2.

Seek a subwoofer on the host device - for Dock E30, press and hold the dial for 10 seconds until the display shows a seeking animation.

Note: Other products may differ in pairing method. Refer to the Orbitsound website for more information.

### 3.

After a few seconds the STATUS light should turn solid red, and the subwoofer will start to operate.

# Controlling the SUB S4

The volume of the subwoofer is automatically linked to the master speaker.



You can change the amount of bass produced by the SUB S4 by pressing bass+/- on the remote control.



Please note that the remote control should be pointed at the master speaker (e.g. DOCK) and not the subwoofer to control it.

Bass control



 
## Get the most from the SUB S4

The S4 can be placed anywhere, but for the best performance, please take note of the following advice.



### Not too far


Although the SUB S4 is wireless with a range of 10+ metres, the best sound is achieved by keeping it within 3 metres of the master speaker. This is to ensure that the sound you experience from the master and sub speakers travels about the same distance, and is about the same volume.



### Obstacles are ok


Sub bass has long wavelengths that travel around objects. So, you can place the SUB S4 on display, or choose to tuck it away behind furniture, and the sound will not usually be affected.

 The choice is yours.

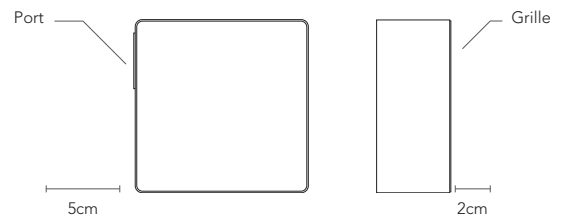

### Room to breathe

 The SUB S4 moves a lot of air. Wherever you place the subwoofer, make sure that the metal grille has at least 2cm of space all around, and that the port has at least 5cm between it and any large surfaces (e.g. walls)

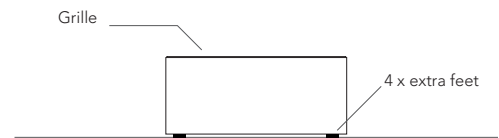

### Alternative placement

The SUB S4 can also be placed on its side. This is convenient for placing under furniture or shelves e.g. Please note that the subwoofer must be placed with the metal grille facing upwards, and with minimum clearance as stated above. Use included extra feet when placing in this position.

