

Escape™ P6 BT

Quick Start Guide

ENG
ES

escape™
a journey through sound

Carefully read all safety precautions in the attached document or on the website www.escapeSpeakers.com before using this product.

P6 BT QSG ENG-SP (V2021.01)

Keypad special functions

BUTTON	FUNCTION
◀◀ 5 sec Keypad lock	Press the skip backwards button for 5 seconds until you hear a confirmation tone. The keypad is now locked. To confirm, the skip backwards LED starts flashing three times each time you touch any key.
▶▶ 5 sec Keypad unlock	Press the skip forward button for 5 seconds until you hear a confirmation tone. The keyboard is now unlocked.
▷▷ 10 sec Factory reset	Press and hold the play/pause button for 10 seconds until you hear a double confirmation tone. The factory settings will be restored. All Bluetooth® devices are deleted from the P6 BT Bluetooth® memory and Twin mode is switched off.
Standby mode	The standby mode is activated by default. This means that when the unit is turned on and does not receive any audio signal for 20 minutes, the P6 BT enters standby mode to save power. The power button will blink and all other LEDs will turn off. Press the power button to turn on the P6 BT again.



Escape™ Remote APP


Download the customized "Escape™ Remote" App and use your phone or tablet as a remote control to control your P6 BT. Make sure your Escape™ is always up to date with the latest software via over-the-air updates.

The user manual for the app can be downloaded from the Escape™ website.



Enjoy your Escape™ P6 BT in 3 steps

1 CHARGING THE INTERNAL BATTERY

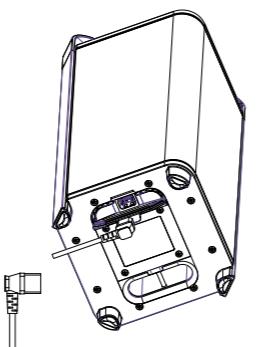

- Connect the enclosed power cord to the input of the device (at the bottom of the unit).
- Plug the power cord into an electrical outlet.
- The red power LED [●] on the keyboard will light up to indicate that the battery is charging. Leave the unit connected to the mains until the red LED goes out. The battery is then fully charged.
- Remove the power cord and close the protective cover.
- A full charge cycle of the battery takes approximately two to three hours. Never leave the P6 BT unattended while charging.


2 TURNING ON THE UNIT



Press the power button [●] for a few seconds until the LED of the volume up button [▬▬] lights up briefly.

A few seconds later, all LEDs will light up and a short confirmation tone will indicate that the unit is switched on.

TWIN mode

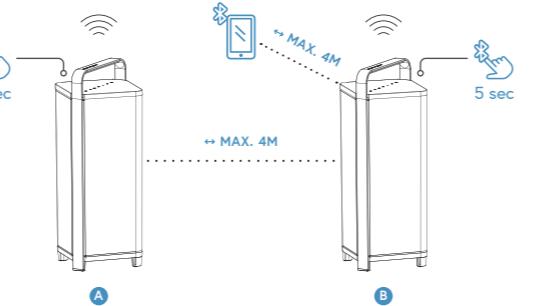

TWIN MODE SET UP

It is possible to connect two Escape™ P6 BT via Twin mode. Make sure that the distance between the two speakers and the Bluetooth® audio source is no more than 4 meters.

Range may vary depending on the brand and model of the phone, tablet or laptop. Note: To enhance the Bluetooth® signal in Twin mode, point the antennas of the two P6 BT towards each other → ← . The direction of the antenna is indicated at the bottom of the device by an arrow → .

Turn on unit A and unit B. Make sure that one P6 BT is connected in Bluetooth® to your mobile device (see Bluetooth® pairing). Then press the Bluetooth® symbol on unit A and B for 5 seconds. All LEDs except the on/off and Bluetooth® LED start flashing and you hear a short confirmation tone followed by a long confirmation tone when both units are connected. Twin mode is stored in the memory and both units will automatically reconnect after the units have been switched off and on again.

White LED's flashing simultaneously = P6 BT's in Twin search mode
 White LED's flash one by one = Twin mode active

TWIN MODE TEMPORARILY DISABLED

If you briefly press the volume down [▬▬] and volume up [▬▬] symbols at the same time, the Twin mode is temporarily switched off. Both P6 BT's work as individual speakers. When the speakers are switched off and on again, the Twin mode is activated again.

For more information, download the extended user manual from the website www.escapeSpeakers.com


3 STREAM MUSIC TO THE ESCAPE™ P6 BT WITH BLUETOOTH® WIRELESS TECHNOLOGY

- To start the Bluetooth® connection, briefly press the Bluetooth® button [❖]. The white LED will start flashing blue and white followed by a double confirmation tone.
 - Go to Settings [⚙️] on your Apple® or Android™ device, select Bluetooth® from the connection list and turn on Bluetooth®.
 - Select Escape™ P6 BT xxxx from the device list. The xxxx represents the last 4 letter/number combination of the unique serial number of the unit. You can find the full serial number on the label next to the battery compartment on the bottom of the unit or on the packaging. (4 last digits are printed in bold)
 - Do not** select the Escape™ P6 BT xxxx App from your list of devices if listed. You cannot stream music via this link.
 - The blue LED of the Bluetooth® symbol on the Escape™ P6 BT keyboard will light up permanently as soon as the connection is established, followed by a short confirmation tone.
- Play your favorite music on the connected mobile device.

Note: If the Bluetooth® connection failed and your mobile device asks you to forget the device, P6 BT may not reappear in the list. In that case, turn Bluetooth® off on your mobile device and turn it on again. P6 BT will then be listed again.

IDEAL LISTENING POSITION

- The P6 BT's specially developed DSP is set to "wide" mode for a three-dimensional sound reproduction.
- Turn the speaker slightly towards the listening position for optimal soundstage. This allows the listener to hear the location of different instruments when listening to a particular piece of music.
- The "wide" mode can be changed to "Stereo" if desired via the Escape™ Remote app.

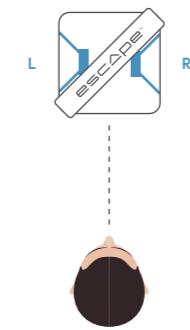

How can I play music on the Escape™ P6 BT from my mobile device?

There are hundreds of free and paying music apps that can be downloaded to your mobile device. (*)

Depending on whether you have an iOS (Apple) or Android operating system, you need to download the app from the Apple store or Google Play.



Spotify is now free on mobile and tablet. With Spotify you have access to a world full of music and podcasts. Registration required.

Radioplayer is the official radio app for the United Kingdom, supported by the BBC and all major independent broadcasters. It's easy to use, with a number of powerful features that will help you enjoy the radio even more. The 11 countries where Radioplayer is active are: UK, Germany, Italy, Canada, Ireland, Austria, Norway, Belgium, Switzerland, Peru, Denmark.

TuneIn brings you live sports, music, news, podcasts and internet radio from all over the world.

Receiver radio (One-time) to be purchased. Receiver is an international internet radio that includes more than 40,000 radio stations, more than 25,000 podcasts and a radio alarm clock function. Search by genre, region, language, sound quality, popularity, etc.
+ List of channels with high sound quality

Overview functions of control buttons

BUTTON	FUNCTION
On/Off button	Turn the Escape™ P6 BT on and off. To turn on the P6 BT, press the power button for 2 seconds until the LED of the volume up button [▬▬] lights up briefly. Briefly press the power button to turn off the P6 BT.
Skip backwards	Press the skip backwards button [] to replay the song from the beginning or press it twice in quick succession to go back to the previous song.
Play/pause	Start or pause the music.
Skip forward	Play the next song.
Decrease the volume	Press the [] briefly to decrease the volume step by step. To decrease the volume quickly, press and hold the [].
Increase volume	Press the [] briefly to increase the volume step by step. To increase the volume quickly, press and hold the [].
Bluetooth® pairing	Briefly press the Bluetooth® logo [] to start pairing with your device. The white LED starts flashing blue and white followed by a double confirmation tone. The search function is activated for 8 minutes and a confirmation tone is heard every 2 minutes. After 8 minutes, the search function stops automatically. Briefly press the Bluetooth® symbol again to restart the search function if necessary. When your portable device is connected in Bluetooth™ with the P6 BT, a short confirmation tone is heard and the Bluetooth® LED lights up permanently blue. The last 8 devices paired in Bluetooth® with the P6 BT are stored in memory. There is no need to pair every time the P6 BT has been turned off. The P6 BT automatically establishes a connection if your portable device is stored in the P6 BT Bluetooth® memory. As soon as you have established a connection with more than 8 devices and the P6 BT, the oldest device is automatically removed.

ⓘ The power LED light indicates the status of the internal battery.

LED APPEARANCE	BATTERY STATUS
Flashing red for 3 seconds and white for 0.5 seconds	The battery charge has reached approximately 10%. The unit is not connected to a power outlet and the battery needs to be charged.
Solid Red	The unit is connected to a power outlet and is charging.
White	The battery is fully charged.
Rapidly flashing red for 10 seconds	Battery error, for example when the power cable is connected to a power outlet but no battery has been installed.

Warranty and regulations

Limited warranty for the product

The product is covered by a 1-year limited warranty (*) in accordance with the Escape™ P6BT User Manual. The warranty includes all parts and labour required to repair the product. This warranty does not cover damage caused by misuse, accident, misuse, negligence or improper operation or installation, products that have been altered or products whose identification number or serial number has been altered, defaced or removed. For this warranty to apply, you must use the product in accordance with the instructions. (*) The limited warranty on Escape™ products is not subject to change but is subject to alternative legal regulations that may vary from country to country.

Battery Warranty Limitation

The battery is guaranteed for 6 months from date of purchase worldwide.

Returning a P6 BT for repair

Repack the speaker in its original packaging or in a corrugated carton with at least 7.5 cm of resilient material to protect it from damage in transit. Escape™ bv is not responsible for any damage in transit.

European Union

Escape™ bv hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53 / EU and all other applicable EU Directives.



The IPX4 rating of a product means it is suitable for all weather conditions and can withstand strong water splashes. However, it is not resistant to immersion.

(*) Certain music services are subject to change, require individual subscriptions, software or memberships, or may not be available in all countries. Escape™ bv cannot be held responsible for this.

Escape™ P6 BT

Guía De Inicio Rápido

ES
ENG



Por favor, antes de utilizar este producto, consulta atentamente todas las medidas de seguridad enumeradas en el documento adjunto o en el sitio web www.escapeSpeakers.com

P6 BT QSG ENG-SP (V2021.01)

Funciones especiales del teclado

BOTÓN	FUNCIÓN
⬅ 5 sec Bloqueo del teclado	Pulsa el botón para saltar atrás durante 5 segundos hasta que oigas un sonido de confirmación. El teclado ahora queda bloqueado. Como confirmación el LED 'saltar atrás' empieza a parpadear tres veces cuando aprietas un botón cualquiera.
➡ 5 sec Desbloqueo del teclado	Pulsa el botón para saltar adelante durante 5 segundos hasta que oigas un sonido de confirmación. El teclado ahora queda desbloqueado.
⏯ 10 sec Restaurar ajustes de fábrica	Pulsa el botón para iniciar/pausa durante 10 segundos hasta que oigas un doble sonido de confirmación. Los ajustes de fábrica vuelven a instalarse. Todos los aparatos Bluetooth® se borran de la memoria del aparato y se desactiva el modo Twin.
modo stand-by	El modo stand-by queda activado automáticamente. Esto significa que, cuando el aparato ha sido activado y no recibe señales durante 20 minutos, el P6 BT se pone en modo stand-by para ahorrar energía. El botón de encendido se pone a parpadear y todos los demás LED se apagan. Pulsa brevemente el botón de encendido para reactivar el P6 BT.




Aplicación Escape™ Remote



Disfruta de tu Escape™ P6 BT en 3 etapas

1 LA CARGA DE LA BATERÍA INTERNA.

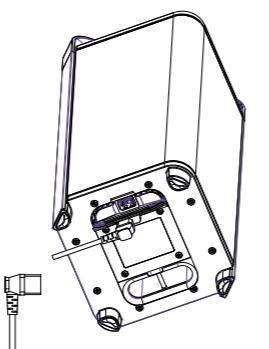

- Conecta el cable de alimentación que va incluido con el puerto de acceso del aparato (en la parte inferior del aparato).
- Enchufa el cable de alimentación.
- En el teclado, la luz LED se iluminará en rojo [] para indicar que la batería está cargando. Mantén el aparato enchufado hasta que se apague la luz LED roja, indicando que la carga de la batería se ha completado.
- Desconecta el cable de alimentación y cierra la protección.
- La duración completa de la carga de la batería es de 2-3 horas. Por favor, nunca dejes el P6 BT desatendido durante el proceso de la carga.

2 LA ACTIVACIÓN DEL APARATO



Pulsa el botón de encendido durante [] unos segundos hasta que brille brevemente la luz LED del botón que sube el volumen [].

Tras unos segundos, todas las luces LED brillarán y se oirá una señal corta de afirmación para indicar que el aparato está activado.

3 LA TRANSMISIÓN DE MÚSICA AL ESCAPE™ P6 BT CON TECNOLOGÍA INALÁMBRICA BLUETOOTH®.


- Para iniciar la conexión con Bluetooth®, pulsa brevemente el botón Bluetooth® []. La luz LED blanca se pone a parpadear azul y blanco, seguido por una doble señal de afirmación.
- Ve a Configuración [] en tu aparato Apple® o Android™, selecciona Bluetooth® en la lista de conexiones y activa Bluetooth®.
- Selecciona Escape™ P6 BT xxxx en la lista de aparatos. Los xxxx representan las últimas 4 combinaciones de letras y números del número único de serie del aparato. Se puede consultar el número de serie completo en la parte inferior del aparato o en el embalaje (los últimos 4 números aparecen en negrita)
- No selecciones la app Escape™ P6BT xxxx en tu lista de aparatos cuando te lo pidan. No puedes transmitir música a través de ese enlace.
- La luz LED azul del símbolo Bluetooth® en el teclado Escape™ P6 BT estará activada permanentemente nada más hecha la conexión, seguido por una corta señal de afirmación.

Escucha tu música preferida a través del aparato móvil conectado.


Nota: Cuando la conexión Bluetooth® falla y el dispositivo te pide que olvides el aparato, es posible que el P6 BT desaparezca de la lista. En dicho caso, hay que desactivar Bluetooth® en tu aparato móvil, luego, volver a conectarlo. Después, el P6 BT volverá a aparecer en la lista.

POSICIÓN IDEAL PARA ESCUCHAR MÚSICA

- La especialmente desarrollada DSP del P6 BT está puesta en el modo "wide", lo cual es apto para una reproducción tridimensional.
- Gira el altavoz un poquito hacia la posición de audición para obtener un sonido perfecto. De esta manera, al escuchar una obra musical, el oyente será capaz de localizar los diversos instrumentos.
- Si lo deseas, es posible modificar el modo "wide" en "Stereo" a través de la aplicación Escape™ Remote.

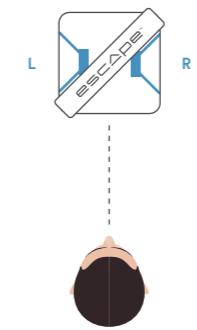

El modo TWIN

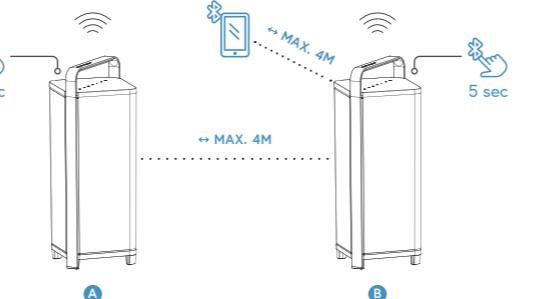

ACTIVAR EL MODO TWIN

Se puede conectar 2 Escape™ P6 BT a través del modo Twin. Haz que la distancia entre los dos altavoces y la fuente de audio Bluetooth® sea de 4 metros como máximo.

El alcance puede variar según la marca y el modelo del teléfono, la tableta o la computadora portátil. Consejo: Para mejorar la señal Bluetooth® en el modo Twin, apunta las antenas de los dos P6 BT hacia el otro → . La dirección de la antena se indica en la parte inferior del dispositivo con una flecha → .

Enciende tanto el aparato A como el aparato B. Asegúrate de que un P6 BT esté conectado en Bluetooth® a tu aparato inalámbrico (Ver Conexión Bluetooth®). A continuación, pulsa el símbolo Bluetooth® de los aparatos A y B durante 5 segundos. Todos los LED, salvo el botón de encendido y el botón de conexión Bluetooth® se ponen a parpadear y cada vez se oye un sonido corto seguido por uno largo de confirmación cuando ambos aparatos estén conectados. El modo Twin se conserva en la memoria y ambos aparatos volverán a conectarse automáticamente después de apagar y encenderlos de nuevo.

LEDs blancos parpadeando simultáneamente = P6 BT's en modo de búsqueda Twin
Los LEDs blancos parpadean uno por uno = Modo Twin activo

DESACTIVAR EL MODO TWIN TEMPORALMENTE

Si se pulsa brevemente y al mismo tiempo el botón para bajar [] y subir [] el volumen se desactiva temporalmente el modo Twin. Ambos P6BT funcionarán como altavoces individuales. Después de apagar y encender los altavoces nuevamente se vuelve a activar el Modo Twin.

Si deseas más información, descarga el amplio manual en el sitio web www.escapeSpeakers.com

Lista de los botones y de sus funciones

BOTÓN	FUNCIÓN
Botón de encendido	Enciende y apaga el Escape™ P6 BT. Para encender el P6 BT, pulsa el botón de encendido durante 2 segundos hasta que brille brevemente el LED del botón para subir el volumen []. Pulta brevemente el botón de encendido para desactivar el P6 BT.
Saltar atrás	Pulsa el botón para saltar atrás [] para reproducir la canción desde el principio, o dos veces en una secuencia corta, para navegar de nuevo hacia la canción anterior.
Iniciar/pausa	Pon la música o ponla en pausa.
Saltar adelante	Reproduce la canción siguiente.
Bajar el volumen	Pulsa brevemente el [] para bajar el volumen gradualmente. Para bajar el volumen rápidamente, sigue pulsando [].
Subir el volumen	Pulsa brevemente el [] para subir el volumen gradualmente. Para subir el volumen rápidamente, sigue pulsando [].
Conexión Bluetooth®	Pulsa brevemente el logotipo de Bluetooth® [] para iniciar la conexión con tu aparato. El LED blanco se pone a parpadear azul y blanco, seguido por un doble sonido de confirmación. La función de búsqueda queda activada durante 8 minutos y cada 2 minutos se oye un breve sonido recordatorio. Despues de 8 minutos la función de búsqueda se apaga automáticamente. Pulsa brevemente el logotipo Bluetooth® para iniciar la función de búsqueda otra vez si fuera necesario. Cuando tu aparato portátil queda conectado en Bluetooth® con el P6 BT se oye un breve sonido afirmativo y el Bluetooth® LED brilla permanentemente azul. Los últimos 8 aparatos que estuvieron conectados en Bluetooth® con el P6 BT se conservan en la memoria. Es decir, no hace falta hacer la conexión cada vez que se haya apagado el P6 BT. Si tu aparato portátil está puesto en la memoria el P6 BT automáticamente hará una conexión. Si haces una conexión con más de 8 aparatos, se eliminará automáticamente la conexión más antigua.

5 Luz LED de alta potente – indicador del nivel de la batería

NIVEL DE LA LUZ LED	NIVEL DE LA BATERÍA
Parpadeando rojo durante 3 segundos y blanco durante 0,5 segundos	La batería ha alcanzado más o menos el 10% de su capacidad. El aparato no está enchufado y la batería tiene que ser cargada.
Permanentemente rojo	El aparato está enchufado y está cargando.
Blanco	La batería está cargada por completo
Parpadeando rojo rápidamente durante 10 segundos	Error de batería, esto ocurre cuando el cable de alimentación está enchufado sin que esté instalada la batería.

Garantía y normativa

Garantía limitada para el aparato
El aparato tiene una garantía limitada hasta 1 año (*), conforme con el manual de usuario del Escape™ P6BT. La garantía incluye todas las piezas y todo el trabajo, necesarios para reparar el producto. Esta garantía no cubre daños causados por mal uso, accidentes, uso inadecuado, negligencia u operación/instalación incorrecta. Esta garantía tampoco cubre los productos modificados ni los productos con el número de identificación o el número de serie alterado, vuelto ilegible o borrado. Para que esta garantía sea aplicable, tienes que usar el producto según las instrucciones. (*) No se puede modificar la garantía limitada de los productos de Escape™, sin embargo, la garantía es sujeta a las diversas normativas vigentes que pueden ser diferentes según el país.

Garantía limitada para la batería
Para la batería, es aplicable una garantía universal de 6 meses.

Devolver un P6 BT para reparaciones
Envuelve el altavoz en el embalaje original o en un embalaje de cartón ondulado, incluyendo un material elástico con un espesor de al menos 7,5 cm para proteger el aparato contra posibles daños durante el transporte. Escape™ bv no es responsable por cualquier forma de daño durante el transporte.

Unión Europea
Escape™ bv certifica que este producto cumple con los requisitos esenciales y con otras estipulaciones relevantes de la directiva europea 2014/53 / EU y con todas las demás directivas de la UE que sean aplicables.



La clasificación IPX4 de un producto demuestra que se puede utilizar el producto en todo tipo de situaciones meteorológicas, incluso que el producto es resistente a las salpicaduras abundantes de agua, sin embargo, el producto no es resistente a la inmersión. Conforme a la Directiva europea de Residuos de Aparatos Eléctricos y Electrónicos, entrada en vigor el 13 de agosto de 2005, quisieramos informarte sobre el hecho que este producto puede contener materiales regulados y que según la Directiva RAEE requieren tratamientos especiales de reuso y de reciclaje. Cuando deseches embalajes u otros materiales similares, te aconsejamos que recicles estos materiales a través de los canales comunes. La batería Escape™ P6 BT cumple con las normativas UN38.3.