
Fosi Audio

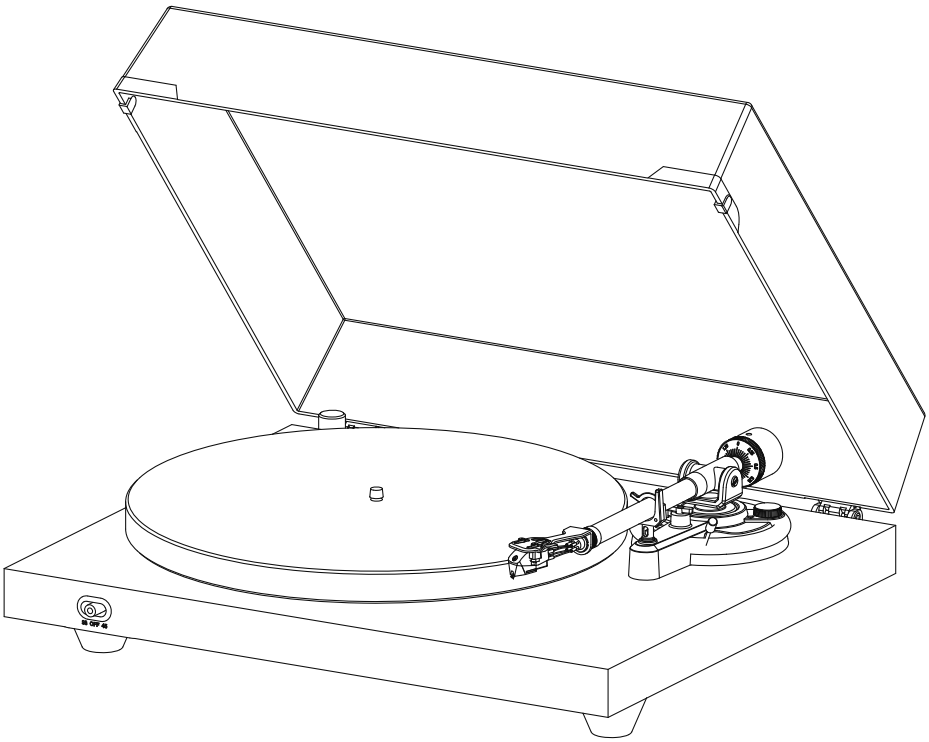


Luna3 User Manual


Introduction

Thank you for purchasing Fosi Audio Luna3 turntable!

The Luna3 is our first high-quality turntable, meticulously designed for audiophiles seeking superior sound quality. It features the latest servo motor technology, ensuring stable and precise rotation speeds. The substantial and stylish acrylic platter effectively minimizes unwanted resonance, thus reducing noise. Our innovative mounting technology significantly decreases motor noise, ensuring a flawless audio signal. Whether you are an audio enthusiast or a music lover, the Luna3 will guide you through an unparalleled auditory journey. Thank you again for your support; Fosi Audio is committed to delivering the ultimate audio solutions.

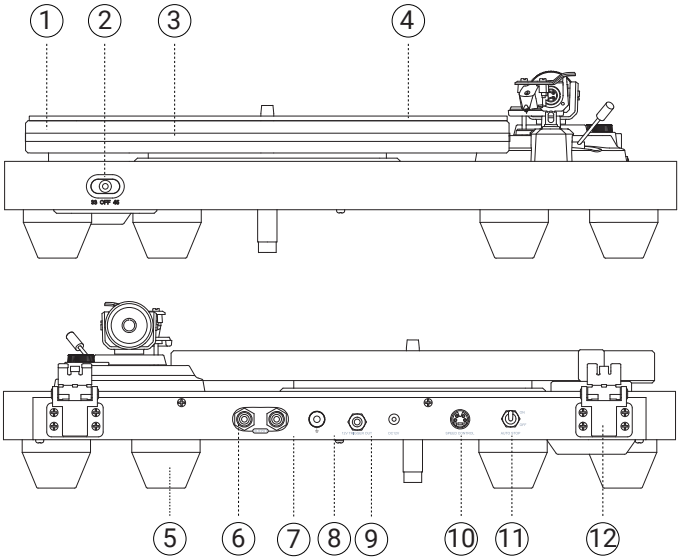

1. Turntable Platter
2. Speed Selector Switch
3. Rubber Belt
4. Platter Mat
5. Isolation Feet
6. RCA Output
7. Ground Terminal
8. 12V Trigger Out Port
9. Power Connector
10. Speed Control
11. Auto-Stop Switch
12. Hinge

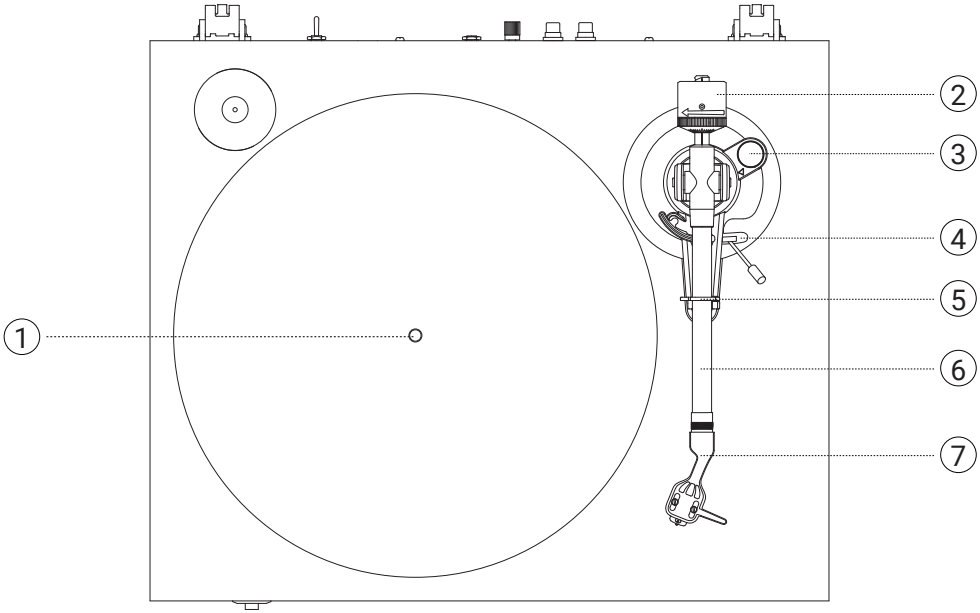


1. Main Spindle
2. Counterweight
3. Anti-skate Adjustment
4. Cueing Lever
5. Tonearm Lock
6. Tonearm
7. Headshell with Stylus


Specifications

Speed	33, 45 (electronic speed change)
Speed Variation	33: 0.1% 45: 0.1%
Wow&Flutter	33: 0.1% 45: 0.15%
Platter	300mm (acrylic)
SNR	65dB
Tonearm Length&Matreial	8.6in (aluminum)
Tonearm Diameter	12.2mm
Effective Arm Length	218.5mm
Overhang	22mm
Dimensions	420×112×330mm (W×H×D)
Weight	3.5kg
Power Consumption	5W (Max)
Power Supply	12VDC/1500mA


Product Overview

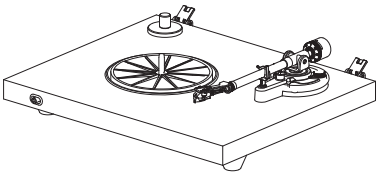


Plinth




12V Power Adapter

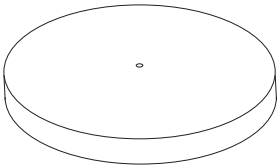


Acrylic Platter

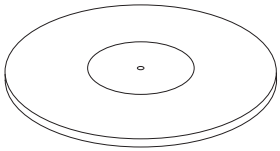


Platter Mat

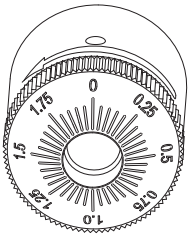


Counterweight

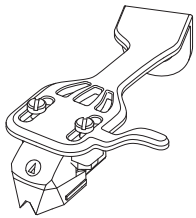


Headshell with Stylus

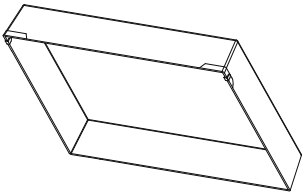

Dust Cover

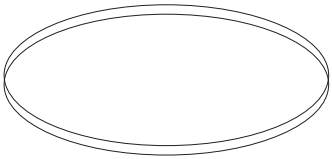

Rubber Belt

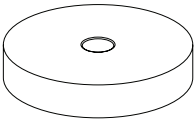

45 Adapter




User Manual

Operation Guide


Initial Setup

Step One: Assemble the Turntable


1. Remove all protective packaging and place the plinth on a solid, level surface. Then, position the platter onto the central spindle;

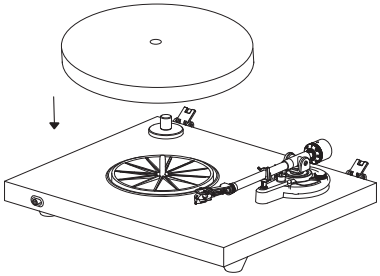

2. Loop the rubber belt around the motor pulley and the platter, being careful not to stretch it excessively. Rotate the platter several times to ensure the belt moves smoothly;

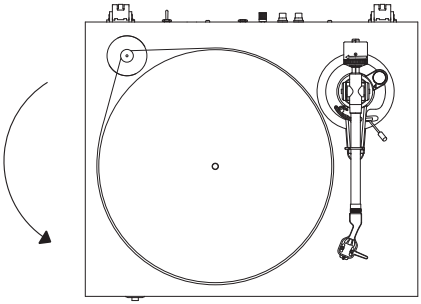


3. Place the platter mat on top of the platter, ensuring the grooved side is facing upward.

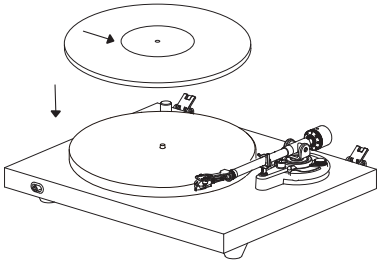


BYPASS

Step Two: Install the Counterweight

1. Secure the tonearm using the tonearm lock;

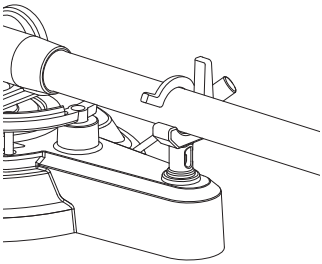


2. Slide the counterweight onto the end of the tonearm with the numbers facing forward, then rotate it to fully engage onto the tonearm.

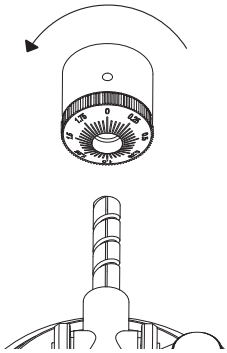

Step Three: Install the Headshell


1. Remove the headshell from its protective packaging and insert it into the end of the tonearm;
2. Tighten the nut on the tonearm until the headshell is secure.

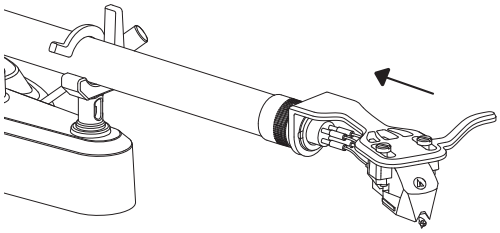

Step Four: Install the Dust Cover

1. Gently place the dust cover aside to use later, avoiding any bumps and scratches;
2. Carefully lift the hinges at the back of the turntable and align the slotted side of the dust cover to fit into place.


Note:
The hinges are spring-loaded and may exert significant force. Handle with care to ensure safety during installation.

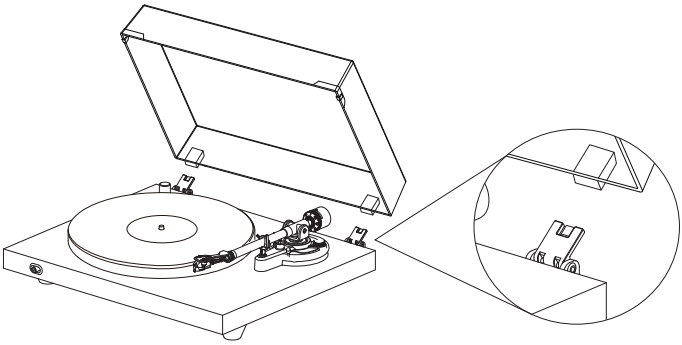


Step Five: Balance the Tonearm

Note:
Please follow all steps to balance the tonearm correctly, as improper balance can damage the stylus and records. For more assistance, please visit the Fosi Audio support page:
https://support.fosiaudio.com/.


1. Remove the stylus protector;

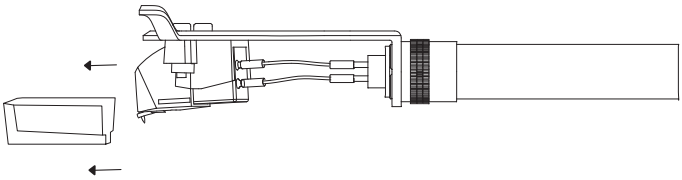


2. Unlock the tonearm lock and lift the cueing lever;

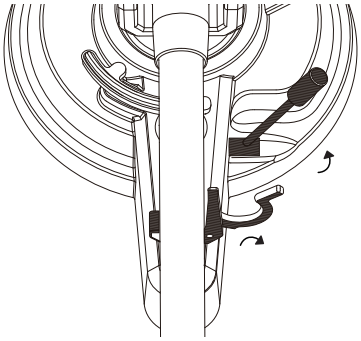


3. Place the tonearm over the platter;

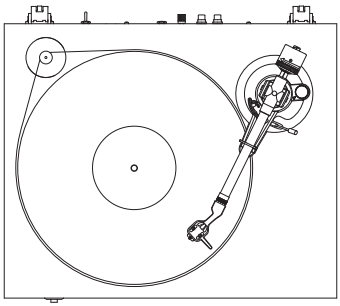

4. Hold the headshell and reset the cueing lever, taking care to avoid contact between the stylus and the platter;

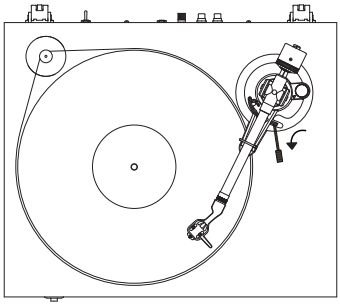


5. Lower the cueing lever and rotate the counterweight until the tonearm and cartridge are horizontally balanced, ensuring the stylus does not touch the platter;

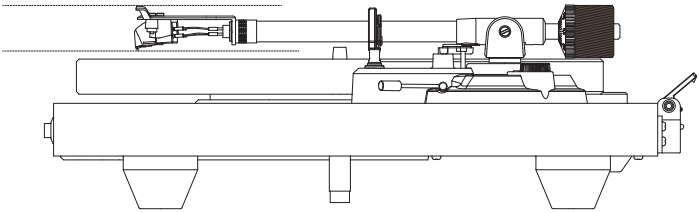


6. Only rotate the counterweight dial, align the centerline to the number "0", maintaining the balance of the tonearm, then secure the tonearm with the tonearm lock;



7. Set the tracking force to 2g by rotating the entire counterweight counterclockwise until the “0” on the dial aligns with the center line;

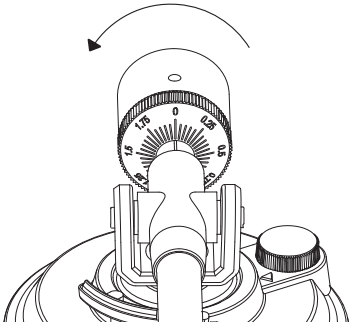


8. Adjust the anti-skating force to match the tracking force of 2 grams.

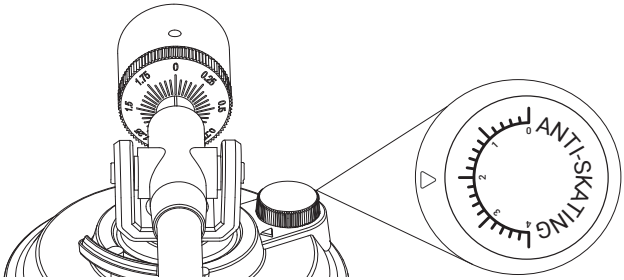

Note:
When adjusting the counterweight, ensure you are rotating the entire counterweight, not just the calibration ring.


Step Six: Connect the RCA Cables and Grounding Wire

The Luna3 does not have a built-in phono preamplifier, so it must be connected to an external phono preamplifier or an amplifier with a phono input. Connect the RCA cables and grounding wire to the back of the turntable and then to the phono input and grounding terminal of the phono preamplifier or amplifier. Match the cable colors to the RCA connectors.

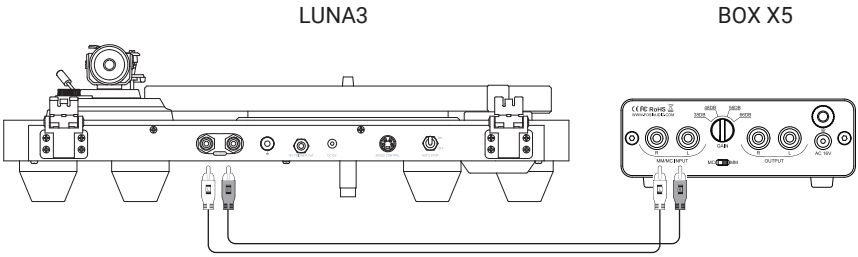

Note:


1. When using a phono preamplifier, connect the grounding wire between the turntable and the phono preamplifier;

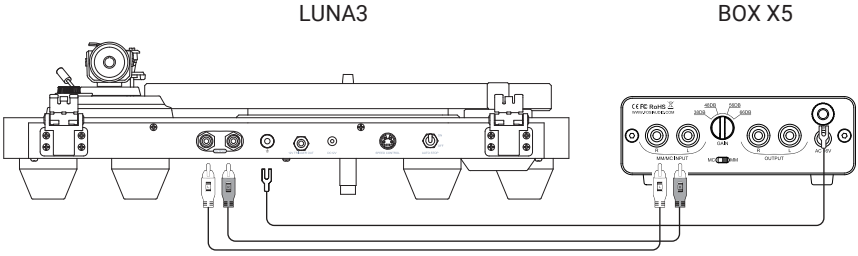

2. Connect a second grounding wire between the phono preamplifier and the amplifier or active speakers. Ensure both ends are grounded to prevent unwanted noise or hum.

Step Seven: Connect the Power Adapter

Ensure a firm connection between the power adapter and the wall outlet. Insert the power cord into the power input on the back of the turntable.

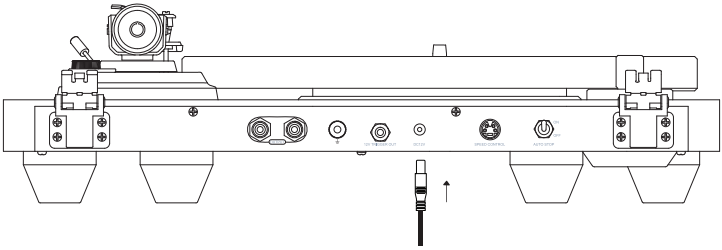

Note:
Always use the official power adapter provided.

Step Eight: Play a Record


1. For optimal audio performance, it is advisable to remove the dust cover first;
2. Place a record on the platter;
3. Set the speed selector switch to the correct speed listed on your record (normally 33 RPM for standard play);
4. Unlock the tonearm;
5. Lift the cueing lever;
6. Move the headshell over to the starting point of the record;
7. Lower the cueing lever;
8. Enjoy the music.

Note:
When not in use, set the speed selector switch to the off position.

Operation Guide

Auto-Stop Feature

The auto-stop function is designed to prolong the life of the stylus. If enabled, the turntable will automatically stop spinning within three minutes if no music is played at the end of a record. If the auto-stop switch is set to off, the turntable will continue to operate.



Note:
The auto-stop function takes about three minutes to activate. Due to variations in vinyl production, some records may not trigger the auto-stop function.

Replacing the Drive Belt

1. Remove the drive belt from the motor pulley and platter;
2. Place the new belt around the motor pulley and platter without overstretching;
3. Rotate the platter several times to ensure the belt operates smoothly.

Turntable Care

1. Wipe the platter's surface with a soft fiber cloth to remove dust;
2. Cover with the dust cover when not in use.

Record Care

1. Store records vertically in a dry environment away from heat sources;
2. Use an anti-static brush to remove groove dirt or a record cleaning solution for deeper cleaning to ensure clear playback;
3. Always use the lever to raise or lower the tonearm to prevent accidental slippage and damage.

Cartridge Care

1. Attach the cartridge protective cover when not in use to prevent accidental damage to the stylus;
2. A stylus cleaning brush can be used to remove dust and debris from the stylus;
3. Enabling the auto-stop feature can stop the platter after playback, reducing stylus wear.

Frequently Asked Quetions

Turntable Not Spinning

A. Ensure the power connection is secure.
B. Set the speed switch to 33 or 45. Lift the tonearm above the platter; the platter should start spinning.
C. Ensure the drive belt is intact and functioning properly.

Incorrect Speed

Check the record label and set the speed switch to match. Most LPs play at 33RPM, but some may play at 45 RPM.

Skipping

A. Ensure the record surface is clean and the record is not warped or damaged.
B. Check the stylus tip for dirt or debris.
C. Refer to the initial setup step four to ensure the tonearm is correctly balanced and set the correct tracking force.
D. Check that the anti-skate adjustment matches the set tracking force.

Audio Feedback

A. Ensure speakers are placed far from the turntable. The turntable should not be placed in front of speakers or on the same surface.
B. For optimal audio performance, remove the dust cover during playback.
C. Lower the volume if feedback occurs at high volume levels.
D. If using an external phono preamp with a filter, turn on the filter to reduce resonance feedback.

Cueing Lever Not Lowering Tonearm

A. Refer to the initial setup step five to ensure the tonearm is properly balanced and the correct tracking force is set.
B. Unlock the tonearm and lower the lever gently pressing the small cradle underneath to fully lower it, resetting the tonearm's lowering mechanism.

Low Volume

A. Check that RCA connections are correct and secure (refer to initial setup step six).
B. Since Luna3 does not have a built-in phono preamp, it must be connected to an amplifier with a phono input or first to an external phono preamp, then to an amplifier.

Humming Sound

A. Connect the ground cable between the external phono preamp and the amplifier. If using an external phono preamp, ensure a second ground cable connects from the phono preamp to the amplifier or active speakers.
B. Ensure the headshell is tightly screwed on and secure.
C. Plug the turntable and other equipment directly into a wall outlet. Do not use power strips or extension cords, as unstable currents can affect sound quality or device operation.
D. Place speakers away from the turntable to reduce resonance and feedback.

Sound Only from One Channel

A. Test speakers with another audio source like a CD player or smartphone to ensure they are working properly.
B. Check the tonearm is balanced and set with the correct tracking force.
C. Disconnect and reconnect RCA cables, ensuring each connection is tight.
D. Try replacing the RCA cables to rule out cable faults.
E. Remove the headshell from the tonearm, and clean the metal contacts at the tail end with an alcohol-dipped swab. After cleaning, reinstall the headshell and tighten the securing nut.

If you have any further questions, please contact our support team at **support@fosiaudio.com.**

Warranty and Maintenance

Fosi Audio pledges to give a 24-month limited warranty and support from the date of purchase. If you encounter any problem when using our product, please contact our support team at support@fosiaudio.com.

About Us

Fosi Audio designs and builds innovative audio products with all your music in mind. Great sound, simple but elegant designs, high-quality components, and truly useful features are what Fosi Audio pursues. We sincerely hope you can get as much enjoyment from our products as we've had to create them!

Our Website: www.fosiaudio.com

Amazon Store: www.amazon.com/fosiaudio

Facebook Page: www.facebook.com/fosiaudioglobal

Youtube Channel: www.youtube.com/@fosiaudio

Official Forum: https://community.fosiaudio.com

Whatsapp: +86 13716612254


After-Sales Service and Technical Support Email:
support@fosiaudio.com

Get Online Support

产品简介

感谢您购买Luna3黑胶唱片机!

Luna3是Fosi Audio首款高品质唱机，专为追求卓越音质的用户设计。它采用最新的伺服电机技术，保证稳定而准确的转速，搭配厚重且美观的亚克力转盘能够显著减少多余的共振，从而减少噪音。创新的固定技术则有效降低电机噪音，确保音频信号纯净无瑕。无论您是发烧友还是音乐爱好者，Luna3都将带您体验无与伦比的音质之旅。再次感谢您的支持，Fosi Audio始终致力于提供极致音频解决方案。

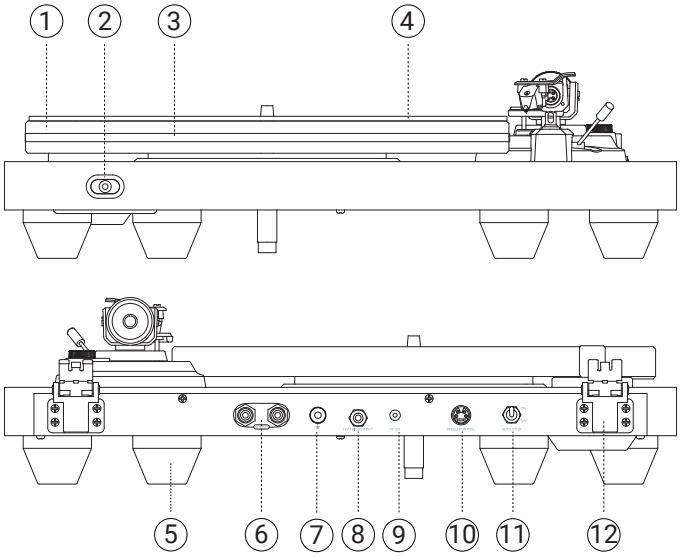

① 转盘

② 转速开关

③ 橡胶皮带

④ 唱盘垫

⑤ 隔离脚

⑥ RCA输出

⑦ 接地端子


⑧ 12V trigger out

⑨ 电源接口

⑩ 速度控制

⑪ 自动停止开关

⑫ 铰链

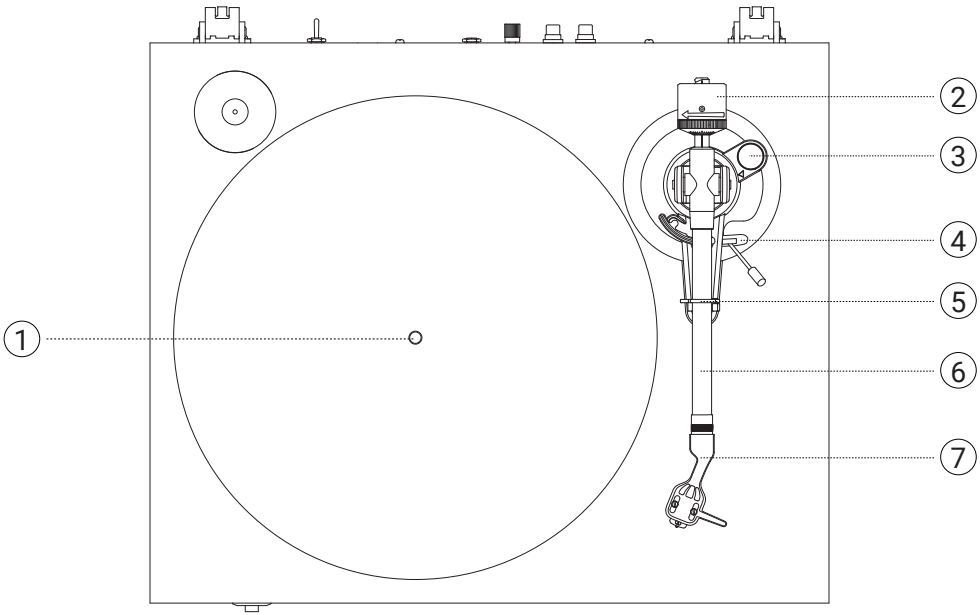

① 主轴

② 配重块

③ 抗侧滑调节

④ 操纵杆

⑤ 唱臂锁


⑥ 唱臂

⑦ 唱头盖


规格参数

转速	同轴、光纤、蓝牙、
转速差	33: 0.1% 45: 0.1%
抖晃	33: 0.1% 45: 0.15%
转盘尺寸	300mm 亚克力
SNR	65dB
唱臂	8.6寸 铝制
唱臂直径	12.2mm
有效唱臂长度	218.5mm
悬垂	22mm
尺寸	420×112×330mm (W×H×D)
重量	3.5kg
功耗	5W (Max)
电源	12VDC/1500mA


包装清单

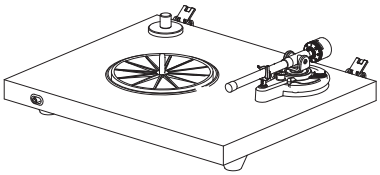


Luna3主体




12V电源

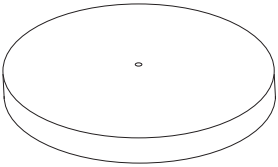


唱盘

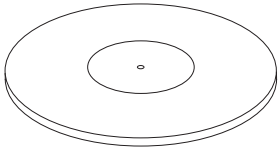


唱盘垫

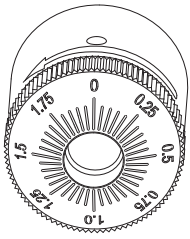


配重块

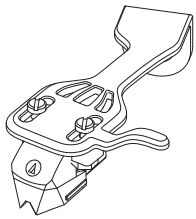


唱头盖

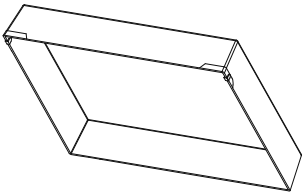

防尘罩

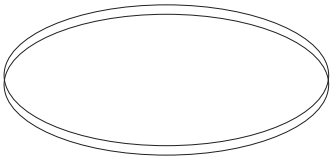

皮带

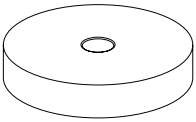

45转适配器




使用说明书

使用说明


首次设置

第一步:安装操作平台


1. 拆除保护包装，将唱机主体放在一个坚固且平整的表面上，再把转盘安装在中间的主轴上;

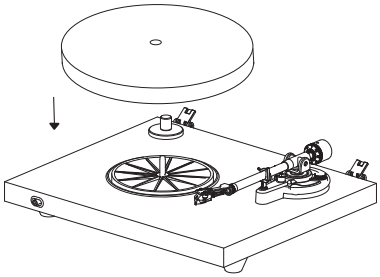

2. 将橡胶皮带沿电机滑轮和转盘缠绕一周，注意不要过度拉伸。旋转几次转盘，以确保橡胶皮带能够正常运转;

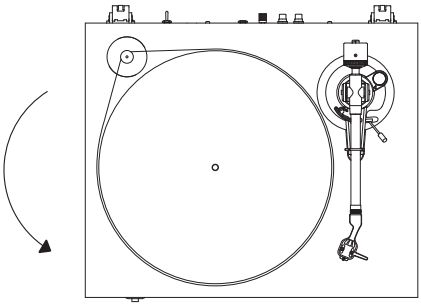


3. 将转盘垫放在转盘的顶部，确保有凹槽的一侧朝上。

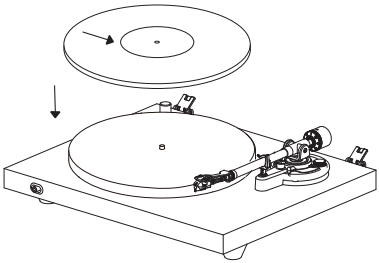


BYPASS 1.0

第二步：安装配重器

1. 使用唱臂锁固定唱臂；

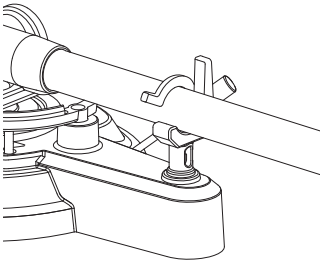


2. 将配重块放到唱臂的末端，数字朝前，旋转配重块使其完全安装在唱臂上。

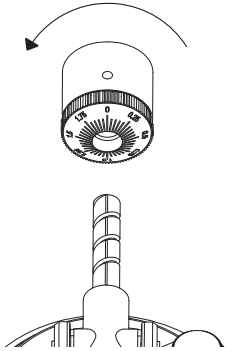

第三步：安装唱头盖


1. 从保护包装上取下唱头盖，并插入唱臂末端；
2. 锁紧唱臂上的螺母，直到唱头盖牢固。

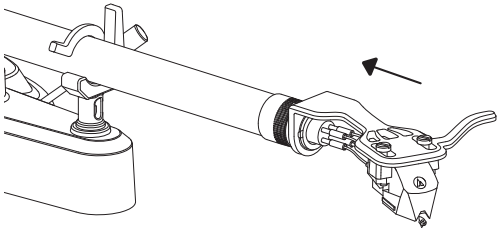

第四步：安装防尘罩

1. 轻轻地将防尘罩放至一边待用，避免磕碰和划伤；
2. 小心地抬起转盘背面的铰链，并将防尘罩带有的插槽的一面对齐安装到位。


注意：
铰链由弹簧应力，开合时可能产生较大力量，安装时请务必注意安全。

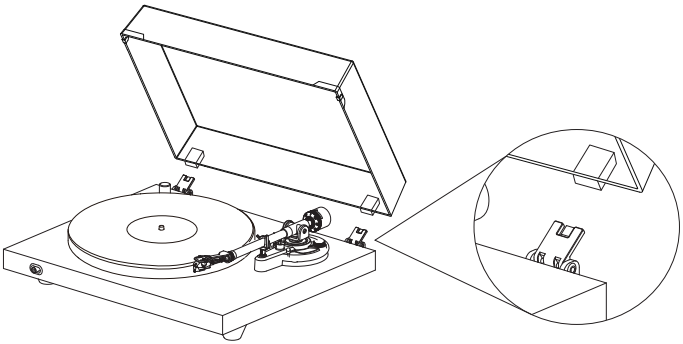


第五步：平衡唱臂

重要提示：
请务必按照说明完成平衡唱臂的所有步骤，不正确的唱臂平衡会损坏唱头和唱片。如需更多帮助，请前往Fosi Audio官网了解更多：
https://support.fosiaudio.com/。


1.拆下唱头保护盖；

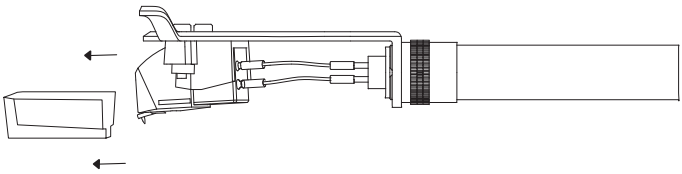


2.打开唱臂锁，并抬起操纵杆；

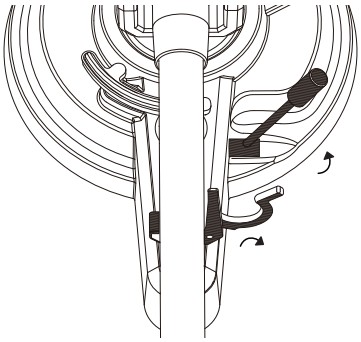


3.将唱臂放置在转盘上；

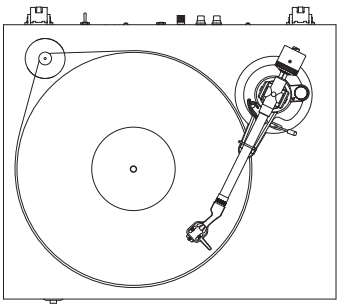

4.握住唱头盖，并将操纵杆复位，此时需要保护唱头不触碰到唱盘；

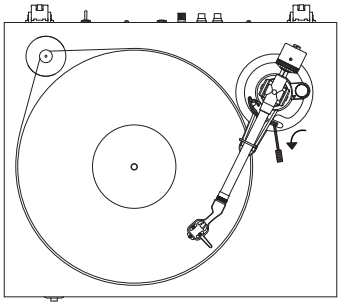


5. 降低操纵杆，旋转配重块直到唱头和唱臂保持水平平衡，过程中不要让唱头触碰到唱盘；

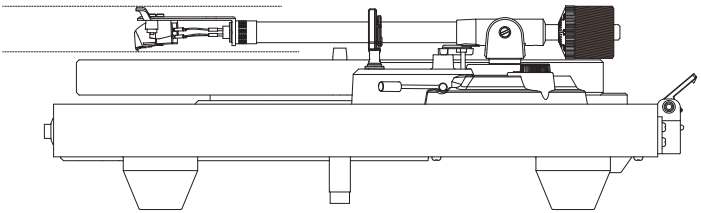


6. 只旋转配重指示环，将中线对齐数字“0”，同时保持唱臂平衡，然后将唱臂归位并用唱臂锁固定；



7.使用2g重量来设置唱头的针压。逆时针旋转整个配重块一圈，直到指示环上的数字0与中心线对齐；

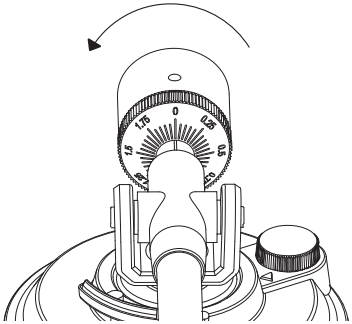


8.设置抗侧滑力的值，以匹配2g的循轨力。

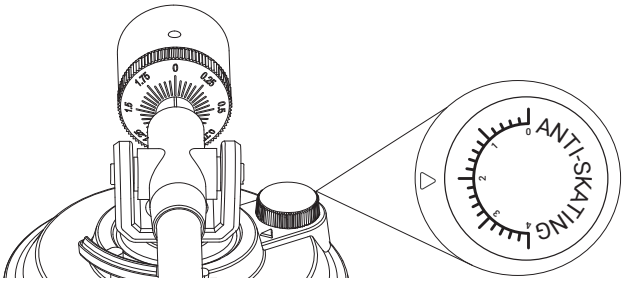

注意：
在设置配重时，要确保转动的是整个配重块，而不是平衡砝码刻度环。


第六步：连接RCA线和接地电缆

Luna3没有内置唱头放大器，所以必须外接一个唱头放大器或带有唱头放大器输入的功放。先将RCA线和接地电缆连接到唱机的背面，再将另一端连接到唱头放大器或功放上的唱机输入以及接地端子。请确保线材的颜色与RCA连接器的颜色相匹配。

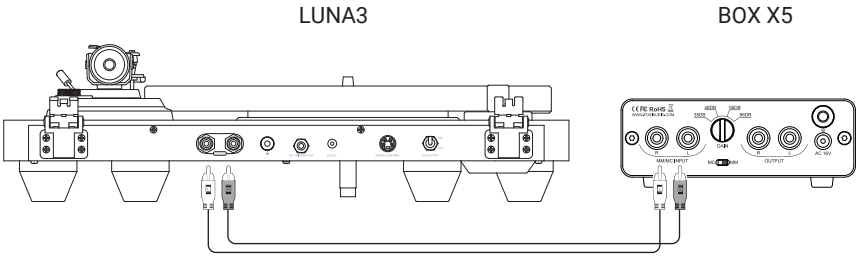

注意：


1.当使用唱头放大器时，接地电缆应连接到唱机和唱头放大器之间。应在唱头放大器和功放或有源扬声器之间连接第二根接地电缆;

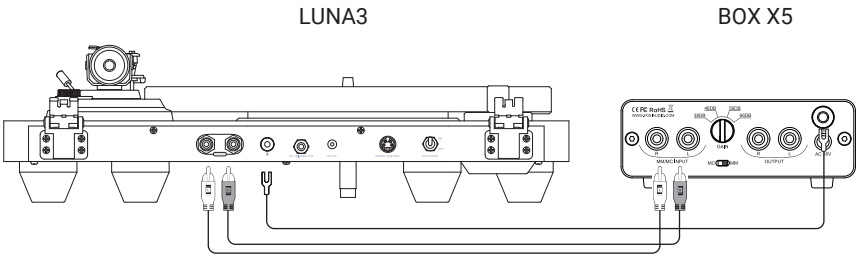

2.接地电缆必须同时连接到唱机和功放上，如果两端不接地会导致不必要的噪音或嗡嗡声。

第七步：连接电源适配器

确保电源适配器与电源插座连接牢固。将电源线插入到唱机背面的电源输入接口中。

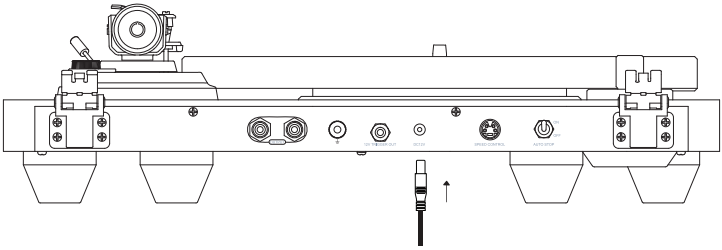

注意：
请务必使用随附的官方电源适配器。

第八步：播放唱片


1.为了获得最佳的音频性能，建议先拆去防尘罩；
2.在转盘上放置一张唱片；
3. 将速度选择开关拨到您的唱片上列出的正确转速(正常唱片播放速度是33转)；
4.解开唱臂锁；
5.抬起操纵杆；
6.将唱头移动到唱片的起点；
7.降下操纵杆；
8.享受音乐。

注意：
不使用唱机时，速度选择开关应设置为关闭。

其他说明

自动停止功能

自动停止功能旨在延长唱头使用寿命。在唱片播放结束时，如果启用了自动停止功能，三分钟内没有音乐播放唱机将自动停止旋转。如果自动停止开关设置为关闭位置，唱机将会一直处于工作状态。



注意：
自动停止功能大约需要三分钟完成。由于在黑胶唱片生产的差异，一些唱片可能使唱机无法实现自动停止功能。

更换橡胶皮带

1.从电机皮带轮和转盘上卸下橡胶皮带；
2.使新的橡胶皮带沿电机滑轮和转盘缠绕一周，注意不要过度拉伸；
3.旋转几次转盘，以确保橡胶皮带能够正常旋转。

转盘护理

1.使用柔软的纤维布擦拭转盘表面的灰尘；
2.不使用唱机时盖上防尘罩。

唱片保养

1.唱片应垂直存储在远离热源的干燥环境中；
2.使用防静电刷扫去唱片的凹槽污垢，也可以使用唱片清洁液做进一步清洁，以确保清晰的播放效果；
3.抬高或放下唱臂时，务必使用操纵杆，以防止意外打滑和划伤。

唱头护理

1.不使用唱机时，需安上唱头保护盖，以防止唱针意外损坏。
2.唱针清洗刷可以用来清除唱针上的灰尘和碎片。
3.启用自动停止功能可以在播放完成后停止转盘，从而减少唱针的磨损。

常见问题

转盘不旋转

A.确保电源连接稳固可靠;
B.将速度选择开关拨到33或45。把唱臂抬到唱盘上方，唱盘会开始旋转;
C.确保橡胶皮带完好，并能正常工作。

转速不匹配

检查唱片标签，并使用转速开关设置与之匹配的转速。常见的LP唱片播放速度是33⅓转/分钟，但也有部分唱片以45转/分钟的速度播放。

跳针

A.确保唱片表面没有污垢和碎屑，以及唱片是否扭曲或变形;
B.检查唱针尖端是否有污垢或碎片;
C.参考首次设置说明的第四步，确认唱臂是否正确平衡，并设置了正确的针压;
D.检查抗侧滑调节钮是否与设定的针压相匹配。

啸叫

A.请确保扬声器的位置远离唱机。唱机不应放置在扬声器的前面或与扬声器在同一桌面上;
B.为了获得最佳的音频性能，应在播放期间移除灰尘盖;
C.大音量播放会导致啸叫。如果出现啸叫，需调小音量;
D.如果使用带有滤波器的外置唱头放大器，请打开它的滤波器以减少共振反馈。

操纵杆未降低唱臂

A.参考首次设置说明第五步，确认唱臂已经完成平衡调节，并设置了正确的唱针压力；
B.锁定唱臂，并降下操纵杆。轻轻按压唱臂下面的小托架直至完全它降到底，以重置唱臂的下降机制。

音量过低

A.检查RCA线连接是否正确和到位（参考首次设置第六步）；
B.Luna3没有内置唱头放大器，因此必须使用带有唱机输入的功放；也可先外接一个唱头放大器，再连接功放。

嗡嗡声

A.将接地线连接到外置唱头放大器或功放上。如果您使用的是外置唱头放大器，请确保另一根接地线已从外置唱头放大器连接到功放或有源音箱上；
B.确保唱头盖已完全拧紧和固定；
C.唱机和其他设备应直接插入墙面电源插座，不建议使用插线板或延长线，以避免电流不稳影响音质或设备的运行；
D.请将音箱远离唱机摆放，避免将唱机放在音箱前面或与音箱放在同一个桌面上，以减少共振和啸叫。

只有一个声道有声音

A.用其他音源设备如CD机、智能手机等测试扬声器是否正常；
B.检查唱臂是否已经平衡，并设置了正确的针压；
C.断开并重新插入 RCA 线，确保每个接口都牢固插紧；
D.尝试更换一组 RCA 线，以排除线材故障的可能性；
E.将唱头盖从唱臂上拆下，用蘸有酒精的棉签清洁唱头盖尾端的金属触点。清洁后重新安装唱头盖，并确保旋紧固定螺母。

如果您还有其他问题，请联系我们的支持团队**support@fosiaudio.com**

产品保修

产品自售出7日内，在正常使用情况下出现故障，客户可以无条件退换货。正常使用两年内出现故障，可以免费保修。购买日期以发票或收据日期为准，网上购买按订单日期为准。

无法享受“三包”服务的情况：

1. 一切人为因素损坏，包括但不限于非正常工作环境下使用或者不按照说明书使用的；
2. 用户私自拆机、改装以及维修的；
3. 使用非指定或许可的配件造成损坏的；
4. 不能出示有效购机凭证的；
5. 不属于本公司产品的。

保修方式：

保修方式为送修，此条款只适用于官方销售渠道售出的产品，其他渠道请参考销售代理商的规定和当地国家法规关于质保的规定。

关于我们

深圳远虑科技是一家专注于音频产品的设计，研发和销售为一体的科技型公 司。我们深耕用户需求，深入研发设计，通过不断创新，持续打磨产品和 服务，致力于打造全球音频领域的星品牌。我们尤其在意客户的反馈，如 果您有任何问题或者需求，欢迎联系我们。

官网：https://www.fosiaudio.com

天猫旗舰店：FOSI AUDIO旗舰店 fosiaudio.tmall.com

京东店铺：FOSI AUDIO旗舰店 mall.jd.com/index-12512168.html

QQ群：760657010


售后邮箱：support@fosiaudio.com

扫码查看在线帮助


製品について

Luna3 ビニールレコードプレーヤーをお買い上げいただきありがとうございます。

Luna3 は、優れた音質を求めるユーザー向けに設計された、Fosi Audio 初の高品質レコードプレーヤーです。最新のサーボモーター技術を採用し、安定した正確な回転速度を実現します。頑丈でスタイリッシュなアクリルターンテーブルにより、不要な共振を効果的に抑え、ノイズを軽減します。革新的な固定技術により、モーターのノイズが効果的に低減され、純粋なオーディオ信号が確保されます。あなたがオーディオマニアでも音楽愛好家でも、Luna3 はあなたを比類のない音質の旅へと連れて行きます。 Fosi Audio は常に究極のオーディオソリューションを提供することに尽力しています。ご支援に改めて感謝いたします。

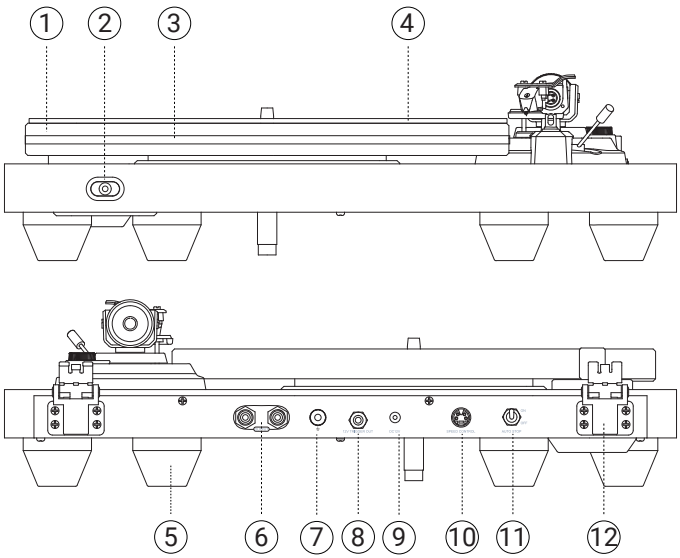

① ターンテーブル・プラッター
② スピードセレクタースイッチ
③ ゴムベルト
④ プラッターマット
⑤ アイソレーションフィート
⑥ RCA出力
⑦ アース端子
⑧ 12V トリガー出力
⑨ 電源コネクタ
⑩ 速度制御
⑪ 自動停止スイッチ
⑫ ヒンジ

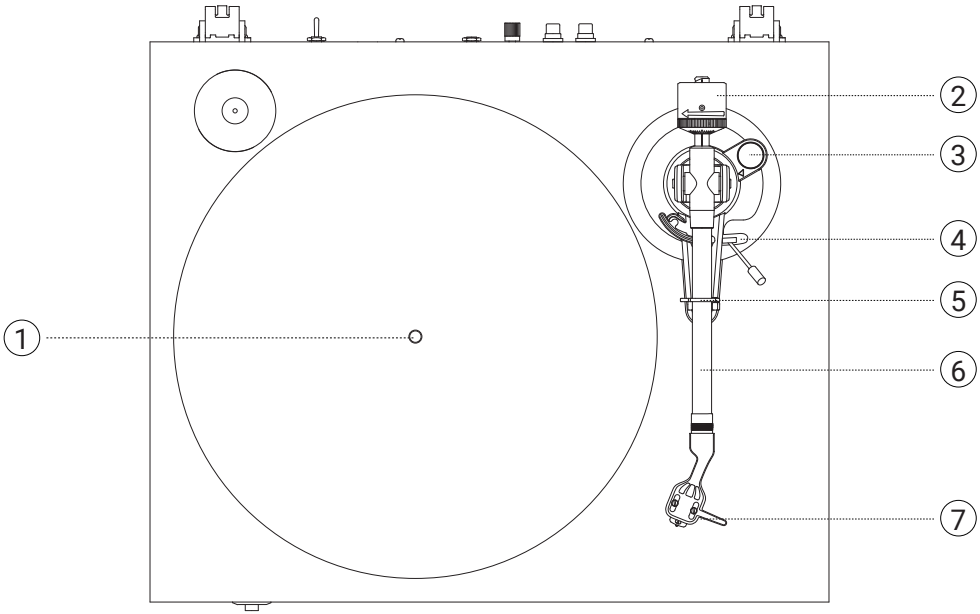

① メインスピンドル

② カウンターウェイト

③ アンチスケート調整

④ キューイングレバー

⑤ トーンアームロック


⑥ トーンアーム

⑦ ヘッドシェル


製品仕様

スピード	33、45（電子変速）
回転速度差	33: 0.1% 45: 0.1%
ワウフラッター	33: 0.1% 45: 0.15%
プラッター	300mm（アクリル）
SNR	65dB
トーンアームの 長さと材質	8.6インチ（アルミニウム）
トーンアーム直径	12.2mm
有効トーンアーム長	218.5mm
オーバーハング	22mm
サイズ	420×112×330mm (W×H×D)
重さ	3.5kg
消費電力	5W (Max)
電源	12VDC/1500mA


製品仕様

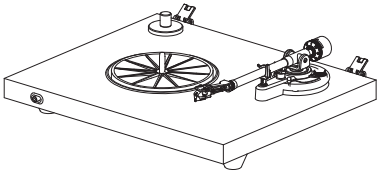


Luna3本体




12V電源アダプター

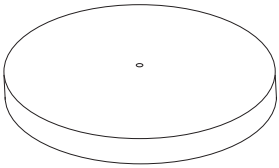


アクリルプラッター

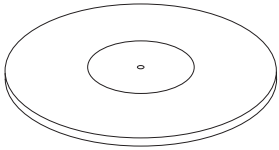


プラッターマット

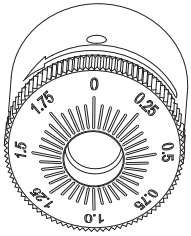


カウンターウェイト

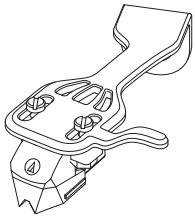


ヘッドシェル

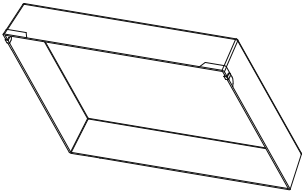


ダストカバー

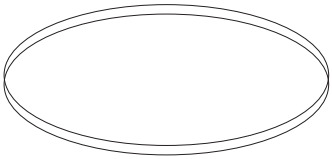

ゴムベルト

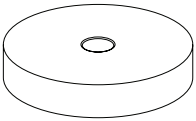

45 アダプター

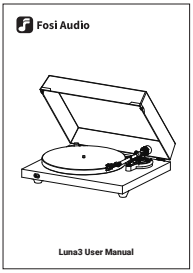


ユーザーマニュアル

操作ガイド


初期セットアップ

ステップ1：ターンテーブルの組み立て


1. 保護包装をすべて取り除き、台座をしっかりとした平らな面に置きます。次に、プラッターを中央のスピンドルに取り付けます。

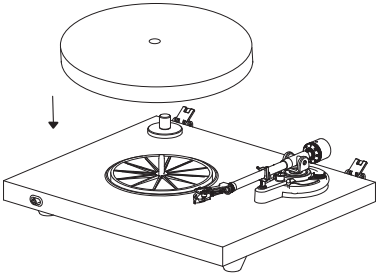

2. ゴムベルトをモータープーリーとプラッターに巻き付けます。ベルトが過度に伸びないように注意してください。プラッターを数回回転させて、ベルトがスムーズに動くことを確認します。

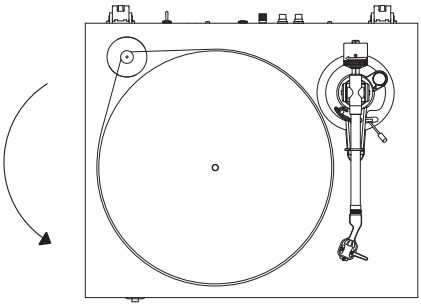


3. 溝のある面が上を向くようにして、プラッターマットをプラッターの上に置きます。

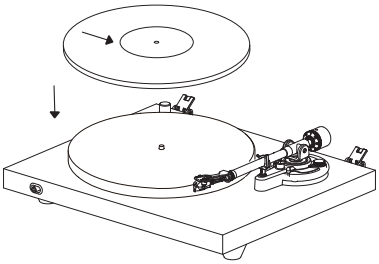


BYPASS

ステップ2：カウンターウェイトを取り付ける

1. トーンアーム ロックを使用してトーンアームを固定します。

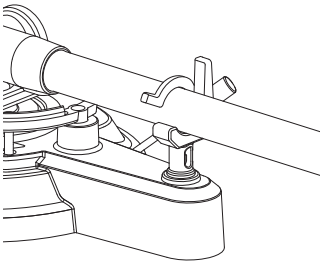


2. カウンターウェイトを、数字が前を向くようにしてトーンアームの端にスライドさせ、回転させてトーンアームに完全に固定します。

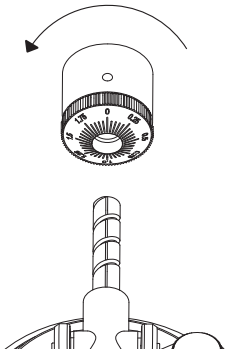

ステップ3：ヘッドシェルの取り付け


1. ヘッドシェルを保護パッケージから取り出し、トーンアームの端に挿入します。
2. ヘッドシェルが固定されるまでトーンアームのナットを締めます。

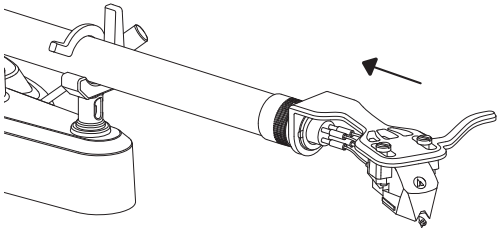

ステップ4：ダストカバーを取り付ける

1. ダストカバーを、後で使うために、衝撃や傷がつかないように注意しながら、優しく脇に置きます。
2. ターンテーブルの背面にあるヒンジを慎重に持ち上げて、ダストカバーのスロット側を所定の位置に合わせます。


注意：
ヒンジはバネ式のため、大きな力がかかる場合があります。取り付けの際は安全のため、慎重に取り扱ってください。

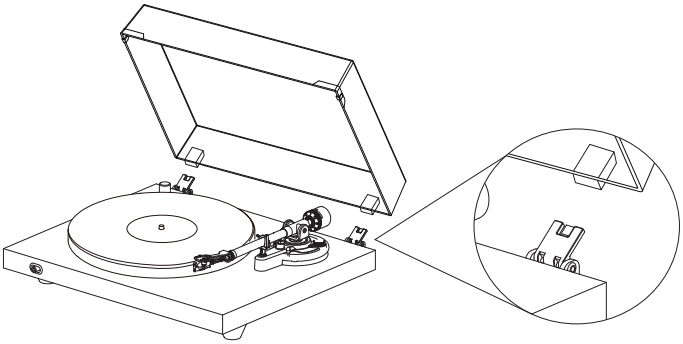


ステップ5：トーンアームのバランス調整

【ご注意事項】
トーンアームのバランス調整は、すべての手順を必ず守ってください。バランスが不適切だと、スタイラスやレコードが損傷する可能性があります。さらに詳しいヘルプが必要な場合は、Fosi Audio の公式 Web サイトをご覧ください。
https://support.fosiaudio.com/


1. スタイラスプロテクターを取り外します。

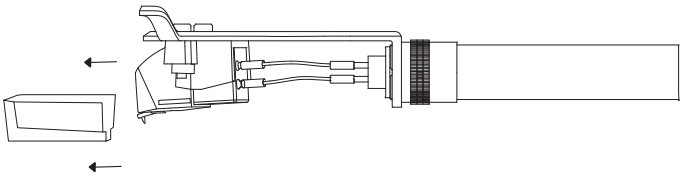


2. トーンアームのロックを解除し、キューイングレバーを持ち上げます。

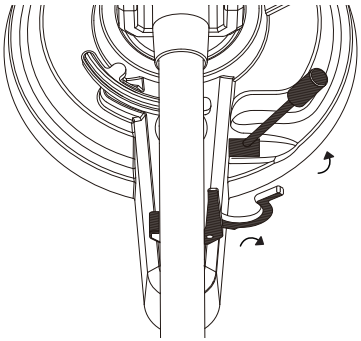


3. トーンアームをプラッターの上に置きます。

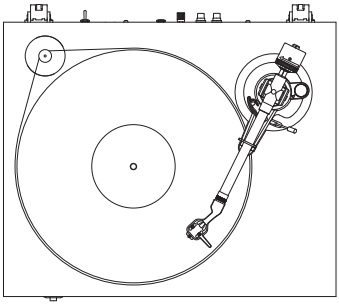

4. ヘッドシェルを持ち、スタイラスとプラッターが接触しないように注意しながらキューイングレバーをリセットします。

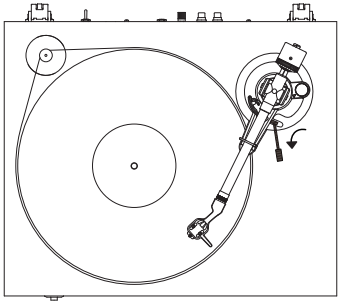


5. キューイングレバーを下げて、トーンアームとカートリッジが水平にバランスし、スタイラスがプラッターに触れない状態になるまでカウンターウェイトを回転させます。

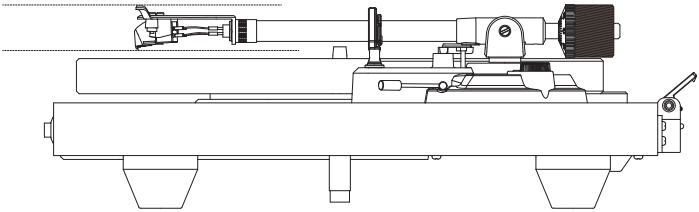


6. カウンターウェイトダイヤルのみを回し、中心線を数字の「0」に合わせ、トーンアームのバランスを維持しながら、トーンアームロックでトーンアームを固定します。



7. 2gの重りを使用してカートリッジの針圧を設定します。ダイヤルの「0」が中心線と揃うまでカウンターウェイト全体を反時計回りに1回転させます。

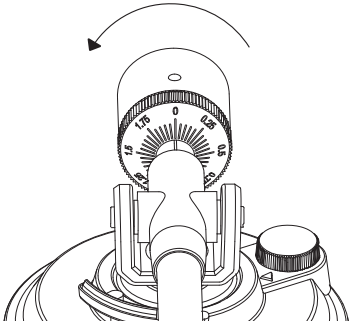


8. アンチスケーティング力を 2 グラムのトラッキングフォースに合わせて調整します。

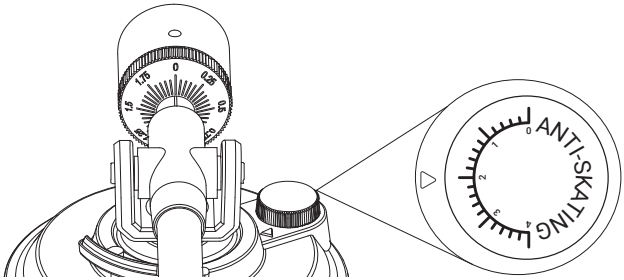

注意:
カウンターウェイトを調整するときは、キャリブレーションリングだけでなく、カウンターウェイト全体を回転させてください。


ステップ6：RCAケーブルとアース線を接続する

Luna3にはフォノプリアンプが内蔵されていないため、外付けのフォノプリアンプまたはフォノ入力を備えたアンプに接続する必要があります。RCAケーブルとアース線をターンテーブルの背面に接続し、フォノプリアンプまたはアンプのフォノ入力とアース端子に接続します。ケーブルの色はRCAコネクタの色に合わせてください。

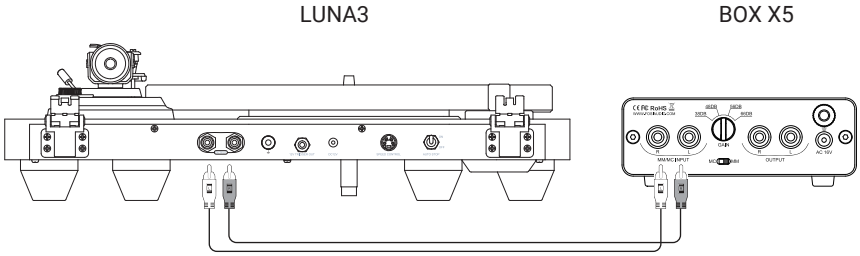

注意：


1. フォノプリアンプを使用する場合は、ターンテーブルとフォノプリアンプの間にアース線を接続します。

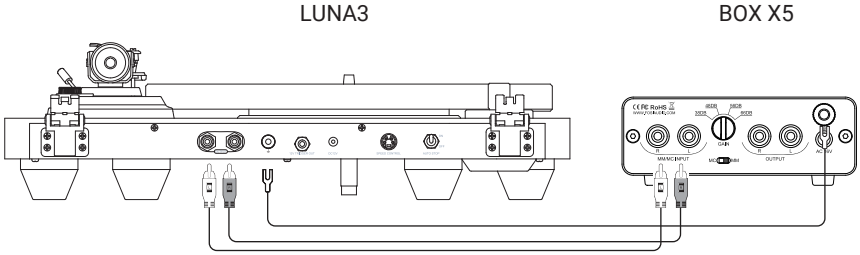

2. フォノプリアンプとアンプまたはアクティブスピーカーの間にもう1本のアース線を接続します。不要なノイズやハムを防ぐため、両端がアースされていることを確認してください。

ステップ7：電源アダプターを接続する

電源アダプターと壁のコンセントがしっかりと接続されていることを確認してください。電源コードをターンテーブル背面の電源入力に差し込んでください。

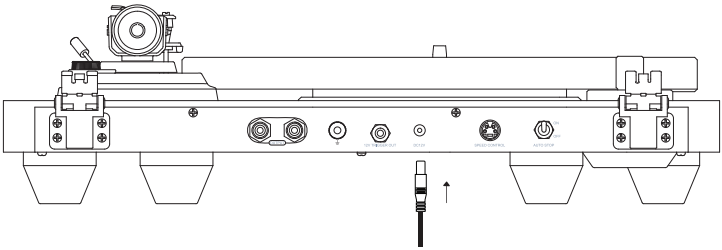

注意:
必ず付属の公式電源アダプターを使用してください。

ステップ8：レコードを再生する


1. 最適なオーディオ性能を得るには、まずダストカバーを取り外すことをお勧めします。
2. レコードをプラッターの上に置きます。
3. スピードセレクタースイッチを、レコードに記載されている正しい回転数に設定します（通常、標準再生の場合は 33 RPM）。
4. トーンアームのロックを解除します。
5. キューレバーを上げます。
6. ヘッドシェルをレコードの開始点まで移動します。
7. キューレバーを下げます。
8. 音楽をお楽しみください。

注意:
使用しないときは、スピードセレクタースイッチをオフの位置にしてください。

操作ガイド

オートストップ機能

オートストップ機能は、スタイラスの寿命を延ばすために設計されています。この機能を有効にすると、レコードの再生終了時に音楽が再生されていない場合、ターンテーブルは3分以内に自動的に回転を停止します。オートストップスイッチをオフにすると、ターンテーブルは回転を続けます。



注意:
オートストップ機能が作動するまでに約3分かかります。レコードの生産の違いにより、一部のレコードではオートストップ機能が作動しない場合があります。

ドライブベルトの交換

1. モータープーリーとプラッターからドライブベルトを取り外します。
2. 新しいベルトを、過度に伸ばさないようにモータープーリーとプラッターに巻き付けます。
3. プラッターを数回回転させて、ベルトがスムーズに動作することを確認します。

ターンテーブルのお手入れ

1. プラッターの表面を柔らかい繊維の布で拭いてほこりを取り除きます。
2. 使用しないときはダストカバーをかぶせてください。

レコードのお手入れ

1. レコードは、熱源から離れた乾燥した場所に、立てて保管してください。
2. 溝の汚れを取り除くには静電気防止ブラシを、より深く洗浄するにはレコード洗浄液を使用し、クリアな再生を確保してください。
3. トーンアームを上げ下げするときは、誤って滑ったり傷がついたりしないように、必ずレバーを使用してください。

カートリッジのお手入れ

1. スタイラスへの偶発的な損傷を防ぐために、使用しないときはカートリッジ保護カバーを取り付けてください。
2. スタイラスクリーニングブラシを使用して、スタイラスに付着した埃やゴミを取り除くことができます。
3. オートストップ機能を有効にすると、再生後にプラッターの回転を停止し、スタイラスの摩耗を軽減できます。

よくある質問

ターンテーブルが回転しない
A. 電源が確実に接続されていることを確認してください。
B. スピードスイッチを33または45に設定します。トーンアームをプラッターの上に持ち上げると、プラッターが回転し始めます。
C. ドライブベルトに損傷がなく、正常に機能していることを確認してください。

回転速度が正しくない
レコードのラベルを確認し、回転数スイッチを適切な値に設定してください。ほとんどのLPレコードは33RPM で再生されますが、中には45 RPM で再生されるものもあります。

スキップステッチ
A. レコードの表面に汚れやゴミが付いていないこと、またレコードがねじれたり変形したりしていないことを確認してください。
B. スタイラスの先端に汚れやゴミが付いていないか確認してください。
C. 初回セットアップ手順のステップ 4 を参照して、トーンアームのバランスが適切に取られており、正しい針圧が設定されていることを確認してください。
D. アンチスキッド調整ノブが設定された針圧と一致しているかどうかを確認してください。

オーディオフィードバック
A. スピーカーはターンテーブルから離して設置してください。ターンテーブルはスピーカーの前や同じ面に置かないでください。
B. 最適なオーディオ性能を得るには、再生中はダストカバーを外してください。
C. 音量が高いときにフィードバックが発生する場合は、音量を下げてください。
D. フィルター付きの外付けフォノプリアンプを使用している場合は、フィルターをオンにして共振によるフィードバックを低減してください。

キューイングレバーでトーンアームが下がらない
A. 初期設定の手順5を参照し、トーンアームのバランスが適切に取られ、適切なトラッキングフォースが設定されていることを確認してください。
B. トーンアームのロックを解除し、その下の小さなクレードルをゆっくりと押しながらレバーを下げて完全に下げ、トーンアームの下降機構をリセットします。

音量が低い

A. RCA接続が正しくしっかりと接続されていることを確認してください（初期セットアップのステップ 6を参照）。
B. Luna3 にはフォノプリアンプが内蔵されていないため、フォノ入力付きのアンプに接続するか、最初に外部フォノプリアンプに接続してからアンプに接続する必要があります。

ハミング音

A. 外付けフォノプリアンプとアンプの間にアースケーブルを接続します。外付けフォノプリアンプを使用する場合は、フォノプリアンプからアンプまたはアクティブスピーカーに2本目のアースケーブルを接続してください。
B. ヘッドシェルがしっかりとねじ込まれて固定されていることを確認してください。
C. レコードプレーヤーやその他のデバイスは、壁のコンセントに直接接続する必要があります。不安定な電流が音質やデバイスの動作に影響を与える可能性があるため、電源タップや延長コードの使用はお勧めしません。
D. 共鳴とフィードバックを減らすために、スピーカーをターンテーブルから離して配置してください。

片方のチャンネルからしか音が出ない

A. CDプレーヤーやスマートフォンなどの別の音源でスピーカーをテストし、正常に動作することを確認します。
B. トーンアームのバランスが取れており、正しい針圧が設定されていることを確認します。
C. RCAケーブルを取り外し、再度接続し、しっかりと接続されていることを確認します。
D. ケーブルの故障を除外するために、RCAケーブルを交換してみてください。
E. トーンアームからヘッドシェルを取り外し、アルコールを含ませた綿棒でヘッドシェル後端の金属接点を清掃します。清掃後、ヘッドシェルを元に戻し、固定ナットを締めます。

まだ何かご不明な点がございましたら、弊社のサポートチームまでご連絡ください。
「support@fosiaudio.com」

製品保証

Fosi Audio は、購入日から 24 ヶ月の限定保証とサポートを提供することを約束します。 製品の使用中に問題が発生した場合は、サポート担当 (support@fosi-audio.com) までご連絡ください。

当社について

Fosi Audio は、あらゆる音楽へのニーズを念頭に置いて革新的なオーディオ製品を設計、構築しております。素晴らしいサウンド、シンプルかつエレガントなデザイン、高品質のコンポーネント、そして本当に便利な機能こそが Fosi Audio の追求するものです。当社が作成したのと同じくらい当社の製品を楽しんでいただけることを心から願っています。

公式サイト： www.fosiaudio.com

Amazonストア: https://www.amazon.co.jp/fosiaudio

Facebook ページ: www.facebook.com/fosiaudioglobal

YouTube チャンネル: www.youtube.com/@fosiaudio

公式フォーラム： community.fosiaudio.com

ツイート（twitter）： https://twitter.com/FosiAudio_JP

アフターサービス電子メール:
support@fosiaudio.com

オンラインサポートを受ける