

Atacama

EVOQUE SERIES ASSEMBLY INSTRUCTIONS



FOR ALL EVOQUE VERSIONS EXCLUDING
SPECIAL EDITION



Before starting assembly place ASSIST GASKETS over the top caps and bottom caps

Please note

Bamboo is a natural material so colour, texture, grain and age may give a variable appearance to each shelf. Because of this, adding an extra shelf at a later date will introduce a batch / colour tone difference. Where possible order your rack as a complete modular support with enough levels to fulfil possible future requirements in order to minimize this variation.

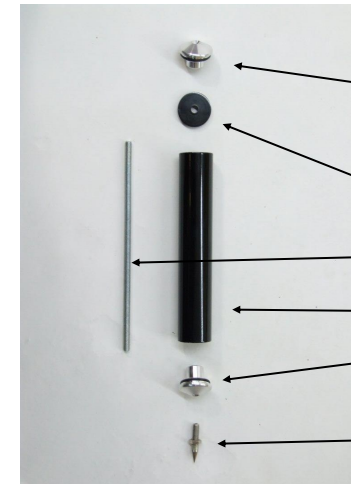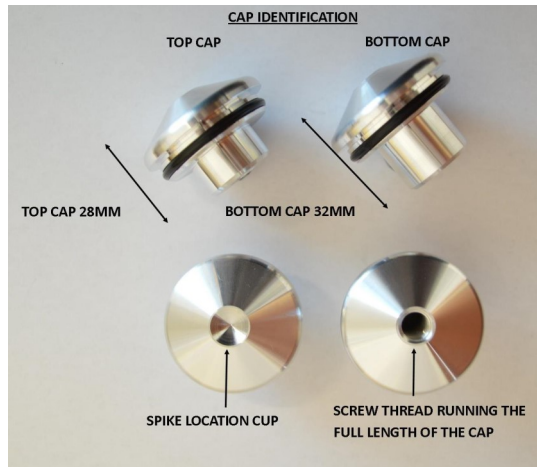

TOP CAPS (4)
ASSIST GASKETS (8) See instructions opposite
SPACER WASHERS (4)
STUDS (4)
COLUMNS (4)
BOTTOM CAPS (4)
CARPET SPIKE AND LOCK NUTS (4)

1. Screw the stud into the top cap.
2. Insert this top cap and stud assembly through the top of the bamboo shelf (the top of the shelf is the side with the large 35mm counter sunk holes).
3. Slide the spacer washer along the stud with the small inner collar of the spacer washer facing the bamboo. This washer should then fit into the hole underneath of the shelf.
4. Slide the leg column over the stud. It will then engage the Assist gasket collar.
5. Offer up the bottom cap to the column/stud assembly. Hand tighten.
6. Screw the carpet spike with lock nut into the bottom cap.

Once all 4 legs have been assembled, If it is the base module place in position on the floor and adjust the spikes so the module is level.

For the shelf modules, carefully stack one on top of the other making sure the spikes only touch the spike location cup.

Be careful not to allow the spikes to touch the bamboo. Level off each module by adjusting the spikes.

