
# CORRIDOR® 8172

## INSTRUCTION MANUAL

LET'S GET STARTED.



**DESIGN MATTHEW WEATHERLY** 

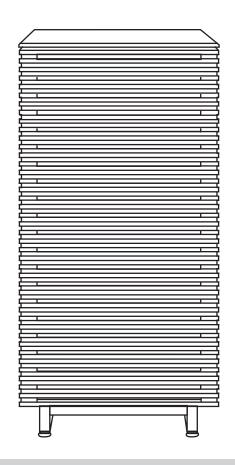



Congratulations on the purchase of your Corridor cabinet from BDI. Your cabinet has been designed to provide a lifetime of enjoyment. This manual will provide assembly instructions and other helpful information to ensure you get the most out of your product. Please save it for future reference.

Your Corridor has been engineered for simple assembly. Please follow these directions carefully to prevent any damage.


Should you need further assistance, contact BDI at customerservice@bdiusa.com.





#### HARDWARE AND COMPONENTS


Unpack and identify the parts listed below. The assembly workspace should be a non-marring surface, such as carpet. For missing hardware pieces, please contact BDI Customer Service at **customerservice@bdiusa.com**. For all other concerns, please contact your BDI retailer.


Do not use power tools for the assembly of this product.










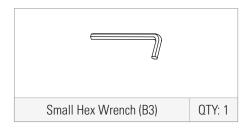


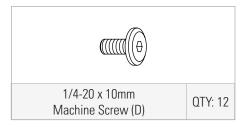

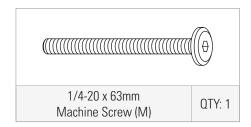


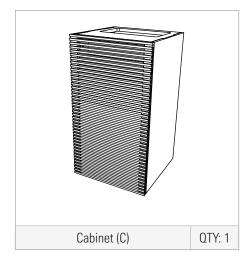


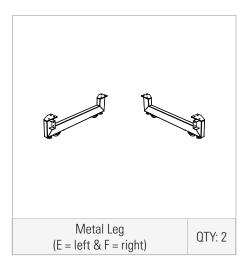


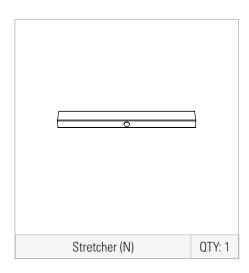



#### **HARDWARE AND COMPONENTS**

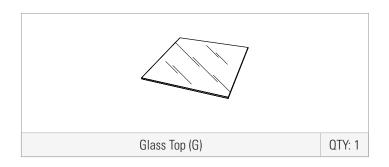


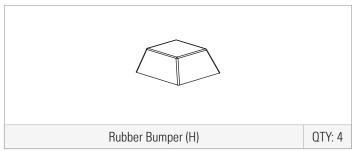

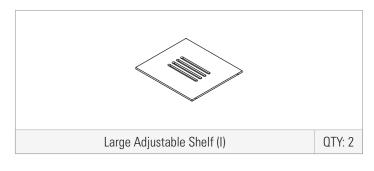

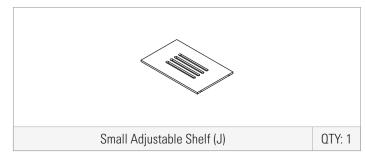


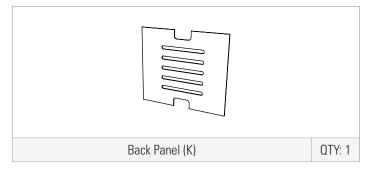

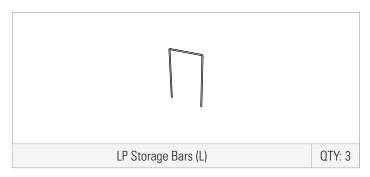

Slide (E & F) Metal Legs into (N) Stretcher and attach by using (B1) Hex Wrench and 4 (D) Screws. Fully tighten all screws.


PART/DESCRIPTION	QTY
B1-HEX WRENCH	1
D-SCREW	4

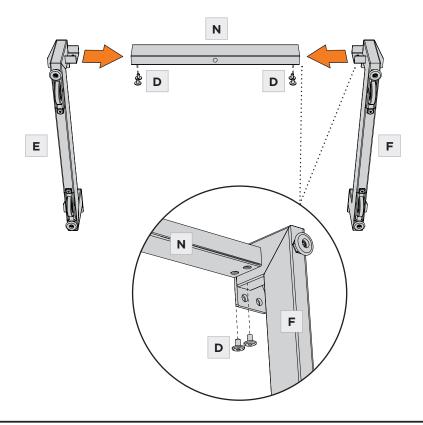


For your convenience, wheel assembly is pre-installed. Wheels can be removed if desired.

Removal of wheels (optional):

Detach Wheel Assembly from (E & F) Metal Legs by removing the Leveler and Screw.

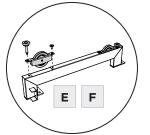


Reinstall Leveler to (E & F) Metal Legs.

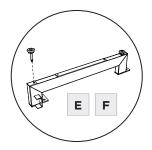

Carefully lay (C) Cabinet on its back. Prop up the bottom edge with a book. Using (B1) Hex Wrench, attach the base assembly to the bottom of the (C) Cabinet with (D) Screws and (M) Screw.

Note: Each of the metal legs has levelers that can be adjusted using the (B2) Open Mouth Wrench.


PART/DESCRIPTION	ОТУ
B1-HEX WRENCH	1
D-SCREW	8
M-SCREW	1

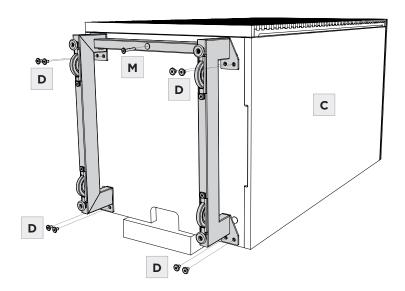

#### STEP 3. INSTALL RUBBER BUMPERS AND PLACE GLASS TOP

Position the cabinet upright and remove paper backing from (H) Rubber Bumpers and place near corners of the top of the cabinet (within 1" of the edge). Place (G) Glass Top on top of (C) Cabinet centered left to right and front to back.

PART/DESCRIPTION	ОТУ
H-RUBBER BUMPER	4

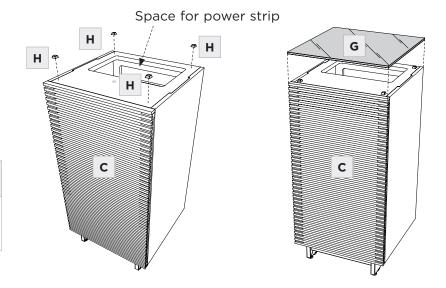


#### **ASSEMBLY**


#### STEP 4. INSTALL BACK PANEL

Install **(K) Back Panel** to the backside of the **(C) Cabinet** by inserting top edge in upper channel then tipping bottom edge forward and into lower channel.

Note: Velcro straps are included for your convenience to facilitate wire management.

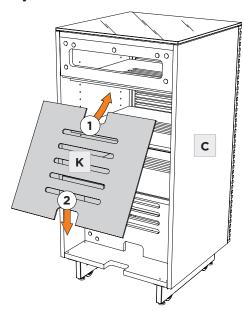


If desired, lift (I) Adjustable Shelf away, loosen & remove related Shelf Support Pins, reinstall the Shelf Support Pins at desired height, then reinstall (I) Adjustable Shelf.

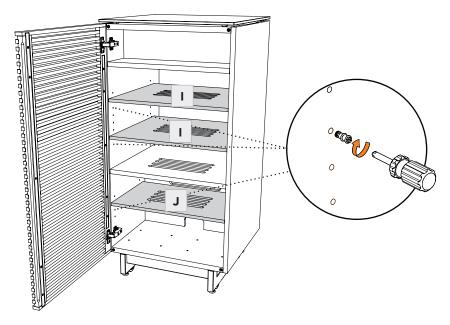

LP RECORD STORAGE

**FINE TUNING** 

This cabinet is designed to store LP Records by placing (L) LP Storage Bars into designated holes in bottom of (C) Cabinet. (L) LP Storage Bars can be stored by placing them in designated holes in back of (C) Cabinet when not in use (see below).

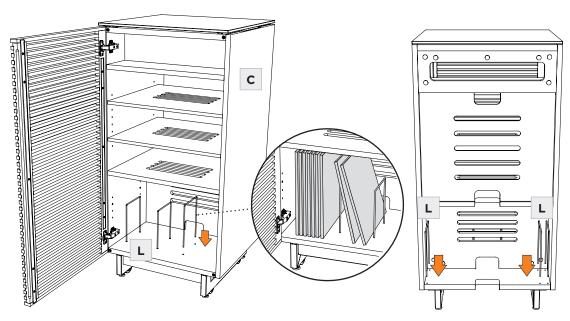


#### REVERSE DOOR-SWING (IF DESIRED)

The door on the Corridor AV Tower can either hinge left or right. To change sides, remove the 1 wood screw and 2 machine screws on each hinge plate using a **(A) Phillips Screwdriver** that secure the hinge plates to the cabinet. Rotate the door 180° (up side down) and reattach the door with the

PART/DESCRIPTION	ОТУ
A-PHILLIPS SCREWDRIVER	1

machine screws going into the threaded inserts on the other side of the cabinet as illustrated. Adjust the door catches: dial in the one on the hinge side and dial out the catch on the unhinged side. Adjust the door so it aligns with the cabinet (see next page). Once the door is aligned properly with the cabinet, drive 1 wood screw into one of the front holes on each hinge plate to keep the door from shifting downward (optional).

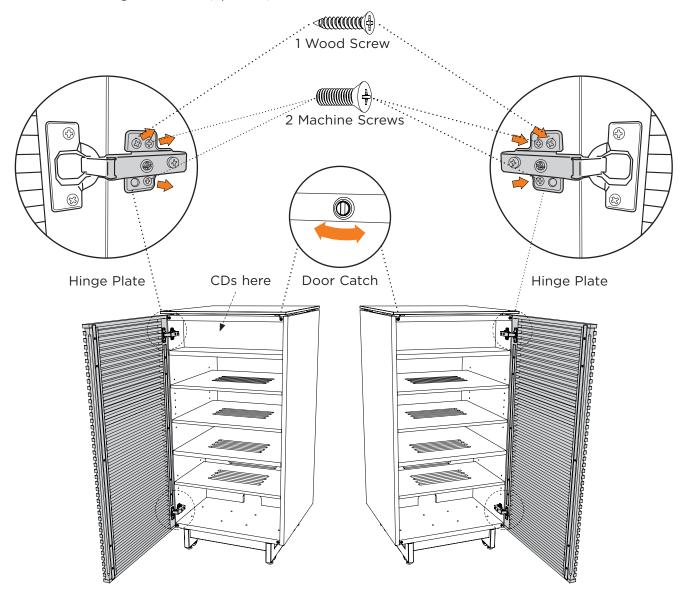


Levelers are integrated into each leg assembly and are accessed at the bottom of each cabinet leg using the (B2) Open Mouth Wrench. If your floor is uneven, you may extend one or more levelers to attain a level, stable cabinet placement. Turning the leveler clockwise will extend the leveler; turning it counter-clockwise will retract it.

PART/DESCRIPTION	ОТУ
B2-OPEN MOUTH WRENCH	1

#### DOOR ALIGNMENT


**FINE TUNING** 

These steps are to be followed after you have unpacked and completed the simple assembly instructions for your Corridor AV cabinet. Due to jostling in freight or perhaps an uneven floor, the doors on your Corridor cabinet may not appear to be in perfect alignment. Making a few minor adjustments can rectify this situation. Be aware that depending on your situation, patience and a bit of trial and error are required. The high-quality European hinge hardware is infinitely adjustable, but changing one element can cause the need for further adjustments. Through a little adjustment, you can modify the orientation of the cabinet doors to make sure that they are sitting perfectly on your Corridor unit.

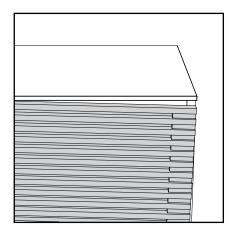

#### **INCORRECT!**

Door is out of alignment with the rest of the unit.

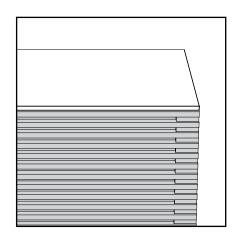

#### CORRECT!

Door is sitting squarely and evenly spaced on tops and sides.

#### ADJUST DOOR HINGES (IF NEEDED)

The doors on your cabinet should be evenly spaced and the doors should open and close freely without rubbing against the door frame.

me.	A-PHILLIPS SCREWDRIVER
alignment, this	
or adjustment	

PART/DESCRIPTION


QTY

1

If the cabinet's doors appear out of alignment, this condition can be corrected with minor adjustment to the European hinges on each door.


Use a (A) Phillips Screwdriver to adjust Corridor's door hinges:


- By adjusting **Screw 1**, the door will move LEFT or RIGHT within the frame. Make minor adjustments at both top and bottom hinges for best results.
- By adjusting **Screw 2** the entire door will move IN or OUT, opening or closing the gap between the door frame and cabinet. (This screw rarely needs adjustment.)

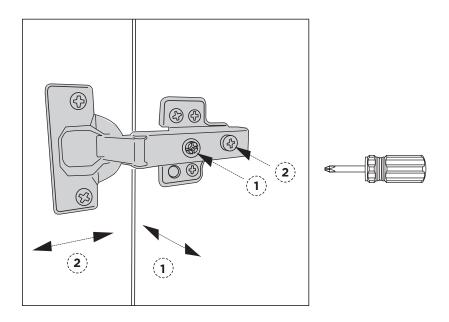

If your door is not straight, the door can be straightened by adjusting the depth of the set screw found in the middle of the 2 metal bars on the back of the door.

PART/DESCRIPTION	ОТУ
B3-SMALL HEX WRENCH	1

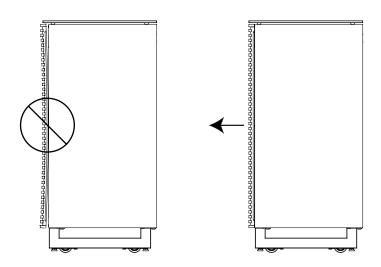

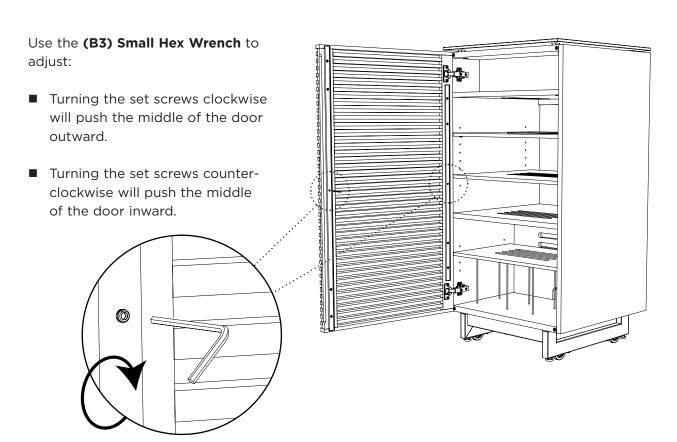

#### **CARE & MAINTENANCE**

Your BDI furniture has been constructed with the finest materials, carefully manufactured, and designed to last a lifetime. Regular furniture care will prolong your enjoyment and keep it looking its best. Here are some general tips for taking care of BDI furniture. Your surfaces may vary.

#### **GLASS**

Glass surfaces are maintained using household glass cleaner and a paper towel or cloth.

#### **SATIN-ETCHED GLASS**

This uniquely smooth-to-the-touch glass surface can be regularly maintained using household glass cleaner and a paper towel or cloth.

A 'Magic Eraser' removes minor scratches or scuffs not eliminated using a paper towel or cloth. 'Magic Eraser' is a melamine foam product available at any grocery store or home improvement center. Dampen the entire glass surface and the Magic Eraser, then rub the whole surface in broad, even strokes using moderate pressure. Clean and dry the surface with a paper towel. Check for results and repeat as necessary. Any scratches or scuffing not eliminated by one of the above methods can often be addressed by 'refreshing' the glass. This process should not be required more than once per 6–12 months. See this brief video for the simple method: www.bdiusa.com/glass

#### WOOD

Wood surfaces should be cleaned with a slightly damp (not saturated) cloth or paper towel. Do not use glass cleaner on wood. If moisture remains, dry the surface with another cloth. If needed, a gentle, non-abrasive cleanser may be used, but wipe away all cleaner residue and dry the surface with a cloth.

BDI's wood finishes feature natural hardwood solids and veneers. Wood is a product of nature and—unlike man-made materials that can be manufactured to strict and consistent specifications—has natural imperfections that are part of its appeal and character. Every piece of wood differs from every other, even when coming from the very same tree. As such, grain, texture, and tone variation should be expected from one panel or piece of furniture to the next.

While BDI's stained wood finishes are stable in tone & appearance, all finishes are subject to some degree of discoloration with prolonged exposure to direct sunlight. Please avoid positioning your BDI cabinet in any area with ample direct sunlight. To learn more about the features of natural wood, visit www.bdiusa.com/wood

#### **METAL, PORCELAIN, & PAINTED SURFACES**

Surfaces should be cleaned with a slightly damp (not saturated) cloth or paper towel. If moisture remains, dry the surface with another cloth. If needed, a gentle, non-abrasive cleanser may be used, but be sure to wipe away all cleaner residue and dry the surface with a cloth.

BDI warrants to the original purchaser that for the below-stated warranty term, BDI will replace any product, part, or component covered by this warranty that fails under normal use as a result of a defect in material or workmanship. The decision to replace a complete product versus the part or component in question will be at BDI's sole discretion.

Residential Use: BDI Furnishings carry warranty coverage for three (3) years from the date of product delivery, as shown on your sales receipt/documentation. Select chairs carry coverage for five (5) years from the date of product delivery.

Commercial Use: BDI Furnishings carry warranty coverage for one (1) year from the date of product delivery, as shown on your sales receipt/documentation. Select chairs carry coverage for five (5) years from the date of the product delivery, based on an 8-hour daily use pattern.

BDI reserves the right to refine or update its warranty from time to time. See the complete and latest warranty document at www.bdiusa.com/warranty.

#### PRODUCT REGISTRATION

Registering your new BDI product allows us to send you important product updates, service information, and helpful hints related to your BDI products.

Register today, and you will be entered to win free a BINK table from BDI: www.bdiusa.com/register





### SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM FURNITURE TIP-OVER. TO HELP PREVENT TIP-OVER:

- Install tip-over restraint.
- Place heaviest items in lower compartments.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.

USE OF TIP-OVER RESTRAINT MAY REDUCE—BUT NOT ELIMINATE—THE RISK OF TIP-OVER.



These distinctive product configu ations are protected by US and international patents, trade dress, and/or copyright laws. Corridor & BDI are trademarks of Becker Designed, Inc. All rights reserved. ©2024, BDI | V.01.22.2024

Made in China.